



## global sources HY316 WIFI Thermostat Owner's Manual

[Home](#) » [global sources](#) » global sources HY316 WIFI Thermostat Owner's Manual 

### Contents

- [1 global sources HY316 WIFI Thermostat](#)
- [2 Product Specifications](#)
- [3 Before wiring and installing](#)
- [4 Start up](#)
- [5 Displays](#)
- [6 Description of icon](#)
- [7 Wiring Diagram](#)
- [8 Operation key](#)
- [9 Programmable](#)
- [10 Advanced options](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

global  sources

global sources HY316 WIFI Thermostat



## Product Specifications

- Power: 90-240Vac 50/60HZ
- Range of temperature display: 0~40°C
- Display accuracy: 0.5°C
- Probe sensor: NTC(10k)1%
- Contact capacity: 16A/250V(WE)

## Before wiring and installing

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure it is suitable for your application.
3. Installer must be a trained and qualified Electrician
4. After installation is complete check operation as per these instructions

**CAUTION:** Disconnect power supply before installation to avoid electrical shock or equipment damage.

## Start up

Where possible you should set up the Wifi by using the attached manual. If unable to do so please see guide below.

When you turn on the thermostat for the first time you will need to set the time and also the number that corresponds to the day of the week (1-7 starting from Monday). This can be done by following the steps below:

1. Press the TIMER button and the time in the top left corner will start flashing.
2. Press UP or DOWN BUTTON to get to the desired minute and then press TIMER button
3. Press UP or DOWN BUTTON to get to the desired hour and then press TIMER button
4. Press UP or DOWN BUTTON to change the day number. 1=Monday 2= Tuesday 3=Wednesday 4=Thursday 5=Friday 6=Saturday 7=Sunday – Once you have selected the day press TIMER button to confirm.

You will now be ready to set the temperature. This can be done by pressing UP or DOWN BUTTON . The set temperature is displayed in the top right corner.

It is recommended to start out at a low temperature and increase the temperature 1 or 2 degrees a day until you reach a comfortable heat. This only needs to be done once.












Please see the operation key list which shows all the additional functions per button. These can all be controlled via the mobile app if you have paired your device (see attached pairing instructions)

Always check that the temperature limit for the floor probe is set to a suitable temperature for your flooring (typically 27°C). This can be done in the advanced setting menu A9 (see next page)


## Displays



## Description of icon

- |   |   |
|---|---|
|  Auto mode; run preset program                       |  Manual mode                |
|  Temporary manual mode                               |  : Clock                    |
|  Holiday mode  |  Wifi status: Disconnection |
|  Heating, icon disappears to stop heating            |  External NTC sensor        |
|  WIFI connection, flashing = EZ distribution mode    |  Child lock                 |
|  Cloud icon: flashing = AP distribution network mode |   |

## Wiring Diagram

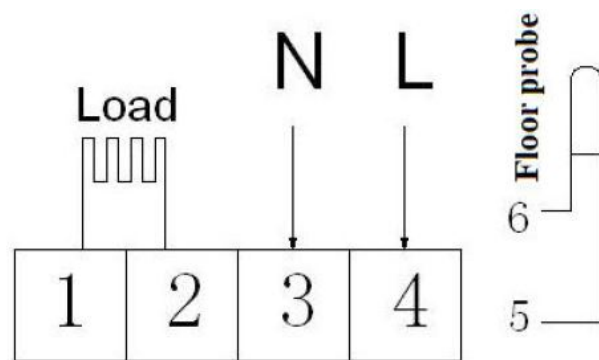

## Electric heating wiring diagram

Connect the heating mat to 1 & 2, connect the power supply to 3 & 4 and connect the floor probe to 5 & 6. If you connect it wrongly, there will be a short circuit and the thermostat may become damaged and the warranty will be invalid.

### Operation key







NO	symbols	represent
----	---------	-----------

<b>A</b>		Turn ON/OFF: Short press to turn on/ turn off
<b>B</b>		<ol style="list-style-type: none"> <li>1. Short press to switch between automatic mode and manual mode</li> <li>2. Turn on thermostat then long press for 3-5 seconds to enter into programmable setting</li> <li>3. Turn off thermostat then long press for 3-5 seconds to enter advanced setting</li> </ol>
<b>C</b>		<ol style="list-style-type: none"> <li>1 Confirm key: use it with key</li> <li>2 Short press it to set time</li> <li>3 Turn on thermostat then long press it for 3-5seconds to enter holiday mode setting. Appear <b>OFF</b>, press UP or DOWN BUTTON change to ON, then press to confirm activation of holiday mode</li> </ol>
<b>D</b>		<ol style="list-style-type: none"> <li>1 Decrease key</li> <li>2 Long press to lock /unlock</li> </ol>
<b>E</b>		<ol style="list-style-type: none"> <li>1 Increase key :</li> <li>2 Long press to display external sensor temperature</li> <li>3 In the Auto mode, press UP or DOWN BUTTON enter to temporary manual mode</li> </ol>

## Programmable

5+2 (factory default), 6+1 and 7 day models contain 6 time periods to automate. In the advanced options choose number of days required, when power is on then long press for 3-5 seconds to enter into programming mode. Short press to choose: hour, minute, time period, and press UP or DOWN BUTTON and to adjust data. Please

note after about 10 seconds it will automatically save and exit. See example below.

					
Wake Up	Leave Home	Back Home	Leave Home	Back Home	Sleep
6: 00    20°C	8: 00    15°C	11: 30    20°C	13: 30    15°C	17: 00    20°C	22: 00    15°C

The optimum comfort temperature is 18°C-22°C.

### Advanced options

NO	Setting Options	Data Setting Function	Factory Default
<b>A1</b>	Measure Temperature Calibration	-9-+9°C	0.5°C Accuracy Calibration
<b>A2</b>	Temperature control return difference setting	0.5-2.5°C	1°C
<b>A3</b>	External sensors limit temperature control return difference	1-9°C	2°C
<b>A4</b>		N1:Built-in sensor (high temperature protection close)	N1

	Options of sensor control	<p>N2:External sensor (high temperature protection close )</p> <p>N3:Built-in sensor control temperature ,external sensor limit temperature (if the external sensor detects the temperature is higher than the limited temperature of external sensor the thermostat will disconnect relay and turn off load)</p>				
<b>A5</b>	Children lock setting	0:	half lock	1:	full lock	0
<b>A6</b>	Limit value of high temperature for external sensor	<p>1. 35°C-70°C</p> <p>2. Under 35°C, screen display — , high temperature protection was cancelled</p>				35°C
<b>A7</b>	Limit value of low temperature for external sensor(anti-freeze protection)	<p>1. 1-10°C</p> <p>2. Exceed 10°C, screen display — , Low temperature protection was cancelled.</p>				5°C
<b>A8</b>	Setting temperature lowest limit	1-10°C				5°C


<b>A9</b>	Setting temperature highest Limit	20-70°C				35°C
<b>AA</b>	Descaling function	0: Close descaling function 1: Open descaling function if valve is continuously closed for over 100 hours it will be opened for 3 minutes automatically				0:Close descaling function
<b>AB</b>	Power with memory function	0: Power with memory function 1: Shutdown power after power off 2: Shutdown power after power on				0:Power with memory function
<b>AC</b>	Weekly programming selection	0:	5+2			0: 5+2
		1:	6+1			
		2:	7			
<b>AD</b>	Restore factory defaults	Restore to factory settings				

**Sensor fault display:** Please choose correct setting of built-in and external sensor (option A4), if chosen wrongly or if there is a sensor fault (breakdown) then error “E1” or “E2” will be displayed on the screen. Thermostat will stop heating until the fault is eliminated.

**Warranty:** We offer the warranty of 24 months, from the day of purchase. Beyond the warranty period we will charge for the after-sale service.



Documents / Resources

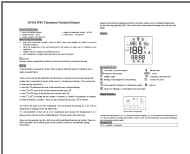	<a href="#">global sources HY316 WIFI Thermostat</a> [pdf] Owner's Manual HY316, WIFI Thermostat, HY316 WIFI Thermostat, Thermostat
---	--

[Manuals+.](#)