



Godox X2T-N High-Speed Sync Wireless Flash Trigger Transmitter User Manual

[Home](#) » [Godox](#) » Godox X2T-N High-Speed Sync Wireless Flash Trigger Transmitter User Manual



X2T-N High-Speed Sync Wireless Flash Trigger Transmitter User Manual



Contents [[hide](#)]

- [1 X2T-N High-Speed Sync Wireless Flash Trigger Transmitter](#)
- [2 Foreword](#)
- [3 Names of Parts](#)
- [4 Battery](#)
- [5 Setting the Flash Trigger](#)
- [6 C.Fn: Setting Custom Functions](#)
- [7 Using the Flash Trigger](#)
- [8 Compatible Smartphone Models](#)
- [9 Compatible Flash Models](#)
- [10 The Compatible Camera Models](#)
- [11 Technical Data](#)
- [12 Restore Factory Settings](#)
- [13 Firmware Upgrade](#)
- [14 Caring for Flash Trigger](#)
- [15 Warranty Conditions](#)
- [16 EU Declaration of Conformity](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

X2T-N High-Speed Sync Wireless Flash Trigger Transmitter

Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

✉ www.alza.co.uk/kontakt

☎ +44 (0)203 514 4411

Importer

Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Prague 7, www.alza.cz

Foreword

Thanks for your purchase of this X2T-N wireless flash trigger.

This wireless flash trigger is suitable for using Nikon cameras control Godox flashes with X system e.g. camera flash, outdoor flash, and studio flash. It can also control Nikon original speedlites with the coordination of X1R-N receiver. Featuring multi-channel triggering, stable signal transmission, and sensitive reaction, it gives photographers unparalleled flexibility and control over their setups. The flash trigger applies to hotshoe-mounted Nikon series cameras, as well as the cameras which have PC sync socket.

With X2T-N wireless flash trigger, high speed synchronization is available for most of camera flashes in the market which support i-TTL. The max flash synchronization speed is up to 1/8000s*.

*: 1/8000s is achievable when the camera has a max camera shutter speed of 1/8000s.

Warning


- Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- Always keep this product dry. Do not use in rain or in damp conditions.
- Keep out of reach of children.
- Do not use the flash unit in the presence of flammable gas. In certain circumstance please pay attention to the


relevant warnings.

- Do not leave or store the product if the ambient temperature reads over 50°C.
- Turn off the flash trigger immediately in the event of malfunction.
- Observe precautions when handling batteries.
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.


Names of Parts

Body

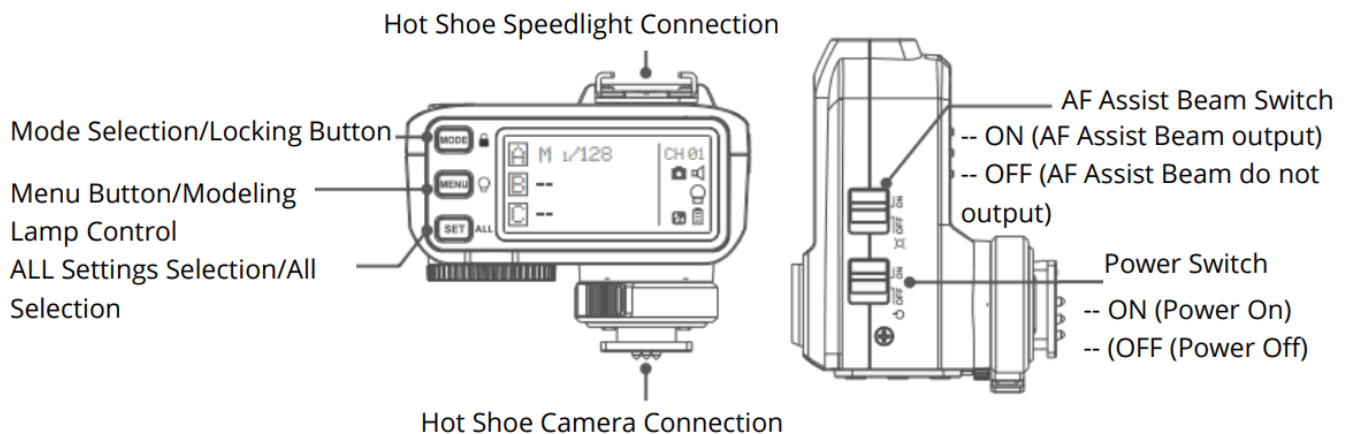

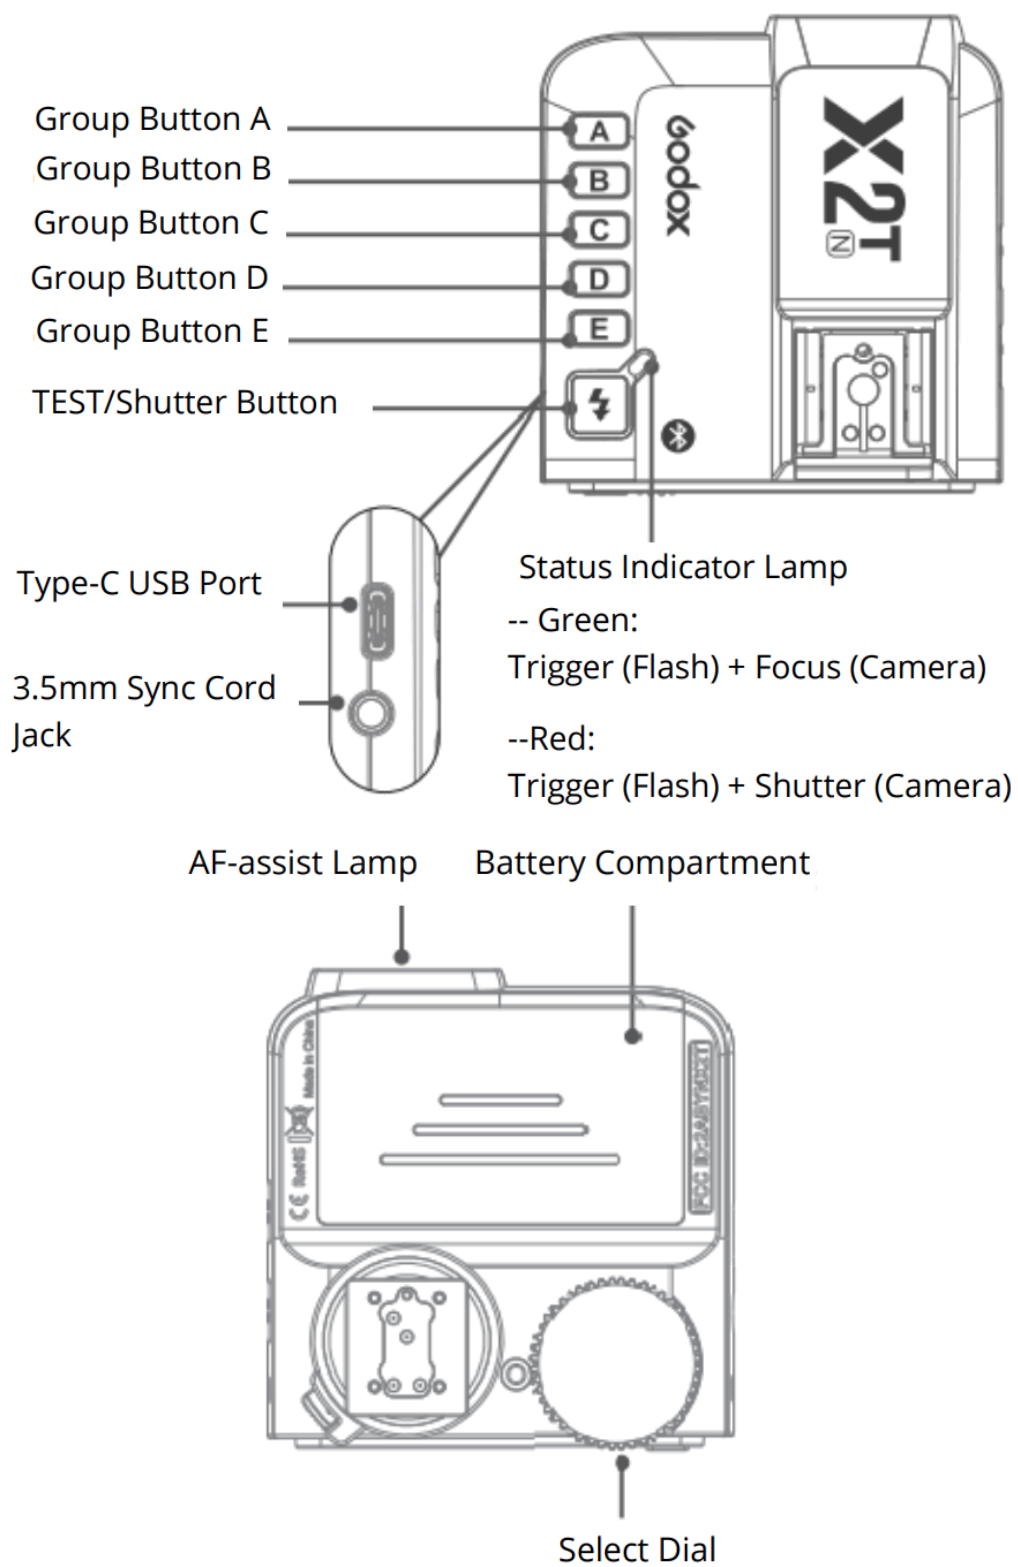

LCD Panel

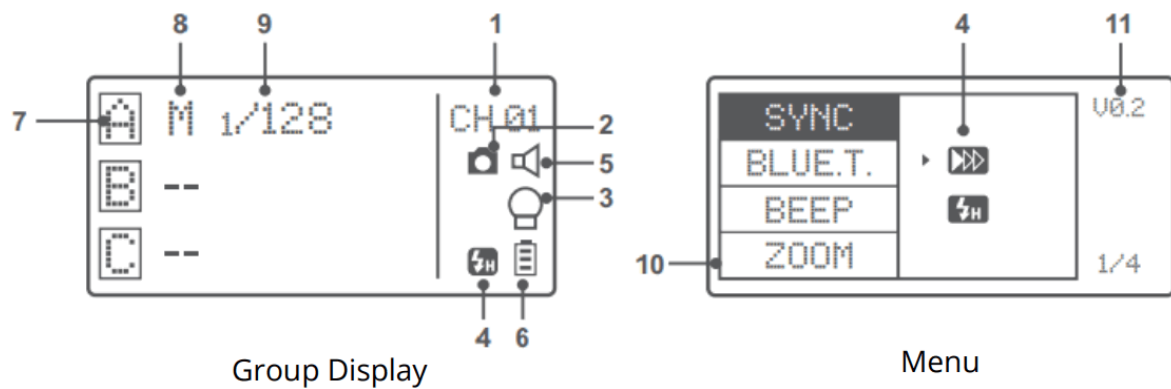


- | | |
|--|--|
| <ul style="list-style-type: none"> 1. Channel (32) 2. Camera Connection 3. Modeling Lamp Master Control 4. High-Speed/Rear Curtain Sync 5. Sound 6. Battery Level Indication | <ul style="list-style-type: none"> 7. Group 8. Mode 9. Power 10. ZOOM Value 11. Version |
|--|--|

Battery

AA alkaline batteries are recommended.

Installing Batterie

As shown in the illustration, slide the battery compartment lid of the flash trigger and insert two AA batteries separately.

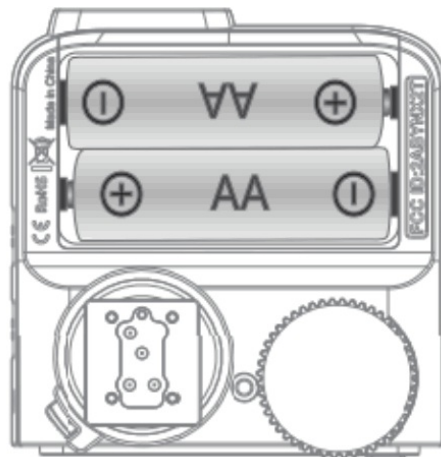

Battery Indication

Check the battery level indication on the LCD panel to see the remaining battery level during the usage.

Battery Level Indication	Meaning
3 grids	Full
2 grids	Middle
1 grid	Low
Blank grid	Low battery, please replace it.
Blinking	<2.5V The battery level is going to be used out immediately (please replace new batteries, as low power lead to no flash or flash missing in case of long distance).

The battery indication only refers to AA alkaline batteries. As the voltage of Ni-MH battery tends to be low, please do not refer to this chart.

Setting the Flash Trigger

Power Switch

Slide the Power Switch to ON, and the device is on, and status indicator lamp will not reveal.

Note: In order to avoid power consumption, turn off the transmitter when not in use.

Automatically Enter Power Saving Mode

- The system will automatically enter standby mode after stop operating the transmitter over 60 seconds. And the displays on the LCD panel disappear now.
- Press any button to wake up. If the flash trigger is attached to the hot shoe of Nikon camera, half press the camera shutter can also wake the system up.

Note: If do not want to enter power saving mode, press the <MENU> button to enter C.Fn custom settings and set STBY to OFF.

Power Switch of AF Assist Beam

Slide the AF-assist beam switch to ON, and the AF lighting is allowed to output. When the camera cannot focus, the AF assist beam will turn on, when the camera can focus, the AF assist beam will turn off.

Channel Setting

- Short press the <MENU> button and choose CH to set the channel value.
- Turn the select dial to choose the appropriate channel. The channel value will be confirmed after exiting the menu.
- This flash trigger contains 32 channels which can be changed from 1 to 32. Set the transmitter and the receiver to the same channel before usage.

Wireless ID Settings

Change the wireless channels and wireless ID to avoid interference for it can only be triggered after the wireless IDs and channels of the master unit and the slave are set to the same.

Press the <MENU> button to enter C.Fn ID. Press the <SET> button to choose OFF channel explosion shutdown, and choose any figure from 01 to 99.


Note: It can only be used when the slave units have the wireless ID settings functions. If they do not have, please set the ID to OFF.

Mode Setting

- After pressing the group button to select one group, press the <MODE> button and all the current group's mode will be changed by the order of TTL/M/–.

Note: Only A/B/C group can be set to TTL mode, the rest two groups can only be set to M/– mode.

- In normal situation, press the <MODE> button to switch the multi-group mode to MULTI mode. Press the group selection button and then press the <MODE> button can set the MULTI mode to ON or OFF.

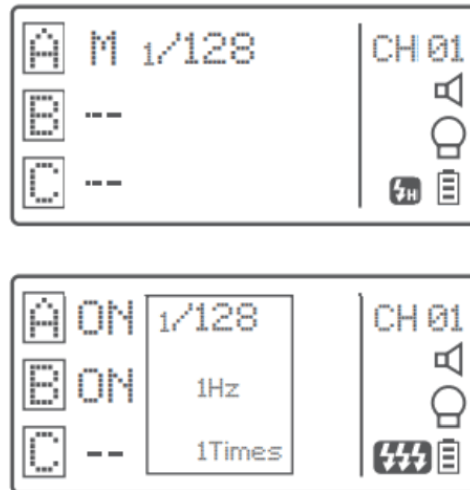

Output Value Settings

In the M mode:

- Press the group button to choose the group, turn the select dial, and the power output value will change from Min to 1/1 in 0.3 stop increments. Press the <SET> button to confirm the setting.
- Press <ALL> button to choose all group's power output value, turn the select dial, and all groups power output value will change from Min to 1/1 in 0.3 stop increments. Press <ALL> button again to confirm the setting.

Note: Min. refers to the minimum value that can be set in M or Multi mode. The minimum value can be set to 1/128 0.3, 1/256 0.3, 1/128/ 0.1, 1/256 0.1 3.0(0.1) and 2.0(0.1) according to C.Fn-Min. For most of camera flashes, the minimum output value is 1/128 and cannot be set to 1/256. However, the value can change to 1/256 when using in combination with Godox strong power flashes e.g. AD600, etc.

Flash Exposure Compensation Settings

In the TTL mode:


Press the group button to choose the group, turn the select dial, and the FEC value will change from -3~3 in 0.3 stop increments. Press the <SET> button to confirm the setting.

Multi Flash Settings (Output Value, Times, and Frequency)

- In the multi flash (TTL and M icon are not displayed).
- The three lines are separately displayed as power output value, Hz (flash frequency) and Times (flash times).
- Press the <SET> button and turn the Select Dial to change the power output value from Min. to 1/4 in integer stops.
- Press the <SET> button again and choose Hz to change flash frequency. Turn the select dial to change the

setting value.

- Press the <SET> button again and choose Times to change flash times. Turn the select dial to change the setting value.
- Until all the amounts are set. Or during any value setting, short press the <SET> button to exit setting status.
- In the multi flash setting submenu, short press the <MODE> button to return to main menu when no values are blinking.

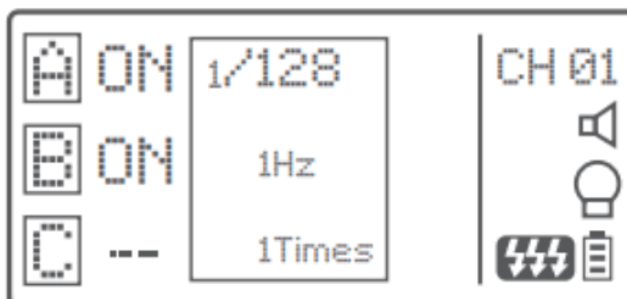

Note: As flash times are restricted by flash output value and flash frequency, the flash times cannot be surpass the upper value that permitted by the system. The times that transported to the receiver end are a real flash time, which is also related to the camera's shutter setting.


Modeling Lamp Settings

Long press the <MENU> button for 2 seconds to control the ON/OFF of the modeling lamp.


ZOOM Value Settings

Short press the <MENU> button to enter the ZOOM menu. Short press the <SET> button and turn the select dial, and the ZOOM value will change from AUTO/24 to 200. Choose the desired value and back to the main menu.

Note: The flash's ZOOM should be set to Auto (A) mode before responding.

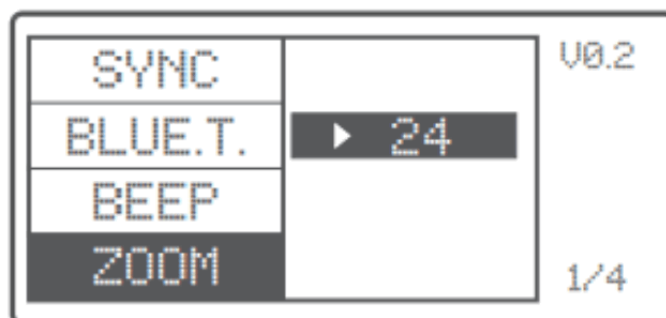


Shutter Sync Settings

-  High-speed sync: short press the <MENU> button to enter the SYNC menu.


Choose high-speed sync icon and  is displayed on the LCD panel.

- Second-curtain sync: short press the < > on Nikon camera, and turn the main command dial until is displayed on the panel. Then, set the camera shutter.

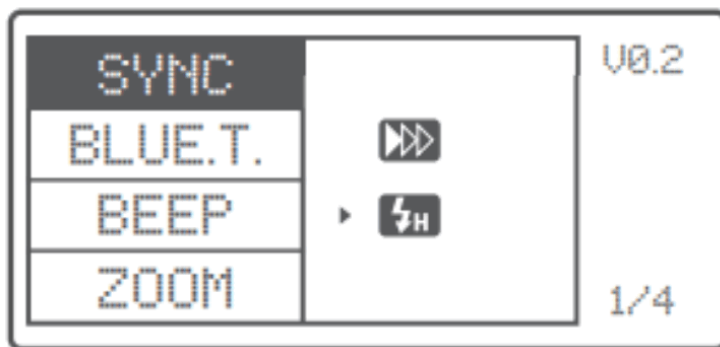


Buzz Settings

Press the <MENU> button to enter C.Fn BEEP and press the <SET> button. Choose ON to turn on the BEEP while OFF to run off it. Press the <MENU> button again to back to the main menu.

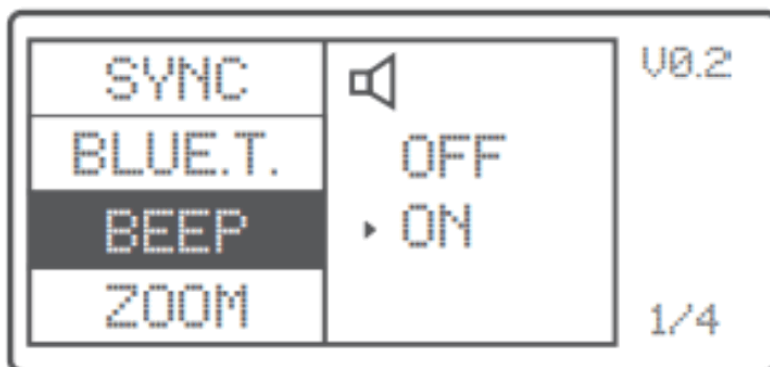

Sync Socket Settings

- Press the <MENU> button to enter C.Fn SYNC and press the <SET> button to choose IN or OUT. Press the <MENU> button again to back to the main menu.
 - When choosing IN, this sync socket will enable X2T-N to trigger flash.
 - When choosing OUT, this sync socket will send trigger signals to trigger other remote control and flash.

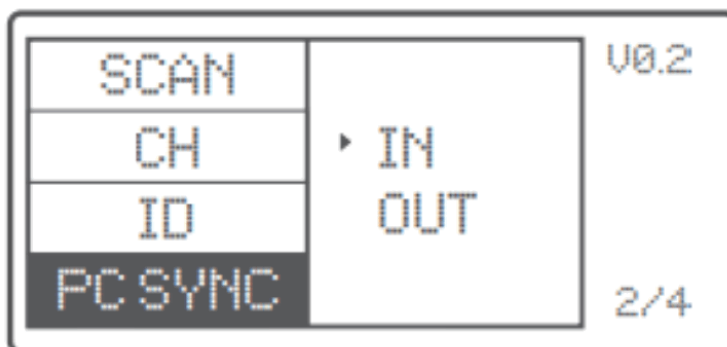

SHOOT Function Settings


Press the <MENU> button to enter C.Fn SHOOT. Press the <SET> button to choose oneshoot or multi-shoots and press the <MENU> button again to back to the main menu.

One-shoot: When shooting, choose one-shoot. In the M and Multi-mode, the master unit only sends triggering signal to the slave unit, which is suitable for one person photography for the advantage of power saving.

Multi-shoots: When shooting, choose multi-shoots, and the master unit will send parameters and triggering



signals to the slave unit, which is suitable for multi person photography. However, this function consumes power quickly.

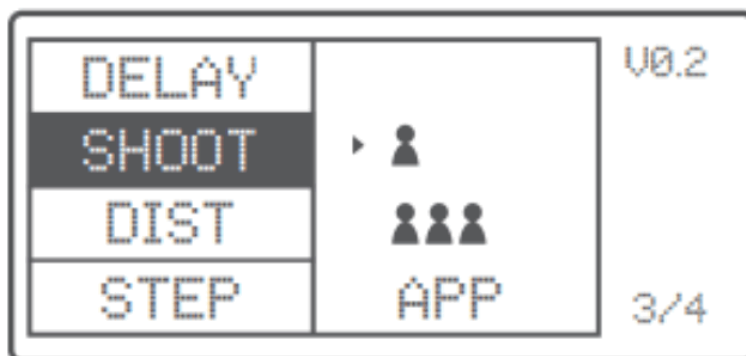APP: Only send triggering signal when camera is shooting (control the flash's parameters by smartphone APP)



C.Fn: Setting Custom Functions

Custom Function	Function	Setting Signs	Setting and Description
SYNC	Shutter sync setting		Front curtain
			High speed
BLUE.T.	Bluetooth status setting	OFF	Off
		ON	On
BEEP	Beeper	ON	On
		OFF	Off
ZOOM	ZOOM setting	24	AUTO/24-200
SCAN	Scan the spare channel	OFF	Off
		START	Start to find the spare channel
CH	Wireless	01	01-32
ID	Channel setting Wireless ID	OFF	Off
		01-99	Choose any figure from 01-99 (the old version flashes cannot use this function temporarily)
PC SYNC	Sync cord jack	IN	Trigger X2T-C to fire flash
		OUT	Output signal to trigger other remote control and flash
DELAY	Delay setting	OFF	Off
		0.1 ms-9.9ms	Set the firing delay in highspeed sync


SHOOT		One-shoot	Only send triggering signals in the M & Multi mode when camera is shooting
		All-shoot	Send parameters and triggering signal when camera is shooting (suitable for multi person photography)
	APP	APP	Only send triggering signal when camera is shooting (control the flash's parameters by smartphone APP)
DIST	Triggering distance	0-30m	0-30m triggering
		1-100m	1-100m triggering
STEP	Power output value	1/128(0.3)	The minimum output is 1/128(change in 0.3 step)
		1/256(0.3)	The minimum output is 1/256(change in 0.3 step)
		1/128(0.1)	The minimum output is 1/128(change in 0.1 step)
		1/256(0.1)	The minimum output is 1/256(change in 0.1 step)
		3.0(0.1)	The minimum output is 3.0(change in 0.1 step)
		2.0(0.1)	The minimum output is 2.0(change in 0.1 step)
GROUP	Group	5 (A-E)	5 groups (A/B/C/D/E)
		3 (A-C)	3 groups (A/B/C)
STBY	Sleep	60sec	60 seconds
		30min	30 minutes
		60min	60 minutes
		OFF	—
LIGHT	Backlighting time	12sec	Auto off in 12 seconds
		OFF	Always off
		ON	Always lighting
LCD	Contrast ration of LCD panel	-3-+3	The contrast ratio can be set as integral number from -3 to +3

Using the Flash Trigger

Ass a Wireless Camera Flash Trigger

Take TT685N as an example:

- Turn off the camera and mount the transmitter on camera hot shoe. Then, power on the flash trigger and the camera.

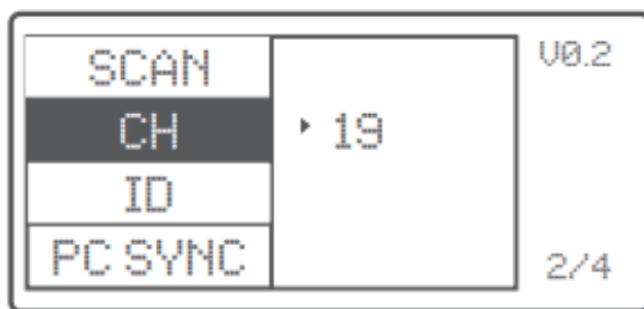

- Short press the <MENU> button to set channel, group, mode and parameters (refers to the contents of “Setting the Flash Trigger”).
- Turn on the camera flash, press the <⚡> wireless setting button and the <((Ⓜ))> wireless icon and <SLAVE> slave unit icon will be displayed on the LCD panel. Press the <CH> button to set the same channel to the flash trigger, and press the <Gr> button to set the same group to the flash trigger. (Note: please refer to the relevant instruction manual when setting the camera flashes of other models).
- Press the camera shutter to trigger and the status lamp of the flash trigger turns red synchronously.



As a Wireless Outdoor Flash Trigger

Take AD600B as an example.

- Turn off the camera and mount the transmitter on camera hot shoe. Then, power on the flash trigger and the camera.
- Short press the <MENU> button to set channel, group, mode and parameter (refers to the contents of “Setting the Flash Trigger”).
- Power on the outdoor flash and press the <⚡> wireless setting button and the <((Ⓜ))> wireless icon will be displayed on the LCD panel. Long press the <GR/CH> button to set the same channel to the flash trigger, and short press the <GR/CH> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the outdoor flashes of other models).
- Press the camera shutter to trigger and the status lamp of the flash trigger turns red synchronously.

As a Wireless Original Flash Trigger

Use Hot Shoe Speedlight Connection to Trigger

- Attach Nikon speedlight on the flash trigger's Hot Shoe Speedlight Connection. For normal use, Nikon speedlight can only be set to i-TTL/M/RPT mode.

Note: the parameters of speedlight on Hot Shoe Speedlight Connection cannot be adjusted by camera flash.

Take SB910 as an example:


- Turn off the camera and mount the transmitter on camera hot shoe. Then, power on the flash trigger and the camera.
- Short press the <MENU> button to set channel, group, mode and parameters (refers to the contents of “Setting the Flash Trigger”).
- Attach the original flash to the X1R-N receiver. Press the <CH> button on the receiver to set the same channel to the flash the trigger and press the <Gr> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the original camera flashes).
- Press the camera shutter to trigger. And the status lamp of the camera flash and the flash trigger both turn red synchronously.

Note: Nikon speedlight must be always set to i-TTL auto mode no matter what the mode of flash trigger is.




As a Wireless Studio Flash Trigger

Take GS400II as an example:

- Turn off the camera and mount the transmitter on camera hot shoe. Then, power on the flash trigger and the camera.
- Short press the <MENU> button to set channel, group, mode and parameters (refers to the contents of “Setting the Flash Trigger”).
- Connect the studio flash to power source and power it on. Synchronously press down the <GR/CH> button and <S1/S2> button and the <  > wireless icon will be displayed on the LCD panel. Long press the <GR/CH> button to set the same channel to the flash trigger, and short press the <GR/CH> button to set the same group to the flash trigger. (Note: please refer to the relevant instruction manual when setting the studio flashes of other models).
- Press the camera shutter to trigger. And the status lamp of the camera flash and the flash trigger both turn red synchronously.

Note: As the studio flash's minimum output value is 1/32, the output value of the flash trigger should be set to or over 1/32. As the studio flash do not have TTL and stroboscopic functions, the flash trigger should be set to M mode in triggering.

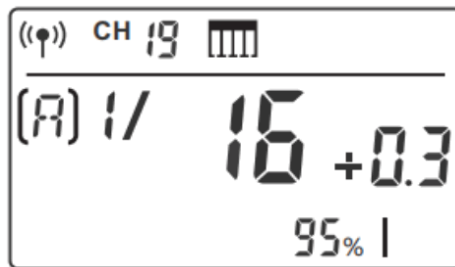

As a Wireless Shutter Release Trigger

Operation method:

- Turn off the camera. Take a camera remote cable and insert one end into the camera's shutter socket and the other end to the shutter release port of X1R-N to connect. Power on the camera and the receiver.
- Short press the <MENU> button to set channel, group, mode, and parameters refers to the contents of "Setting the Flash Trigger").
- Press the receiver's <CH> button to set the same channel to the flash trigger and press the <Gr> button to set the same group to the flash trigger.
- Half press the < ⚡ > button to focus and full press the <TEST> button to shoot.
Release the button until the status lamp turns to red.



As a Flash Trigger with 3.5mm Sync Cord Jack


Operation method:


- The connection method please refers to the contents of "As a Wireless Studio Flash Trigger" and "As a Wireless Shutter Release".
- Set the transmitter end's sync cord jack as an output port. Operation: press the <MENU> button on the transmitter end to enter C.Fn settings. Then, set PC SYNC to OUT mode.
- Press the shutter normally and the flashes will be controlled by sync cord jack's signal.



Connect to Smartphone through Bluetooth

Using method:

- Short press the <MENU> button to enter BLUE.T. to open the Bluetooth. The Bluetooth ID will be displayed under ON.
- Search "Godox Photo" in iPhone's APP store and download the APP. Or install the APP by scanning the QR Code with your smartphone.
- Open the APP and choose .
- Connect the transmitter to the responded Bluetooth ID and enter the password to match (the initial password id "000000").

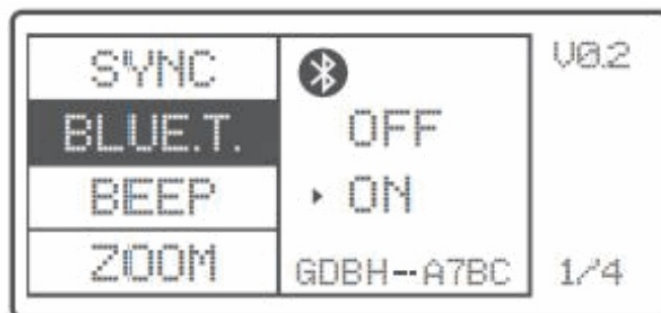

<https://itunes.apple.com/us/app/godoxphoto/id1258982778>

- Full match and back to APP main interface.
- When started the Bluetooth function, the Bluetooth icon will be displayed on the transmitter's panel.
- Set the channels of the slave flash and the transmitter to the same, and parameter e.g. slave flash mode, power value, modeling lamp and beep can be controlled on the APP of the smartphone.
- Use the APP of the smartphone for shooting after setting all the parameter.

Note: When successfully connected the flash trigger and smartphone APP, the auto sleep of the flash trigger

can be set to 30 min.



Compatible Smartphone Models

This flash trigger can be used on the following Smartphone models:

iPhone 6S iPhone 6S Plus iPhone 7 Plus iPhone 7 iPhone 8 Plus
iPhone 8 iPhone 6 Plus iPhone 6 iPhone X
HUAWEI P9 HUAWEI P10 HUAWEI P10 Plus HUAWEI Mate 9 Pro
HUAWEI Mate 9 HUAWEI Mate 10 Pro HUAWEI Mate 10
HUAWEI P20 HUAWEI P20 Pro
Samsung galaxy S8 Samsung galaxy Note8 Samsung galaxy S9















- This table only lists tested Smartphone models, not all Smartphone. For the compatibility of other Smartphone models, a self-test is recommended.
- Rights to modify this table are retained.

Compatible Flash Models

Transmitter	Receiver	Flash	Note
X2T-N	—	AD600 series/AD400 series/AD3601 1 series AD200 seriesN86011 series V/8501 1 V350N/TT685 series/TT600M350N Quicker!! series/QTII/SK 11 series DP 11 series/6511	
	X1 R-N	SB910/SB800/SB5000/SB900 V860 N	As there are so many camera flashes in the market which are compatible with Nikon speedlight, we do not test one by one.
	XTR-1 6	AD360/AR400	The flashes with Godox wireless USB port
		Quicker series/SK series/DP series GT/GS series/Smart flash series	Can only be triggered
	XTR-16S	V860N V850	

Note: The range of support functions: the functions that are both owned by X2T-N and flash.

The relationship of XT wireless system and X2 wireless system:

XT-16 (Code Switch)								
X2 (Display Screen)	CH01	CH02	CH03	CH04	CH05	CH06	CH07	CH08
XT-16 (Code Switch)								
X2 (Display Screen)	CH09	CH10	CH11	CH12	CH13	CH14	CH15	CH16

The Compatible Camera Models

This flash trigger can be used on the following Nikon series camera models:

D5	D4S	Df	D4	D850	D500	D810A
D750	D810	D610	D600	D800	D800 E	D700 D300S
D300	D7500	D7200	D7100	D7000	D5600	D5500
D5300	D5200	D5100	D5000	D3400	D3300	D3200
D3100	D3000	D90	D200	D100	D80	Z7

- This table only lists the tested camera models, not all Nikon series cameras. For the compatibility of other camera models, a self-test is recommended.
- Right to modify this table are retained.

Technical Data

Model	X2T-N
Compatible cameras	Nikon cameras (I-TTL autoflash) Support for the camera that have PC sync socket
Compatible smartphone (sync flash in M mode)	(Phone, Huawei, Samsung (see the compatible smartphone models for details)
Power supply	2*AA batteries
Flash Exposure Control	
TTL autoflash	i-TTL
Manual flash	Yes
Stroboscopic flash	Yes
High-speed sync	Yes
Function	
Flash exposure compensation	Yes, ± 3 stops in 1/3 stop increments Yes
Flash exposure lock	Yes
Focus assist	Yes
Modeling lamp	Yes
Beeper	Yes
Wireless shutter	Control the beeper by the flash trigger. The receiver end can control the camera shooting through the 3.5mm sync cord Jack.
ZOOM setting	Adjust the ZOOM value by the transmitter
Firmware upgrade	Upgrade through the Type-C USB port
Memory function	Settings will be stored 2 seconds after last operation and recover after a restart.
Wireless Flash	
Transmission range (approx.)	0-100m
Built-in wireless	2.4G
Modulation mode	MSK

Channel	32
Wireless ID	Jan-99
Group	5
Other	
Display	Large LCD panel, backlighting ON or OFF
Dimension/Weight	72x70x58mm/90g
2.G Wireless Frequency Range	2413.0MHz-2463.5MHz
Max. Transmitting Power of 2.4G Wireless	5dbm

Restore Factory Settings

Hold the MODE button and power the flash trigger on and all parameters will restore the factory settings.

Firmware Upgrade

This flash trigger supports firmware upgrade through the Type-CUSB port. Updated information will be released on our official website.



- USB connection line is not included in this product. As the USB port is a Type-C USB socket, please use Type-C USB connection line.
- As the firmware upgrade needs the support of Godox G3 software, please download and install the “Godox G3” firmware upgrade software” before upgrading. Then, choose the related firmware file.

Attention

- Unable to trigger flash or camera shutter. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and receiver are set to the same channel, if the hot shoe mount or connection cable is well connected, or if the flash triggers are set to the correct mode.
- Camera shoots but does not focus. Check if the focus mode of the camera or lens is set to MF. If so, set it to AF.
- Signal disturbance or shooting interference. Change a different channel on the device.
- Operating distance limited or flash missing. Check if batteries are exhausted. If so, change them.

The Reason & Solution of Not Triggering in Godox 2.4G Wireless Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G Wi-Fi router, Bluetooth, etc.)

- To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.

Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not (the flash ready indicator is lighten) and the flash is not under the state of over-heat protection or other abnormal situation.

- Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode (a preflash is needed in TTL mode).

Whether the distance between the flash trigger and the flash is too close or not

- Please turn on the “close distance wireless mode” on the flash trigger (<0.5m)
- Please set the C.Fn-DIST to 0-30m.

Whether the flash trigger and the receiver end equipment are in the low battery states or not.

- Please replace the battery (the flash trigger is recommended to use 1.5V disposable alkaline battery).

Caring for Flash Trigger

- Avoid sudden drops. The device may fail to work after strong shocks, impact or excess stress.
- Keep dry. The product isn't waterproof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.
- Avoid sudden temperature changes. Condensation happened if sudden temperature changes such as the circumstance when taking the transceiver out of a building with higher temperature to outside in winter. Please put the transceiver in a handbag or plastic bag beforehand.
- Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters lead to malfunction.

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase. The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

Identification data of the manufacturer's / importer's authorized representative:

Importer: Alza.cz a.s.

Registered office: Jankovcova 1522/53, Holešovice, 170 00 Prague 7

CIN: 27082440

Subject of the declaration:

Title: Flash Trigger

Model / Type: X2T-N

The above product has been tested in accordance with the standard(s) used to demonstrate compliance with the essential requirements laid down in the Directive(s):

Directive No. 2014/53/EU

Directive No. 2011/65/EU as amended 2015/863/EU




WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.





Documents / Resources

 <p>X2T-N</p> <p><small>Nové číslo produktu: X2T-N Staré číslo produktu: X2T-N</small></p>	<p>Godox X2T-N High-Speed Sync Wireless Flash Trigger Transmitter [pdf] User Manual</p> <p>X2T-N High-Speed Sync Wireless Flash Trigger Transmitter, X2T-N, High-Speed Sync Wireless Flash Trigger Transmitter, Flash Trigger Transmitter, Trigger Transmitter</p>
---	--

References

- [alza.at](https://www.alza.at)
- [alza.co.uk](https://www.alza.co.uk)
- [alza.de](https://www.alza.de)

-  alza.hu
-  alza.sk

[Manuals+](#), [home](#) [privacy](#)