

harvest
TEC 735Z
Automatic
Preservative
Applicator



HARVEST TEC 735Z Automatic Preservative Applicator Installation Guide

[Home](#) » [HARVEST TEC](#) » HARVEST TEC 735Z Automatic Preservative Applicator Installation Guide 

Contents

- 1 HARVEST TEC 735Z Automatic Preservative Applicator
- 2 Product Information
- 3 Product Usage Instructions
- 4 Introduction
- 5 Installation of Applicator
- 6 Display Options
- 7 Wiring Diagram – 731, 735Z, 737, 738K, 747, & 749 Models
- 8 Model 735Z Base Kit
- 9 Parts Breakdown for Pump Assembly
- 10 Completed Assembly
- 11 Control Box and Wiring Harnesses
- 12 End of Bale Sensor
- 13 700 Pulsing Solenoid- Round Balers
- 14 Solenoid Packages
- 15 Expanded View of Pulsing Solenoid (002-2203F)
- 16 OPTIONAL High Output Solenoid (Included with 700RBHTK Kit)
- 17 Moisture Sensors Parts Breakdown
- 18 Parts Bag Packages & Hoses
- 19 Hoses
- 20 735Z Spray Shield
- 21 Optional iPad Display Kit
- 22 Optional Android Display Kit (030-1670DK)
- 23 Optional Harvest Tec Display Kit (030-7670DK)
- 24 Harvest Tec LLC. Warranty and Liability Agreement
- 25 FAQ
- 26 Documents / Resources
 - 26.1 References



HARVEST TEC 735Z Automatic Preservative Applicator



Product Information

Specifications

- **Model:** 735Z
- **Type:** Automatic Preservative Applicator
- **Capacity:** 55 Gallons
- **Installation Manual:** 735Z-24-INST-Imp&Metric
- **Tools Needed:** Standard socket set, Side cutter, Crescent wrench, Metal drilling and cutting tools, Standard screwdriver or 5/16 nut driver, Hose cutter, Hammer, Center Punch

Product Usage Instructions

Installation of Applicator

1. Using a lift, bring the assembly up under the cab of the baler.
2. Ensure part 001-4703ZR-D2 aligns with the holes in the front part of the baler.
3. Mark the half-inch holes at the ends of parts 001-4703ZR-A and 001-4703ZR-B that align with the structural parts under the cab.
4. Lower the assembly out of the way and drill these four holes with a 9/16 drill bit. Be cautious not to drill into hydraulic lines or electrical wires.

Mount Pump Plate Assembly

1. Using two 3/8 x 1/4 bolts, locks, washers, and nuts, mount the U-shaped pump plate mount 001-4647 onto the tank saddle in the mounting holes located between the strap brackets on the back of the saddle.
2. Connect the pump plate mounting bracket (001-4648X) using two 3/8 x 1 1/4 bolts, nuts, locks, and flat washers to the mounting bracket.
3. Install the pump plate as shown in the provided figures.

Installation of Plumbing

Details on plumbing installation are not provided in the extracted text. Please refer to the complete user manual for plumbing installation instructions.

Installation of Moisture Sensing Pads

1. If your baler is equipped with bale shaping pads, remove the disc and use existing ones that will need to be drilled to 3/4 (19mm) to install new moisture-sensing discs.
2. If your baler is not equipped with bale shaping pads, drill a hole in the chamber directly behind and above the starting roll.
3. Place a plastic pad as a template for mounting the moisture-sensing discs.
4. Trim the bolt if necessary for proper fit.
5. Tighten all hardware to 50 ft/lbs (68 N/m) and ensure the plastic pad protects all metal surfaces of the disc from touching the baler.
6. Run the moisture wire harness from the pump plate area to each disc and secure it.

Introduction

Congratulations and thank you for purchasing a Harvest Tec Model 735Z applicator. Please read this manual carefully to ensure correct steps are taken to attach the applicator to the baler. This applicator is designed to apply Harvest Tec buffered propionic acid. Use of alternative products may cause complications. Including inaccurate readings from the flow meter and damage to all parts. Resulting in the warranty being void. A parts break down for the applicator is located in the back of the manual.


Tools Needed

- Standard socket set
- Side cutter
- Crescent wrench
- Metal drilling and cutting tools
- Standard screw driver or 5/16" nut driver
- Hose cutter
- Hammer
- Center Punch

Installation of Applicator

Installation of Mounting Brackets and Tank

1. Locate parts 001-4703ZR-A, 001-4703ZR-B, two 001-4703ZR-C and four $\frac{3}{4}$ " x 4 $\frac{1}{2}$ " bolts, lock washers and nut.
2. Line up 001-4703ZR-A and 001-4703ZR-B about 18 inches apart on the ground. Slide part 001-4703ZR-C into square mounts and secure with $\frac{3}{4}$ " x 4 $\frac{1}{2}$ " bolts, locks, and nuts to hold in place. Note there are two sets of $\frac{3}{4}$ " holes on the 001-4703ZR-C. Use
3. the set that is about 18 inches apart.
4. Locate part 001-4703ZR-D1 and two $\frac{1}{2}$ " x 5 $\frac{1}{2}$ " bolts, locks, washers, and nuts. Bolt part 001-4703ZR-D1 to the top of the two 001-4703ZR-C with this hardware.
5. Locate part 001-4703ZR-D2. Bolt to the front of 001-4703ZR-D1 with $\frac{1}{2}$ " x 3 $\frac{1}{2}$ " bolts, washers, locks, and nuts. Do not fully tighten down.
6. Using a lift, bring the assembly up under the cab of the baler. Part 001-4703ZR-D2 should line up with holes in the front part of the baler. Mark the half inch holes at the ends of the 001-4703ZR-A and 001-4703ZR-B that line up with the structural parts under
7. the cab. Lower assembly out of the way and drill these four holes with a $\frac{9}{16}$ " drill bit. (Note. Do not drill into hydraulic lines or electrical wires.
Once holes have been drilled. Lift assembly back up under cab and attach to baler with four $\frac{1}{2}$ " x 3 $\frac{1}{2}$ " bolts, washers on both sides, locks, and nuts. $\frac{3}{4}$ " hardware is provided if you would want to use this. However, part 001-4703ZR-A and 001-4703ZR-B will
8. need to be drilled out for the $\frac{3}{4}$ " bolts. The 001-4703ZR-D2 will attach to the front mount with $\frac{1}{2}$ " x 2" bolts, washers on both sides, locks, and nut.
9. Attach two 001-4703ZR-E to each 001-4703ZR-C (one on each side) sticking out the front of the baler. Use $\frac{3}{4}$ " x 4 $\frac{1}{2}$ " bolts, locks, nuts. Do not fully tighten down yet.
10. Attach 001-4703ZR-G to the 001-4703ZR-E at the height you desire to keep the tank about the windrow. Note the lower the take the closer it is to the windrow coming into the baler. The higher it will obstruct your view. Use $\frac{3}{4}$ " x 4 $\frac{1}{2}$ " bolts, locks, and nuts to secure.
11. Attach 001-4703ZR-G to 001-4703ZR-F with $\frac{1}{2}$ " x 4" Bolts, washers, locks, and nut. Do not fully tighten down. (Note: angles will be pointing toward each other.
12. Place saddle assembly on 001-4703ZR-G and secure with $\frac{1}{2}$ " washer, locks, and nuts.
13. Tighten all hardware down.

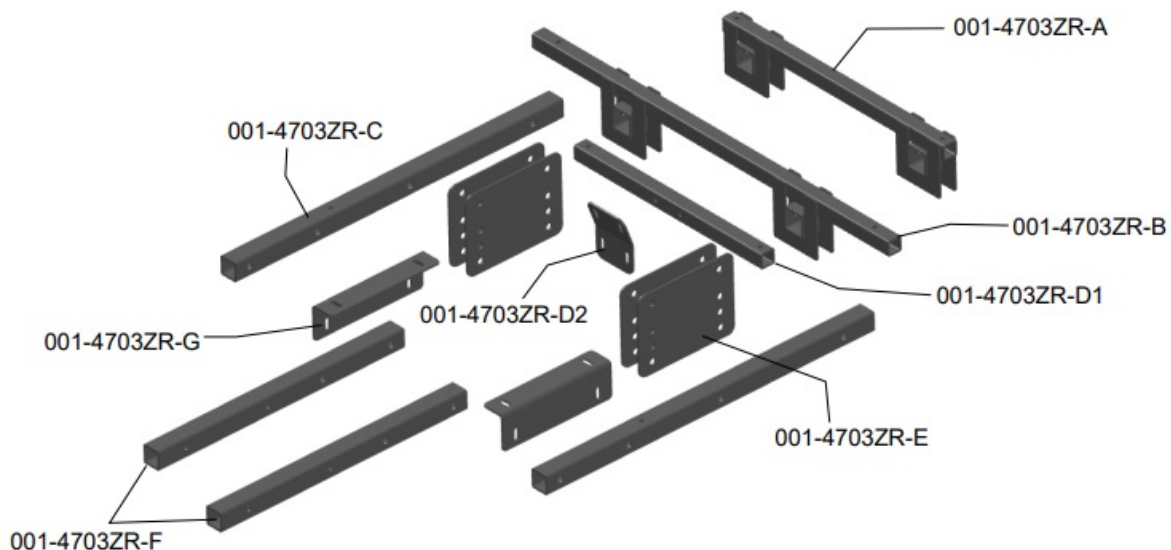



Mount Pump Plate Assembly

- Locate parts bag 8. Using two 3/8" x 1/4" bolts, locks, washers, and nuts. Mount the U-shaped pump plate mount 001-4647 (right) onto the tank saddle in the mounting holes located between the strap brackets on back of saddle (figure 7).
- Connect the pump plate mounting bracket (001-4648X), shown in figure 8, using two 3/8" x 1 1/4" bolts, nuts, locks, and flat washers to the mounting bracket. Install the pump plate as shown completed in figure 9.

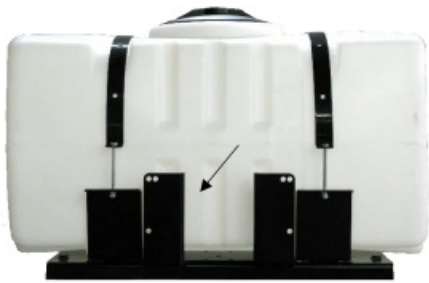


Figure 7



Figure 8

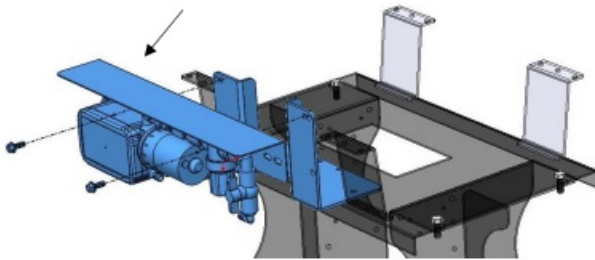


Figure 9


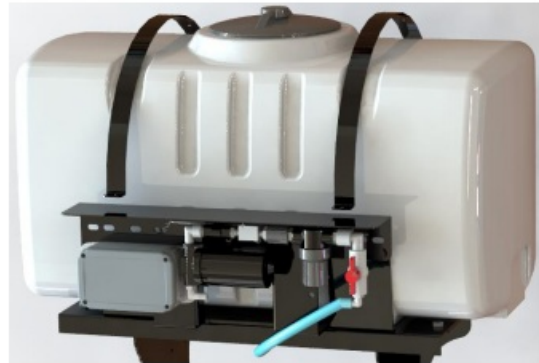


Figure 10

Placement of Spray Nozzle Assembly

- The cross bar on the wind guard above the pick-up head provides a mounting point for the nozzle holders (001-4714). Mount the nozzle holders on the wind guard, using the supplied U bolts (001-4714UBL). Measuring from the center of the baler, the nozzle holders will need to be 6" (15cm) apart on a 4' (1.2M) and 9" (23cm) apart on a 5' (1.5M). Do not fully tighten.
- Position the nozzle holders so that the tips spray in a horizontal direction over the top of the baler's pickup. The tips should be located so that they will be between 14" and 18" (35 – 45 cm) from the normal path of hay. Make sure the nozzle holders do not interfere with the tying system. *It is recommended to test the system with water prior to field operation. This will ensure the fan pattern from the tips reaches the outside edges of the pickup while having a slight overlap in the center.

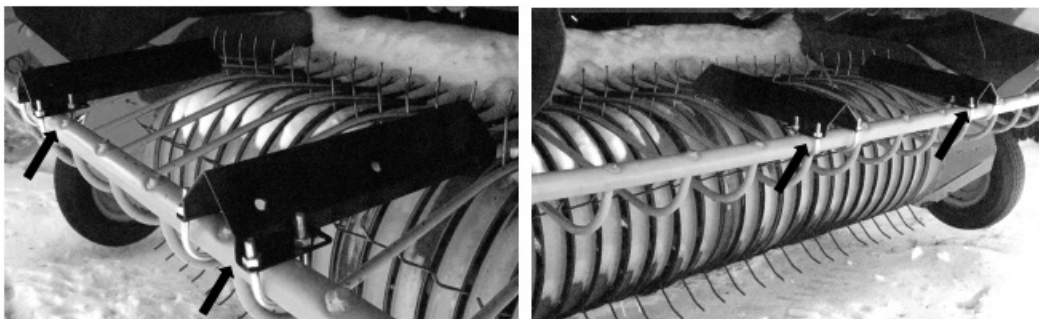

Installation of Plumbing

1. Intake

Locate parts bag 16. Use the 003-EL3412 on the bottom of the tank to route 1/2" line (002-9001) to the 003-A1212 or 003-EL1212 fitting used on the ball valve attached to the pump plate. Attach hose clamps (003-9003)

on both of the fittings.

2. Discharge

Route the 1/2" hose from the pump output toward the front of the baler and connect to the solenoid assembly (SOL-3SP-A). Secure the solenoid assembly and hose along baler, positioning the solenoid as close to the spray tips as possible while remaining in an accessible location. Connect the 1/4" hose to the outgoing side of the solenoid to tip assembly.

3. Low, Standard and High Output Tips

- Your baler comes standard with one set of tips.
- Optional High Output Tip kit 700RBHTK is available for increased application rates.


Installation of Moisture Sensing Pads

*Most balers will have a moisture system already installed on the baler. If not, follow the instructions below. Note: If your baler does have a factory moisture system installed. You can use the factory moisture disc. However, you will need to disconnect the wires leading to both sensors and tape them up. You cannot have the balers moisture wires and Harvest Tec's moisture wires connected to the moisture disc at the same time.



Figure 1


1. If your baler is equipped with bale shaping pads, remove disc and use existing that will need to be drilled to 3/4" (19mm) to install new moisture sensing discs. If the discs are welded, the welds will need to ground off for disc removal.
2. If your baler is not equipped with bale shaping pads you will need to drill a hole in the chamber directly behind and above the starting roll (Figure 1).
3. The mounting hole will be 3/4" (19mm) in diameter. Use a plastic pad (006-4641F) and place it into the baler to use as a template. The bottom edge of the pad will be placed 1" (25mm) up from starting roll and 2" (51mm) from the back of the bale chamber. (Figure 1)

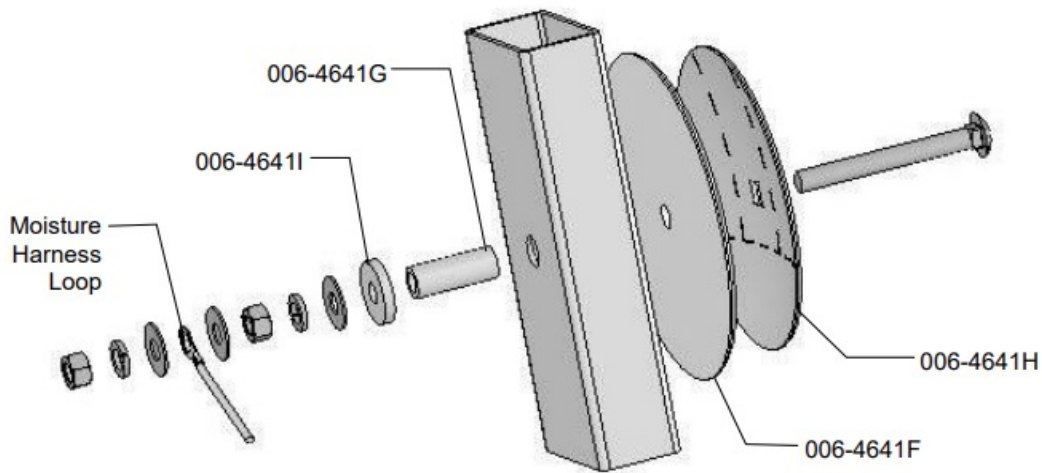

4. Depending on the baler the bolt may need to be trimmed for proper fit.
5. Tighten all of the hardware to 50 ft/lbs (68 N/m).
6. Make sure that the plastic pad is protecting all metal surfaces of the disc from touching baler.
7. Run the moisture wire harness (006-7307RB1) from pump plate area to each disc and secure
8. Apply silicone over nuts and washers.


Installation of End of Bale Sensor

- The bale rate timer/ end of bale sensor is used to determine when the baler door is open upon bale completion. With this information the system is able to change the tons/hour automatically (see Operating Instructions, Automatic Mode).
- Locate the sensor (006-7401) and the sensor bracket (001-4648RB). On the right side of the baler find a location 1"– 6" down from the pivot point, in a well-suited place, to mount the bracket. Check for clearance with hydraulic cylinders before mounting the
- bracket. The bracket should be mounted to the front side of the hinge point, with the sensor aligned over the back door.
- Mark and drill two 1/4" (7mm) holes and install the bracket using two 5/16" x1/4" self-tapping bolts.
- Install the sensor into the bracket and leave 1/4" (7mm) of clearance between the end of the sensor and the door.
- The harness will need to be routed towards the Processor. Secure with cable ties and take care to avoid pinch points. The harness extension (006-7401EXT) may need to be used.

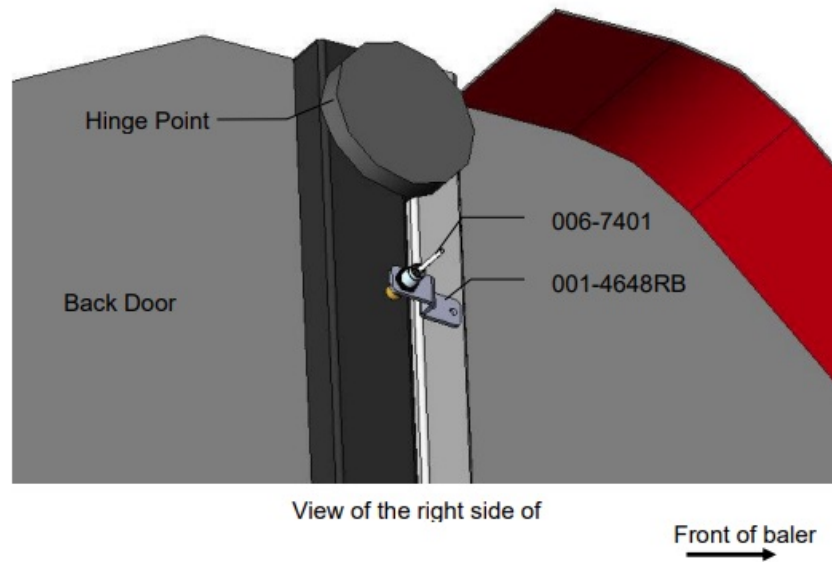

*Additional parts and harness extensions have been included to allow you to easily disconnect the baler unit from the power unit, use as needed.

Tractor Setup


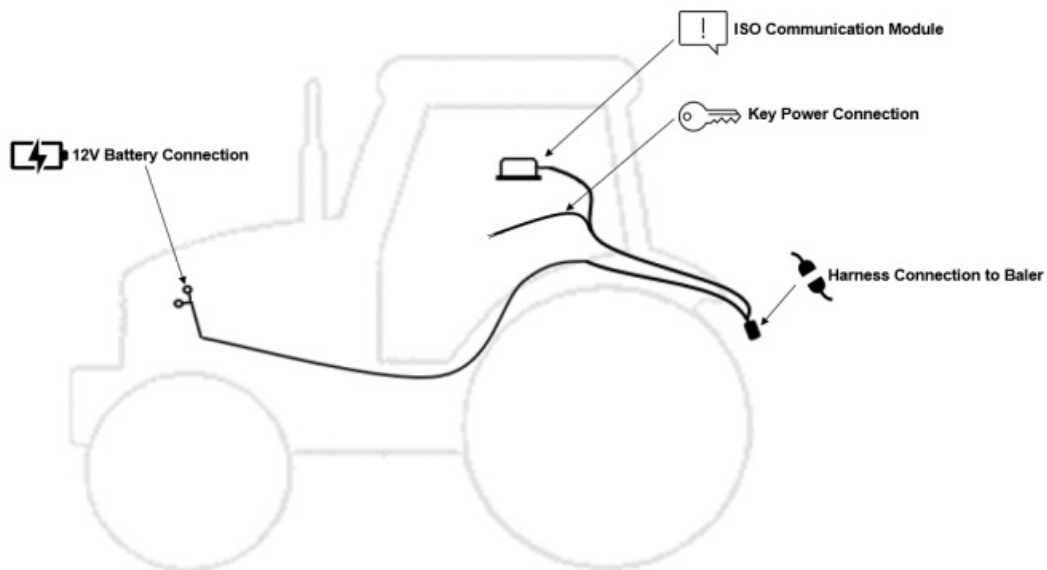


The general tractor setup of the 700 Series applicator can be seen above. The main harness of interest is the tractor power/communication harness (006-7651C). This harness will connect at the tractor battery, to the ISO Communication Module (ICM) mounted in the cab, a keyed power connection point, and connect at the hitch area to the baler power/communication harness (006-765B).

View below to see highlighted installation instructions:

- 12V Battery Connection:** The 12V battery connection must be at the tractor battery. Connection to alternative locations such as an accessory port can cause problems with applicator system.
 MUST BE CONNECTED DIRECT TO TRACTOR BATTERY TERMINALS
- ISO Communication Module:** The ISO communication module is to be mounted inside the cab. Other mounting locations can lead to issues with weathering and operation. Once installed and the system is powered, a green light will turn on with the ICM module.

- **Key Power Connection:** Ensure a solid keyed connection is found inside the cab and wired into. Poor keyed power connection can result in applicator system issues.
- **Harness Connection to Baler:** The tractor harness connects at the hitch to baler power/communication harness (006-765B). This will allow the system components to communicate with one another. Ensure connections are debris and corrosion free.

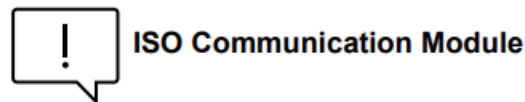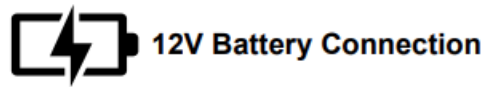

Display Options

Optional Harvest Tec Display



The 700 series Harvest Tec Display will allow you to set your real time baling parameters to ensure the most precise application to every bale. This is done by utilizing the improved touch technology to select objects, enter data, and swipe through operational screens. The Harvest Tec Display offers easy integration by connecting to the additional CAN plug on the 006-765IC harness. Once, connected the Harvest Tec display will power up with applicator system.

Note: The Harvest Tec Display must be used as a standalone display, the baler cannot run both integrated and on the Harvest Tec Display. Must be one or the other. Removal of the 006-765VA or integration harness is required when equipped. 006-770R Terminator must be placed on only one CAN/IDM port on the baler harness.

Optional Tablet Display




The iOS or Android Tablet displays offer the ability to communicate with the 700 series applicator system via a hard-wired connection to the ISO Communication Module (ICM). Recommended to use a quality communication cable to connect with the IIC- adapters are not supported. Through the free Precision Baling App, the operator can set real time baling parameters to ensure the most precise application to every bale. This provides a multi-use option while utilizing the improved app to select objects, enter data, and easily switch through operational screens. The Tablet Display offers easy integration by connecting a charging cable to the USB port on the ICM module. Once connected the Harvest Tec applicator will display upon opening the app and powering up the applicator system. Tablets can be used in addition to integrated baler VT display. Required to be running a current supported iOS operating system.

*iPad is a trademark of Apple Inc., registered in the U.S. and other countries.

Wiring Diagram – 731, 735Z, 737, 738K, 747, & 749 Models


1. Connect the power harness (006-765IC) to the tractor battery (12 volt) using the red wire with fuse to the positive side and the black wire to the negative.
 1. The power harness must be connected to the battery!
CONTACT HARVEST TEC BEFORE MODIFICATIONS.
 2. The unit will draw more amps than convenience outlets can handle. Any modifications of the power harness will void systems warranty*
 3. This unit will not function on positive ground tractors.
 4. If the unit loses power while operating it will not keep track of accumulated pounds of product used.
2. The power harness on the tractor (006-765IC) will run from the tractor battery to the hitch. The power harness on the baler (006-763B) will connect to the tractor power harness (006-765IC) at the hitch.
3. Connect the keyed power wire (006-765CPH) to a keyed power source on the tractor.
4. The keyed power wire must connect to a keyed source or the unit will not power up correctly.
5. Attached the ISO Communication Module (006-6673) to the tractor power harness (006-765IC).
6. Attach the End of Bale (EOB) connection on baler harness (006-763B) to the EOB Sensor (006-7401).
7. Attach the Solenoid (SOL 1) connections on the baler harness (006-763B) and to the solenoids (002-2203F).
8. Attach the Flowmeter (006-4724A) to the Pump Module connection on pump plate assembly.
9. Attach the rubber molded connector on pump plate to the Pump (007-4120DE).
10. Attach moisture disc harness (006-7307RB) connection to the IPM and connect to Moisture Discs
11. Ensure 006-700R terminator is connected to CAN/IDM port on 006-763B harness

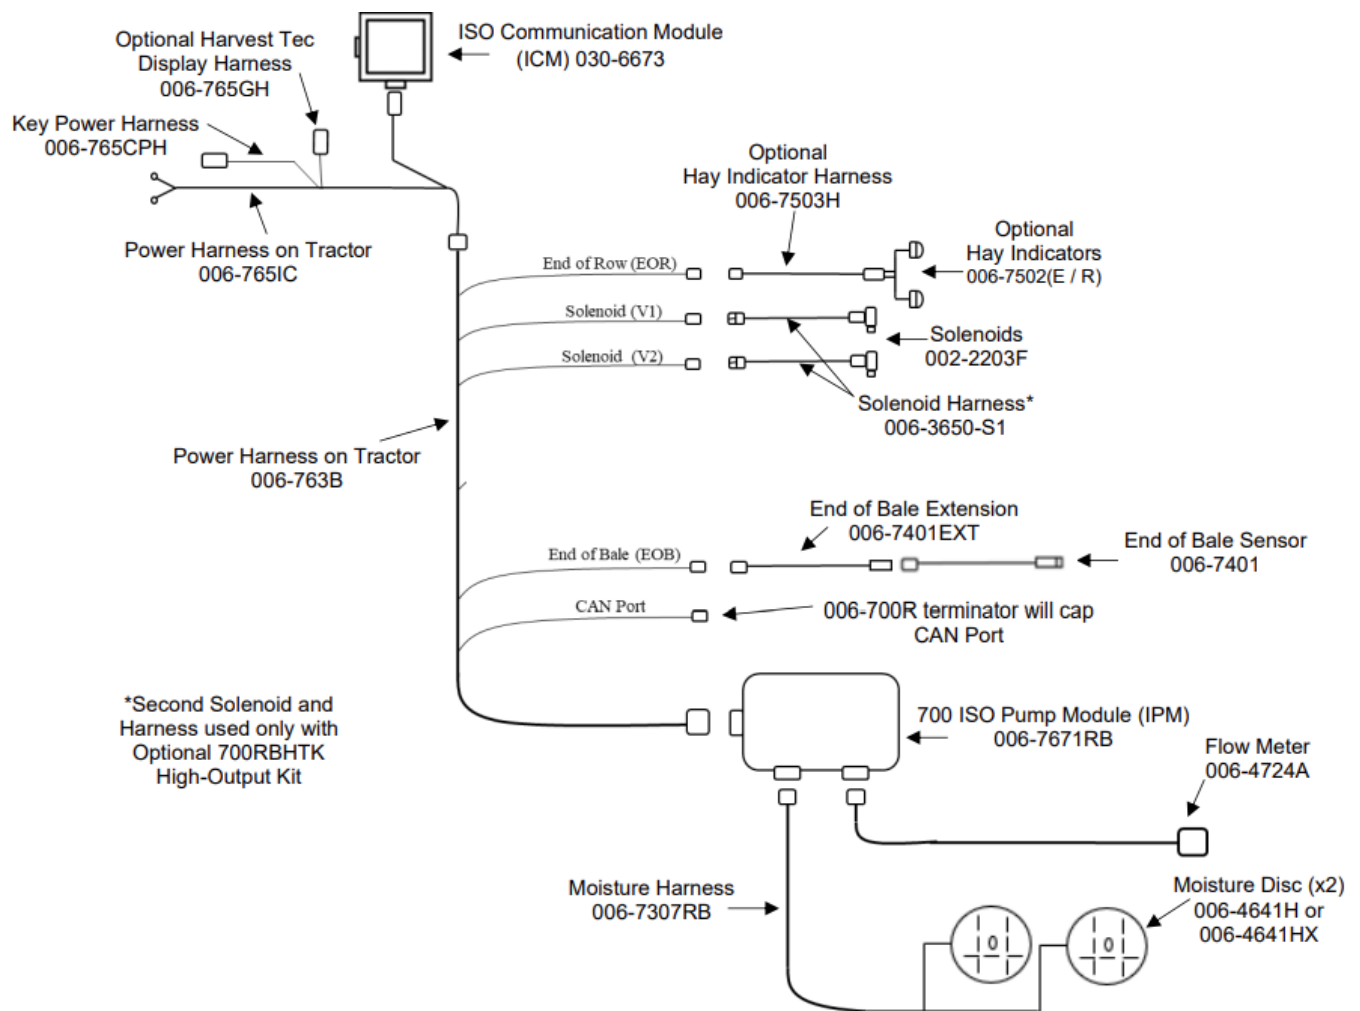

Pin Outs

Integrated Control Module (ICM) on Tractor Harness 006-765IC


(Deutsch Plug Number: DTM06-12SA)

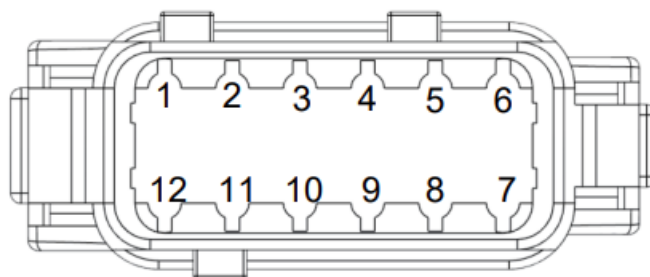

Pin 1	Red	+12V from ECU
Pin 2	Purple	Signal Wire
Pin 3	Red/White	+12V CAN X
Pin 4	Black/White	Ground CAN X
Pin 5	Orange	CAN X Hi
Pin 6	Blue	CAN X Lo
Pin 7	Green	ISO CAN Lo
Pin 8	Yellow	ISO CAN Hi
Pin 9	White	GPS Expansion 1
Pin 10	Gray	GPS Expansion 2
Pin 11	Brown	GPS Expansion 3
Pin 12	Black	Ground from ECU

ISOBUS Plug on Tractor Harness 006-7651C


(Deutsch Plug Number: DT04-4P)

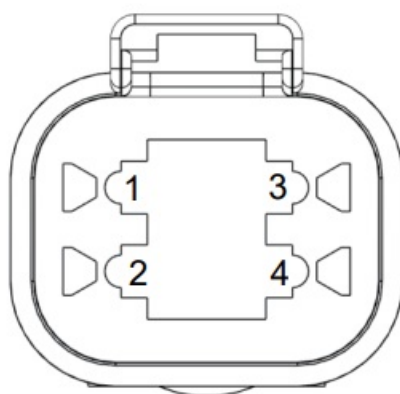

Pin 1	Red	+12V from ECU
Pin 2	Yellow	ISO CAN Hi
Pin 3	Green	ISO CAN Lo
Pin 4	Black	Ground from ECU


Power / Communication Tractor Harness 006-7651C at Hitch

(Deutsch Plug Number: HDP24-24-18PN)

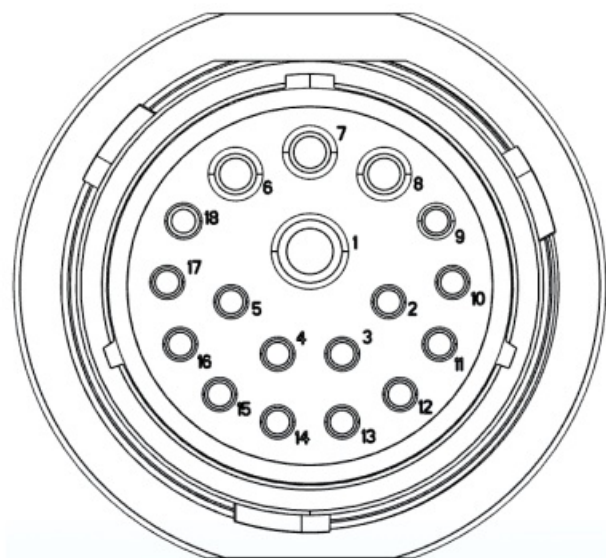


Pin 1	Not Used	---
Pin 2	Yellow	ISO CAN Hi
Pin 3	Green	ISO CAN Lo
Pin 4	Red	+12V Power to ECU
Pin 5	Black	Ground to ECU
Pin 6	Red	+12V From Battery
Pin 7	Not Used	---
Pin 8	Black	Ground From Battery
Pin 9	Not Used	---
Pin 10	Purple	Signal Wire
Pin 11	Red/White	+12V CAN X
Pin 12	Black/White	Ground CAN X
Pin 13	Orange	CAN X Hi
Pin 14	Blue	CAN X Lo
Pin 15	White	GPS Expansion 1
Pin 16	Gray	GPS Expansion 2
Pin 17	Brown	GPS Expansion 3
Pin 18	Not Used	---

Power / Communication Baler Harness 006-763B at Hitch
 (Deutsch Plug Number: HDP26-24-18SN)

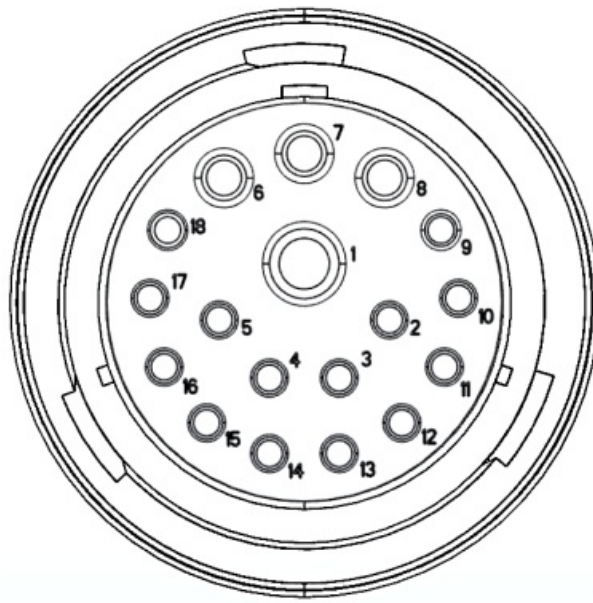

Pin 1	Not Used	—
Pin 2	Yellow	ISO CAN Hi
Pin 3	Green	ISO CAN Lo
Pin 4	Red	+12V Power to ECU
Pin 5	Black	Ground to ECU
Pin 6	Red	+12V From Battery
Pin 7	Not Used	—
Pin 8	Black	Ground From Battery
Pin 9	Not Used	—
Pin 10	Not Used	—
Pin 11	Not Used	—
Pin 12	Not Used	—
Pin 13	Not Used	—
Pin 14	Not Used	—
Pin 15	Not Used	—
Pin 16	Not Used	—
Pin 17	Not Used	—
Pin 18	Not Used	—


Power / Communication Baler Harness 006-763B at IPM Module
 (Deutsch Plug Number: HDP24-24-18PN)

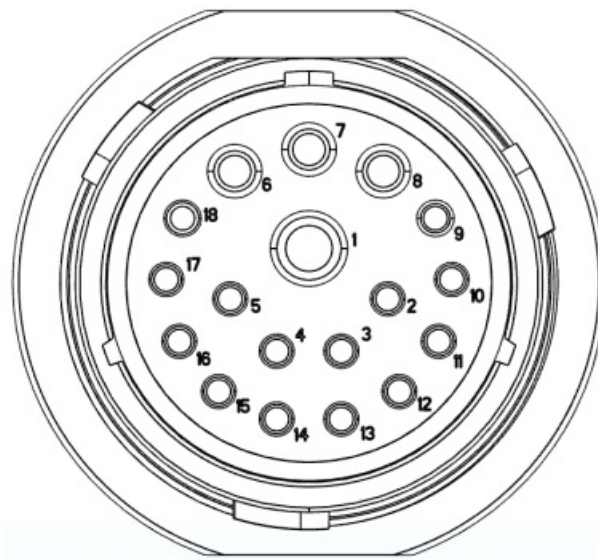

Pin 1	Not Used	—
Pin 2	Yellow	ISO CAN Hi
Pin 3	Green	ISO CAN Lo
Pin 4	Red	+12V Power to ECU
Pin 5	Black	Ground to ECU
Pin 6	Red	+12V From Battery
Pin 7	Not Used	—
Pin 8	Black	Ground From Battery
Pin 9	Not Used	—
Pin 10	Orange/White	+12V Power to EOR
Pin 11	Orange/Black	Ground to EOR
Pin 12	Purple/Green	EOR Signal
Pin 13	Blue/White	EOB Signal
Pin 14	Gray/Red	+12V Power to Solenoid 1
Pin 15	White/Black	Ground to Solenoid 1
Pin 16	Orange/Red	+12V Power to Solenoid 2
Pin 17	White/Black	Ground to Solenoid 2
Pin 18	Not Used	—

*IPM Module Whip Plug- Pin # 5 Not Used

Solenoid 1 Plug on Baler Harness 006-763B
 (Deutsch Plug Number: APTIV 12052641)

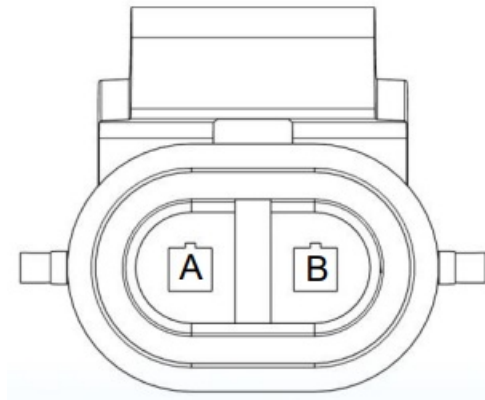

- Pin B Gray/Red +12V to Solenoid 1
- Pin A White/Black Ground to Solenoid 1


Solenoid 2 Plug on Baler Harness 006-763B

(Deutsch Plug Number: APTIV 12052641)

- Pin B Orange/Red +12V to Solenoid 2
- Pin A White/Black Ground to Solenoid 2

CAN / IDM on Baler Harness 006-763B


(Deutsch Plug Number: DT06-4S)

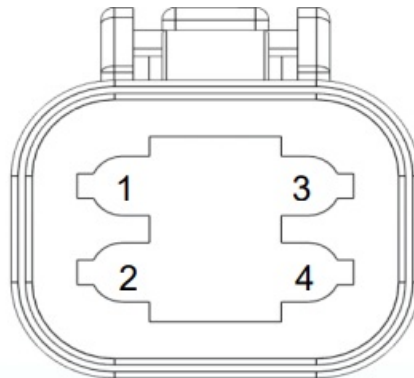

Pin 1	Red	+12V to ECU
Pin 2	Yellow	ISO CAN Hi
Pin 3	Green	ISO CAN Lo
Pin 4	Black	Ground to ECU

End of Bale Sensor Plug on Baler Harness 006-763B

(Deutsch Plug Number: DT06-3S)

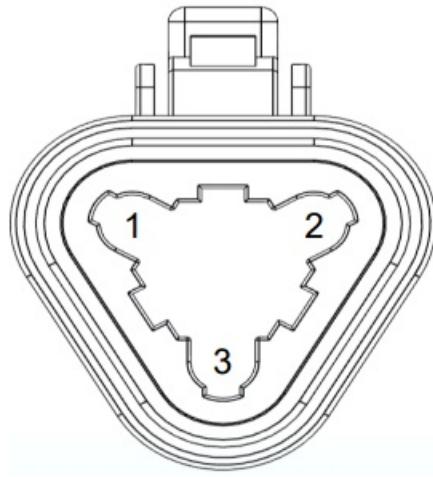

Pin 1	Orange/White		+12V to End of Bale Sensors
Pin 2	Orange/Black		Ground to End of Bale Sensors
Pin 3	Blue/White		Signal


CAN / IDM on Baler Harness 006-763B

(Deutsch Plug Number: DT06-4S)


Pin 1	Orange/White	+12V to End of Bale Sensors
Pin 2	Orange/Black	Ground to End of Bale Sensors
Pin 3	Purple/Green	Signal

Pump Connection on 700 Controller Harness (16 AWG Two-Wire Plug)


- Pin 1 Red Power to Pump
- Pin 2 Black Ground to Pump

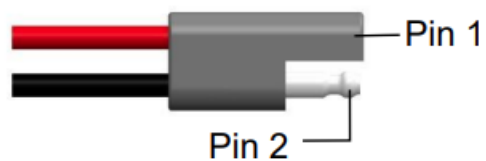

Model 735Z Base Kit

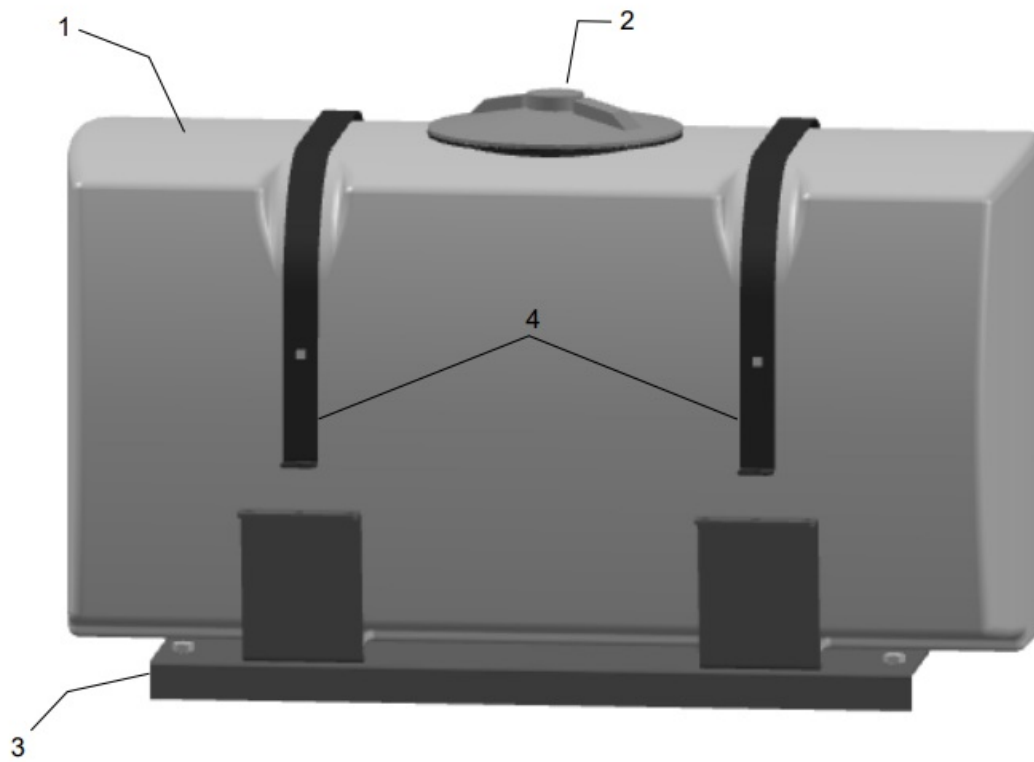


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	50 Gallon Tank	005-9203SQ	1	7	Side Rail Plate	001-4703ZR-E	4
2	Tank Cap, Gasket, & Breather	P05-9022HBG	1	8	Front Mount Support	001-4703ZR-D2	1
3	Tank Saddle	001-4703X	1	9	Front Mount Crossmember	001-4703ZR-D1	1
4	Tank Strap	001-4402	2	10	Long Side Rail	001-4703ZR-C	2
5	Tank Saddle Support	001-4703ZE-G	2	11	Mid Mount	001-4703ZR-B	1
6	Short Side Rail	001-4703ZR-F	2	12	Rear Mount	001-4703ZR-A	1
				NP	Hex Plug	003-F34	1
					Complete Kit	030-0445Z-TK	

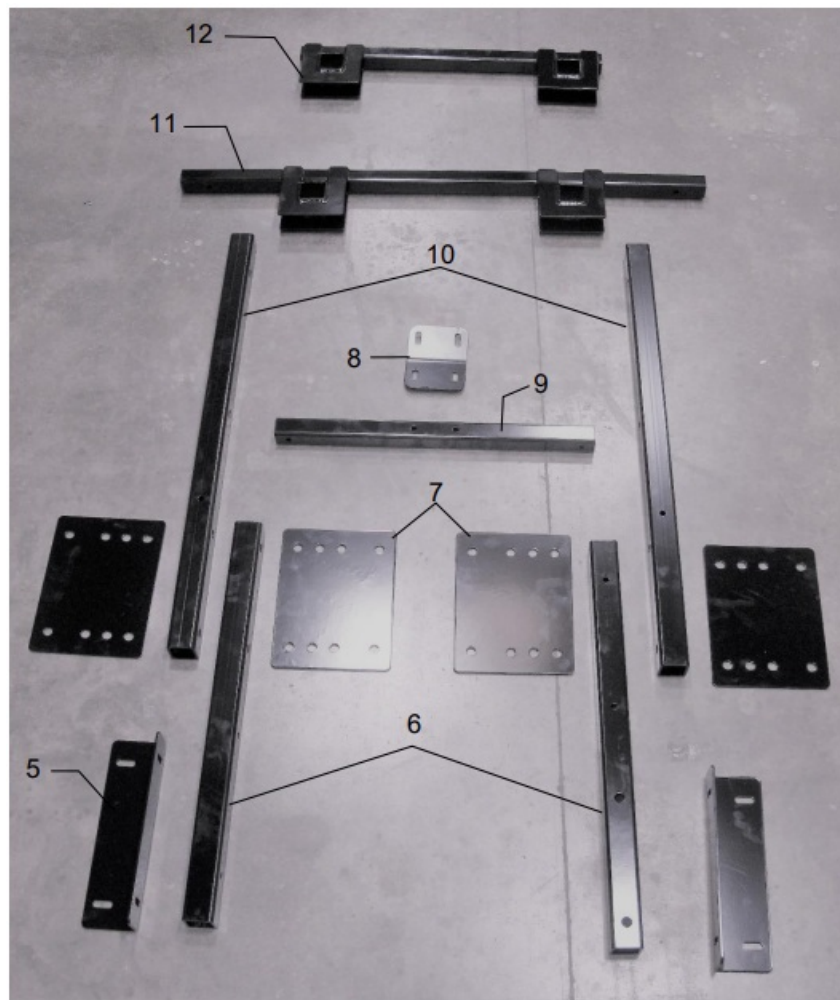


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	50 Gallon Tank	005-9203SQ	1	7	Side Rail Plate	001-4703ZR-E	4
2	Tank Cap, Gasket, & Breather	P05-9022HBG	1	8	Front Mount Support	001-4703ZR-D2	1
3	Tank Saddle	001-4703X	1	9	Front Mount Crossmember	001-4703ZR-D1	1
4	Tank Strap	001-4402	2	10	Long Side Rail	001-4703ZR-C	2
5	Tank Saddle Support	001-4703ZE-G	2	11	Mid Mount	001-4703ZR-B	1
6	Short Side Rail	001-4703ZR-F	2	12	Rear Mount	001-4703ZR-A	1
				NP	Hex Plug	003-F34	1
					Complete Kit	030-0445Z-TK	

Parts Breakdown for Pump Assembly

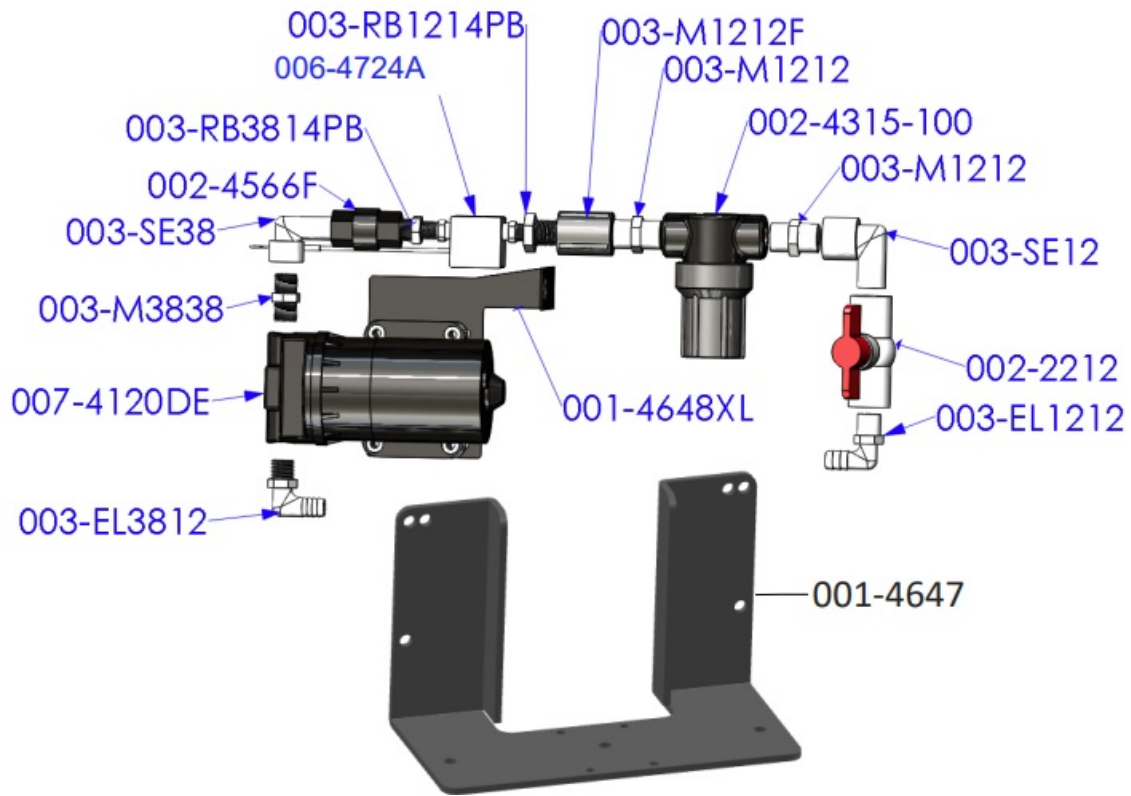

<u>Part#</u>	<u>Description</u>	<u>Qty</u>	<u>Part#</u>	<u>Description</u>	<u>Qty</u>
003-EL3812	3/8" MPT X 1/2" HB Elbow	1	003-M1212	1/2" Union	2
007-4120DE	300 Series Pump	1	002-4315-100	1/2" Line Strainer-100 Mesh	1
003-M3838	3/8" x 3/8" Union	1	003-SE12	1/2" Street Elbow	1
003-SE38	3/8" Street Elbow	1	002-2212	1/2" Ball Valve	1
002-4566F	3/8" Check Valve	1	003-EL1212	1/2" MPT x 1/2" HB	1
003-RB3814PB	RB 3/8" x 1/4" Reducer	1	001-4648XL	300 Pump Support	1
006-4724A	Flow Meter – Deutsch Plug	1	001-4648X	Pump Plate Mount	1
003-RB1214PB	RB 1/2" x 1/4" Reducer	1	003-A1212	Not Pictured	
003-M1212F	1/2" Coupler	1	003-A3812	Not Pictured	
			Pump Assembly PMP-7636P (001-4647 Not Included)		

Completed Assembly

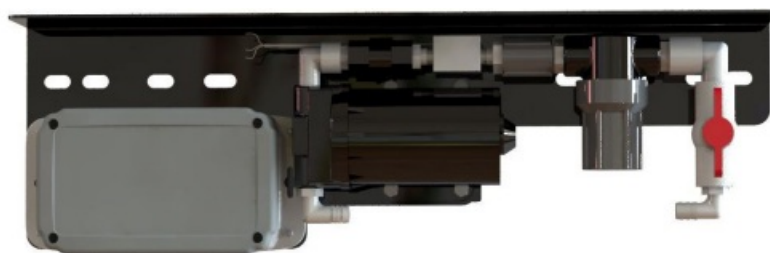


***Note:** Due to alternative baler designs, elbow 003-EL3812 can be replaced by straight fitting 003-A3812. As well as elbow 003-EL1212 can be replaced by straight fitting 003-A1212. Both straight fittings are included.

Control Box and Wiring Harnesses




<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Power Lead Baler 20	006-762B	1	NP	120 Ohn Resistor	006-700R*	1
2	Power Lead Tractor	006-765IC	1	NP	Dust Plug Kit	006-765DP	1
3	Key Switch Wire	006-765CPH	1	NP	Lightning to USB-A Cable	006-6672USBC	1
4	ISO Pump Module	006-7671RB	1	NP	Optional USB-C to USB-A Communication Cable	006-6672USBX	1
5	ISO Communication Module	006-6673	1				
					*006-700R installation on 006-762B harness is required at all times when operating the small square 700 series applicator		

End of Bale Sensor

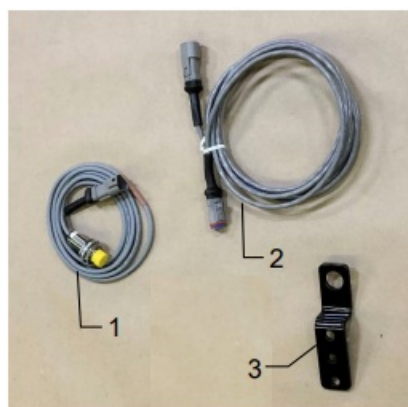

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	End of Bale Sensor	006-7401	1
2	EOB Extension	006-7401EXT	1
3	End of Bale Bracket	001-4648RB	1
Complete Assembly		EOB-7RB-A	

700 Pulsing Solenoid- Round Balers

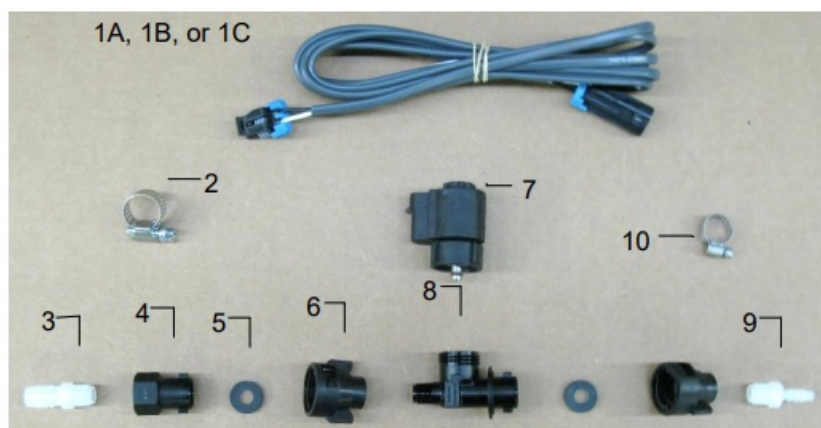

Solenoid Packages

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1A	Solenoid Harness (5')	006-3650-S1		6	1/4" Female Disconnect	004-1207H	2
1B	Solenoid Harness (10')	006-3650-S2		7	Solenoid	002-2203F	1
1C	Solenoid Harness (15')	006-3650-S3		8	Solenoid Valve Body	004-1207VF	1
2	#6 Hose Clamp	003-9003	1	9	1/4" x 1/4" Straight Fitting	003-A1414	1
3	1/4"x1/2" Straight Fitting	003-A1412	1	10	Mini Hose Clamp	003-9002	1
4	1/4" Female Connector	004-1207G	1				
5	Rubber Washer	004-1207W	2	Complete Assembly Pkg. A		SOL-3SP-A	
				Complete Assembly Pkg. B		SOL-3SP-B	
				Complete Assembly Pkg. C		SOL-3SP-C	

Expanded View of Pulsing Solenoid (002-2203F)


Replacement Pulsing Solenoid O-Ring Kit available (002-2203FG) (Includes EPDM O-Rings 6, 8, 9 shown below)



To clean solenoid valves:



The Center Section can be removed from Housing #2 by loosening #1 from #3. Once removed, use wrenches on components #3 and #7 and gently turn to loosen and separate. Soak parts #3-10 in warm soapy water, clean with a soft bristle brush, rinse with clean water to remove buildup before reassembly

OPTIONAL High Output Solenoid (Included with 700RBHTK Kit)

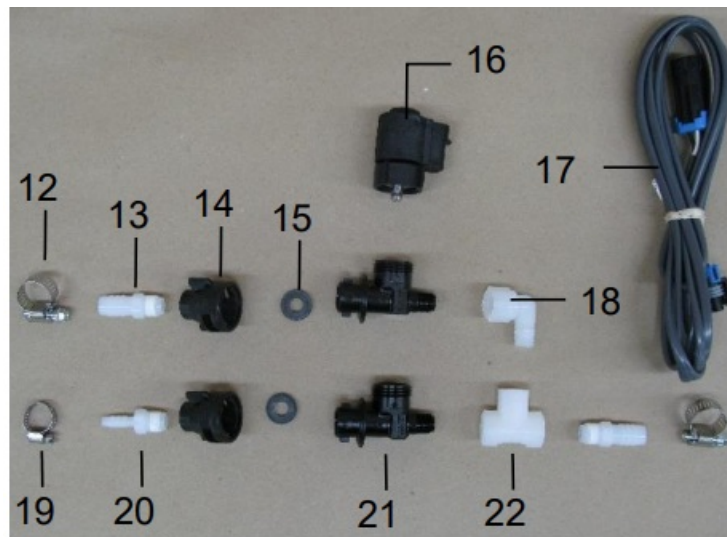



Ref	Description	Part #	Qty
12	#6 Hose Clamp	003-9003	2
13	1/4" x 1/2" Straight Fitting	003-A1412	2
14	Female Quick Coupler	004-1207H	2
15	Rubber Washer	004-1207W	1
16	Solenoid	002-2203F	1
17	Solenoid Harness (10')	006-3650-S2	1
18	1/4" Street Elbow	003-SE14	1
19	Mini Hose Clamp	003-9002	1
20	1/4" x 1/4" Straight Fitting	003-A1414	1
21	Solenoid Check Valve	004-1207VF	2
22	1/4" Tee	003-TT14	1

Moisture Sensors Parts Breakdown

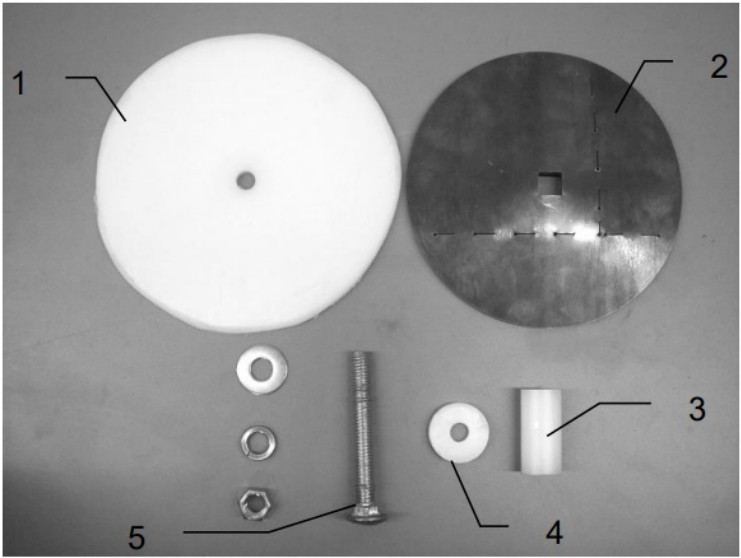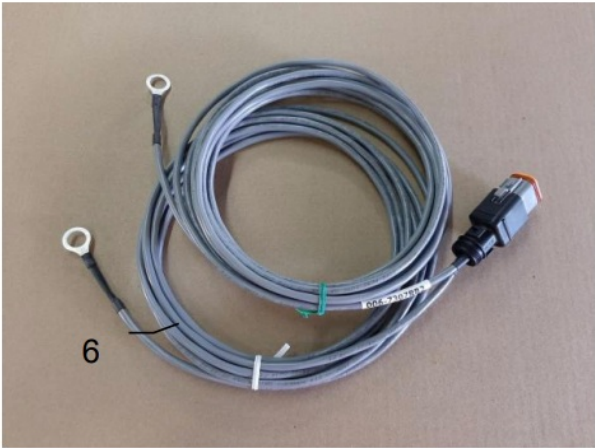

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Plastic Pad	006-4641F	2	4	Plastic Isolator	006-4641I	2
2	Moisture Disc	006-4641H	2	5	1/2X4 1/2" Carriage Bolt		2
3	Plastic Bushing	006-4641G	2	6	Moisture Cable (both 15')	006-7307RB1	1
				Moisture Pad Assembly (Ref 1-5)		030-4643	2
				Complete Assembly (Ref 1-6)		MSH-7RB-A	


Parts Bag Packages & Hoses

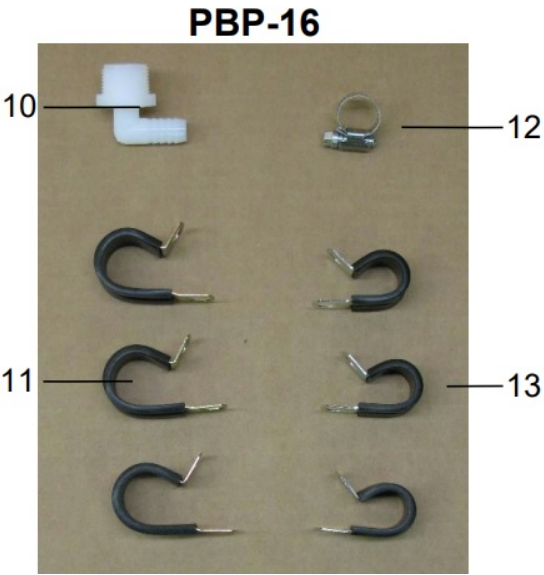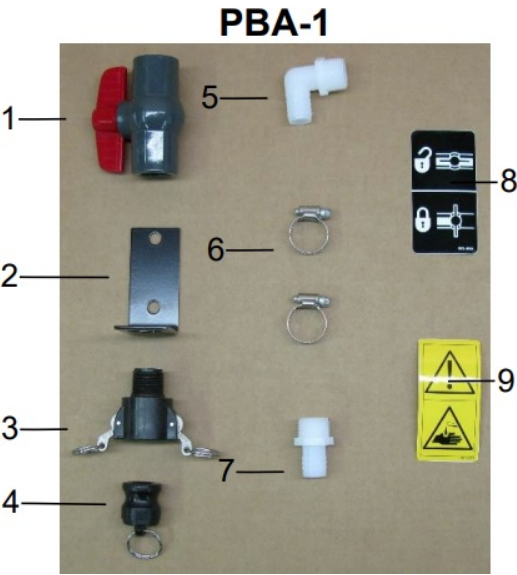

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	3/4" Ball Valve	002-2200	1
2	Valve Holder	001-6702H	1
3	Female Coupler	002-2204A	1
4	Male Shut-Off Plug	002-2205G	1
5	3/4" x 3/4" Elbow	003-EL3434	1
6	#10 Hose Clamp	003-9004	2
7	3/4" x 3/4" Straight Fitting	003-A3434	1
8	Valve Decal	DCL-8004	1
9	Chemical Hazard Decal	DCL-8001	1
	Complete Drain Fill Kit	030-0493DFK	


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
10	3/4" x 1/2" Elbow	003-EL3412	1
11	3/4" Jiffy Clip	008-9010	3
12	#6 Hose Clamp	003-9003	1
13	Small Jiffy Clip	008-9009	3

Hoses

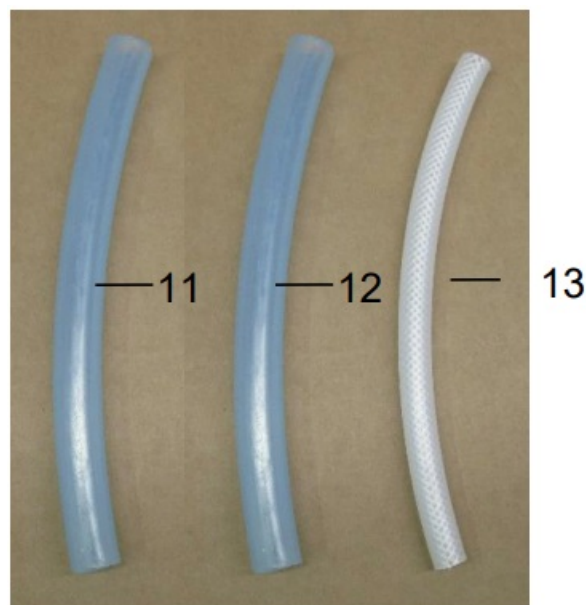


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
11	1/2" Hose (Tank to Solenoid)	002-9001	15ft
12	3/4" Hose (Drain/Fill Line)	002-9002	6ft
13	1/4" Hose (Solenoid to Tips)	002-9016	6ft

735Z Spray Shield

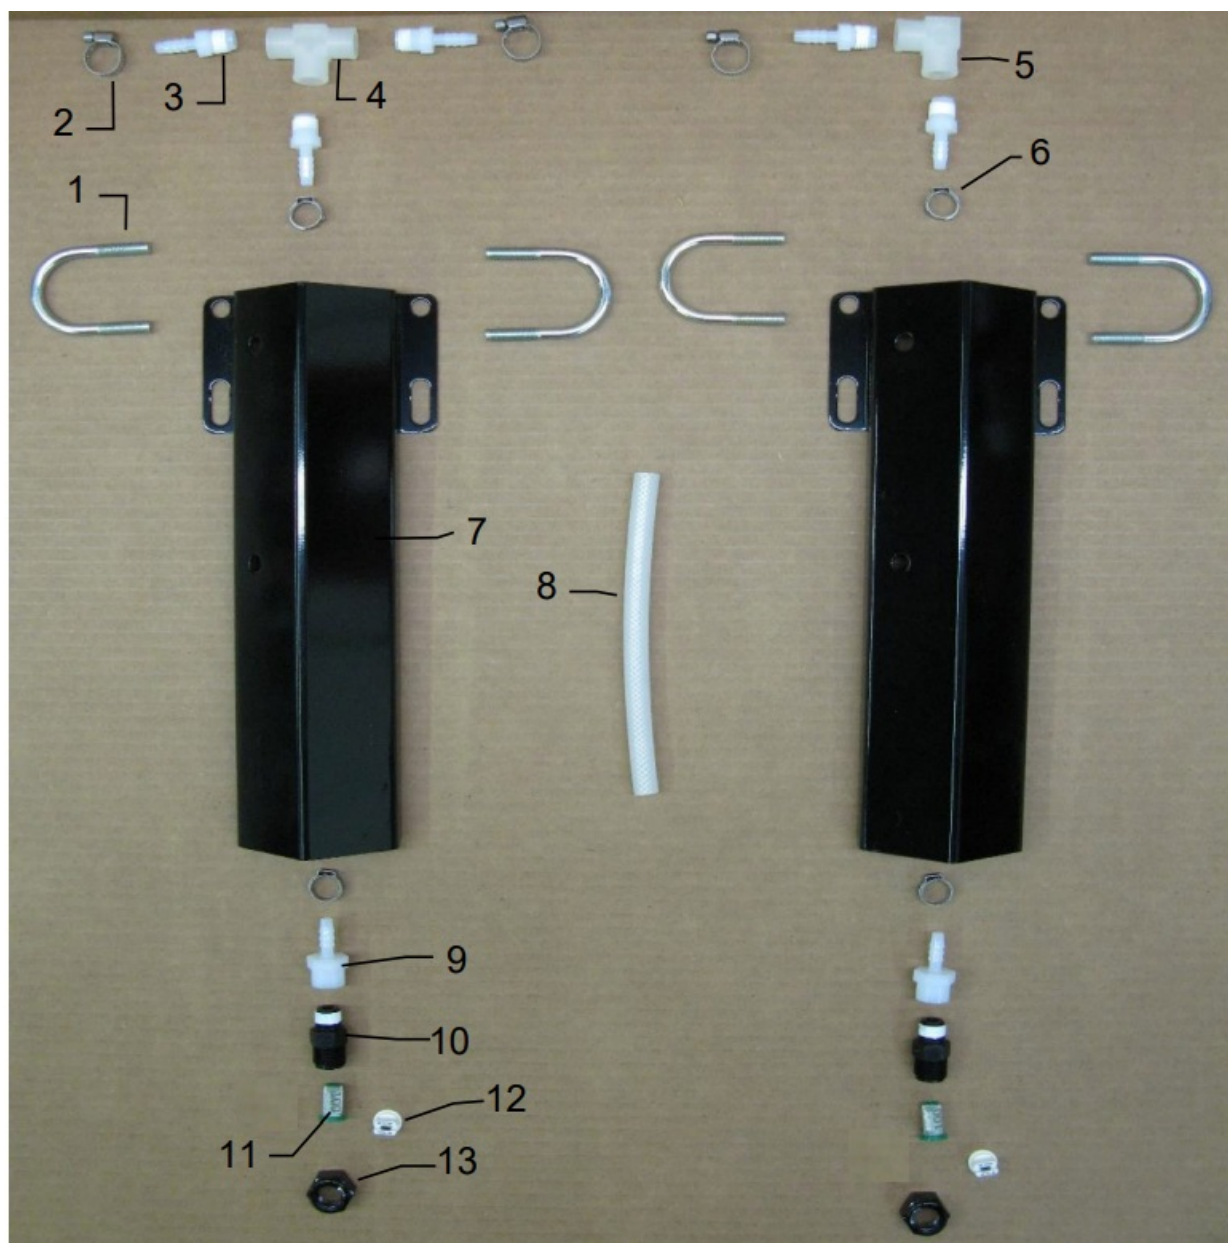

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	U Bolt	001-4714UBS	4	10	Nozzle Body	004-4722	2
2	Hose Clamp	003-9002	2	11	Tip Strainer	004-1203-100	2
3	1/4" x 1/4" Fitting	003-A1414	5	12	Tip – Gray*	004-XR11006VS	2
4	1/4" Sq Tee	003-TT14SQ	1	13	Nozzle Cap	004-4723	2
5	1/4" St Elbow	003-SE14F	1	NP	477 Jiffy Clip	008-9014	2
6	Oetiker Clamp	003-9008	4				
7	Nozzle Holder	001-4714J	2		* Tip color subject to change		
8	Hose	002-9016	3ft				
9	1/4" x 1/4" Fitting	003-A1414F	2	Spray Shield Only		030-4714J-SO	

Optional iPad Display Kit

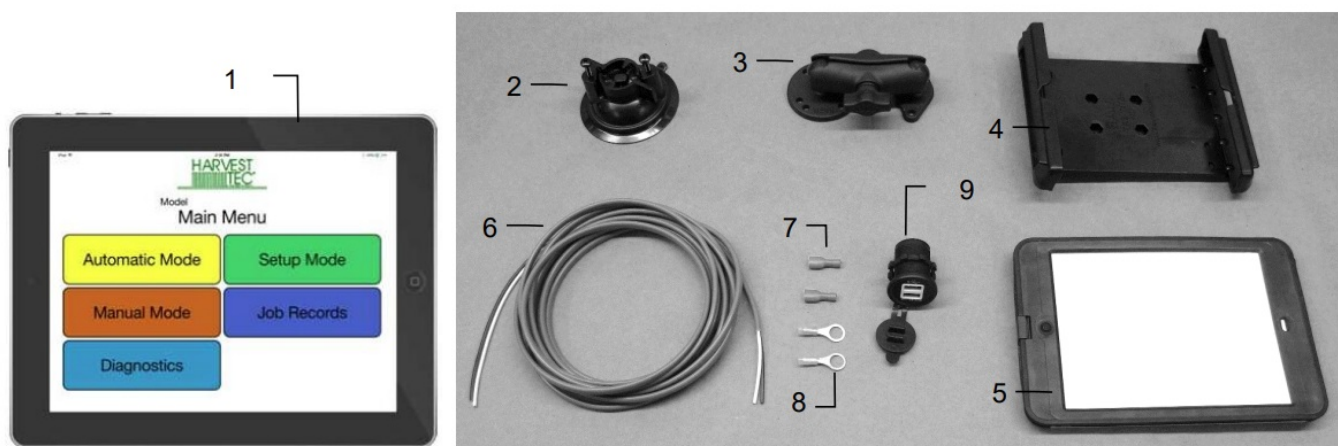

Optional Android Display Kit (030-1670DK)



Installation Instructions

1. Assemble Cradle (001-2012SLC)
2. Attach round base from ram mount to cradle

3. Attach trapezoid end of ram mount to suction mount
4. Clean glass or metal surface that unit will be attaching to.
5. Add a small amount of water to suction cups rubber surface and attach to surface
6. Turn lock on suction cup mount to secure.
7. Place tablet in cradle and hook USB cable that came with system into it.
8. Run USB cable over to (006-765ICM) control module and plug into USB port that show's a tablet

Optional Harvest Tec Display Kit (030-7670DK)



<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Suction Cup Mount	001-2012SCM	1
2	Ram Mount	001-2012H	1
3	Harvest Tec Display	006-765GVT	1
4	Display Harness	006-765GH	1
5	Mounting Plate	001-700GH	1
NP	700 Series Resistor	006-700R	1

Installation Instructions

1. Identify 006-765GH harness connection to 006-765IC tractor harness.
2. Connect harness to the Harvest Tec Display before tightening into place.
3. Tighten the mounting and display. Streamline harness, as necessary.
4. Once connected, power cycle system and ensure display is working properly

NOTE: CANNOT OPERATE WITH BOTH HARVEST TEC DISPLAY AND BALER VT CONNECTED AT THE SAME TIME.

Harvest Tec LLC. Warranty and Liability Agreement

Harvest Tec, LLC. will repair or replace components that are found to be defective within 12 months from the date of manufacture. Under no circumstances does this warranty cover any components which in the opinion of Harvest Tec, LLC. have been subjected to negligent use, misuse, alteration, accident, or if repairs have been made

with parts other than those manufactured and obtainable from Harvest Tec, LLC. Our obligation under this warranty is limited to repairing or replacing free of charge to the original purchaser any part that in our judgment shows evidence of defective or improper workmanship, provided the part is returned to Harvest Tec, LLC. within 30 days of the failure. If it is determined that a non-Harvest Tec branded hay preservative has been used inside the Harvest Tec applicator system where the failure occurred, then Harvest Tec reserves the right to deny the warranty request at their discretion. Parts must be returned through the selling dealer and distributor, and transportation charges prepaid. This warranty shall not be interpreted to render Harvest Tec, LLC. liable for injury or damages of any kind, direct, consequential, or contingent, to persons or property. Furthermore, this warranty does not extend to loss of crop, losses caused by delays or any expense prospective profits or for any other reason. Harvest Tec, LLC. shall not be liable for any recovery greater in amount than the cost or repair of defects in workmanship. There are no warranties, either expressed or implied, of merchantability or fitness for a particular purpose intended or fitness for any other reason. This warranty cannot guarantee that existing conditions beyond the control of Harvest Tec, LLC. will not affect our ability to obtain materials or manufacture necessary replacement parts. Harvest Tec, LLC. reserves the right to make design changes, improve design, or change specifications, at any time without any contingent obligation to purchasers of machines and parts previously sold.

Revised 4/17

HARVEST TEC, LLC.

- P.O. BOX 63 2821 HARVEY STREET HUDSON, WI 54016 USA
- **PHONE:** [715-386-9100](tel:715-386-9100)
- **FAX:** [715-381-1792](tel:715-381-1792)
- **Email:** info@harvesttec.com

FAQ


Q: Can I use this applicator with any type of preservative?

A: The applicator is designed to work with specific types of preservatives. Please refer to the product specifications for compatibility details.

Q: How often should I refill the tank?

A: The frequency of tank refills depends on your usage and application requirements. It is recommended to monitor the tank level regularly and refill as needed to ensure continuous operation.

Documents / Resources

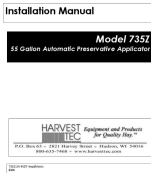	<p>HARVEST TEC 735Z Automatic Preservative Applicator [pdf] Installation Guide 735Z, 001-4703ZR-D2, 001-4647, 735Z Automatic Preservative Applicator, 735Z, Automatic Preservative Applicator, Preservative Applicator, Applicator</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.