


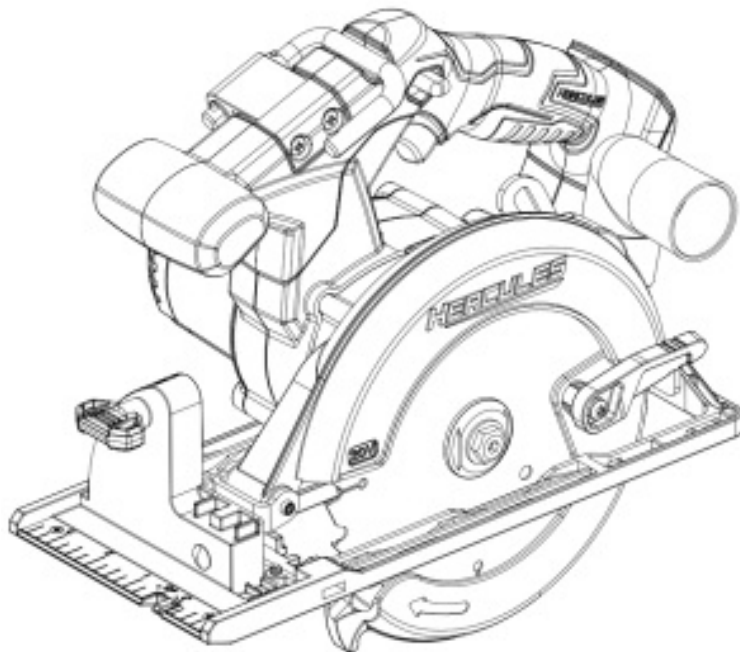


HERCULES HC72B 6-1 Cordless Circular Saw Owner's Manual

[Home](#) » [Hercules](#) » HERCULES HC72B 6-1 Cordless Circular Saw Owner's Manual 

HERCULES

Owner's Manual &
Safety Instructions



Model HC72B
6-1/2" Cordless Circular Saw



WARNING: To prevent serious injury, the User must read and understand the Owner's Manual. **SAVE THIS MANUAL.**

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please

call 1-888-866-5797 as soon as possible. Reference 64984.

Contents

[1 IMPORTANT SAFETY INFORMATION](#)

[2 Warning Symbols and Definitions](#)

[3 Symbology](#)

[4 SPECIFICATIONS](#)

[5 FUNCTIONAL DESCRIPTION](#)

[6 OPERATION](#)

[7 Charging](#)

[8 Troubleshooting](#)

[9 PARTS LIST AND DIAGRAM](#)

[10 Assembly Diagram](#)

[11 Documents / Resources](#)

[12 Related Posts](#)

IMPORTANT SAFETY INFORMATION

General Power Tool Safety Warnings



WARNING

Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

- a. Keep work area clean and well-lit.** Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks that may ignite dust or fumes.
- c. Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical safety

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from heat, oil, sharp edges, or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. When operating a power tool outdoors, use an extension cord suitable for outdoor use.** The use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** The use of a GFCI reduces the risk of electric shock.

3. Personal safety

- a. Stay alert, watch what you are doing, and use common sense when operating a power tool. Do not use**

a. power tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.

b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust masks, non-skid safety shoes, hard hats, or hearing protection used for appropriate conditions will reduce personal injuries.

c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to a power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.

d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. The use of dust collection can reduce dust-related hazards.

h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

i. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.

j. Avoid unintentional starting. Prepare to begin work before turning on the tool.

k. Do not lay the tool down until it has come to a complete stop. Moving parts can grab the surface and pull the tool out of your control.

l. When using a handheld power tool, maintain a firm grip on the tool with both hands to resist starting torque.

m. Do not depress the spindle lock when starting or during operation.

n. Do not leave the tool unattended when it is plugged into an electrical outlet the Battery Pack is connected. Turn off the tool, and unplug it from its electrical outlet remove the Battery Pack before leaving.

o. This product is not a toy. Keep it out of reach of children.

p. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to the heart pacemakers could cause pacemaker interference or pacemaker failure. In addition, people with pacemakers should:

- Avoid operating alone.
- Do not use with Trigger locked on.
- Properly maintain and inspect to avoid electrical shock.
- Properly ground power cord. Ground Fault Circuit Interrupter (GFCI) should also be implemented — it prevents sustained electrical shock.

q. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors that cannot be built into this product but must be supplied by the operator.

4. Power tool use and care

a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate at which it was designed.

b. Do not use the power tool if the switch does not turn on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c. Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e. Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to

bind and are easier to control.

g. Use the power tool, accessories and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

h. Keep handles and grasping surfaces dry, clean, and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5. Service

a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

b. Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.



6. Circular Saw Safety Warnings – Cutting procedures



a. **DANGER: Keep hands away from the cutting area and the blade. Keep your second hand on the auxiliary handle, or motor housing.** If both hands are holding the saw, they cannot be cut by the blade.

b. **Do not reach underneath the workpiece.** The guard cannot protect you from the blade below the workpiece.

c. **Adjust the cutting depth to the thickness of the workpiece.** Less than a full tooth of the blade teeth should be visible below the workpiece.

d. **Never hold the workpiece in your hands or across your leg while cutting. Secure the workpiece to a stable platform.** It is important to support the work properly to minimize body exposure, blade binding, or loss of control.

e. **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting tool may contact hidden wiring or its own cord.** Contact with a “live” wire will also make exposed metal parts of the power tool “live” and could give the operator an electric shock.

f. **When ripping, always use a rip fence or straight edge guide.** This improves the accuracy of the cut and reduces the chance of blade binding.

g. Always use blades with the correct size and shape (diamond versus round) of arbor holes. Blades that do not match the mounting hardware of the saw will run off-center, causing a loss of control.

h. Never use damaged or incorrect blade washers or bolts. The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.

7. Kickback causes and related warnings – kickback is a sudden reaction to a pinched, jammed, or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator;

– when the blade is pinched or jammed tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator;

– if the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator. Kickback is the result of saw misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

a. **Maintain a firm grip with both hands on the saw and position your arms to resist kickback forces .** Position your body to either side of the blade, but not in line with the blade. Kickback could cause the saw to jump backward, but kickback forces can be controlled by the operator, if proper precautions are taken.

b. When the blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or kickback may occur. Investigate and take corrective actions to eliminate the cause of blade binding.

c. **When restarting a saw in the workpiece, center the saw blade in the kerf so that the saw teeth are not engaged in the material.** If a saw blade binds, it may walk up or kick back from the workpiece as the saw is restarted.

d. **Support large panels to minimize the risk of blade pinching and kickback .** Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.

e. **Do not use dull or damaged blades. Unsharpened or improperly set blades produce narrow kerf causing excessive friction, blade binding, and kickback.**

f. **Blade depth and bevel adjusting locking levers must be tight and secure before making the cut.** If blade adjustment shifts while cutting, it may cause binding and kickback.

g. **Use extra caution when sawing into existing walls or other blind areas.** The protruding blade may cut

objects that can cause kickback.

Lower guard function

a. Check the lower guard for proper closing before each use. Do not operate the saw if the lower guard does not move freely and close instantly. Never clamp or tie the lower guard into the open position. If the saw is accidentally dropped, the lower guard may be bent. Raise the lower guard with the retracting handle and make sure it moves freely and does not touch the blade or any other part, at all angles and depths of the cut.

b. Check the operation of the lower guard spring. If the guard and the spring are not operating properly, they must be serviced before use. The lower guard may operate sluggishly due to damaged parts, gummy deposits, or a build-up of debris.

c. The lower guard may be retracted manually only for special cuts such as “plunge cuts” and “compound cuts”. Raise the lower guard by the retracting handle and as soon as the blade enters the material, the lower guard must be released. For all other sawing, the lower guard should operate automatically.

d. Always observe that the lower guard is covering the blade before placing the saw down on the bench or floor. An unprotected, coasting blade will cause the saw to walk backward, cutting whatever is in its path. Be aware of the time it takes for the blade to stop after the switch is released.

9. Riving knife function

a. Use the appropriate saw blade for the riving knife. For the riving knife to function, the body of the blade must be thinner than the riving knife and the cutting width of the blade must be wider than the thickness of the riving knife.

b. Adjust the riving knife as described in this instruction manual. Incorrect spacing, positioning, and alignment can make the riving knife ineffective in preventing kickback.

c. Always use the riving knife except when plunge cutting. The riving knife must be replaced after plunge cutting. The riving knife causes interference during plunge cutting and can create kickback.

d. For the riving knife to work, it must be engaged in the workpiece. The riving knife is ineffective in preventing kickback during shortcuts.

e. Do not operate the saw if the riving knife is bent. Even a light interference can slow the closing rate of a guard.

10. Battery tool use and care

a. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the battery pack, picking up, or carrying the power tool. Carrying the power tool with your finger on the switch or energizing power tool that has the switch on invites accidents.

b. Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing the power tool. Such preventive safety measures reduce the risk of starting the power tool accidentally.

c. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

d. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

e. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

f. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

g. Do not use a battery pack or power tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

h. Do not expose a battery pack or power tool to fire or excessive temperature. Exposure to fire or temperature above 265°F may cause an explosion.

i. Follow all charging instructions and do not charge the battery pack or power tool outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

j. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

k. Do not modify or attempt to repair the power tool or the battery pack except as indicated in the instructions for use and care.



l. The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a

fire hazard if it does not receive adequate ventilation, due to an electrical fault, or if it is used in a hot environment. Do not place the Charger on a flammable surface. Do not obstruct any vents on the Charger. Especially avoid placing the Charger on carpets and rugs; they are not only flammable, but they also obstruct vents under the Charger. Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

m. Charge Battery Pack using Hercules 20V Lithium Battery Charger only (sold separately).

11. Lithium Battery Safety Warnings



LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

a. Keep Battery Pack dry.

B. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:

- Open,
- Drop,
- Short-circuit,
- Puncture,
- Incinerate, or
- Expose to temperatures greater than 265°F.

c. Charge Battery Pack only according to its Charger's instructions.

d. Inspect Battery Pack before every use; do not use or charge if damaged.

12. Vibration Safety

This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms, and shoulders. To reduce the risk of vibration-related injury:

a. Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.

b. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.

c. Wear suitable gloves to reduce the vibration effects on the user.

d. Use tools with the lowest vibration when there is a choice.

e. Include vibration-free periods each day of work.

f. Grip tool as lightly as possible (while still keeping safe control of it). Let the tool do the work.

g. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.

Grounding Instructions



Extension cords must not be used with this item's Charger.

Warning Symbols and Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

**DANGER**

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

**WARNING**

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION**

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Addresses practices not related to personal injury.


Symbology

V	Volts
	Direct Current
A	Amperes
n0 XXXX/min	No Load Revolutions per Minute (RPM)
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.
	Read the manual before set-up and/or use.
	Keep hands clear of cutting area.
	DANGER marking concerning Risk of Amputation. Keep hands well clear of cutting area. a. Charge on the fireproof surface only.

SPECIFICATIONS

Battery Type	20V Li-Ion Hercules Battery
Spindle No Load Speed	5,000 RPM
Max. Accessory Diameter	6-1/2"
Arbor	5/8" Round
Max. Depth of Cut	45°:1-5/8", 90°:2-3/16"

FUNCTIONAL DESCRIPTION

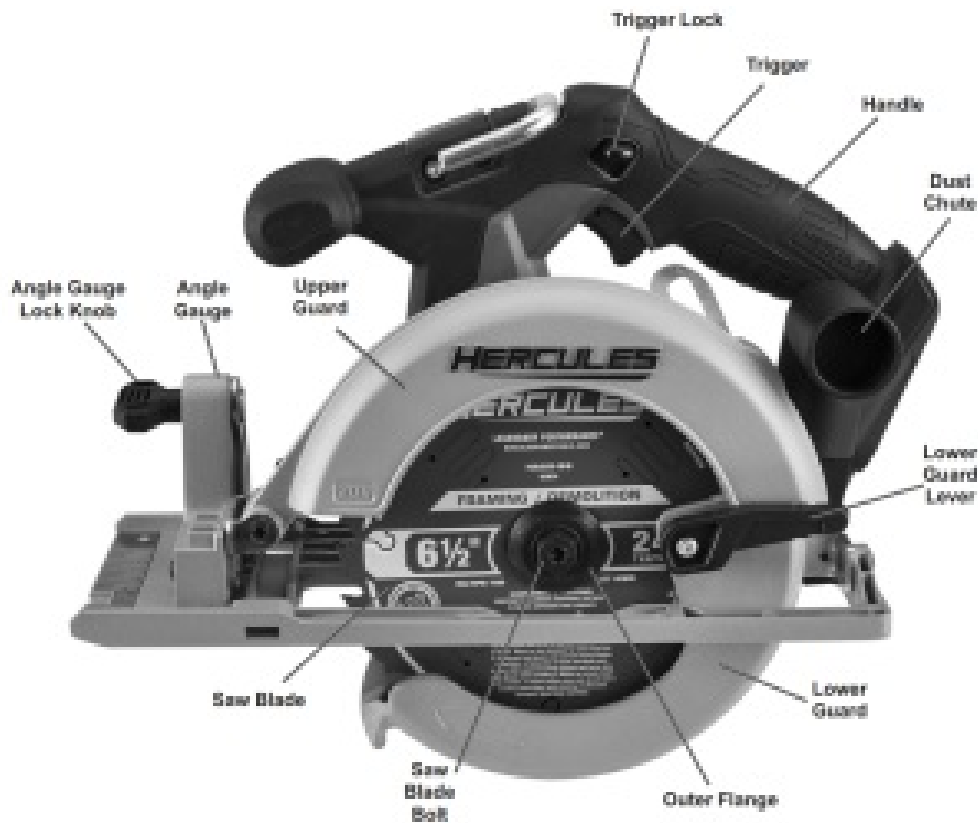

OPERATION



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use. TO PREVENT SERIOUS INJURY: DO NOT OPERATE WITH ANY GUARD DISABLED, DAMAGED, OR REMOVED. Moving guards must move freely and close instantly.

Tool Set Up



WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Release the Trigger and remove the Battery Pack before performing any procedure in this section

NOTE: For additional information regarding the arts listed in the following pages, refer to the Assembly Diagram near the end of this manual.

Replacing the Blade

1. Push and hold Spindle Lock, located above Upper Guard, to keep Spindle from rotating.
2. Use the included hex key to loosen (**clockwise**) and remove Saw Blade Bolt. Remove Outer Flange.
3. Use the Lower Guard Lever to pull Lower Guard all the way up into Upper Guard. While holding Lower Guard in an upward position, remove old blade if needed and install new Saw Blade.

WARNING! TO PREVENT SERIOUS INJURY: Blade must be rated to at least 5,000 RPM.

Note: Install the new Saw Blade with its teeth and its arrow pointing in the same direction as the Lower Guard's arrow.

4. Replace Outer Flange on Spindle with the cupped side towards the blade, then tighten the Blade Bolt by turning counterclockwise.

Dust Chute Installation

1. Align mounting hole on Dust Chute with a threaded hole on the Saw Base behind the Upper Guard.
2. Insert the mounting screw into the hole and tighten securely.

Depth Adjustment

1. Push the Depth Gauge Lever down to unlock.
2. Hold Base Plate down with one hand and raise or lower Saw with the other hand until the Blade is at the desired depth of cut, using the Depth Gauge as a guide.
3. Pull Depth Gauge Lever up to lock.

WARNING! To reduce the risk of Serious Injury: The depth of cut must be adjusted to just clear the workpiece.

Angle Adjustment

1. Loosen Angle Gauge Lock Knob.
2. Adjust Base Plate to the desired angle between 0° and 50°, using the Angle Gauge as a guide.
3. Tighten Angle Gauge Lock Knob.

Workpiece and Work Area Set Up

1. Workpiece selection:
 - a. Workpiece must be free of foreign objects and loose knots.
 - b. Do not use to cut logs, tree limbs, or uneven lumber.
 - c. Wet lumber, green (unseasoned) lumber and pressure-treated lumber all have an increased potential for kickback and should only be cut with a blade designed for cutting that lumber. Wear a NIOSH-approved respirator and have appropriate ventilation whenever cutting pressure-treated lumber.
2. Designate a work area that is clean and well-lit. The work area must not allow access by children or pets to prevent distraction and injury.
3. Secure loose workpieces using a vise or clamps (not included) to prevent movement while working.
4. Verify that there are no utility lines or hardware in or near the workpiece. This is especially critical for plunge cuts.
5. Connect a dust collection system (sold separately) to the Dust Chute.

Charging

Refer to the Hercules charger manual for instructions on how to properly charge a Hercules battery (sold separately).

General Operation

1. Make all necessary adjustments to the Circular Saw.
2. Make sure that all guards are in place in proper working order and that all adjustment knobs are tight before operation.
3. Connect a 20V Hercules battery (sold separately) to the back of the handle.
4. Firmly grip the Main Handle with one hand and the Auxiliary Handle with the other hand.
5. Press and hold Trigger Lock, then the Trigger to turn on the Circular Saw.
6. Release Trigger Lock.
7. Allow the Saw Blade to reach full speed before feeding Saw Blade into the workpiece.
8. Make straight cuts only. DO NOT twist Saw while cutting. If this occurs, the Saw Blade will “bind” in the workpiece causing kickback, potential injury, and/or damage to the workpiece and Circular Saw.
9. Do not force the Circular Saw to cut faster than it is designed to cut. Feed the Saw Blade gradually into the workpiece.
10. Release Trigger if the Saw Blade is to be backed out of an uncompleted cut. Wait until the Saw Blade stops spinning before removing the Saw. Do not press against the Saw Blade to stop it.
11. Once the cutting job is completed, release the Trigger and wait until the Saw Blade stops spinning.

12. Disconnect the battery by pressing down on the release button and removing it from the back of the handle.
13. Clean, then store the tool indoors out of children's reach.

MAINTENANCE AND SERVICING



Procedures not specifically explained in this manual must be performed only by a qualified technician.



WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Release the Trigger and remove the Battery Pack before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - leaking, swollen, or cracked battery pack,
 - loose hardware
 - misalignment or binding of moving parts
 - cracked or broken parts
 - damaged electrical wiring
 - any other condition that may affect its safe operation.
2. **AFTER USE**, wipe the external surfaces of the tool with a clean cloth.
3. Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. Do not short, incinerate, or open the battery.



4. **WARNING! TO PREVENT SERIOUS INJURY: If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.**
5. For making accurate cuts, the Saw Blade must be adjusted to be exactly vertical to the Table. If adjustment is necessary, have the Miter Saw serviced by a qualified service technician.

Troubleshooting

Problem	Possible Causes	Likely Solutions
The tool will not start.	<ol style="list-style-type: none">1. No power at outlet.2. Cord not connected.	<ol style="list-style-type: none">1. Check power at outlet.2. Check that cord is plugged in.

The tool operates sporadically or at low power.	<ol style="list-style-type: none"> 1. Low power supply or improper extension cords. 2. Worn or cracked Carbon Brushes. 	<ol style="list-style-type: none"> 1. Check the power supply and power cords. 2. Check Carbon Brushes. Replace if damaged or worn.
Wood burns at ends when cut.	<ol style="list-style-type: none"> 1. Dirty Blade. 2. Material is binding. 	<ol style="list-style-type: none"> 1. Clean Blade using blade cleaner or mineral spirits. 2. Check the position of work material on the Table. The material must be flat, flush against Fence, and supported on ends.
Material frays or chips out.	<ol style="list-style-type: none"> 1. Finished side is down. 2. Blade chipped or dull. 3. Blade inappropriate for material. 4. Material is unsupported. 	<ol style="list-style-type: none"> 1. Keep the finished side of the material up or facing the operator. The bottom and backside are prone to chip out. 2. Check for damaged teeth. Sharpen or replace the blade. 3. Check blade manufacturer's recommendations for the material being cut. For cross-cutting hardwood and for precision cuts use a thin kerf blade with 60 or more teeth. 4. Use a thin piece of scrap material, such as 1/4" plywood, underneath or behind the material to support the edges of the material as it is being cut.
Blade binds, slowing or stopping saw.	<ol style="list-style-type: none"> 1. Material is misaligned on the saw or ends are not supported. 2. Material is wet, contaminated or inappropriate blade is being used. 	<ol style="list-style-type: none"> 1. Material must be flat on a table, flush against the fence, and supported on both ends. 2. Check the condition of the material and check the compatibility of the blade to the material.
Blade does not cut completely through the workpiece.	<ol style="list-style-type: none"> 1. Depth Stop setting in use. 2. Depth Stop set too shallow. 	<ol style="list-style-type: none"> 1. Swing Depth Stop up to its vertical position to disengage. 2. Adjust Depth Adjustment Bolt for desired depth of cut.
Motor runs but the blade does not turn.	The drive belt has failed.	Have qualified technician service tool.



Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

PARTS LIST AND DIAGRAM

Parts List

Part	Description	Qty
1	Pan Head Self-Tapping Screw	a
2	Cover Cap	1
3	Socket Pan Head Triplex Screw	4
4	Housing	1
5	Brush Component	1
6	Rubber Column	1
7	Cross Pan Head Screw	2
8	Deep Groove Ball Bearing	1
9	Rotor	1
10	Deep Groove Ball Bearing	2
11	Stator	1
12	Pan Head Screw	5
13	Trigger	1
14	Windshield	1


15	Screw	1
16	Washer	1
17	Screw	1
18	Right Handle	1
19	Spacer	1
20	Bracket	1
21	Compression Spring	1
22	Self-Tapping Screw	2
23	Fixing Sleeve	1
24	Elastic Cylindrical Pin	2
25	Hook	1
26	Baseboard	1
27	Guide Plate	1
28	Flat Washer	2
29	Thin Head Semi-Tubular Rivet	1
30	Left Handle	1
31	Gear Box	1
32	Seal Ring	1
33	Compression Spring	1
34	Lockpin	1
35	Button	1
36	Shaft Sleeve	1
37	Flange Head-Tapping Screw	1
38	Electronic Component	1
39	Inner Socket-Tapping Screw	1
40	Hex Socket Set Screw	2

Part	Description	Qty
41	Guide Plate	1

42	Oval Head Semi-Tubular Rivet	1
43	Knob Component	1
44	Flat Washer	1
45	Guide Ruler	1
46	Cross Countersunk Screw	4
47	Spring	1
48	Knob Component	1
49	Screw	1
50	Guide Ruler	1
51	Wrench	1
52	Cylindrical Pin	1
53	Button	1
54	Reverse Lock Button Spring	1
55	Shield	1
56	Cover Cap	1
57	Spring Pin	1
58	Absorber	1
59	Socket Screw	1
60	Circlip	1
61	Gear	1
62	Circlip For Hole	1
63	Wave Washer	1
64	Output Shaft	1
65	Oil Seal	1
66	End Cover	1
67	Socket Countersunk Head Screw	8
68	Inner Flange	1
69	Outer Flange	1
70	Saw Blade Bolt	1
71	Torsion Spring	1
72	Shield	1
73	Stop Collar	1
74	Guard Handle	1

75	Socket Pan Head Screw	2
76	Compound Slot Pan Head Screw	1
77	Dust Chute	1
78	Blade	1
79	Hex Key (Not Shown)	1

Assembly Diagram

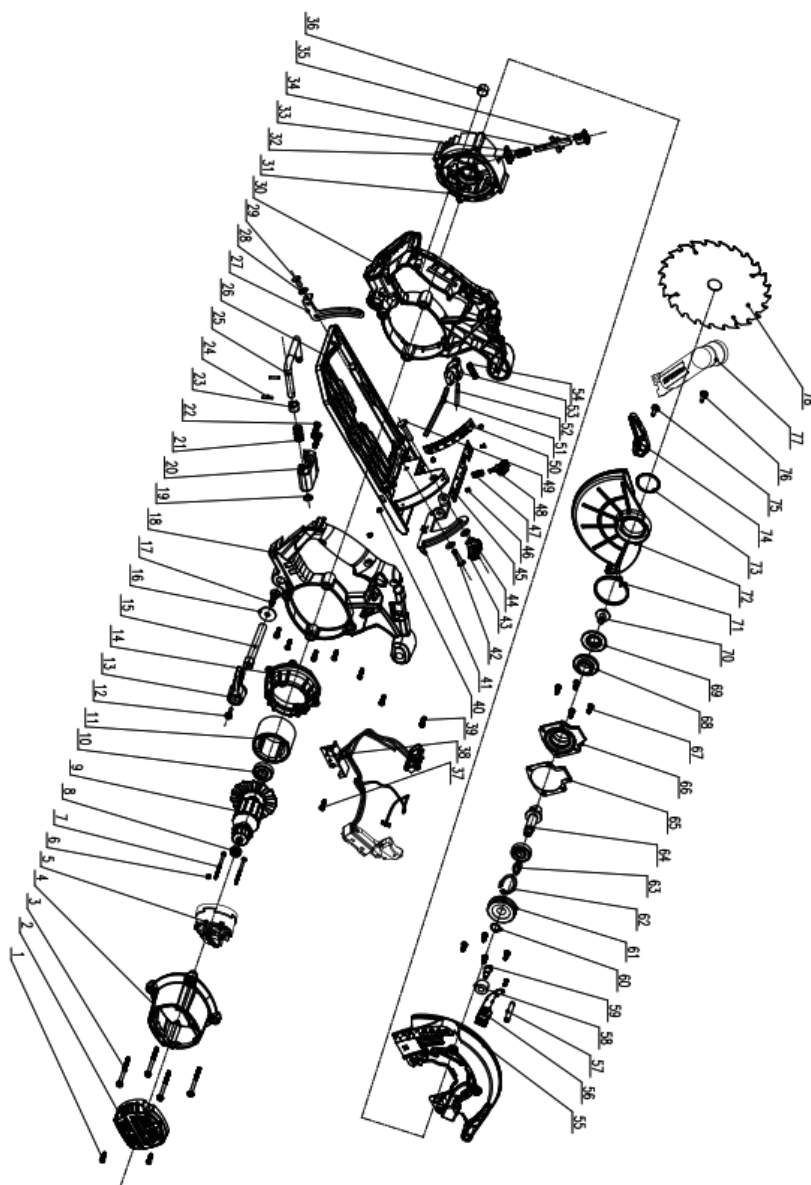

NOTE: If the product has no serial number, record the month and year of purchase instead.

NOTE: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

LIMITED 90 DAYS WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the

period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear, and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Visit our website at: <http://www.harborfreight.com> Email our technical support at: productsupport@harborfreight.com For technical questions, please call 1-888-866-5797


Copyright©2018 by Harbor Freight Tools®

. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, the actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

HERCULES

26541 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797

Documents / Resources

 <p>Model HC72B 6-1/2" Cordless Circular Saw</p> <p><small>WARNING: To prevent serious injury, user must read and understand Owner's Manual. SAFETY 101 Series.</small></p>	<p>HERCULES HC72B 6-1 Cordless Circular Saw [pdf] Owner's Manual HC72B, 64984, 6-1 Cordless Circular Saw, 2-Inch Cordless Circular Saw</p>
--	--