




HERCULES HD67B 12V Brushless Cordless Owner's Manual

[Home](#) » [Hercules](#) » [HERCULES HD67B 12V Brushless Cordless Owner's Manual](#) 

HERCULES HD67B 12V Brushless Cordless

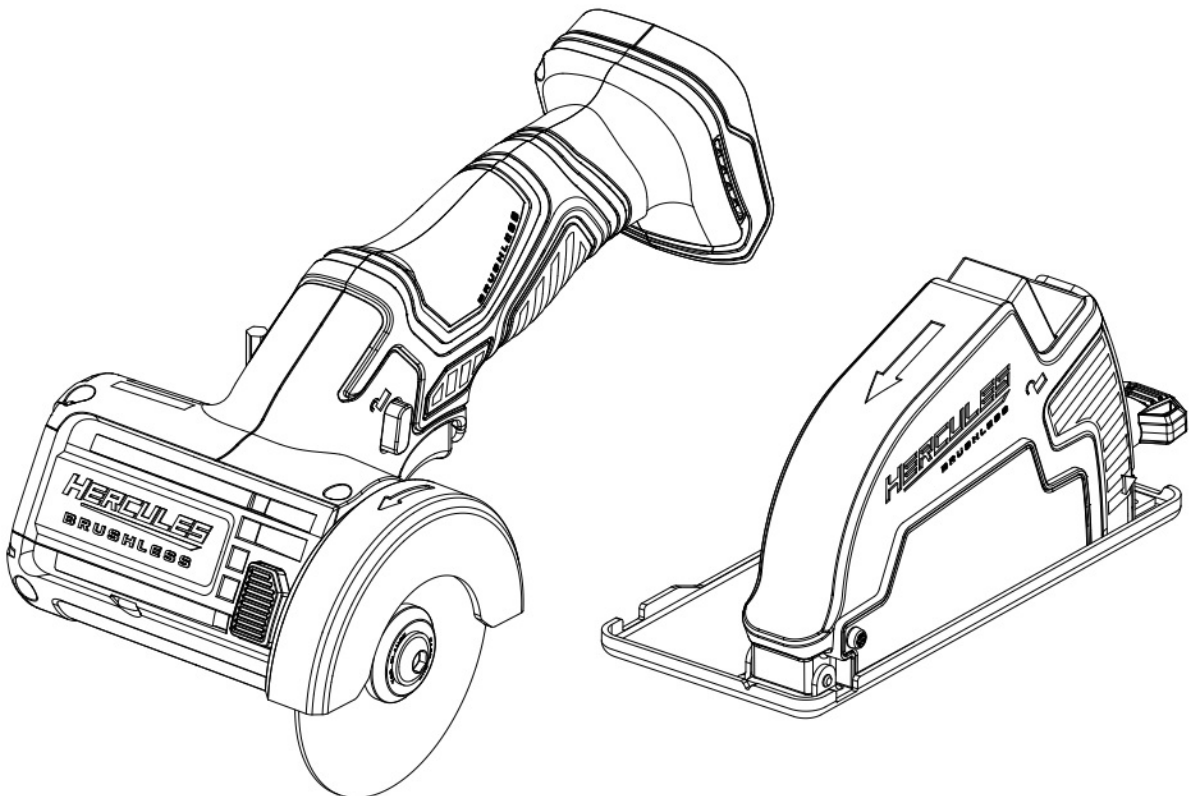

Battery and Charger Sold Separately

12V Brushless 3" Cut Off Tool

WARNING: To prevent serious injury, User must read and understand Owner's Manual.

SAVE THIS MANUAL.

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call

Contents

1 IMPORTANT SAFETY INFORMATION

1.1 GENERAL POWER TOOL SAFETY WARNING

1.2 Work Area Safety

1.3 Electrical Safety

1.4 Personal Safety

1.5 Power Tool Use and Care

1.6 Battery Tool Use and Care

1.7 Service

1.8 Cut-Off Machine Safety Warnings

1.9 Kickback and Related Warnings

1.10 Lithium Battery Safety Warnings

1.11 Vibration Safety

2 GROUNDING

2.1 Extension Cords

2.2 Warning Symbols and Definitions

3 Symbology

4 Specifications

5 SETUP – BEFORE USE

5.1 Battery Charging

5.2 Functional Description

6 OPERATING INSTRUCTIONS

7 Tool Set Up

7.1 Cut-Off Wheel Installation / Replacement

7.2 Adjusting the Wheel Guard

7.3 Depth Gauge Installation / Removal

7.4 Depth Adjustment

7.5 Workpiece and Work Area Set Up

7.6 Tool Set Up

7.7 Cut-Off Wheel Installation / Replacement

7.8 Adjusting the Wheel Guard

7.9 Depth Gauge Installation / Removal

7.10 Depth Adjustment

7.11 Workpiece and Work Area Set Up

8 General Operation

9 MAINTENANCE AND SERVICING

9.1 Cleaning, Maintenance, and Lubrication

9.2 Accessory Storage and Handling

9.3 Troubleshooting

10 LIMITED 90 DAY WARRANTY

11 Documents / Resources

12 Related Posts

IMPORTANT SAFETY INFORMATION

GENERAL POWER TOOL SAFETY WARNING

⚠WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term power tool in the warnings refers to your battery-operated (cordless) power tool.

Work Area Safety

1. Keep work area clean and well lit. Cluttered or dark areas invite accidents
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes
3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
3. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.

Personal Safety

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
3. Prevent unintentional starting. Ensure the Trigger is in the off-position before connecting to power source, picking up or carrying the tool. Carrying power tools with your finger on the Trigger or energizing power tools that have the Trigger on invites accidents.
4. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
6. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are

connected and properly used. Use of dust collection can reduce dust-related hazards.

8. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.
9. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.
10. Do not leave the tool unattended when the Battery Pack is connected. Turn off the tool, and remove the Battery Pack before leaving.
11. This product is not a toy. Keep it out of reach of children.
12. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. In addition, people with pacemakers should:
 - Avoid operating alone.
 - Do not use with power switch locked on.
 - Properly maintain and inspect to avoid electrical shock.
13. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Power Tool Use and Care

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
8. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

Battery Tool Use and Care

1. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a

risk of injury and fire.

3. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.



5. The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate ventilation, due to an electrical fault, or if it is used in a hot environment. Do not place the Charger on a flammable surface. Do not obstruct any vents on the Charger. Especially avoid placing the Charger on carpets and rugs; they are not only flammable, but they also obstruct vent under the Charger. Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

Service

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
2. Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Cut-Off Machine Safety Warnings

1. The guard provided with the tool must be securely attached to the power tool and positioned for maximum safety, so the least amount of wheel is exposed towards the operator. Position yourself and bystanders away from the plane of the rotating wheel. The guard helps to protect operator from broken wheel fragments and accidental contact with wheel.
2. Use only bonded reinforced or diamond cut-off wheels for your power tool. Just because an accessory can be attached to your power tool, it does not assure safe operation.
3. The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool. Accessories running faster than their rated speed can break and fly apart.
4. Wheels must be used only for recommended applications. For example: do not grind with the side of cut-off wheel. Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
5. Always use undamaged wheel flanges that are of correct diameter for your selected wheel. Proper wheel flanges support the wheel thus reducing the possibility of wheel breakage.
6. Do not use worn down reinforced wheels from larger power tools. Wheels intended for a larger power tool are not suitable for the higher speed of a smaller tool and may burst.
7. The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately guarded or controlled.
8. The arbour size of wheels and flanges must properly fit the spindle of the power tool. Wheels and flanges with

arbour holes that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.

9. Do not use damaged wheels. Before each use, inspect the wheels for chips and cracks. If power tool or wheel is dropped, inspect for damage or install an undamaged wheel. After inspecting and installing the wheel, position yourself and bystanders away from the plane of the rotating wheel and run the power tool at maximum no load speed for one minute. Damaged wheels will normally break apart during this test time.
10. Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and shop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtering particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.
11. Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken wheel may fly away and cause injury beyond immediate area of operation.
12. Hold the power tool by insulated gripping surfaces only, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
13. Never lay the power tool down until the accessory has come to a complete stop. The spinning wheel may grab the surface and pull the power tool out of your control.
14. Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
15. Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
16. Do not operate the power tool near flammable materials. Sparks could ignite these materials.
17. Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

Kickback and Related Warnings

Kickback is a sudden reaction to a pinched or snagged rotating wheel. Pinching or snagging causes rapid stalling of the rotating wheel which in turn causes the uncontrolled power tool to be forced in the direction opposite of the wheel's rotation at the point of the binding.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

1. Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up. The operator can control torque reactions or kickback forces, if proper precautions are taken.
2. Never place your hand near the rotating accessory. Accessory may kickback over your hand.
3. Do not position your body in line with the rotating wheel. Kickback will propel the tool in direction opposite to the wheel's movement at the point of snagging.
4. Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory.

Comers, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.

5. Do not attach a saw chain, woodcarving blade, segmented diamond wheel with a peripheral gap greater than 10mm or toothed saw blade. Such blades create frequent kickback and loss of control.
6. Do not “jam” the wheel or apply excessive pressure. Do not attempt to make an excessive depth of cut. Overstressing the wheel increases the loading and susceptibility to twisting or binding of the wheel in the cut and the possibility of kickback or wheel breakage.
7. When wheel is binding or when interrupting a cut for any reason, switch off the power tool and hold the power tool motionless until the wheel comes to a complete stop. Never attempt to remove the wheel from the cut while the wheel is in motion otherwise kickback may occur. Investigate and take corrective action to eliminate the cause of wheel binding.
8. Do not restart the cutting operation in the workpiece. Let the wheel reach full speed and carefully re-enter the cut. The wheel may bind, walk up or kickback if the power tool is restarted in the workpiece.
9. Support panels or any oversized workpiece to minimize the risk of wheel pinching and kickback. Large workpieces tend to sag under their own weight. Supports must be placed under the workpiece near the line of cut and near the edge of the workpiece on both sides of the wheel.
10. Use extra caution when making a “pocket cut” into existing walls or other blind areas. The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.

Lithium Battery Safety Warnings



LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

1. Keep Battery Pack dry.
2. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - Open,
 - Drop,
 - Short-circuit,
 - Puncture,
 - Incinerate, or
 - Expose to temperatures greater than 265°F.
3. Charge Battery Pack only according to instructions.
4. Inspect Battery Pack before every use; do not use or charge if damaged.

Vibration Safety

This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

1. Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any medical or physical

symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.

2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Wear suitable gloves to reduce the vibration effects on the user.
4. Use tools with the lowest vibration when there is a choice between different processes.
5. Include vibration-free periods each day of work.
6. Grip tool as lightly as possible (while still keeping safe control of it). Let the tool do the work.
7. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.



SAVE THESE INSTRUCTIONS.

GROUNDING

⚠ WARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING: Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Never remove the grounding prong from the plug. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Extension Cords

Note: Extension cords must not be used with this item's Charger.

Warning Symbols and Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.










⚠ CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Addresses practices not related to personal injury.

Symbiology

	Volts
	Direct Current
	Amperes
	No Load Revolutions per Minute (RPM)
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.
	WARNING marking concerning Risk of Respiratory Injury. Wear NIOSH- approved breathing protection rated for the hazards in your work area.
	Read the manual before set-up and/or use.
	WARNING marking concerning Risk of Hearing Loss. Wear hearing protection.
	WARNING marking concerning Risk of Fire. Do not cover Charger ventilation ducts. Charge on fireproof surface only.



WARNING marking concerning Risk of Electric Shock.
Properly connect Charger's power cord to appropriate outlet.



WARNING marking concerning Risk of Explosion.
Do not puncture, short, or open battery packs and do not charge damaged battery packs.

Specifications

Battery Type	Hercules 12 V Li-ion: 56566, 57367 (sold separately)
Charger Type	Hercules 12 V Li-ion Charger: 56559 (sold separately)
No Load Speed	n0: 0 – 20,000/min
Arbor Hole Diameter	3/8" or 7/16"
Cut-Off Wheel Diameter	3" (Ø 76 mm)
Min – Max Wheel Thickness	0.030" – 0.125"
Maximum Depth of Cut	0.6"

SETUP – BEFORE USE

⚠WARNING


TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Make sure that the Trigger Lock is in the LOCKED position and the Battery Pack is removed before performing any procedure in this section.

Battery Charging

Charge battery pack before using this tool.

Follow instructions included with battery charger. Battery Pack and Charger sold separately.

Functional Description

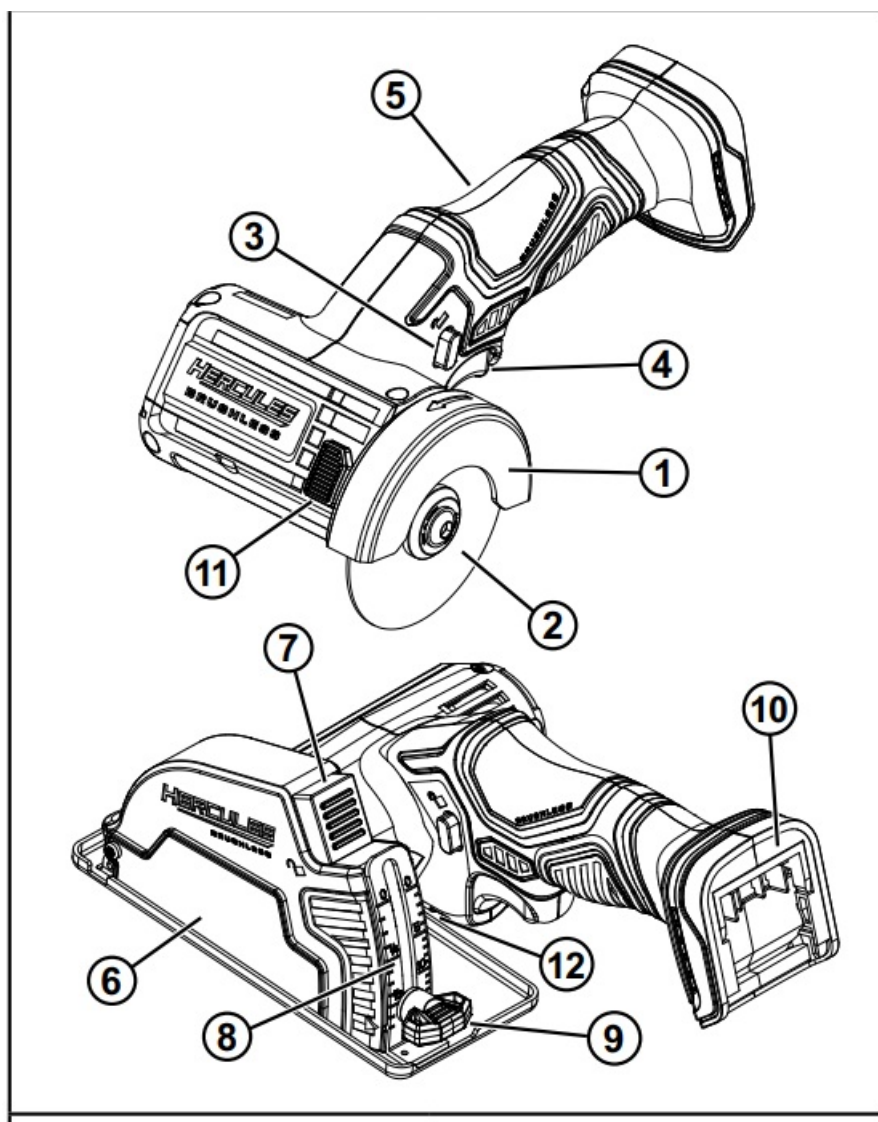

1. Wheel Guard
2. Cut-Off Wheel
3. Trigger Lock-Off
4. Trigger
5. Handle
6. Depth Gauge
7. Release Button
8. Depth Scale
9. Depth Adjustment Nut
10. Battery Receptacle
11. Spindle Lock
12. LED Light

OPERATING INSTRUCTIONS



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Tool Set Up

⚠WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Make sure that the Trigger Lock-Off is in the LOCKED position and the Battery Pack is removed before performing any procedure in this section.

Cut-Off Wheel Installation/Replacement

1. The Cut-Off Wheel MUST be:
 - rated to at least 20,000 RPM
 - no larger than 3" (76mm) in diameter
 - fitted with a 3/8" or 7/16" round arbor hole
 - from 0.030"—0.125" thick
 - suitable for edge grinding, not surface grinding
 - dry and clean
 - proven undamaged by visual inspection
2. Remove the Depth Gauge assembly if attached. Refer to Depth Gauge Installation/Removal.
3. Press in and hold the Spindle Lock. Loosen Arbor Bolt by turning COUNTERCLOCKWISE and remove Bolt, Top Flange, and old cut-off wheel (if installed).
4. Select the 3/8" or 7/16" Bottom Flange that matches the arbor of the Cut-Off Wheel and place on the Spindle with the flat side facing the Wheel. When properly installed the words BOTTOM FLANGEFACE BLADE can be seen on the Flange.
5. Insert Cut-Off Wheel onto Spindle. When using the 7/16" Bottom Flange, make sure the Flange centering hub fits inside the Cut-Off Wheel's arbor.
6. Place the Top Flange on the Spindle with the flat side facing the Cut-Off Wheel. When properly installed the words TOP FLANGEFACE OUT can be seen on the Flange.
7. Press in and hold the Spindle Lock. Insert Arbor Bolt into Spindle and tighten securely by turning **CLOCKWISE**.

WARNING! TO PREVENT SERIOUS INJURY, do not overtighten Arbor Bolt. Overtightening can damage the wheel, causing wheel failure.

Adjusting the Wheel Guard

⚠WARNING


TO PREVENT SERIOUS INJURY: Do not operate this tool without the Wheel Guard in place.

1. Grip the Wheel Guard and rotate forward or backward up to 45° in either direction.
2. Position the Guard as needed to shield you during the planned work.

Depth Gauge Installation/Removal

NOTICE: Do not install or use Depth Gauge when cutting metal, conduit, copper tubing, PVC or metal pipe.


1. To install the Depth Gauge, rotate the Wheel Guard forward as far as it will go.
2. Loosen the Depth Adjustment Nut on the Depth Gauge and fully raise the Gauge away from the Base Plate. Tighten the Adjustment Nut.
3. Insert the Wheel Guard and Cut-Off Wheel into the Depth Gauge Assembly, then rotate the Tool to secure in position. When properly installed, the front of the Guard rests against the stop inside the Depth Gauge, and the slot on the back of the Guard will engage the release tab on the Gauge.

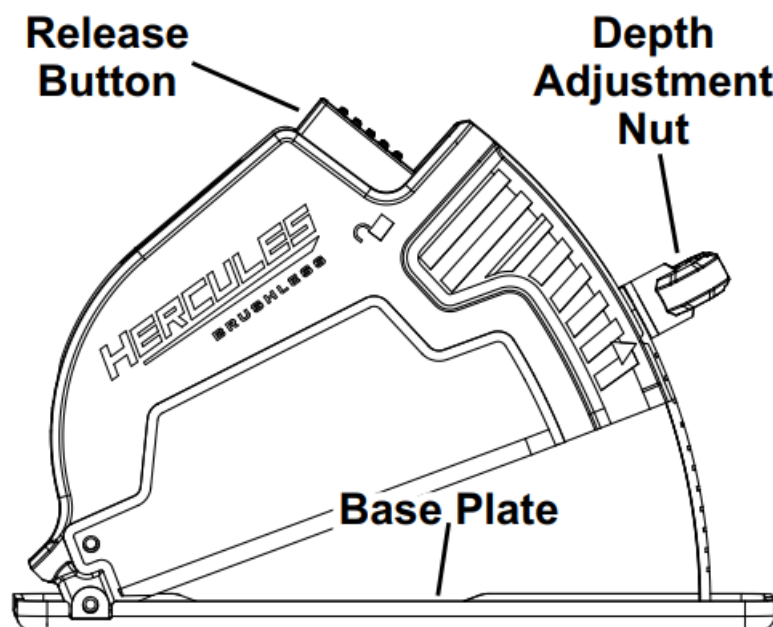

4. To remove the Depth Gauge, loosen the Depth Adjustment Nut and fully raise the Gauge. Tighten the Adjustment Nut.
5. Press in the Release Button to disengage the release tab and slide the Tool out of the Depth Gauge

Depth Adjustment

1. Loosen the Depth Adjustment Nut on the Depth Gauge to allow the depth of cut to be adjusted.
2. Raise or lower the Depth Gauge to the desired position using the Depth Scale to set depth of cut.
3. After adjustment, tighten the Depth Adjustment Nut to secure the depth setting.

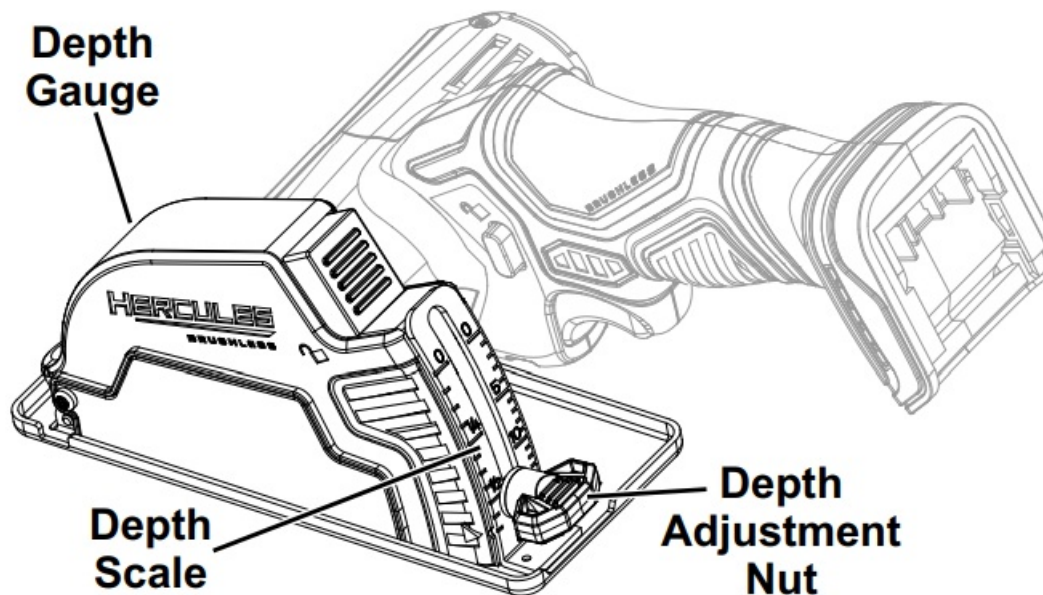

Workpiece and Work Area Set Up

Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Tool Set Up

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Make sure that the Trigger Lock-Off is in the LOCKED position and the Battery Pack is remove

Cut-Off Wheel Installation/Replacement

1. The Cut-Off Wheel MUST be:
 - rated to at least 20,000 RPM
 - no larger than 3" (76mm) in diameter
 - fitted with a 3/8" or 7/16" round arbor hole
 - from 0.030"–0.125" thick
 - suitable for edge grinding, not surface grinding
 - dry and clean
 - proven undamaged by visual inspection
2. Remove the Depth Gauge assembly if attached. Refer to Depth Gauge Installation/Removal.
3. Press in and hold the Spindle Lock. Loosen Arbor Bolt by turning COUNTERCLOCKWISE and remove Bolt, Top Flange, and old cut-off wheel (if installed).
4. Select the 3/8" or 7/16" Bottom Flange that matches the arbor of the Cut-Off Wheel and place on the Spindle with the flat side facing the Wheel. When properly installed the words BOTTOM FLANGEFACE BLADE can be seen on the Flange.
5. Insert Cut-Off Wheel onto Spindle. When using the 7/16" Bottom Flange, make sure the Flange centering hub fits inside the Cut-Off Wheel's arbor.
6. Place the Top Flange on the Spindle with the flat side facing the Cut-Off Wheel. When properly installed the words TOP FLANGEFACE OUT can be seen on the Flange.

7. Press in and hold the Spindle Lock. Insert Arbor Bolt into Spindle and tighten securely by turning CLOCKWISE.

WARNING! TO PREVENT SERIOUS INJURY, do not overtighten Arbor Bolt. Overtightening can damage the wheel, causing wheel failure.

Adjusting the Wheel Guard

TO PREVENT SERIOUS INJURY: Do not operate this tool without the Wheel Guard in place.

1. Grip the Wheel Guard and rotate forward or backward up to 45° in either direction.
2. Position the Guard as needed to shield you during the planned work.

Depth Gauge Installation/Removal

NOTICE: Do not install or use Depth Gauge when cutting metal, conduit, copper tubing, PVC or metal pipe.

1. To install the Depth Gauge, rotate the Wheel Guard forward as far as it will go.
2. Loosen the Depth Adjustment Nut on the Depth Gauge and fully raise the Gauge away from the Base Plate. Tighten the Adjustment Nut.
3. Insert the Wheel Guard and Cut-Off Wheel into the Depth Gauge Assembly, then rotate the Tool to secure in position. When properly installed, the front of the Guard rests against the stop inside the Depth Gauge, and the slot on the back of the Guard will engage the release tab on the Gauge.
4. To remove the Depth Gauge, loosen the Depth Adjustment Nut and fully raise the Gauge. Tighten the Adjustment Nut.
5. Press in the Release Button to disengage the release tab and slide the Tool out of the Depth Gauge.

Depth Adjustment

1. Loosen the Depth Adjustment Nut on the Depth Gauge to allow the depth of cut to be adjusted
2. Raise or lower the Depth Gauge to the desired position using the Depth Scale to set depth of cut.
3. After adjustment, tighten the Depth Adjustment Nut to secure the depth setting.

Workpiece and Work Area Set Up

1. Designate a work area that is clean and well-lit. The work area must not allow access by children or pets to prevent distraction and injury.
2. Secure loose workpieces using a vise or clamps (not included) to prevent movement while working.
3. There must not be hazardous objects, such as utility lines or foreign objects, nearby that will present a hazard while working.
4. You must use personal safety equipment including, but not limited to, ANSI-approved eye and hearing protection, as well as heavy-duty work gloves.
5. Before beginning work, provide for sparks and debris that will fly off the work surface.

General Operation

1. Push the Trigger Lock-Off to the left to LOCK the Trigger.
2. If using the Depth Gauge, set the depth of cut as described in Depth Adjustment.
3. Insert a fully charged Battery Pack (sold separately) into the Battery Receptacle, making sure it clicks in place securely.
4. Push the Trigger Lock-Off to the right to UNLOCK the Trigger.
5. Grip the tool firmly, then squeeze the Trigger to start the Tool.
6. Allow the Tool to come up to full speed before touching the work material.
7. If using the Depth Gauge, keep the Base Plate of the Gauge flat against the work material through the full length of the cut.
8. Apply the Cut-Off Wheel straight into the work material using only the edge of the Wheel, allowing the Tool to operate at full speed. If the Tool bogs down, use lighter pressure.
WARNING! TO PREVENT SERIOUS INJURY: Do not grind with the side of the Cut-Off Wheel. Abrasive cut-off wheels are intended for peripheral grinding; side forces applied to these wheels may cause them to shatter.
9. Avoid contact with foreign objects such as metal screws and nails when cutting.
10. Do not apply excessive pressure on the Tool. Allow the Tool to do the work. Note: Use caution to avoid overheating the cut-off wheel. If cutting plastic, cut at an even pace to avoid melting it.
11. When finished, release the Trigger to stop the Tool.
12. **TO PREVENT ACCIDENTS, AFTER USE:** Turn off the Tool.
WARNING! TO PREVENT SERIOUS INJURY: Allow the Tool to come to a complete stop before setting it down. Push the Trigger Lock-Off to the left to LOCK the Trigger, then remove the Battery Pack. Clean, then store the Tool indoors out of children's reach.

MAINTENANCE AND SERVICING



Procedures not specifically explained in this manual must be performed only by a qualified technician

⚠ WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Make sure that the Trigger Lock-Off is in the LOCKED position and the Battery Pack is removed before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use

Cleaning, Maintenance, and Lubrication

1. BEFORE EACH USE, inspect the general condition of the tool. Check for:
 - leaking, swollen, or cracked battery pack
 - loose hardware
 - misalignment or binding of moving parts
 - cracked or broken parts
 - any other condition that may affect its safe operation.
2. AFTER USE, wipe external surfaces of the tool with clean cloth.
3. PERIODICALLY, blow dust and grit out of the motor vents using dry compressed air. Wear ANSI-approved safety goggles and NIOSH-approved breathing protection while doing this.

4. Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. Do not short, incinerate or open battery.
5. Disconnect battery pack and store battery pack, charger, and tool in dry, indoor area out of reach of children and away from metal objects (i.e., paperclips, coins) to prevent shorting.

Accessory Storage and Handling

1. Handle cut-off wheels carefully to prevent dropping or bumping. Do not use wheels that have been dropped or bumped.
2. 1Store accessories in shelves, racks, boxes, or drawers. Keep storage area dry and above freezing. Any cut-off or grinding wheels exposed to humidity or freezing temperatures must not be used.


Record Product's Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available. Reference UPC 193175442543

Troubleshooting

Problem	Possible Causes	Likely Solutions
Tool will not start.	<ol style="list-style-type: none"> 1. Battery Pack not properly connected. 2. . Battery Pack not properly charged. 3. Battery Pack stopped working. 4. Tool's thermal reset breaker tripped (if equipped). 5. Internal damage or wear. (Trigger, for example.) 	<ol style="list-style-type: none"> 1. Remove Battery Pack, make sure there are no obstructions, reinsert the Battery Pack according to its shape (it should only fit one way), and press firmly until the Battery Pack locks in place. 2. Make sure Charger is connected and operating properly. Give enough time for Battery Pack to recharge properly. 3. Dispose of old Battery Pack properly or recycle. Replace Battery Pack. 4. Turn off tool and allow to cool. Press reset button on tool. 5. Have technician service tool.
Tool operates slowly.	<ol style="list-style-type: none"> 1. Excess pressure applied to work piece. 2. Battery Pack power low. 3 . Battery Pack wearing out. 	<ol style="list-style-type: none"> 1. Decrease pressure, allow tool to do the work. 2. . Recharge Battery Pack. 3. Dispose of old Battery Pack properly or recycle. Replace Battery Pack.

Performance decreases over time.	Battery Pack wearing out	Dispose of old Battery Pack properly or recycle. Replace Battery Pack.
Excessive noise or rattling.	Internal damage or wear. (Bearings, for example.)	Have technician service tool.
Overheating.	<ol style="list-style-type: none"> 1. Forcing tool to work too fast. 2. Blocked motor housing vents. 	<ol style="list-style-type: none"> 1. Allow tool to work at its own rate. 2. 1Wear ANSI-approved safety goggles and NIOSH-approved dust mask/ respirator while blowing dust out of motor using compressed air.
Tool does not cut or grind effectively	<ol style="list-style-type: none"> 1. Disc accessory may be loose on Spindle. 2. Disc accessory damaged, worn or wrong type for the material 	<p>Confirm disc accessory arbor is correct and Arbor Bolt is tight. 2. Check condition and type of disc accessory. Use only proper type of disc accessory in good condition.</p>
 Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.		

LIMITED 90 DAY WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. **THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**


To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com
For technical questions, please call 1-888-866-5797
26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797



Documents / Resources

	<p>HERCULES HD67B 12V Brushless Cordless [pdf] Owner's Manual HD67B 12V Brushless Cordless, HD67B, 12V Brushless Cordless, Brushless Cordless, Cordle SS</p>
---	--