



Home » hoymiles » hoymiles DTB Series Data Transfer Bridge User Manual 📆

Contents [hide]

- 1 hoymiles DTB Series Data Transfer Bridge
- 2 Product Information
- 3 About This Manual
- 4 Safety Instructions
- 5 Product Introduction
- 6 Features
- 7 Dimensions
- 8 Technical Specifications
- 9 Installation
- 10 Indicators and Button
- 11 Network Configuration
- 12 FCC Statement
- 13 Warranty
- 14 FAQ
- 15 Documents / Resources
 - 15.1 References



hoymiles DTB Series Data Transfer Bridge



Specification

• Product Name: Hoymiles Data Transfer Bridge (DTB)

• Communication Method: WiFi, 4G, WLAN

• Generation: G3

Product Information

The Hoymiles Data Transfer Bridge (DTB) is designed to connect to the S-Miles Cloud via various communication methods such as WiFi, 4G, and WLAN. It is the third generation of the Data Transfer Bridge product line.

About This Manual

Purpose

This manual contains important instructions regarding the installation and operation of the Hoymiles Data Transfer Bridge(DTB). Please carefully read this manual before the installation, operation, and maintenance.

Audience


This document is only for qualified personnel. Only qualified personnel who have been trained or mastered relevant skills can install and maintain the product under the guidance of this document.

Validity

The DTB is only compatible with Hoymiles hybrid energy storage inverters and ACcoupled energy storage inverters.

This document is valid for the following DTB models:

- DTB-WiFi-G3
- DTB-4G-G3
- DTB-WL-G3

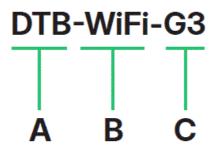

Item	Meaning	Description
А	Product name	DTB: Data Transfer Bridge
В	Communication method	 WiFi: Connects to the S-Miles Cloud v ia Wi-Fi 4G: Connects to the S-Miles Cloud via 4G WL: Connects to the S-Miles Cloud via WLAN
С	Generation	G3: The third generation

Safety Instructions

Safety Symbols

Safety symbols are used in this manual as follows:

Symbol	Description
DANGER	This symbol indicates potential risks that, if not avoided, may lead to death or serious physical injury.
WARNING	This symbol indicates potential risks that, if not avoided, may lead to personal injury or device damage.

CAUTION	This symbol indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.
NOTICE	This symbol indicates potential risks that, if not avoided, may lead to minor injury or damage to the equipment.
NOTE	This symbol indicates an important step or tip that leads to the be st results but is not safety or damage-related.

Additional Symbols

The product label contains the following symbols with their meanings described below:

Icon	Explanation
C€	CE mark The product complies with the requirements of the applicable EU directives.
F©	FCC mark The product complies with the FCC standard.
	Observe the documentation Read and understand all documentation supplied with the product.
	Treatment Electrical equipment that has reached the end of life must be colle cted separately and returned to an approved recycling facility to c omply with the European Directive 2002/96/EC on Waste Electrica I and Electronic Equipment and its implementation as national law. Return any devices you no longer need to an authorized dealer or an approved collection and recycling facility.

Safety Instructions

The DTB has been designed and tested in compliance with international safety standards, and thus requires careful installation and operation. Installers must carefully

read and strictly follow the safety instructions in this section.

Failure to do so may result in:

- Injury or death to the installers or operators
- Damage to the DTB

DANGER!

Do not attempt to repair the device yourself. If you encounter any device issues, or need repair or warranty information, please contact us.

WARNING!

- Do not use Hoymiles products in a way that is not suggested by the manufacturer.

 Doing so may cause death or injury to persons or damage to the equipment.
- Read all instructions and warnings in the technical description and on the DTB before installing or using the device.
- Do not use the device in locations where wireless devices are not allowed.
- Keep the device away from water, fire, moisture, and hot environments to prevent damage.

CAUTION!

- Do not try to repair the DTB without approval from Hoymiles. If the DTB is damaged, send the DTB back to your installer for repair or replacement. Disassembling the DTB without approval from Hoymiles will invalidate the remaining warranty period.
- Hoymiles confirms that the product described in this guide meets the essential requirements and relevant provisions of the EU directives.

Radio Technology	2.4 G Wi-Fi
Radio Spectrum	 Wi-Fi: 2412 to 2484 MHz Bluetooth LE: 2402 to 2480 MHz

Maximum Transmission Power

• Wi-Fi: 15 dBm

Bluetooth LE: 13.5 dBm

These technical parameters apply only to EU countries.

NOTICE

- **Electrical installations:** Perform all electrical installations in accordance with national and local regulations.
- To ensure optimal reliability and meet warranty conditions, install the DTB according to the instructions in this guide.
- This product is not a network device but can connect to a home router via Wi-Fi,
 leveraging the router's security functions to counter potential cybersecurity risks like
 DoS attacks.

EU Directive Compliance

This product complies with the following EU directives and can be used without restrictions in the European Union:

- **Directive 2014/53/EU (RED) and 2009/125/EC**: Relating to the provision of electrical equipment within certain voltage limits on the market (Low Voltage Directive).
- **Directive 2011/65/EU and 2015/863/EU (RoHS):** Restricting the use of certain hazardous substances in electrical and electronic equipment.

More detailed information can be found at https://www.hoymiles.com/.

Product Introduction

Overview

- DTB-G3 is the third-generation data transfer stick of Hoymiles, which is small and easy to install.
- DTB-G3 supports communication methods including Wi-Fi, 4G and LAN, enabling the inverter to connect to the router or base station, and transmit data to the S-Miles

Cloud for real-time monitoring and remote control. In addition.


 DTB-G3 supports Bluetooth for short-range communication between the inverter and App, offering users convenient control of power on/off, power adjustment, mode setting, and configuration parameters viewing via the App.

Features


- Plug and play
- Stable and reliable data transmission
- Supports Bluetooth local configuration
- IP66 protection

Applications


• DTB-WiFi-G3

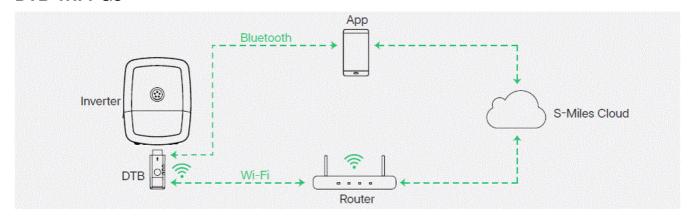

• DTB-4G-G3

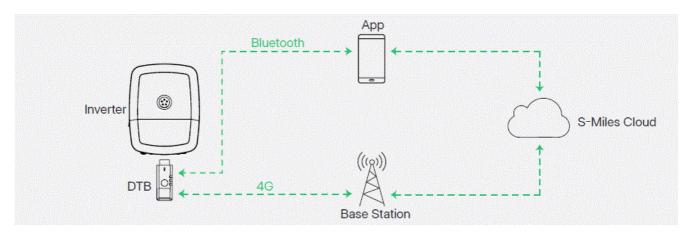


• DTB-WL-G3

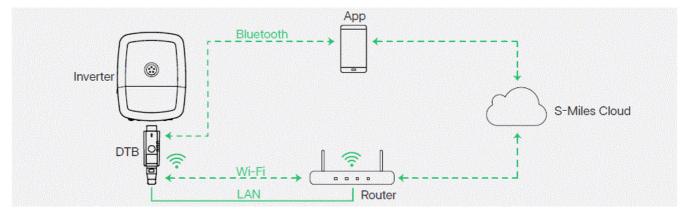


- DTB Interface: Connect and communicate with the inverter.
- Inverter Interface: Connect and communicate with the DTB.

Dimensions

DTB-WiFi-G3 / DTB-4G-G3

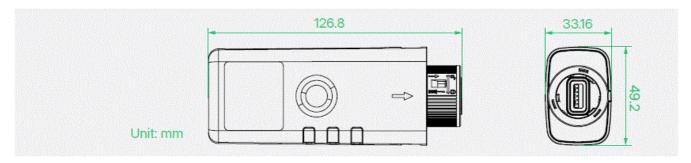

DTB-WL-G3

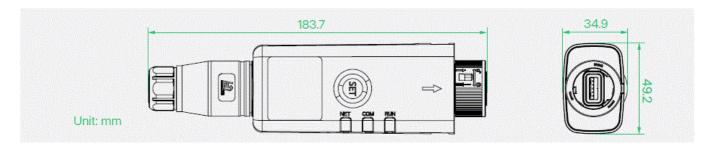


Technical Specifications


Model	DTB-WiFi-G3	DTB-4G-G3	DTB-WL-G3
Communication			
Max. inverter supported		10	
Data upload cycle (min)		5	
Indicator		LED × 3	
Connection interface	USB		
4G standard		4G: LTE-FDD / LTE-TDD 3G: WCDMA / HSDPA / HSUPA / HSPA+ 2G: GSM / GPRS / EDGE	I
Wi-Fi standard		IEEE 802.11 b/g/n @2.4 GHz	
LAN standard	1	1	10/100 Mbps adaptive; Max. length of network cable: 100 m
Bluetooth standard		Bluetooth 5.0	
Configuration method		BLE App	
General			
Operating voltage (V)		5	
Power consumption (W)		≤ 5	
Dimensions (mm)	49.2 × 126.8 × 33.16	49.2 × 126.8 × 33.16	49.2 × 183.7 × 34.9
Weight (g)		105	
Protection degree		IP66	
Installation method	Plug and play		
Environment			
Operating temperature range (°C)		-25 to +65	
Relative humidity		0 to 95%, no condensing	
Operating altitude (m)		≤ 4000	
Certifications and Standards			
Certificate	CE	; NTC; PTA; RED18031; MIC; NB1	TC .


Installation

Wi-Fi/4G DTB Installation

- Step 1 Remove the DTB port cover on the bottom of the inverter.
- Step 2 Insert the DTB into the DTB port. Listen for a click as they engage.

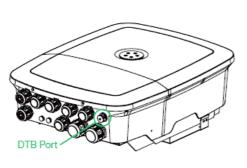


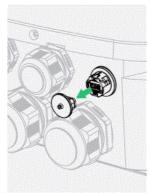


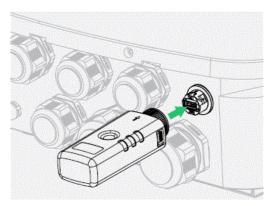


WLAN DTB Installation


- **Step 1** Turn the end of the DTB counterclockwise, and separate the DTB into four parts.
- Step 2 Plug the LAN cable into the network port on the part 1.
- Step 3 Slide part 2, 3 and 4 over the cable in sequence, and tighten all parts.

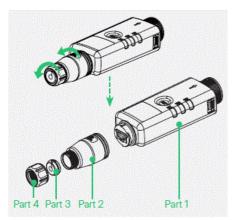


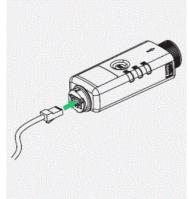


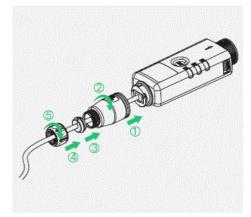

- Step 4 Remove the DTB port cover on the bottom of the inverter.
- Step 5 Insert the DTB into the DTB port. Listen for a click as they engage.

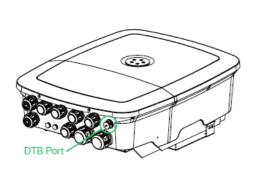


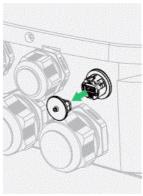

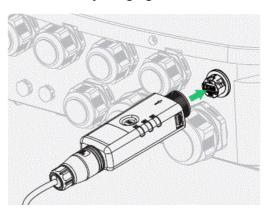


NOTICE

For both types of devices, if you need to remove the DTB, turn the lock ring counterclockwise, and unplug it.

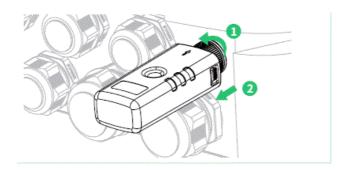


Indicators and Button

Indicators Status

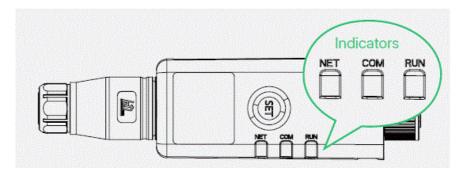

Indicat or	Statu	Indication
NET	On	The network is connected, and communication with the S-Miles CI oud is normal.
	Off	Network not connected
	Blinkin g	The network is connected, but communication with the S-Miles Clo ud is abnormal.
COM	On	Communication with the inverter is normal.
COIVI	Off	Communication with the inverter is abnormal.
RUN	On	Connected to external power supply
	Off	Not connected to external power supply

Button Instruction

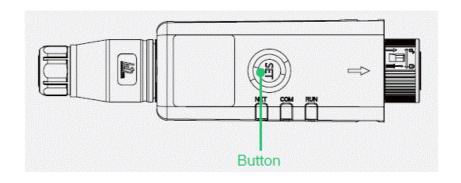

Operation	Function
Press two times	Reboot software
Press for 5s to 10s	Reset password

Network Configuration

NOTICE


The screenshots provided here are for reference only. The actual screens may vary.

For additional details of App operation, see S-Miles Installer App Operating Guide.


• **Step 1** Scan the QR code below, or search for "S-Miles Installer" on the App Store (iOS) or Google Play Store (Android) to download the app.



- Step 2 Open and log in to the app using your credentials.
- Step 3 Tap O&M >> Network Config . The app will scan for the Bluetooth of nearby devices.
- Step 4 On the Via Bluetooth part, tap the DTB to be connected.
- **Step 5** Enter the PIN code (only required for the first connection, by default is 123456), and tap Confirm.

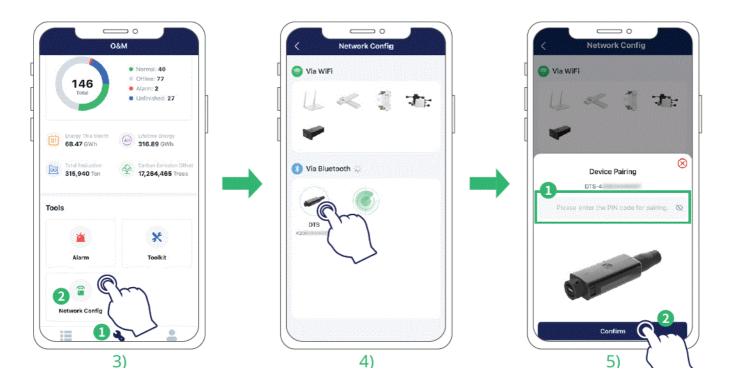

- Step 6 Connect to the network.
 - Ethernet Mode (Only applicable to DTB-WL-G3): DTB and router are connected via LAN cable. Select Ethernet and tap Send to DTU.
 - Wi-Fi Mode: Select Wi-Fi. Enter the router's Wi-Fi name and password, and tap Send to DTU.
- Step 7 When the connection is successful, tap Finish.

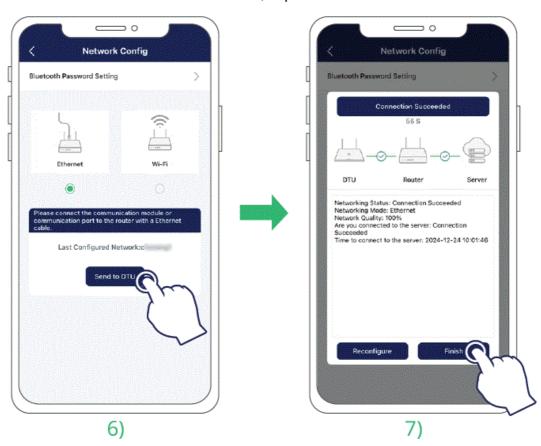

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This equipment should be installed and operated with minimum distance 20cm between the radiator your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s).

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Legal Notice

- Hoymiles has made every effort to ensure the accuracy and completeness of this manual. However, this manual may be changed and revised due to product enhancements or user feedback.
- Hoymiles reserves the right to modify this manual without prior notice at any given time. The latest version of this manual can be found by visiting the Hoymiles official website (<u>www.hoymiles.com</u>) or scanning the QR Code below.



Warranty

Follow the installation instructions in this manual to ensure warranty compliance and reliability. The current warranty conditions can be accessed at www.hoymiles.com.

Contact Us

If you have technical queries or any questions concerning our products, please contact our support through the Hoymiles service portal:

- Germany
 service.de@hoymiles.com
- Italy

service.it@hoymiles.com

Poland

service.pl@hoymiles.com

· Rest of the EU

service.eu@hoymiles.com

Brazil

service.br@hoymiles.com

• USA

service.us@hoymiles.com

Australia & New Zealand

service.au@hoymiles.com

Germany

+ 49 6994322186

Brazil

+ 55 1148585231

hoymiles.com

Spain

service.es@hoymiles.com

Netherlands

service.nl@hoymiles.com

Finland

service.fi@hoymiles.com

• Spanish-speaking countries

service.mx@hoymiles.com

Canada

service.ca@hoymiles.com

Asia & Pacific

service.asia@hoymiles.com

France

+33 159131589

North America

+1 8449964537

Netherlands

+31 852736388

France

service.fr@hoymiles.com

Norway

service.no@hoymiles.com

Austria

service.at@hoymiles.com

Poland

+48 918821656

Revision History

V202502	This issue marks the initial official release.
---------	--

FAQ

- Q: Where can I find the latest version of the user manual?
 - A: The latest version of the user manual can be found on the Hoymiles official website at www.hoymiles.com or by scanning the QR code provided in the manual.
- Q: How can I contact customer support for technical queries?
 - A: You can contact customer support through the Hoymiles service portal or via email based on your region. Refer to the contact details provided in the manual for specific email addresses and phone numbers.

Documents / Resources



hoymiles DTB Series Data Transfer Bridge [pdf] User Manual DTSWIFIG3, DTB-WiFi-G3, DTB-4G-G3, DTB-WL-G3, DTB Series Data Transfer Bridge, DTB Series, Data Transfer Bridge, Transfer Bridge, Bridge

References

• User Manual

- hoymiles
- ▶ Bridge, Data Transfer Bridge, DTB Series, DTB Series Data Transfer Bridge, DTB-4G-G3, DTB-WiFi-G3, DTB-WL-G3, DTSWIFIG3, hoymiles, Transfer Bridge

Leave a comment

Your email address will not be published. Required fields are marked * Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment**

Search:

e.g. whirlpool wrf535swhz

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.