

HYTRONIK HBEM8200D/F Built mln DALI to Bluetooth Converter Translator Module User Manual

Home » HYTRONIK » HYTRONIK HBEM8200D/F Built mln DALI to Bluetooth Converter Translator Module User Manual ™





Product Description

HBEM8200D/F is a DALI/Bluetooth convertor, which converts a standard DALI/DALI2 emergency driver output to Bluetooth output, so that user can view, edit and manage the emergency system though high-end Koolmesh platform. User can then enjoy all the powerful and convenient features in Koolmesh platform, such as scheduling a monthly self test or annually self test in the app, checking the DALI/DALI2 emergency drivers' status, including automatic email notication upon detecting fault, automatic monthly/yearly (functional/duration test) emergency report generation etc. All the settings and parameters can be set in both Koolmesh app and Koolmesh IOT platform.

Contents

- 1 App Features
- 2 Hardware Features
- **3 Technical Specifications**
- 4 Mechanical Structure &
- **Dimensions**
- **5 Wire Preparation**
- **6 Wiring Diagram**
- 7 Dimming Interface Operation Notes
 - 7.1 Switch-Dim
- **8 Additional Information** /
- **Documents**
- 9 Documents / Resources
 - 9.1 References

App Features

Floorplan feature to simplify project planning
 Grouping luminaires via mesh network
Scenes
Push switch con-guration
Schedule to run scenes based on time and date

	Astro timer (sunrise and sunset)	
	Device -rmware update over-the-air (OTA)	
£7	Power-on status (memory against power loss)	
	Ofine commissioning	
P	Different permission levels via authority management	
	Network sharing via QR code or keycode	
	Remote control via gateway support HBGW01	
	Interoperability with Hytronik Bluetooth product portfolio	

Compatible with EnOcean BLE switches
Continuous development in progress

Hardware Features

DALI	I00mA DALI broadcast output for up to 50 LED drivers
Print)	Compact design
Switch-Dim.	2 Push inputs for flexible manual control
Short Circuit Protection	Short-circuit protection
Over-load Protection	Overload protection
5 YEARD WARRA	5-year warranty











Fully support EnOcean self-powered switch module PTM2 I 5B (HBES0 1 /W & HBES0 1 /B)







Koolmesh Pro app for iPad





Web opp/platform: www.iot.koolmesh.com

Note:

Point to Point Control: I pc HBEM8200D/F convertor for I pc 3rd party DALI/DALI2 emergency driver. **Remote Control and Monitoring:** with Bluetooth gateway HBGWOI, users can remotely control and monitor emergency system via Koolmesh mobile/tablet opp & web opp platform.

HBEM8200D/F & 3rd Party standard DALI/DALI2 emergency driver does not need to connect to central DALI PSU.

HBEM8200D/F provides power supply to the 3rd party standard DALI/DALI2 emergency driver.

Technical Specifications


Bluetooth Transceiver	
Operation frequency 2.4 GHz 2.483 GHz	
Transmission power	4 dBm
Range (Typical indoor)	I0~30m
Protocol	Bluetooth " 5.0 SIG Mesh

Environment	
Operation temperature	Ta: -20°C - +50°C
Case temperature (Max.)	Tc:+75°C
Storage temperature	20°c ~ 60°C
Relative humidity	20 ~ 90%
IP rating	IP20
Insulation	Class II


Input & output Characteristics		
Operating voltage	220 240VAC 50 / 60 Hz	
Load rating	100mA, I 6VDC (max. 50 devices)	

Safety & EMC		
EN55015, EN6 I 547	EMC standard (EMC)	
Safety standard (LVD)	EN62479, EN6 I 000	
Radio Equipment (RED)	IEC/EN 61058, AS/NZS 61058	
EN301489- I /-17, EN62479	EN300 328,	
Semko, CB, CE, EMC, RED, RCM	Certification	

Mechanical Structure & Dimensions

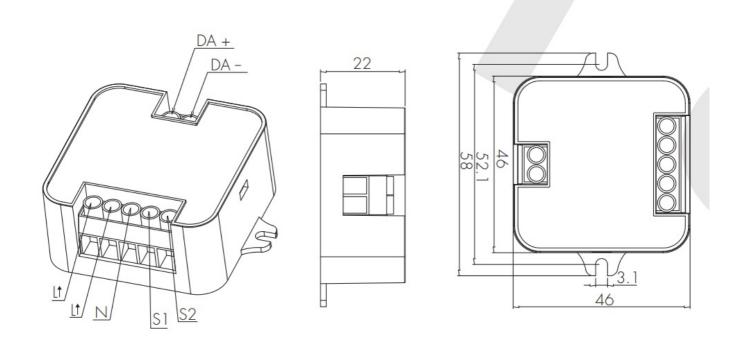


Wire Preparation

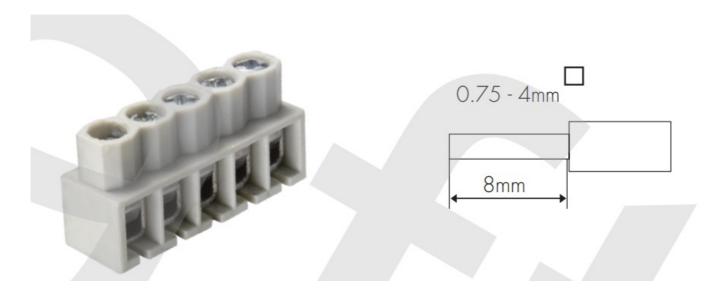

To make or release the wire from the termin al, use a screwd river to push down the button.

- 1. 200 metres (total) max. for 1 mm' CSA (Ta= 50°C)
- 2. 300 metres (total) max. for 1.5mm' CSA (Ta= 50°C)

Wiring Diagram

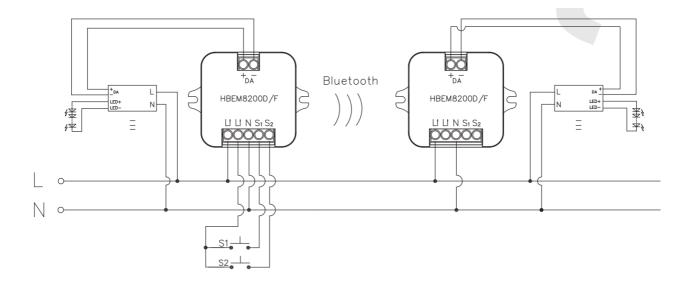

Normal Mode

It is the mode in which mains supply is available, with the battery charged or charging. In this mooe, HBEM8200D/F is a standard Bluetooth dimmer with DALI broadcasting function, also with ability to create scenes and controllable by motion sensor, Push switch, schedules and opp.

Emergency Mode

It is the mode in which mains supply hos foiled and whilst the control gear is powered by the battery until deep discharge point. In this mode,

HBEM8200D/F is unable to be controlled by motion sensor, Push switch, schedules and opp. However, some emergency parameters con still be conjured via the opp. such as time scheduled for self-test, duration for extended emergency mode etc.

Rest Mode

It's the mode in which the luminoires ore intentionally off whilst the control gear is powered by the battery. To enter this mooe, the prerequisite is that there is no mains supply. In this mode, the luminoires will be turned off automatically and HBEM8200D/F is powered by the battery. If the luminoires ore forced to turn on in this mode, HBEM8200D/F will then be adjusted to emergency mode. When mains supply is recovered, HBEM8200D/F will return to normal mode.

Inhibit Mode

It is the mode in which HBEM8200D/F is powered from mains but prevented from going into emergency mode in the event mains failure. Please enter this mode only in special applications whereby emergency functions is not needed, such as when electricians need to cut off power supply when doing examinations and maintenance work of HBEM8200D/F.

Extended Emergency Mode

It is the mode in which the control gear continues to operate the luminoires in the some way as in emergency mode for the programmed prolong time ofter the restorations of the mains supply. When this mooe is enabled, HBEM8200D/F will remain in emergency mode even when mains supply is recovered. In this mooe, the user must set the time extended for emergency mode; when the time extended elapses, HBEM8200D/F will return to normal mooe.

Self test (Monthly)

HBEM8200D/F carries out routine test on emergency lighting based on pre-programmed time via the opp & web opp ploform or ofter receiving manual commands from the opp & web opp platform. During the self test process, tests for load connections (such as open circuit, short-circuit) and battery connections (such as open circuit, short-circuit, polarity reversal etc.) will be carried out.

All the DALI emergency drivers Self Test feedbacks. results and related Events (Such as the open circuit and short circuit of the load connection, open circuit and short circuit for battery connection) ore generated by the driver itself. the HBEM8200D/F convertor will only retrieve the data from the emergency driver and translate the DALI feedback into Bluetooth Mesh data correctly and accurately and display to the end user interface (App and Web opp Platform). It will not contain any Emergency Self Test circuit in the products itself.

Self test (Annually)

The test is carried out mainly to check the battery level. The user must make sure that the battery for DALI emergency driver is fully charged before HBEM8200D/F carries out annual test. Also, the battery lifetime statistics will be analysed and displayed on a chart basis.

Push switch function

Users con connect Push switch to HBEM8200D/F to achieve multiple functions such as manually trigger monthly self test, annually self test, invalid and back to normal mode. Those options con be selected in Koolmesh opp Push switch settings.

Dimming Interface Operation Notes

Switch-Dim

The provided Switch-Dim interface allows for a simple dimming method using commercially available non-latching [momentary] wall switches. Detailed Push switch configurations con be set on Kool mesh opp.

Switch Function	Action	Descriptions
Push switch	Short press [< I second) • Short press has to be longer than 0. Is, or it will be invalid.	 Turn on/ off Turn on only Turn off only Recall a scene Quit manual mode Do nothing
	Double push	Turn on onlyTurn off onlyRecall a sceneQuit manual mode Do nothing
	long press (::> I second)	DimmingColor tuningDo nothing
Sensor-link	/	Upgrade a normal on/off motion sensor to a Bluetooth controlled motion n sensor
Emergency Self-Test Functi on	Short press [< I second) • Short press hos to be longer than 0. ls, or it will be invalid.	Start SelfStop Self test [Monthly) testStart SelfInvalid test [Annually)
	long press (::> I second)	 Start Self test [Monthly) Stop Self test Start Self test [Annually) Invalid
Fire Alarm [VFC signal only	Refer to <i>Ifaalmesh"App</i> User Manu al V2.	Able to connect the Fire Alarm system Once the fire alarm system is triggered, all the luminaries controlled by the Pu sh Switch will enter the preset scene [normally it's full on), after the fire alarm system gives the ending signal, all the I uminaries controlled by this Push Swit ch will revert bock to normal status.

Additional Information / Documents

- 1. To learn more about detailed product features/functions, please refer to www.hytronik.com/download->knowledge ->Introduction of App Scenes and Product Functions
- Regarding precautions for Bluetooth product installation and operation, please kindly refer
 to <u>wwwhytronik.com/download</u> ->knowledge ->Bluetooth Products Precautions for Product
 Installation and Operation
- Data sheet is subject to change without notice. Please always refer to the most recent release on <u>www.hytronik.com/products/bluetooth</u> technology->DALI-to Bluetooth Converter/Translator Module
- 2. Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download ->knowledge ->Hytronik Standard Guarantee Policy





Documents / Resources



<u>HYTRONIK HBEM8200D/F Built mln DALI to Bluetooth Converter Translator Module</u> [pdf] User Manual

HBEM8200D F Built mln DALI to Bluetooth Converter Translator Module, HBEM8200D F, Built mln DALI to Bluetooth Converter Translator Module Bluetooth Converter Translator Module, Converter Translator Module, Translator Module

References

- **©** Catalogue Hytronik
- Diot.koolmesh.com

Manuals+,