



IndiaMART MS10-DP-W 230V Real Presence Sensor Instruction Manual


[Home](#) » [indiamart](#) » IndiaMART MS10-DP-W 230V Real Presence Sensor Instruction Manual 

IndiaMART MS10-DP-W 230V Real Presence Sensor Instruction Manual



Welcome to use MS10 Microwave Real Presence Sensor!

The product adopts microwave sensor mould with high-frequency electro-magnetic wave (24GHz) and integrated circuit. It detects human breath, as long as people are present, the lights will remain on. When people leave, the lights will go out. It gathers automatism, convenience, safety, saving-energy and practical functions.

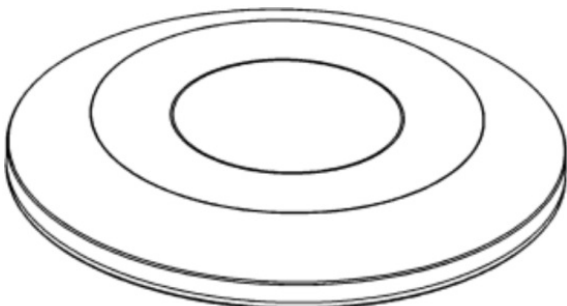

SPECIFICATION:

Voltage: 110-240V/AC

Power Frequency: 50/60Hz

Detection Distance: 3m(radius)

Rated Load: Max. 2000W(220-240V/AC)
1000W(110-130V/AC)



1000W(220-240V/AC)

500W(110-130V/AC)



Detection Range: 360°

Ambient Light: <3-2000LUX (Adjustable)

HF System: 24GHz CW radar, ISM band

Installing Height: 2-4m


Transmission Power: <10mW

Time Delay: Min. 10sec±3sec Max. 12min±1min


FUNCTION:

- Can identify day and night: It can work in the daytime and at night when it is adjusted on the “sun” position (max). It can work in the ambient light less than 3LUX when it is adjusted on the “3” position (min). As for the adjustment pattern, please refer to the testing pattern.
- When the detection distance is less than 3M, it detects human breathing and keeps lamp on continuously.
- When the detection distance is 3-4.5M, it will be worked as a normal microwave sensor and detects human movement automatically.
- Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.
- Time-Delay is adjustable. It can be set according to the consumer’s desire. The minimum time is 10sec±3sec. The maximum is 12min±1min.

SENSOR INFORMATION:

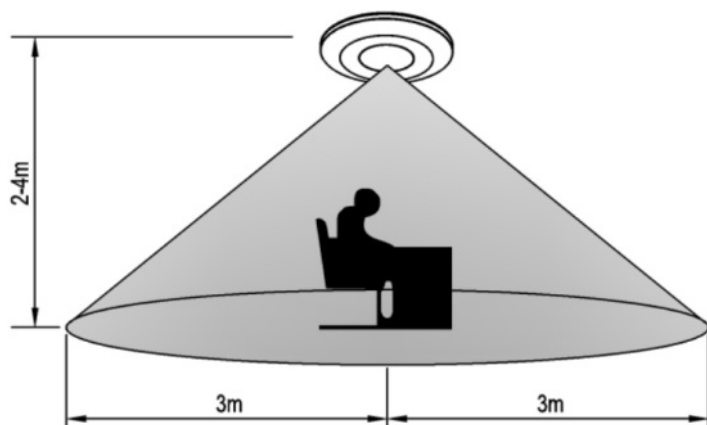


INSTALLATION: (see the diagram)

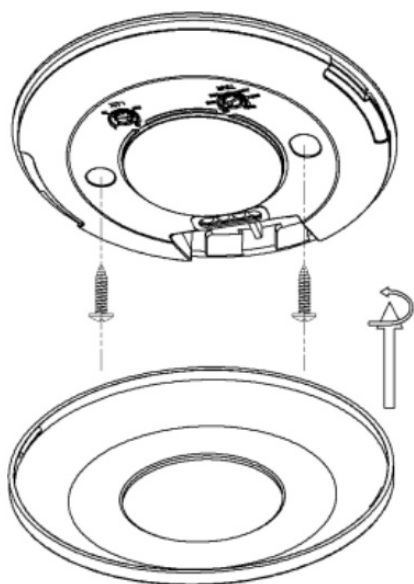


- Please move the upper cover with anti-clockwise whirl as per the diagram on the right.
- Connect the power and the load according to the connection-wire diagram.
- Fix the bottom on the selected position with the inflated screw.
- Install back the upper cover on the sensor, then you could switch on the power and test it.


CONNECTION-WIRE DIAGRAM:

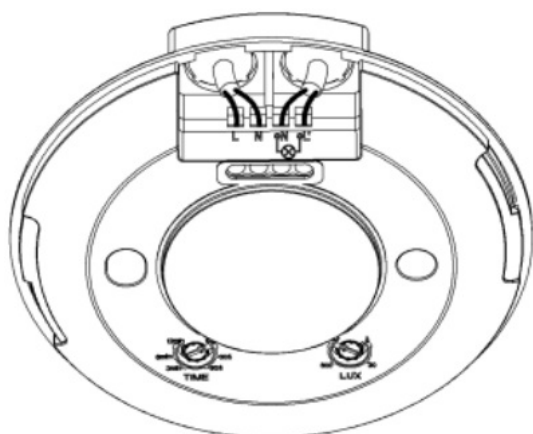


The wires come in and out from the bottom

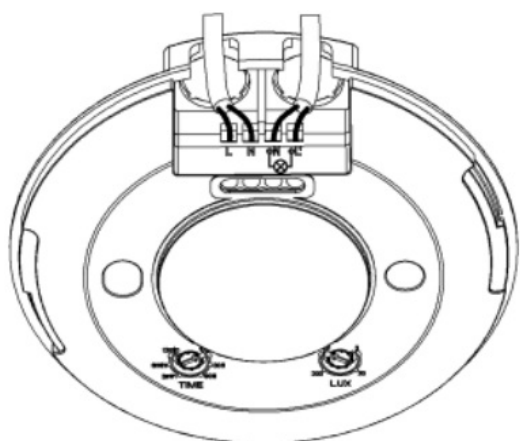

The wires come in and out from the side

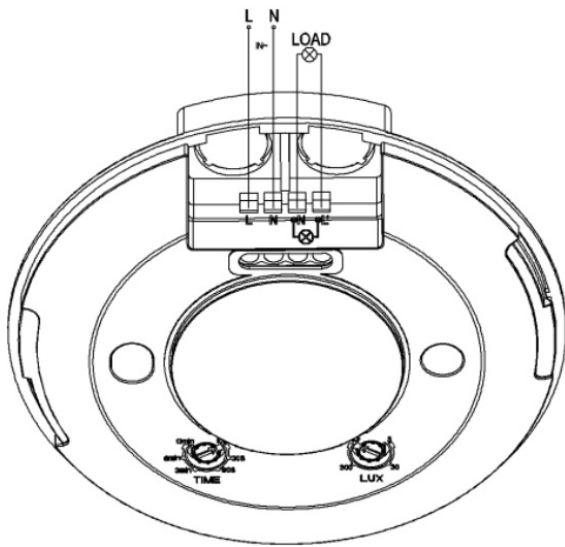

TEST:

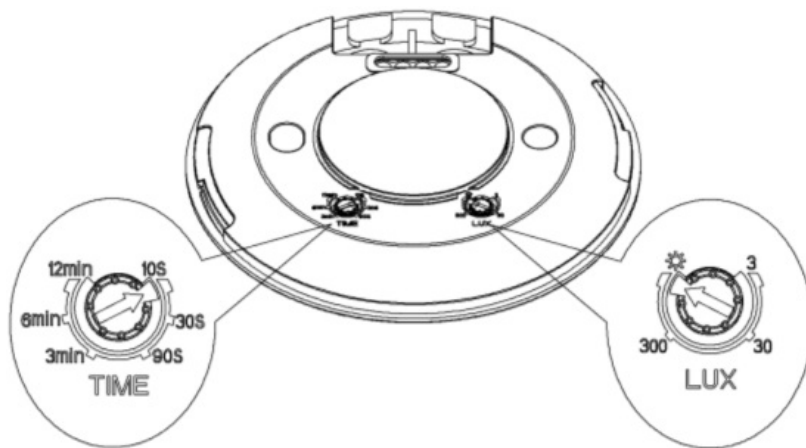

- Turn the TIME knob anti-clockwise on the minimum (10s). Turn the LUX knob clockwise on the maximum (sun).
- When you switch on the power, the light will be on at once. And $10\text{sec} \pm 3\text{sec}$ later the light will be off automatically.
Then if the sensor receives induction signal again, it can work normally.
- When the detection distance is less than 3M, it can detect human breathing and keep the lamp on continuously. When the detection distance is more than 3m and then the lamp will be off after the settled time if there is no other movement.
- When the detection distance is 3-4.5M, it will be worked as a normal microwave sensor and detects human movement automatically.
- When the sensor receives the second induction signals within the first induction, it will restart to time from the moment.
- Turn LUX knob anti-clockwise on the minimum (3). If the ambient light is less than 3LUX (darkness), the inductor load could work when it receives induction signal.

Note: When testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor could not work!

NOTES

- Electrician or experienced human can install it.

- Can not be installed on the uneven and shaky surface.
- In front of the sensor there shouldn't be obstructive object affecting detection.
- Avoid installing it near the metal and glass which may affect the sensor.
- For your safety, please don't open the case if you find hitch after installation.


SOME PROBLEM AND SOLVED WAY:

- **The load don't work:**
 - a. Check the power and the load.
 - b. Whether the indicator light is turned on after sensing? If yes, please check load.
 - c. If the indicator light does not turn on after sensing, please check if the working light corresponds to the ambient light.
 - d. Please check if the working voltage corresponds to the power source.
- **The sensitivity is poor:**
 - a. Please check the ambient temperature.
 - b. Please check if the signals source is in the detection fields.
 - c. Please check the installation height.
- **The sensor can't shut automatically the load:**
 - a. If there are continual signals in the detection fields.
 - b. If the time delay is set to the longest.
 - c. If the power corresponds to the instruction.

Contents

- 1 Documents / Resources**
 - 1.1 References**
 - 2 Related Posts**

Documents / Resources

| | |
|---|---|
|  | IndiaMART MS10-DP-W 230V Real Presence Sensor [pdf] Instruction Manual 068284, MS10-DP-W, MS10-DP-W 230V Real Presence Sensor, MS10-DP-W 230V, Real Presence Sensor, Presence Sensor, Sensor |
|---|---|

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.