



interlogix NX-4 NetworkX 4 Zone Control Panel User Guide

[Home](#) » [interlogix](#) » interlogix NX-4 NetworkX 4 Zone Control Panel User Guide

interlogix NX-4 NetworkX 4 Zone Control Panel



Contents [[hide](#)

1 Changing and Adding User Codes

1.1 NX-4, NX-6, or NX-8

1.2 NX-8E

2 Activating the Chime Mode:

3 Resetting Smoke Detectors

4 Bypassing Zones

5 Reset Battery

6 Review User Codes from the Keypad

7 Identifying Service or Trouble Conditions

8 Documents / Resources

9 Related Posts

Changing and Adding User Codes

NX-4, NX-6, or NX-8

System must be disarmed to change user codes

Step 1 – Press *5 and the Master Code (main user code).

Step 2 – The ready light will flash.

Step 3 – Enter the 2 digit “user number” (example: 01 for user #1 if changing Master Code.)

Step 4 – Enter the new 4 digit user code.

Step 5 – Press the # key while the ready light is flashing to exit the User Code Programming Mode.

To delete a user code enter **** for a 4 digit code after step 3.

**** Do NOT delete user 1**

NX-8E

System must be disarmed to change user codes

Step 1 – Press *5 and the Master Code (main user code).

Step 2 – The ready light will flash.

Step 3 – Enter 3 digit user number Ex. 001 for user # 1 if changing master code

Step 4 – Enter the new 4 digit user code.

Step 5 – Press the # key while the ready light is flashing to exit the User Code Programming Mode.

To Delete a user code enter **** for a 4 digit code after step 3.

**** Do NOT delete user 1**

Activating the Chime Mode:

The door chime is turned on or off by pressing the CHIME key while the system is in the disarmed state. If the chime is on the CHIME light will be on. If the chime is off the CHIME light will be off.

Resetting Smoke Detectors

To reset smoke detectors press *7

Bypassing Zones

To bypass a zone press the Bypass key then the zone number then the Bypass key twice

Reset Battery

Arm and then disarm system.

Review User Codes from the Keypad

Press [*] [5] [master code] Enter user # (3 digit # for NX-8E) Press the down arrow (press the arrow 4 times to see all 4 digits of the user code) and the zone LED's will light up. The zone # that is lit indicates the digit of the code (for 9 zones 1 & 8 will be lit).

Flashing power light means low battery.

Identifying Service or Trouble Conditions

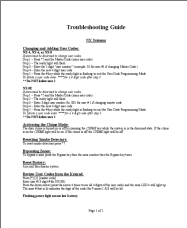
The service light will be on if the security system requires service. If the service light is on press the * key followed by the 2 key to determine the service condition. One or more zone lights will light up indicating what service is required.

Zone	Problem
*1	System Fault – Press the 1 key. The zone light that is lit corresponds to the system faults below: 1 – Overcurrent 5 – Expander Low Battery 2 – Siren Trouble 6 – Expander Box Tamper 3 – Box Tamper 7 – Expander Trouble 4 – Expander Power 8 – Ground Fault
*2	Zone Tamper – Press the 2 key and the zone light will light up showing the zones that are tampered.
*3	Zone Low Battery – Press the 3 key. The zone light will light up showing which zone has a low battery. This only applies to wireless zones.
*4	Zone Loss of Supervision – Press the 4 key and the zone lights will light up showing which zone has loss of supervision. This only applies to wireless zones.
*5	Zone Trouble – Press the 5 key and the zone will light up showing which zone has a trouble condition.
6	Telephone Line Trouble/Line Cut – The service light will remain lit until the trouble clears and a user code is entered.
7	Failure To Communicate – This light will light up when there is a failure to communicate between your system and the control station. To clear a successful signal must be received at Central Station.
8	Loss of System Time – This light will light up when there has been a loss of power and your system clock needs to be reset.

*** Indicates that if one of these trouble conditions comes up then you must press the number to check exact trouble.**

Example: You press *2 and zone 4 is lit, press 4 to see which specific zone number has loss of supervision.

Documents / Resources

	<p>interlogix NX-4 NetworX 4 Zone Control Panel [pdf] User Guide NX-4, NX-6, NX-8, NX-4 NetworX 4 Zone Control Panel, NetworX 4 Zone Control Panel, 4 Zone Control Panel, Control Panel</p>
---	--

