



# INTERMATIC PE35300 Wireless Control System Instructions

[Home](#) » [Intermatic](#) » **INTERMATIC PE35300 Wireless Control System Instructions** 



## Contents

- [1 PE35300 Wireless Control System](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)

## PE35300 Wireless Control System

RAINPROOF TYPE 3R ENCLOSURE FOR INDOOR/OUTDOOR USE.

SUITABLE FOR SWIMMING POOL/SPA APPLICATIONS AND FOR DIRECT CONNECTION TO A WET-NICHE OR NO-NICHE LUMINAIRE.

ALL DEVICES IN THIS CONTROL MUST BE SUPPLIED BY BRANCH CIRCUIT PROTECTORS LOCATED WITHIN THIS ENCLOSURE.

80 A

120/240 V or 120/208 V single phase (three wire) AC, 60 Hz

The short circuit rating of this panel is 10000 RMS symmetrical amperes.

### **WARNING**

Risk of Fire or Electric Shock

- Disconnect power at the circuit breaker(s) or disconnect switch(es) before installing or servicing.
- Installation and/or wiring must be in accordance with National Electrical Code (Article 680)/Canadian Electrical Code (Section 68) and local electrical code requirements and is subject to approval by the local inspection

authority.

- Use #14 – #6 AWG COPPER conductors ONLY, rated 75° C min., for branch circuit and #14 – #2 AWG for main lugs and neutral main.
- For outdoor locations or wet locations (rain-tight), conduit hubs that comply with requirements of the UL514B (standard for fittings for conduit and outlet boxes) are to be used.
- Install only LISTED receptacle(s) and/or wiring device(s) inside the enclosure.
- The control panel is to be a minimum of 3m (in Canada) or 5ft (in USA) from the inside wall of the pool, spa, or pond, unless separated from the body of water by a fence, wall or other permanent barrier that will make the unit inaccessible to persons in the water.
- If this enclosure is used for direct conduit connection to a wet-niche or no-niche luminaire, one of the connection kits listed below in NOTE 6 must be used.
- When panel is outdoors, a LISTED rainproof cover must be installed over the wiring device in the side knockout.
- This control should not be connected to any equipment which would cause bodily injury or property damage should it be activated unexpectedly.
- Follow circuit breaker manufacturer's installation instructions.
- Do not connect two or more power supplies in parallel.
- Replace front panel covering terminals before powering ON.
- KEEP DOOR CLOSED AT ALL TIMES when not servicing.

SUITABLE LISTED BREAKERS						
MANUFACTURER	CIRCUIT BREAKER					FILLER PLATE
	SINGLE	DOUBLE	TWIN	QUAD	GFCB	
CUTLER-HAMMER	BR	BR	BRD	BRD	GFCB	BRFP
MURRAY	MP-T	MP-T	MH-T	MH-T	MP-GT	LX100FP
SIEMENS	QP	QP	QT	QT	QPF	QF3
SQUARE D	HOM	HOM	HOMT	HOMT	HOM	HOMFP
GE (up to 40 A)	THQL	THQL	—	—	THQL-GF, G F1	THFILLER

WIRING INFORMATION – COPPER CONDUCTORS ONLY							
WIRE SIZE 75°C MIN INSULATION	SUPPLY CIRCUIT BREAKER RATING	TERMINAL TORQUE <sup>a</sup>		MAX MOTOR LOAD (CONTINUOUS DUTY)		GENERAL PURPOSE BRANCH CIRCUIT	
		LINE AND NEUTRAL MAIN LUGS	NEUTRAL AND GROUND	120 V	240 V	BREAKER RATING	MAX CURRENT CAPACITY
AWG	AMP	LB-IN	LB-IN	HP	HP	AMP	AMP
14	15	35	20	1/2	1	15	12
12	20	35	20	1	2	20	16
10	30	35	20	1 1/2	3	30	24
8	50 <sup>b</sup>	40	25	2	5	40	32
6	65	45	35	—	—	60	44
4	80	45	35	—	—	—	—

<sup>a</sup> TORQUE CIRCUIT BREAKER LUGS TO VALUES SPECIFIED ON CIRCUIT BREAKERS

<sup>b</sup> 45 A FOR CANADA

#### NOTES:

- Any Intermatic T100M or ET100CM Series Time Switch, PF1000M Series Freeze Protection or RC2000M Series Air Switch mechanisms, P1353ME mechanism, P4243ME mechanism, or P4043ME mechanism may be installed in the bracket(s) provided or in the event an existing mechanism(s) is replaced. The P5043ME can also be used in this panel in conjunction with a MultiWave Control System. If a filler plate is needed, contact factory.
- An additional ground bar may be installed in this control panel (order 130T1318A).
- If this control panel requires bonding, attach a LISTED bonding terminal of a suitable size using the mounting hole(s) provided on the bottom of the enclosure.
- When a circuit breaker is back-fed, 22T904A breaker hold-down kit must be used.
- A wiring device may be installed in this control panel (order 21T156A (4) standoffs for mounting).
- The following kits are available to connect underwater luminaires to this enclosure:
  - 1/2" non-metallic – order 156PA13713A
  - 3/4" non-metallic – order 156PA13714A
  - 1" non-metallic – order 156PA13715A
  - 1/2" metallic – order 156PA14336A

7. This KO is for installing an optional PE653RC MultiWave wireless receiver and remote control system, which can be used with the P5043ME in NOTE 1 above.

#### CONTACT RATINGS – EACH CIRCUIT, (P1353ME)

17 A Resistive, 120/240 VAC, 60 Hz

17 FLA, 80 LRA, 120/240 VAC, 60 Hz

5 A Tungsten, 120/240 VAC, 60 Hz

Aux. Switch, 2 A, 24 VDC

EVENTS PER CIRCUIT: 3 ON/OFF Events Per Circuit

#### MEMORY RETENTION:

40-year retention for all programmed settings.

8-hour time retention.

#### 3-CIRCUIT DIGITAL CONTROL RATINGS:

CLOCK SOURCE VOLTAGE: 120/240 VAC, 60 Hz


POWER CONSUMPTION: 6.0 W Max

CONTACT CONFIGURATION: SPST – each circuit

#### P1353ME OPERATING INSTRUCTIONS

1. Press PROG Key to cycle through menu options.
2. Press UP and DOWN arrow keys to change program settings.
3. Press ENTER key to save changes and exit programming mode.
4. Press ON/OFF keys to manually turn devices ON or OFF.


VALVE ACTUATOR SUPPLY: 24 V – 40 VA MAX.

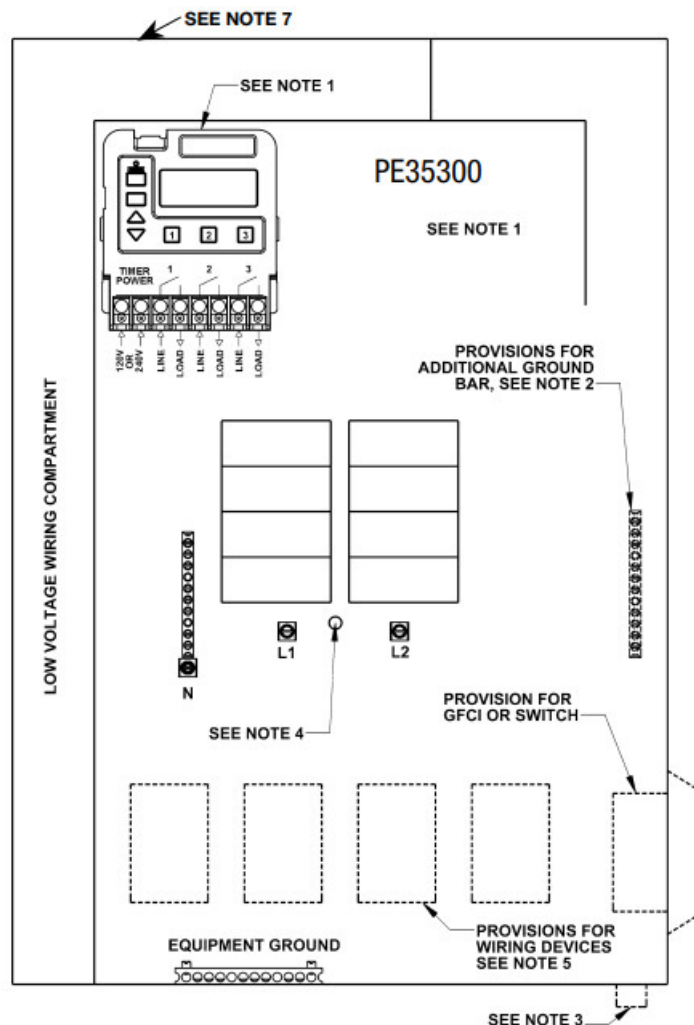



INTERMATIC INCORPORATED  
SPRING GROVE, ILLINOIS 60081-9698  
154-02353

## Documents / Resources

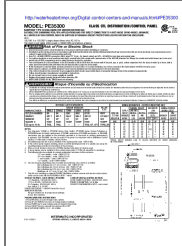

[INTERMATIC PE35300 Wireless Control System](#) [pdf] Instructions  
PE35300, PE35300 Wireless Control System, Wireless Control System, Control System, System

## References

- [Intermatic Digital control centers, parts, manuals](#)

[Manuals+](#).