



Intesis Modbus RTU Interface for Toshiba Air Conditioners User Manual

[Home](#) » [Intesis](#) » Intesis Modbus RTU Interface for Toshiba Air Conditioners User Manual



**Modbus PTV [EIA-485] Interface for
Toshiba air conditioners
Compatible with Digital Inverter & VRF lines**

**USER MANUAL
Issue date: 04/2019 r2.7 ENGLISH**



Modbus RTU (EIA-485) Interface for Toshiba air conditioners Compatible with Digital Inverter & VRF lines

ORDER CODE	LEGACY ORDER CODE
INMBSTOS001R000	TO-RC-MBS-1

Contents [[hide](#)]

1 Important User Information

1.1 Disclaimer

2 Presentation

3 Connection

3.1 Connect to the AC indoor unit

4 Connection to the EIA-485 bus

5 Quick Start Guide

6 Modbus Interface Specification

6.1 Modbus physical layer

6.2 4.2 Modbus Registers

6.3 4.2.1 Control and status registers

6.4 4.3 Modbus Registers for Advanced Functions

6.5 4.5 Implemented Functions

6.6 4.6 Device LED indicator

7 List of supported AC Unit Types.

8 Error Codes

9 Documents / Resources

9.1 References

10 Related Posts

Important User Information

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Industrial Networks of any inaccuracies or omissions found in this document. HMS Industrial Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Industrial Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Industrial Networks and is subject to change without notice. HMS Industrial Networks makes no commitment to update or keep current the information in this document.

The data, examples, and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks cannot assume responsibility or liability for actual use based on the data, examples, or illustrations included in this document nor for any damages incurred during the installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes, and standards. Further, HMS Industrial Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result of the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Presentation

The INMBSTOS001R000 interfaces allow complete and natural integration of Toshiba air conditioners into Modbus RTU (EIA-485) networks.

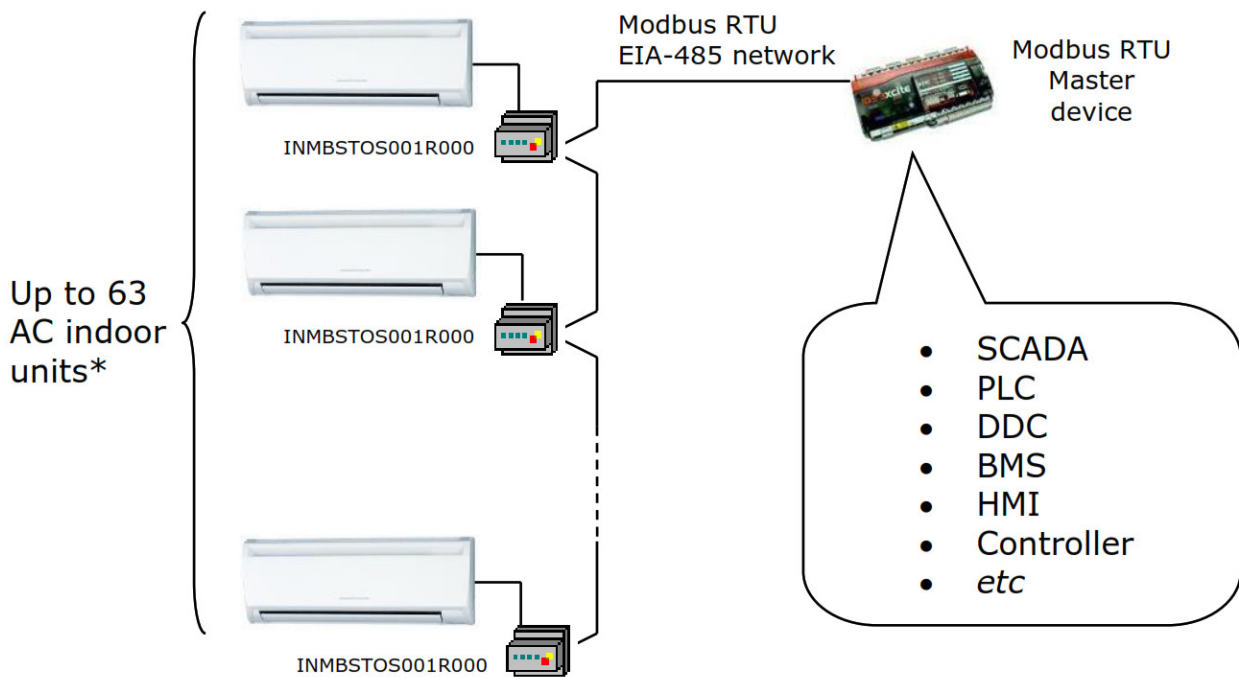
Compatible with Digital Inverter & VRF lines. Reduced dimensions.

93 x 53 x 58 mm

3.7" x 2.1" x 2.3"



- Quick and easy installation.
Mountable on DIN rail, wall, or even inside the indoor unit of AC.
- External power is not required.
- Direct connection to Modbus RTU (EIA-485) networks. Up to 63 INMBSTOS001R000 devices can be connected to the same network.
INMBSTOS001R000 is a Modbus slave device.
- Direct connection to the AC indoor unit. Up to 16 AC indoor units can be connected to INMBSTOS001R000, controlling them as one (not individually).
- Configuration from both on-board DIP switches and Modbus RTU.
- Total Control and Supervision.
- Real states of the AC unit's internal variables.
- Allows simultaneous use of the AC's remote controls and Modbus RTU.



* Up to 63 Intesis devices can be installed in the same Modbus RTU bus. However, depending on the configured speed, the installation of Modbus Repeaters may be required

Connection

The interface comes with a plug-in terminal block of 2 poles to establish a direct connection with the AC indoor unit. It comes as well with a plug-in terminal block of 2 poles to establish a direct connection with the Modbus RTU EIA-485 network.

Connect to the AC indoor unit

The INMBSTOS001R000 connects directly to the Toshiba AB Bus, which is not provided within the interface. The recommended connection' methods are the following ones (details in Figure 2. 1):

- **Wired remote control available.**
- **No remote control is available**

Maximum AB bus length is 500 m / 1,640.42 ft. The bus has no polarity sensitivity.

Important: If a wired remote controller of the AC manufacturer is connected to the same bus, communication may shut down.

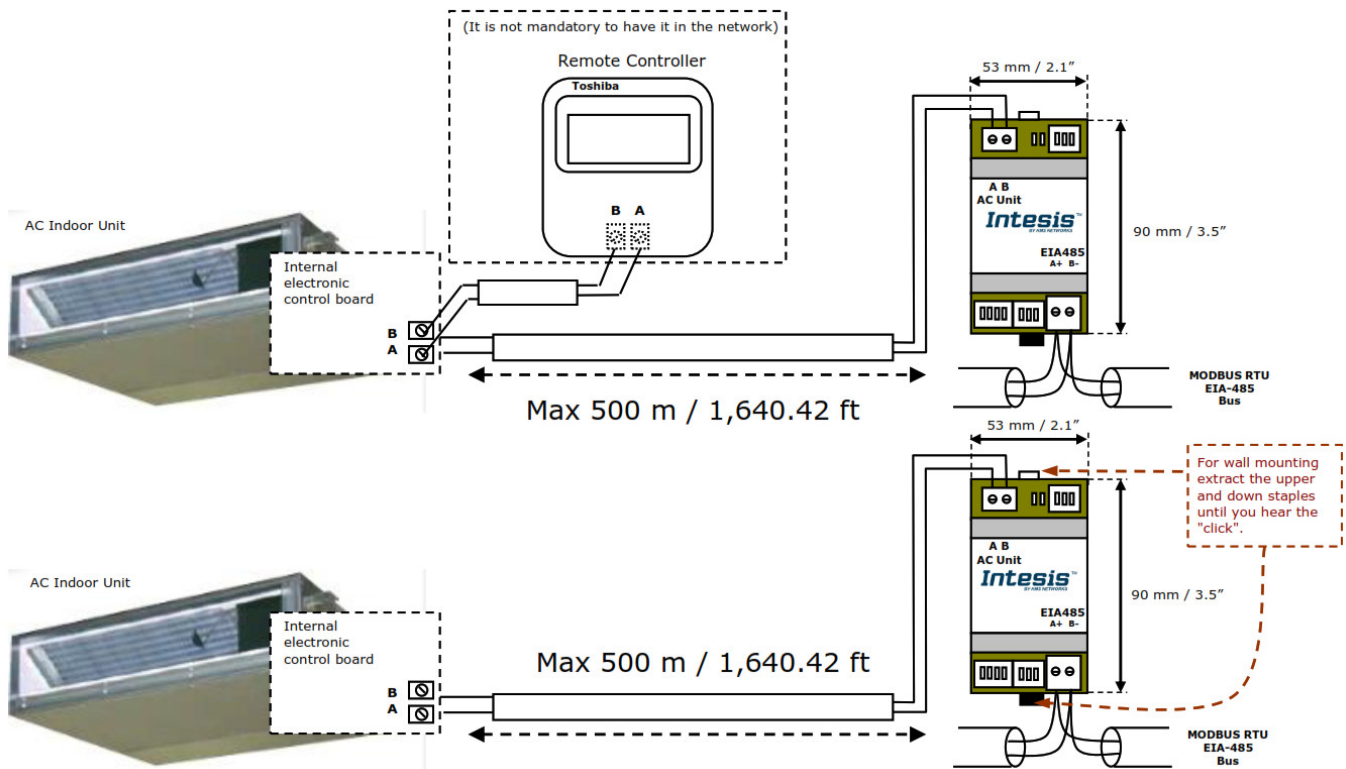


Figure 2. 1 ,INMBSTOS001R000 connection diagram

Connection to the EIA-485 bus

Connect the EIA-485 bus wires to the plug-in terminal block of INMBSTOS001R000 and keep the polarity on this connection (A+ and B-). Make sure that the maximum distance to the bus is 1,200 meters (3,937 ft). Loop or star typologies are not allowed in the case of the EIA-485 bus. A terminator resistor of 120Ω must be present at each end of the bus to avoid signal reflections. The bus needs a fail-safe biasing mechanism (see section 4.7 for more details).

Quick Start Guide

1. Disconnect the air conditioning from the Mains Power.
2. Attach the interface next to the AC indoor unit (wall mounting) following the instructions of the diagram below or install it inside the AC indoor unit (respect the safety instructions given).
3. Connect the AB bus between the interface and the AC indoor unit following the instructions of the diagram. Screw each bare cable end in the corresponding AB terminals of each device.
4. Connect the EIA-485 bus to the connector EIA485 of the interface.
5. Close the AC indoor unit. 6. Check the DIP-Switch configuration of the Intesis interface and make sure it matches the current installation's parameters (see section 4.4).


By default, the interface is set to:



- Modbus Slave Address → 1

- Modbus baud rate → 9600 bps

These parameters can be modified from SW4 and SW3 DIP-Switches.

All other switch positions are set at a low level (Off position ) by default.

NOTE: All changes on the DIP-Switch configuration require a system power cycle to be applied.

7. Connect the AC system to Mains Power.

IMPORTANT: The Intesis interface requires to be connected to the AC unit (powered) to start communicating.

Modbus Interface Specification

Modbus physical layer

INMBSTOS001R000 implements a Modbus RTU (Slave) interface, to be connected to an EIA-485 line. It performs 8N2 communication (8 data bits, no parity, and 2 stop bit) with several available baud rates (2400 bps, 4800 bps, 9600 bps -default-, 19200 bps, 38400 bps, 57600 bps, 76800 bps, and 115200 bps). It also supports 8N1 communication (8 data bits, no parity, and 1 stop bit).

4.2 Modbus Registers

All registers are type “16-bit unsigned Holding Register” and they use the Modbus big-endian notation.

4.2.1 Control and status registers

Register Address (protocol address)	Register Address (PLC address)	R/W	Description
0	1	R/W	AC unit On/Off ◆ 0: Off ◆ 1: On
1	2	R/W	AC unit Mode ¹ ◆ 0: Auto ◆ 1: Heat ◆ 2: Dry ◆ 3: Fan ◆ 4: Cool
2	3	R/W	AC unit Fan Speed ¹ ◆ 0: Auto ◆ 1: Low ◆ 2: Mid ◆ 3: High
3	4	R/W	AC unit Vane Position ¹ ◆ 1: POS1 (Horizontal) ◆ 2: POS2 (Horizontal) ◆ 3: POS3 (Medium) ◆ 4: POS4 (Vertical) ◆ 5: POSS (Vertical) ◆ 6: POS6 ◆ 7: POS7 ◆ 10: Swing
4	5	R/W	AC unit Temperature Setpoint 1,2,3 ◆ -32768 (Initialization value) ◆ 16..32 ⁰ C (⁰ C/x10 ⁰ C) ◆ 61..900F

1. Available values will depend on the AC unit mode. Check the AC unit model functions in its user manual to know the possible values for this register.
2. The magnitude for this register can be adjusted to Celsius x 1⁰C, Celsius x 10⁰C (default), or Fahrenheit. See section 4.3.6 for more information.
3. It is not possible to turn to x10 the value shown in Fahrenheit.

Register Address (protocol address)	Register Address (PLC address)	R/W	Description
5	6	R/W	AC unit Temperature reference ^{1,2,3} · 32768: Initial value. Value invalid, which comes from the IU's sensor. If the value that is shown in register 22 (23 PLC) is valid, the address is going to take this value. · Ranges are specific from Manufacturer (°C/×10°C/°F)
6	7	R/W	Window Contact · 0: Closed (Default) · 1: Open
7	8	R/W	INMBSTOS001R000 Disablement ⁴ · 0: INMBSTOS001R000 enabled (Default) · 1: INMBSTOS001R000 disabled
3	9	R/W	AC Remote Control Disablement ⁴ · 0: Remote Control enabled (Default) · 1: Remote Control disabled
9	10	R/W	AC unit Operation Time ⁴ · 0..65535 (hours). Counts the time the AC unit is in "On" state.
10	11	R	AC unit Alarm Status · 0: No alarm condition · 1: Alarm condition
11	12	R	Error Code ⁵ · 0: No Error active · 65535 (-1): Error in the communication of INMBSTOS001R000 with the AC indoor unit. · Any other error present, see the table at the end of this document.
22	23	R/W	Indoor unit's ambient temperature from external sensor (at Modbus side) 1,2,3,6 · -32768: Initialization value. No temperature is being provided from an input sensor. There's no input sensor. · Any other: (°C/×10°C/°F)

23	24	R	AC Real temperature setpoint ^{1·2·3·6} There's no Virtual Temperature. The value equals to the value of register 5 (6 PLC). The value which is introduced by the user is the one that the machine uses (the external sensor is able to write directly over the machine to do this operation). · Ranges are specific from Manufacturer (°C/×10° C/°F)
97	98	R/W	Block Periodic Sendings ^{4·17·8} · 0: Non-blocked (Default value) · 1: Blocked

4 . This value is stored in non-volatile memory

5. See section 7 for possible error codes and their explanation

6. See section 4.3.6 for more information

7. If the register is configured as "0:Non-blocked", all commands received from Modbus will be sent to the AC system. If "1: Blocked", commands from Modbus will only be sent to the AC system if they differ from the previous value.

8. This register applies to firmware version 2.3 onwards

4.2.2 Configuration Registers

Register Address (protocol address)13	Register Address (PLC address)14	R/W R/W	Description
			“Open Window” switch-off timeout ⁹ · 0..30 (minutes) · Factory setting: 30 (minutes)
14	15	R	Modbus RTU baud-rate 10 · 2400bps · 4800bps 9600bps (Default) · 19200bps · 38400bps · 57600bps · 76800bps · 115200bps
15	16	R	Modbus Slave Address · 1..63
21	22	R	Max number of fan speeds
49	50	R	Device ID: 0x1F00
50	51	R	Software version

While the initialization is ongoing, some Modbus registers indicate an undetermined value. Once the normal operation starts, they acquire its corresponding value. It is important to keep in mind that any change done during the initialization process will not have effect until it has been finished.

4.3 Modbus Registers for Advanced Functions

4.3.1 Advanced registers for Indoor Unit status

These registers are only available when the indoor unit's type selected on SW1 is different from the default value. Please, check the Section 4.4 for more information.

NOTE: IU stands for Indoor Unit's Index

Register Address (Protocol address)	Register Address (PLC address)	R/W	Description	Priority
$(IU - 1) * 25 + 4000$	$(IU - 1) * 25 + 4001$	R	Indoor Unit exist ▪ 0: Doesn't exist ▪ 1: Exist	0
$(IU - 1) * 25 + 4001$	$(IU - 1) * 25 + 4002$	R	Indoor Unit address ▪ MSB – OU address ; LSB – IU address	0
$(IU - 1) * 25 + 4002$	$(IU - 1) * 25 + 4003$	R	Indoor Unit duty ▪ 0..15	1
$(IU - 1) * 25 + 4003$	$(IU - 1) * 25 + 4004$	R	Indoor Unit defrost ▪ 0: Off ▪ 1: On	1

9. Once window contact is open, a count-down to switch off the AC Unit will start from this configured value.

10. The range 38400bps-115200bps applies to firmware version 2.3 onwards

Register Address (Protocol address)	Register Address (PLC address)	R/W	Description	Priority
$(IU - 1) * 25 + 4004$	$(IU - 1) * 25 + 4005$	R	Indoor Unit filter alarm ▪ 0: No alarm ▪ 1: Alarm	1
$(IU - 1) * 25 + 4005$	$(IU - 1) * 25 + 4006$	R	Indoor Unit 11hermos ON. ▪ 0: Cool ▪ 1: Heat	1
$(IU - 1) * 25 + 4010$	$(IU - 1) * 25 + 4011$	R	Room temperature (During Control) ▪ x1 °C	2
$(IU - 1) * 25 + 4011$	$(IU - 1) * 25 + 4012$	R	Room temperature (Remote Controller) ▪ x1 °C	2
$(IU - 1) * 25 + 4012$	$(IU - 1) * 25 + 4013$	R	Indoor suction temperature (TA) ▪ x1 °C	1
$(IU - 1) * 25 + 4013$	$(IU - 1) * 25 + 4014$	R	Indoor fan coil temperature (TCJ) ▪ x1 °C	1
$(IU - 1) * 25 + 4014$	$(IU - 1) * 25 + 4015$	R	Indoor fan coil temperature (TC2) ▪ x1 °C	1

(IU – 1) * 25 + 4015	(IU – 1) * 25 + 4016	R	Indoor fan coil temperature (TC1) ▪ x1 °C	1
(IU – 1) * 25 + 4016	(IU – 1) * 25 + 4017	R	Indoor discharge temperature (TF) ▪ x1 °C ▪ Only for VRF systems	0
(IU – 1) * 25 + 4017	(IU – 1) * 25 + 4018	R	Revolutions indoor fan ▪ RPS ▪ Only for RAV systems	0
(IU – 1) * 25 + 4018	(IU – 1) * 25 + 4019	R	Indoor PMV opening ▪ x1, x10 Pulses ▪ Only for VRF systems	1
(IU – 1) * 25 + 4019	(IU – 1) * 25 + 4020	R	Running hours indoor fan ▪ x100 hours ▪ Only for RAV systems	0
(IU – 1) * 25 + 4020	(IU – 1) * 25 + 4021	R	Time filtersign ▪ Hours ▪ Only for RAV systems	0
(IU – 1) * 25 + 4021	(IU – 1) * 25 + 4022	R	Estimated supply air temperature ▪ x1 °C ▪ Only for RAV systems	0

4.3.2 Advanced registers for Outdoor Unit Status on VRF-SMMSi Systems

These registers are only available when the indoor unit's type selected on SW1 is different from the default value. Please, check section 4.4 for more information.

Register Address (protocol address)	Register Address (PLC address)	R/W	Description	Priority
4200	4201	R	Outdoor Unit duty ▪ 15	1

Register Address (Protocol address)	Register Address (PLC address)	R/W	Description	Priority
4210	4211	R	High-pressure sensor detention pressure (Pd) ▪ X100 Mpa	2

4211	4212	R	Low-pressure sensor detention pressure (Ps) ▪ X100 Mpa	2
4212	4213	R	Compressor 1 discharge temperature (Td1) ▪ x1 °C	2
4213	4214	R	Compressor 2 discharge temperature (Td2) ▪ x1 °C	2
4214	4215	R	Compressor 3 discharge temperature (Td3) ▪ x1 °C	2
4215	4216	R	Suction temperature (TS) ▪ x1 °C	2
4216	4217	R	Outdoor fan coil temperature 1 (TE1) ▪ x1 °C	2
4217	4218	R	Outdoor fan coil temperature 2(TE2) ▪ x1 °C	1
4218	4219	R	Temperature at liquid side (TL) ▪ x1 °C	2
4219	4220	R	Outside ambient temperature (TO) ▪ x1 °C	1
4220	4221	R	PMV1 + 2 opening ▪ x1 Pulse	2
4221	4222	R	PMV4 opening ▪ x1 Pulse	2
4222	4223	R	Compressor 1 current (I1) ▪ x10 A	1
4223	4224	R	Compressor 2 current (I2) ▪ x10 A	2

4224	4225	R	Compressor 3 current (I3) ▪ x10 A	2
4225	4226	R	Outdoor fan current (Ifan) ▪ x10 A	2
4226	4227	R	Compressor 1 revolutions ▪ x10 RPS	2
4227	4228	R	Compressor 2 revolutions ▪ x10 RPS	2
4228	4229	R	Compressor 3 revolutions ▪ x10 RPS	2
4229	4230	R	Outdoor fan mode ▪ x1 mode	2
4230	4231	R	Compressor IPDU 1 heat sink temperature ▪ x1 °C	2
4231	4232	R	Compressor IPDU 2 heat sink temperature ▪ x1 °C	2
4232	4233	R	Compressor IPDU 3 heat sink temperature ▪ x1 °C	2
4233	4234	R	Outdoor fan IPDU heat sink temperature ▪ x1 °C	2
4234	4235	R	Heating/cooling recovery controlled * 5 ▪ 0: Normal ▪ 1: Recovery controlled	2
4235	4236	R	Pressure release * 5 ▪ 0: Normal ▪ 1: Recovery controlled	2

4236	4237	R	Discharge temperature release * 5 ▪ 0: Normal ▪ 1: Recovery controlled	2
4237	4238	R	Follower unit release (U2/U2/U4outdoor units) * 5 ▪ 0: Normal ▪ 1: Recovery controlled	2
4238	4239	R	Outdoor unit horsepower ▪ x1 HP	0

4.3.3 Advanced registers for Outdoor Unit Status on VRF-SHRM/SMMS Systems

These registers are only available when the indoor unit's type selected on SW1 is different from the default value. Please, check section 4.4 for more information

Register Address (protocol address)	Register Address (PLC address)	R/W	Description	Priority
4200	4201	R	Outdoor Unit duty ▪ 15	1
4210	4211	R	Td1-Compressor 1 Discharge Temp. ▪ x1 °C	2
4211	4212	R	Td2-Compressor 2 Discharge Temp. ▪ x1 °C	2
4212	4213	R	Pd – High Pressure Sensor ▪ Mpa	2

4213	4214	R	PS – Low Pressure Sensor ▪ Mpa	2
4214	4215	R	TS – Suction Temp. ▪ x1 °C	2
4215	4216	R	TE – Outdoor Heat Exchanger Temp. ▪ x1 °C	2
4216	4217	R	TL – Liquid Temp. ▪ x1 °C	2
4217	4218	R	TO – Outside ambient temperature ▪ x1 °C	1
4218	4219	R	TU – Low Pressure Saturated Temp. ▪ x1 °C	2

Register Address (protocol address)	Register Address (PLC address)	R/W	Description	Priority
4219	4220	R	Compressor 1 Current ▪ A	1
4220	4211	R	Compressor 2 Current ▪ A	2
4221	4222	R	PMV1 + 2 Opening ▪ 0..100	2
4223	4224	R	Compressor 1, 2 ▪ 0: Off ▪ 1: On	2
4224	4225	R	Outdoor Fan Mode ▪ 0..31	2
4225	4226	R	Outdoor Unit Size ▪ HP	2

4.3.4 Advanced registers for Outdoor Unit Status on RAV Systems

These registers are only available when the indoor unit's type selected on SW1 is different from the default value. Please, check section 4.4 for more information

Register Address (protocol address)	Register Address (PLC address)	R/W	Description	Priority
4400	4401	R	Outdoor Unit duty ▪ 0..15	1
4410	4411	R	TE temperature (evaporator) ▪ x1 °C	2
4411	4412	R	TO temperature outdoor ▪ x1 °C	1

4412	4413	R	Compressor discharge temperature ▪ x1 °C	2
4413	4414	R	Suction temperature TS x1 °C	2
4414	4415	R	Temperature <i>thyristor</i> THS ▪ x1 °C	0
4415	4416	R	Compressor current ▪ A	1
4416	4417	R	Temperature at liquid side TL ▪ x1 °C	2
4417	4418	R	Compressor revolutions ▪ RPS	2
4418	4419	R	Revolutions lowest Fan ▪ RPS	0
4419	4420	R	Revolutions upper Fan ▪ RPS	0
4420	4421	R	Running hours compressor ▪ x100 hours	2

4.3.5 Advanced registers for Indoor Unit Type and Refresh Time adjustment

Register Address (protocol address)	Register Address (PLC address)	R/W	Description	Priority
4450	4451	R	Indoor Unit Type <ul style="list-style-type: none"> ▪ 0: Not defined (extra signals disabled) ▪ 1: RAV ▪ 2: VRF (SMMSi) ▪ 3: VRF (SHRM/SMMS) 	0
4451	4452	R/W	Refresh Time Adjust <ul style="list-style-type: none"> ▪ 1..4 	–

This parameter indicates the cadence when reading priority signals. Priorities are defined as follows and can't be modified:

0: Update on start-up

1. High priority

2. Low priority

The higher the value, the fastest the priority signals are going to update. The cadence is defined by:

- One high priority signal and one low priority signal's poll.
- Two high-priority signals and one low-priority signal's poll.
- Three high-priority signals and one low-priority signal's poll.
- Four high-priority signals and one low-priority signal's poll.

4.3.6 Considerations on Temperature Registers

- **AC unit temperature setpoint (R/W)**

(register 4 – in Protocol address / register 5 – in PLC address):

This is the adjustable temperature setpoint value that must be required by the user.

This register can be read (Modbus function 3 or 4) or written (Modbus functions 6 or 16). A remote controller connected to the Toshiba indoor unit will report the same temperature setpoint value as this register.

- **AC unit temperature reference (R)**

(register 5 – in Protocol address / register 6 – in PLC address):

- This register reports the temperature that is currently used by the Toshiba indoor unit as the reference of its own control loop.

If the value on the register 22 is valid (different from 0x8000), it will report the value from this register. If not, it will show the indoor unit reference temperature.

It is a read-only register (Modbus functions 3 or 4).

Depending on the mode selected, the register shows a different value:

Heat Mode:

Temperature reference = Ambient temperature + 0.5°C

Dry Mode / Fan Mode / Cool mode:

Temperature reference = Ambient temperature -0.5°C

When the mode changes from Heat to anyone else, or from anyone else to Heat, the register updates the value using the intervals +0.5°C/-0.5°C

- **AC unit external temperature reference (Modbus) (R/W)**

(register 22 – in Protocol address / register 23 – in PLC address):

This register reports the temperature from an external sensor in the Modbus side. If valid value is received, the Modbus register will indicate a 0x8000 value.

This register can be read (Modbus function 3 or 4) or written (Modbus functions 6 or 16).

- **AC Real temperature setpoint (R)**

(register 23 – In Protocol address / register 24 – in PLC address):

This register will show the same value as in register 4 (protocol address). The reference temperature from the remote controller is sent directly to the AC unit to be applied in the control loop.

It is a read-only register (Modbus functions 3 or 4).

Moreover, notice that temperature's values of all these four registers are expressed according to the temperature's format configured through its onboard DIP-Switches (See "4.4 -DIP-switch Configuration Interface"). The following formats are possible:

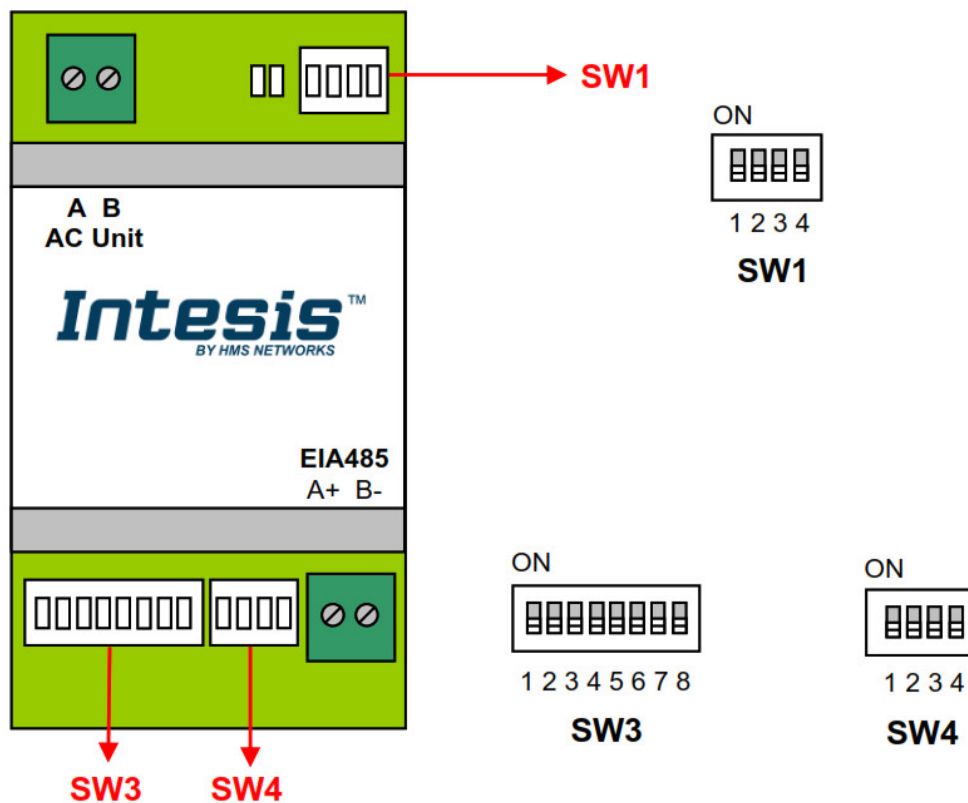
- Celsius value: Value in Modbus register is the temperature value in Celsius (i.e. a value "22" in the Modbus register must be interpreted as 22°C)

- Decicelsius value: Value in Modbus register is the temperature value in decicelsius (i.e. a value "220" in the Modbus register must be interpreted as 22.0°C)

- Fahrenheit value: Value in Modbus register is the temperature value in Fahrenheit (i.e. a value "72" in the Modbus register must be interpreted as 72°F (~22°C).

4.4 DIP-switch Configuration Interface

All the configuration values on INMBSTOS001R000 can be written and read from Modbus interface. Otherwise, some of them can also be setup from its on-board DIP-switch interface. The device has DIP-switches SW1, SW3 and SW4 on the following locations:



The following tables apply to the interface's configuration through DIP-switches:
SW1 – AC indoor unit's features

SW1-P1..2	Description
	Indoor Unit type not defined (Default value)
	Machine type: VRF-SMMSi
	Machine type: RAV
	Machine type: VRF-SMMS/SHRM
	Not used (Default value)
	Not used
	Esclavo del bus A B (Valor por defecto)- Debe existir un mando Toshiba configurado como <i>Header</i> en el bus AB Slave of bus A B (Default value) – A Toshiba Controller must be present in the AB bus, configured as <i>Header</i> .
	Maestro del bus A B - No es necesario un mando Toshiba en bus AB. Si lo hay, debe ser configurado como <i>Follower</i> . Master of bus A B –Toshiba Remote Controller is not necessary to have it in the bus AB. If it exists, it must be configured as <i>Follower</i> .

Table 4.1 SW1: AC indoor unit's features

SW3/SW4 – Baud rate configuration

















SW3-P7..8	SW4-P3	Description
ON 	ON 	2400bps
ON 	ON 	4800bps
ON 	ON 	9600bps (Default value)
ON 	ON 	19200bps
ON 	ON 	38400bps
ON 	ON 	57600bps
ON 	ON 	76800bps
ON 	ON 	115200bps

Table 4.2 SW3-SW4: Modbus baud rate

SW4 – Degrees/Decidegrees (x10), temperature magnitude (°C/°F), and EIA-485 termination resistor.







SW4-P1..2-4	Description
ON 	Temperature values in Modbus register are represented in degrees (x1) (Default value)
ON 	Temperature values in Modbus register are represented in Decidegrees (x10)
ON 	Temperature values in Modbus register are represented in Celsius degrees (Default value)
ON 	Temperature values in Modbus register are represented in Fahrenheit degrees
ON 	EIA-485 bus without termination resistor (Default value)
ON 	Internal termination resistor of 120Ω connected to EIA-485 bus

Table 4.3 SW4: Temperature and termination resistor configuration

SW3 – Modbus Slave address

Add	SW3-P1..6	Add	SW3-P1..6	Add	SW3-P1..6	Add	SW3-P1..6	Add	SW3-P1..6
0		13		26		39		52	
1		14		27		40		53	
2		15		28		41		54	
3		16		29		42		55	
4		17		30		43		56	
5		18		31		44		57	
6		19		32		45		58	
7		20		33		46		59	
8		21		34		47		60	
9		22		35		48		61	
10		23		36		49		62	
11		24		37		50		63	
12		25		38		51			

Table 4.4 SW3: Modbus slave address

4.5 Implemented Functions

INMBSTOS001R000 implements the following standard Modbus functions:

- 3: Read Holding Registers
- 4: Read Input Registers
- 6: Write Single Register
- 16: Write Multiple Registers (Despite this function is allowed, the interface does not allow to write operations on more than 1 register with the same request, this means that the length field should always be 1 when this function is being used in case of writing)

4.6 Device LED indicator

The device includes two LED indicators to show all the possible operational states. In the following table there are written the indicators which can be performed and their meaning.

L1 (green LED)

Device status	LED indication	ON / OFF Period	Description
During not normal operation	LED blinking	500ms ON / 500ms OFF	Communication error
During normal operation	LED flashing	100ms ON / 1900ms OFF	Normal operation (configured and working properly)

L2 (red LED)

Device status	LED indication	ON / OFF Period	Description
During not normal operation	LED Pulse	3sec ON / — OFF	Under voltage

L1 (green LED) & L2 (red LED)

Device status	LED indication	ON / OFF Period	Description
During normal operation	LED Pulse	5sec ON / — OFF	Device Start-up
During not normal operation	LED alternatively blinking	500ms ON / 500ms OFF	EEPROM failure


4.7 EIA-485 bus. Termination resistors and Fail-Safe Biasing mechanism

EIA-485 bus requires a 120Ω terminator resistor at each end of the bus to avoid signal reflections.

In order to prevent fail status detected by the receivers, which are “listening” the bus, when all the transmitters’ outputs are in three-state (high impedance), it is also required a fail-safe biasing mechanism. This mechanism provides a safe status (a correct voltage level) in the bus when all the transmitters’ outputs are in three-state. This mechanism must be supplied by the Modbus Master.

The INMBSTOS001R000 device includes an onboard terminator resistor of 120Ω that can be connected to the EIA-485 bus by using DIP-switch SW4. Some Modbus RTU EIA-485 Master devices can provide also an internal 120Ω terminator resistor and/or fail-safe biasing mechanism (Check the technical documentation of the Master device connected to the EIA-485 network in each case).

Enclosure	Plastic, type PC (UL 94 V-0) Net dimensions (dxwxh): 93 x 53 x 58 mm / 3.7" x 2.1" x 2.3" Color: Light Grey. RAL 7035	Operation Temperature	0°C to +60°C
Weight	85 g.	Stock Temperature	-20°C to +85°C
Mounting	Wall DIN rail EN60715 TH35.	Operational Humidity	<95% RH, non-condensing
Terminal Wiring (for low-voltage signals)	For terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm ² ... 2.5mm ² 2 cores: 0.5mm ² ... 1.5mm ² 3 cores: not permitted	Stock Humidity	<95% RH, non-condensing
Modbus RTU port	1 x Serial EIA485 Plug-in screw terminal block (2 poles): A, B Compatible with Modbus RTU EIA-485 networks	Isolation voltage	1500 VDC
AC unit port	1 x AB bus Plug-in screw terminal block (2 poles): A, B Compatible with Toshiba networks	Isolation resistance	1000 MΩ
Switch 1 (SW1)	1 x DIP-Switch for AC features	Protection	IP20 (IEC60529)
Switch 3 (SW3)	1 x DIP-Switch for Modbus RTU settings	LED indicators	2 x Onboard LED – Operational status
Switch 4 (SW4)	1 x DIP-Switch for extra functions		

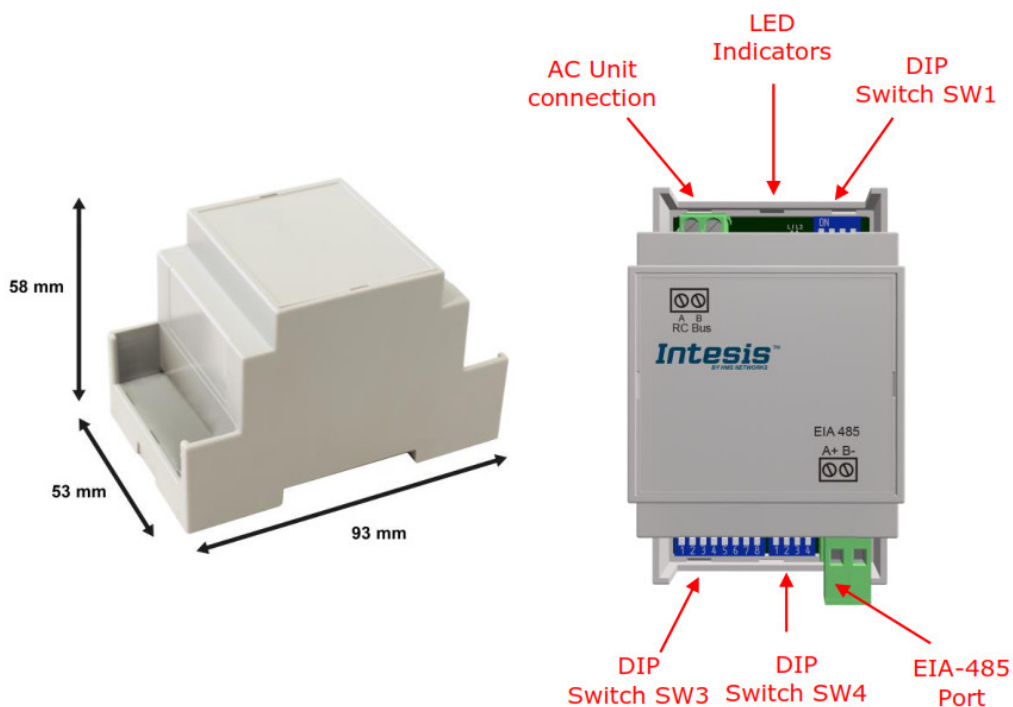

List of supported AC Unit Types.

A list of Toshiba indoor unit model references compatible with INMBSTOS001R000 and their available features can be found in:

[intesis_inxxxtos001rx00_compatibility-list](#) [PDF]

Error Codes

Error Code Decimal	Error Code Hex	Error In Remote Controller	Error category	Error Description
0	0	N/A	INMBSTOS001R000	No active error
33	21	CO1		Duplicated setting of control address
34	22	CO2		Central control number of units mis-matched
35	23	CO3		Incorrect wiring of central control
36	24	C04		Incorrect connection of central control System Controller fault, error in transmitting comms signal, i/door or o/door unit not working, wiring fault

37	25	CO5
38	26	C06
44	2C	C12
48	30	C16
49	31	C17
50	32	C18
51	33	C19
52	34	C20
53	35	C21
54	36	C22
55	37	C23
56	38	C24
57	39	C25
58	3A	C26
60	3C	C28

Central Controller Issues

System Controller fault, error in receiving comms signal, i/door or o/door unit not working, wiring fault, CN1 not connected correctly
Batch alarm by local controller
Transmission error from adaptor to unit
Reception error to adaptor from unit
Duplicate central address in adaptor
Duplicate adaptor address
Mix of PAC & GHP type units on adaptor
Memory fault in adaptor
Incorrect address setting in adaptor
Host terminal software failure
Host terminal hardware failure
Host terminal processing failure
Host terminal communication failure
Reception error of S-DDC from host terminal

61	3D	C29	Addressing and Communication Problems	Initialization failure of S-DDC
63	3F	C31		Configuration change detected by adaptor
65	41	E01		Remote control detecting error from indoor unit, Address not set/Auto address failed. Check interconnecting wiring etc. Re-address system.
66	42	E02		Remote detecting error from indoor unit,
67	43	E03		Indoor unit detecting error from remote,
68	44	E04		Indoor seeing error from outdoor. Qty of i/d units connected are less than qty set. Check; all i/d units are ON, reset turn off all units wait 5min power up
69	45	E05		Indoor unit detecting error from outdoor unit, Error in sending comms signal
70	46	E06		Outdoor unit detecting error from indoor unit, Error in receiving comms signal
71	47	E07		Outdoor unit detecting error from indoor unit, Error in sending comms signal
72	48	E08		Incorrect setting indoor/controller, Indoor address duplicated
73	49	E09		Incorrect setting indoor/controller, Remote address duplicated or IR wireless controller not disabled
74	4A	E10		Indoor unit detecting error from 'option' plug, Error in sending comms signal

75	4B	E11		Indoor unit detecting error from 'option' plug, Error in receiving comms signal
76	4C	E12		Auto addressing failed, Auto address connector CN 100 shorted during auto addressing
77	4D	E13		Indoor unit failed to send signal to remote

78	4E	E14		Setting Failure, Duplication of master indoor units
79	4F	E15		Auto addressing failed, Number of indoor units connected are less than number set
80	50	E16		Auto addressing failed, Number of indoor units connected are more than number set
81	51	E17		Group control wiring error, Main indoor unit not sending signal for sub indoor units
82	52	E18		Group control wiring error, Main indoor unit not receiving signal for sub indoor units
83	53	E19		Outdoor header units quantity error
84	54	E20		Auto addressing failed, No indoor units connected
87	57	E23		Sending error in communication between outdoor units
88	58	E24		Auto addressing failed, Error on sub outdoor unit
89	59	E25	Addressing and Communication Problems	Auto addressing failed, Error on outdoor unit address setting
90	5A	E26		Auto addressing failed, Quantity of main and sub outdoor units do not correspond to the number set on main outdoor unit P.C.B.
92	5C	E28		<i>Follower</i> outdoor unit error
93	SD	E29		Auto addressing failed, Sub outdoor unit not receiving comms for main outdoor unit

95	5F	E31		Between units, Comms failure with MDC, does E31 remain after power is re-instated? If so replace PC B. & power PCB
97	61	F01	Sensor Faults	Indoor Heat Exch inlet temp sensor failure (EI)
98	62	F02		Indoor Heat Exch freeze temp sensor failure (E2)
99	63	F03		Indoor Heat Exch outlet temp sensor failure (E3)
100	64	F04		Outdoor Discharge temp sensor failure (TD) or (DI SCHI)
101	65	F05		Outdoor Discharge temp sensor failure (DISCH2)
102	66	F06		Outdoor Heat Exch temp sensor failure (C1) or (EX G1)
103	67	F07		Outdoor Heat Exch temp sensor failure (C2) or (EX L1)
104	68	F08		Outdoor Air temp sensor failure (TO)
106	6A	FIO		Indoor inlet temp sensor failure
107	68	F11		Indoor outlet temp sensor failure
108	6C	F12		Outdoor Intake sensor failure (TS)
109	6D	F13		GHP – Cooling water temperature sensor failure
111	6F	F15		Outdoor temp. sensor misconnection (TE1,TL)
112	70	F16		Outdoor High pressure sensor failure
113	71	F17		GHP – Cooling water temperature sensor fault
114	72	F18		GHP – Exhaust gas temperature sensor fault
116	74	F20		GHP Clutch coil temperature fault
119	77	F23		Outdoor Heat Exch temp sensor failure (EXG2)
120	78	F24		Outdoor Heat Exch temp sensor failure (EXL2)
125	7D	F29		Indoor EEPROM error

126	7E	F30		Clock Function (RTC) fault
127	7F	F31		Outdoor EEPROM error
129	81	H01	Compressor Issues	Compressor Fault, Over current (Compl)
130	82	H02		Compressor Fault, Locked rota current detected (Comp1)
131	83	H03		Compressor Fault, No current detected (Compl)

132	84	H04		Comp-1 case <i>thermo</i> operation
133	85	H05		Compressor Fault, Discharge temp not detected (Compl)
134	86	H06		Compressor Fault, Low Pressure trip
135	87	H07		Compressor Fault, Low oil level
136	88	H08		Compressor Fault, Oil sensor Fault (Compl)
139	88	H11		Compressor Fault, Over current (Comp2)
140	8C	H12		Compressor Fault, Locked rota current detected (Comp2)
141	8D	H13		Compressor Fault, No current detected (Comp2)
142	8E	H14		Comp-2 case <i>thermo</i> operation
143	8F	H15		Compressor Fault, Discharge temp not detected (Comp2)
144	90	H16		Oil level detection circuit error / Magnet switch error / Overcurrent relay error
149	95	H21		Compressor Fault, Over current (Comp3)
150	96	1122		Compressor Fault, Locked rota current detected (c. 3)
151	97	H23	Compressor Issues	Compressor Fault, No current detected (Comp3)
153	99	H25		Compressor Fault, Discharge temp not detected (Comp3)
155	98	H27		Compressor Fault, Oil sensor fault (Comp2)
156	9C	H28		Compressor Fault. Oil sensor (connection failure)
159	9F	H31		Compressor Fault. IPM trip (IMP current on temperature)
193	CI	LO1		Setting Error, Indoor unit group setting error

194	C2	L02	Incorrect Settings	Setting Error, Indoor/outdoor unit type/model miss-matched
195	C3	L03		Duplication of main indoor unit address in group control
196	C4	L04		Duplication of outdoor unit system address
197	C5	LO5		2 or more controllers have been set as 'priority' in one system – shown on controllers set as 'priority'
198	C6	L06		2 or more controllers have been set as 'priority' in one system – shown on controllers not set as 'priority'
199	C7	LO7		Group wiring connected on and individual indoor unit
200	C8	LOS		Indoor unit address/group not set
201	C9	L09		Indoor unit capacity code not set
202	CA	L10		Outdoor unit capacity code not set
203	CB	L11		Group control wiring incorrect
205	CD	L13		Indoor unit type setting error, capacity
207	CF	L15		Indoor unit paring fault
208	DO	L16		Water heat exch. unit setting failure
209	D1	L17		Miss-match of outdoor unit with different refrigerant
210	D2	L18		4-way valve failure
211	D3	L19		Water heat exch. unit duplicated address
212	D4	L20		Duplicated central control addresses
213	D5	L21		Gas type setup failure
220	DC	1_28		Maximum number of outdoor units exceeded
221	DD	L29		No. of IPDU error
222	DE	L30		Auxiliary interlock in indoor unit
223	DF	L31		IC error
225	EI	P01	Indoor Unit Problems	Indoor unit fault, Fan motor thermal overload
226	E2	P02		Outdoor unit fault, Compressor motor thermal overload, over or under voltage

227	E3	P03		Outdoor unit fault, Compressor discharge temperature too high (Comp') over 111 °C. Low on ref gas, exp. valve, pipework damage.
-----	----	-----	--	---

228	E4	PO4
229	E5	P05
231	E7	P07
233	E9	P09
234	EA	P10
235	EB	P11
236	EC	P12
237	ED	P13
238	EE	P14
239	EF	P15
240	FO	P16
241	FI	P17
242	F2	P18
243	F3	P19
244	F4	P20
246	F6	P22
250	FA	P26
252	FC	P29
253	FD	P30
255	FF	P31


Outdoor unit fault, High pressure trip
Outdoor unit fault, Open phase on power supply. C heck power on each phase, inverter PCB, control P CB
Heat sink overheat error
Indoor unit fault, Ceiling panel incorrectly wired
Indoor unit fault, Condensate float switch opened
GHP – Water Heat exch. low temp (frost protection) fault
Indoor unit fault, Fan DC motor fault
Outdoor liquid back detection error
Input from leak detector (If fitted)
Refrigerant loss, high discharge temp and EEV wid e open and low compressor current draw.
Outdoor unit fault, Open phase on compressor pow er supply
Outdoor unit fault, Compressor discharge temperat ure too high (Comp2) over 111 ⁰ C. Low on ref gas, exp. valve, pipework damage.
Outdoor unit fault, By-pass valve failure
Outdoor unit fault, 4 way valve failure, i/door temp rises in cooling or fills in heating. Check wiring, coil, PCB output, valve operation.
Ref gas, high temp/pressure fault, heat exch. temp high C2, 55-60 ⁰ C, cooling over-load, sensor fault.
Outdoor unit fan motor fault, fan blade jammed, check connections, does fan turn freely, motor resistance 30-40ohm on each pair, no fan fault, yes PCB fault.
Outdoor unit fault, Compressor overcurrent – check winding resistance, Inverter failure – check internal resistance term HIC + & – to UVW 200-300Kohm o r more
Outdoor unit fault, Inverter circuit fault –
Motor-current Detection Circuit (MDC) fault, check comp windings, sensors CI & TS, if ok possible PC B failure
Indoor unit fault, System controller detected fault o n sub indoor unit
Simultaneous operation multi control fault, Group c ontroller fault

65535 (~1)		N/A	INMBSTOS001R00 0	Error in the communication of INMBSTOS001R000 with the AC unit
------------	--	-----	---------------------	--

In case to detect an error code not listed, contact your closest Toshiba technical support service.

© HMS Industrial Networks S.L.U. – All rights reserved This information is subject to change without notice
URL <https://www.intesis.com>

Documents / Resources

 <p>Intesis Modbus RTU (EIA-485) Interface for Toshiba air conditioners Compatible with Inverter and Non-Inverter models</p>	<p>Intesis Modbus RTU Interface for Toshiba Air Conditioners [pdf] User Manual Intesis, EIA-485</p>
---	---

References

- [Intesis | Gateway solutions for Building Automation](#)
- [intesis.com/docs/compatibilities/inxxxxtos001rx00_compatibility](https://www.intesis.com/docs/compatibilities/inxxxxtos001rx00_compatibility)