


Keeson RF398D Hand Controller

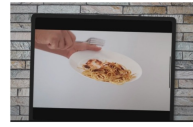

Keeson RF398D Hand Controller User Manual

[Home](#) » [KEESON](#) » Keeson RF398D Hand Controller User Manual 

Contents

- [1 Keeson RF398D Hand Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Test the product](#)
- [5 Testing process](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Keeson RF398D Hand Controller



Product Information

Specifications:

- Product Model: RF398D
- Head driver: 73178
- Foot driver: 3.00.401.151.30
- DC power cable: Included
- AC power cable: Included (Model: D83488)
- Power adapter: Included
- Sync line: B12288
- Vibrating motor: 74340

Product Usage Instructions

Testing Process:

1. Power on the LED

The main control box supplies POWER. The PAIRING LED indicator of the control box blinks four times and then turns off. The POWER LED lights up.

2. Code Test

Coding process: Double click the RESET button of the control box, pairing LED lights up, and the control box enters the matching mode; Press and hold the pairing button in the battery cover of the remote control, the background light of the pairing button flashes, and the remote control enters the matching mode; The remote control to the code backlight stops flashing, while the control box pairing led is off, the code is successfully matched; If the operation fails, repeat the above operations.

Frequently Asked Questions (FAQ)

- **Q: How do I troubleshoot if the head drive or foot drive does not respond?**

A: If the head or foot drive does not respond, check the power connection and ensure that the control box is powered on. You can also try re-pairing the remote control with the control box following the provided instructions.

- **Q: What should I do if the vibration motor indicator light does not turn off?**

A: If the vibration motor indicator light does not turn off when it should, try pressing any key to stop the action and then attempt to turn off the vibration motor again. If the issue persists, refer to the troubleshooting section in the user manual.

Hand controller User manual

JLDK.148.13.06 Test Guide

Test the product



Test the configuration list

name	Product Model	Reference quantity
Head driver		1
Foot driver		1
DC power cable	73178	1
AC power cable	3.00.401.151.30	1
The power adapter	D83488	1
Sync line	B12288	
Vibrating motor	74340	2

Test and verify with JLDP.15.001.010

Testing process

1. Power on the LED

The main control box supplies POWER. The PAIRINGLED indicator of the control box blinks four times and then turns off. The POWER LED lights up.

2. Code test

- Coding process:
- Double click the RESET button of the control box, pairing LED lights up, and the control box enters the matching mode;
- Press and hold the pairing button in the battery cover of the remote control, the background light of the pairing button flashes, and the remote control enters the matching mode;
- The remote control to the code backlight stops flashing, while the control box pairing led is off, the code is successfully matched;
- If the operation fails, repeat the above operations.

3. Software version testing

- Power on the control box, connect to the PC through the mfp tool, and open the upper computer software;
- Select the COM port of VISA, click START, after seeing the synchronization frame data, click sw info to read the firmware version information of the remote control 11306-231;

4. The head drives out test

- Click the “head up” button, the head drive is extended, and the action stops when you release the button.

5. The head drives back test

- Click the “head down” button, the head drive is withdrawn, and the action stops when you release the button.

6. The foot drives out test

- Click the “foot up” button, the foot drive is extended, and the action stops when you release the button.

7. The foot drives back test

- Click the “foot down” button, the foot drive is withdrawn, and the action stops when you release the button.

8. FLAT test

- Click the FLAT button and release it, and the head and foot drive will run to the lowest position (when the drive is idle, the vibration motor can be turned off and off with one key, and the vibration motor indicator light can be turned off) , and the action will stop when any key is pressed;

9. ZERO G position test

- Click the ZERO G button and release it, and the head and foot drives will run to the preset memory position, and the action will stop when any key is pressed;

10. ANTISNORE position test

- Click the ANTISNORE button and release it. The head and foot drives will run to the preset memory position, and the action will stop when any key is pressed.

11. LOUNGE position test

- Click the LOUNGE button and release it. The head and foot drives will run to the preset memory position, and the action will stop when any key is pressed.

12. TV position test

Click the TV button and release it, and the head and foot drives will run to the preset memory position, and the action will stop when any key is pressed;

13. Preset position test (ANTISNORE ,LOUNGE , TV

1. Click the FLAT button to lay the drive flat.
2. Use the head up or head down or foot up or foot down button to adjust the head drive and foot drive to the desired position;
3. Press the button that needs to be customized, hold it for 5 seconds, and the backlight of the remote control will flash cycle;
4. Release the button and the indicator stops blinking, indicating that the customization is complete.
The customized position setting can be restored to the default setting. Long press the ZERO G+FLAT key for about 5 seconds until the backlight of the remote control flashes cyclically, indicating that the default position is restored.

14. Head massage motor test

- Each time you click the “HEAD” button, the vibration strength of the head motor increases by one level, and the massage strength is 6 levels. When the strength is level 6, click the “HEAD” button again, the strength becomes 0, and the strength cycles;
- When the vibration motor is started, the vibration time is 10 minutes by default. The top indicator will show the vibration time;

15. Foot massage motor test

- With each click of the “FOOT” button, the vibration intensity of the foot motor increases by one level, and the massage intensity is 6 levels in total. When the strength is level 6, click the “FOOT” button again, and the strength becomes 0, and the strength cycles;
- When the vibration motor is started, the vibration time is 10 minutes by default. The top indicator will show the vibration time;
- Made by:
- Checked by:
- Confirmed by:

16. Massage timing test

Click the TIMER/ALL OFF button, and the vibration time is cycled 0-10min-20min-30min;

17. Under bed light test

Click the button to switch the state of the lamp under the bed; Click the button to switch the state of the lamp under the bed;

18. Child lock test

- **Lock:** Hold head out + flat for more than 3s, the backlight blinks twice, the lock is successful; In the locked state, click any key, the control box has no action response, and the backlight flashes twice for prompt.
- **Unlock:** Press foot out + flat for more than 3s and the backlight will blink twice to unlock successfully. In the unlocked state, click any key, the control box will have an action response;

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

ISED Statement

English: This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

- This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
- This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Documents / Resources

	<p>Keeson RF398D Hand Controller [pdf] User Manual 2AK23-RF398D, 2AK23RF398D, RF398D Hand Controller, RF398D, Hand Controller, Controller</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.