



# Kinan KVM-1508XX LCD KVM Switch User Manual

[Home](#) » [Kinan](#) » Kinan KVM-1508XX LCD KVM Switch User Manual 

Kinan KVM-1508XX LCD KVM  
Switch User Manual

# **Rackmount LCD Console**

## **(2 Port /4 Port)**

### **User Manual**



[www.kinankvm.com](http://www.kinankvm.com)

@all right reserved Shenzhen Kinan Technology Co., Ltd

Printing date: 2022/08

Version: V2.1

[www.kinankvm.com](http://www.kinankvm.com)

## Contents

- [1 Product Description](#)
- [2 Product Features](#)
- [3 Switch Functions](#)
- [4 Product Overview](#)
- [5 Structure and Size](#)
- [6 Rear View](#)
- [7 Installation](#)
- [8 Start to Use](#)
- [9 Closing the Console](#)
- [10 Pushbutton Operation](#)
- [Instructions](#)
- [11 LED OSD Configuration](#)
- [12 Hot Key Operations](#)
- [13 Specifications](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)

## Product Description

The KVM console integrates multiple ports KVM switches in a 1U height console. It can control multiple computers with a set of devices including monitor, keyboard and mouse, thus saves much cost and space to separately equip keyboard, mouse and monitor for every computer.

It is easy and fast to install the KVM console; you just need to connect corresponding cables to the right ports of KVM and its module without software configuration.

## Product Features

- 17" LED TFT monitor, high brightness, high resolution;
- 1U height, suitable height for standard 19" rack mount, metal structure;
- Ultra slim 99 keys keyboard with small numeric keyboard;
- High resolution and high flexibility with touchpad; with two function buttons and scroll wheel.

## Switch Functions

- A single console controls up to 2/ 4 computers
- Multiplatform support-Windows, Linux, Mac and Sun
- Supports multimedia USB keyboard (PC, Mac and Sun)
- USB or PS/2 keyboard emulation-computer boot even the console focus is elsewhere
- Convenient computer switching via front panel pushbuttons and hotkeys
- Auto scan feature for monitoring user-selected computers
- Hot pluggable-add or remove computers without having to power down the switch

## Product Overview

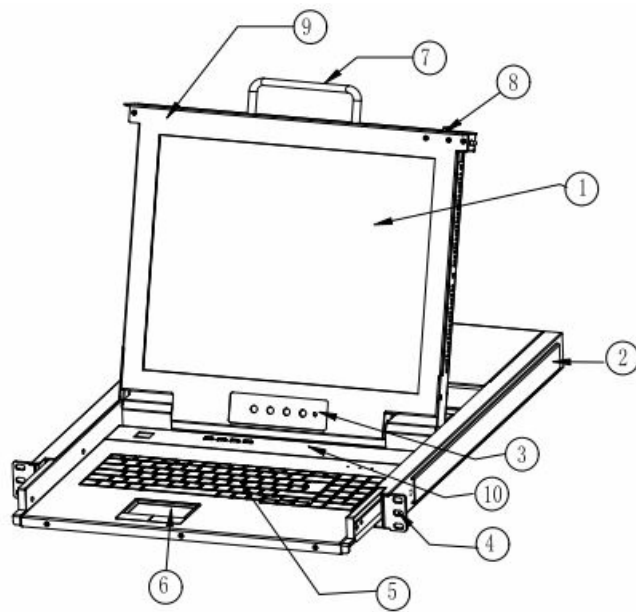


Figure 1-1 front view

- 1. LCD monitor
- 2. Rear bracket
- 3. OSD controls
- 4. Front bracket
- 5. Keyboard
- 6. Touchpad
- 7. Handle
- 8. Release lock
- 9. Display panel
- 10. Switching LEDs

## Structure and Size

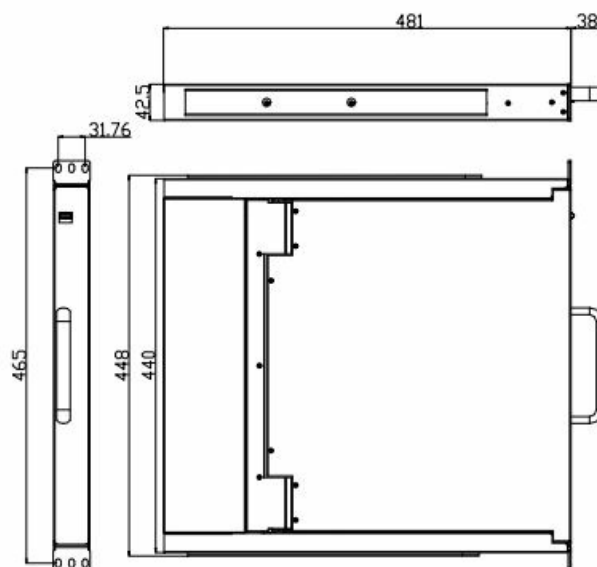


Figure 1-3

## Rear View

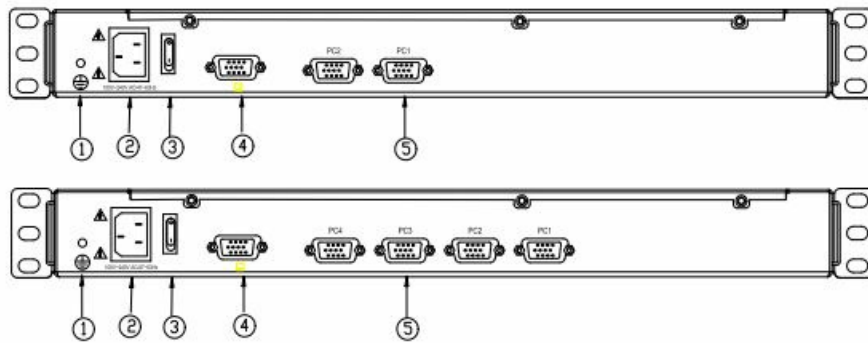


Figure 1-2

1. Ground connection screw
2. Power input (AC or DC)
3. Power switch
4. Console Port
5. PC connection port: 4 ports

## Installation

1. Make sure the KVM has been connected to the ground ( in the diagram)
2. Connect the KVM with the computer according to in the diagram
3. Connect power cable to KVM port as shown in in the diagram
4. Turn on the power, the KVM start to work after power supply (in the diagram)
5. Connect to the external monitor according to in the diagram

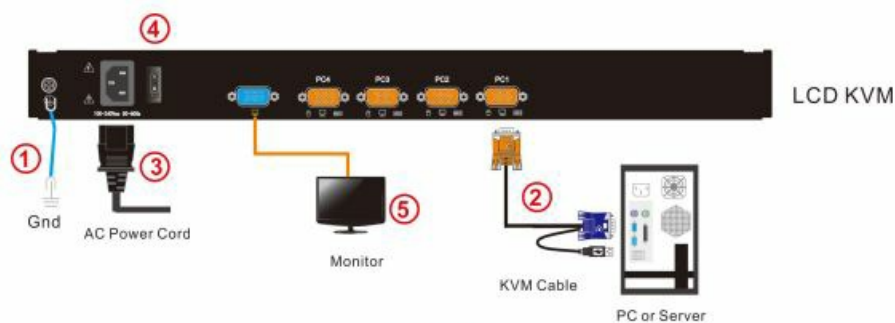


Figure 1-3

To ensure signal integrity and simplify cable layout, we strongly recommend you using high quality cables with different length as shown in above table.

## Start to Use

1. Release the lock.

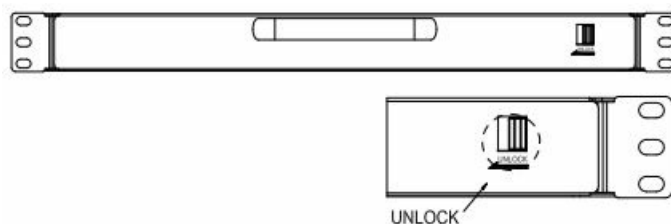


Figure 2-1 unlock the KVM

Note The release lock can only do horizontal locking, it can't bear any load.

2. Pull the LCD panel all the way out until it clicks into place.
3. Rotate the LED module all the way back to expose the LED screen, the LED module can be rotated up to 108°.


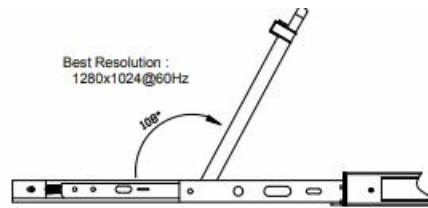


Figure 2-2 rotate angle of the console

4. Power on the KVM, the power LED will turn to green after power on
5. Power on computer or server after power on KVM and you will see green light at each port.

## Closing the Console

- Close the console and the power automatically shut down.
- Push the release catch in the direction of the arrow, push the LED panel all the way in until it automatically locks up.

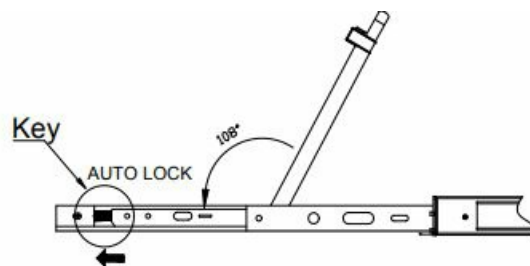

## Pushbutton Operation Instructions



Figure 3-1 front view of the pushbuttons

No.	Parts	Functions
1	1-4	Switch freely from port 1 to port 4
2	Port Selection Buttons& LEDs	<p>Indicator LEDs are built into the switches, the online LED light is on the left and the selected LED light is on the right.</p> <p>1) An online LED light (green) indicates that the KVM has connected to its corresponding computer and power on.</p> <p>2) A selected LED light (orange) indicates that the computer attached to its corresponding port is up and running.</p>
3	Port ID	It shows the current selected port

Table 1 pushbuttons operation instruction

## LED OSD Configuration



The LED OSD allows you to set up and configure the LED display.

Buttons	Functions
MENU SELECT	Press this button invokes the menu function and brings up the main menu.
EXIT/AUTO	Press this button exits the current menu and returns to the previous menu or presses this button exits the LED OSD. Press AUTO for automatic configuration.
SL-/SL+	Press this button moves your menu to make corresponding adjustment.
LED state	Green: running Red: power off or access nonstandard VESA signal Flash green: energy saving mode or no signal

Table 2 LED OSD configuration instructions

Press AUTO if the screen migrates after power on or under other circumstances, then the screen auto configure to its best display state.(It might can't be adjusted to its best state if part of the display mode is not standard VESA mode, if so return back to OSD menu to RESET, then it will back to normal.

We suggest our customers to set up the display mode at 1280×1024, refresh rate at 60Hz.

## Hot Key Operations

PressL\_Ctrl key twice, you can use the hot keys after hearing a warning sound. Keyboard mode: The keyboard will exit the hot key mode if no operation in 2 seconds. See below hot keys operation instructions: PressL\_Ctrl key twice + function buttons



Function	Operation	Descriptions
Switching port	+ 1~4	Switch from 1~4 E.g.: Press 【 L_Ctrl 】 twice + 2 to select the port 2 in the current level
	+ ↑/↓	Skip to previous/next port
Auto scan	+ S	1. Auto Scan automatically scan ports that attached PC or server. Users can set the scan duration in OSD menu and press any key to exit scanning mode. 2. Move the mouse to extend scan interval.

Table 3 hot key operation instructions


**Note:** Only the large numbers keys on the keyboard are available when you select the port while hot keys, the small numeric keyboard are unavailable.

## Specifications

Model No		XL1702	XL1704
Function			
Computer connections	Direct	2	4
	Max	2	4
Port emulation	Keyboard, mouse	USB	
LED monitor	LED model	SXGA TFT	
	View area	17 "	
	Optimum resolution	1280×1024@60Hz	
	Display color	16.7 M	
	Brightness	250cd/m <sup>2</sup> ( Typ )	
	Contrast ratio	1000 : 1 ( Typ )	
Mouse	Pixel pitch(mm)	0.264(H) × 0.264(W)	
	X/Y resolution	>1000 points /inch, (40 points/mm)	
	Roll wheel	Supports scroll wheel function	

Keyboard	99 keys (82 keys main keyboard +17 independent small numeric keyboard)	
Port selection	Pushbuttons, hot keys	
Input power	100V- 240Vac, 50-60Hz, <1.5A	
Power consumption	14 W	15W
Mounting distance	450- 790mm (L=420mm)	
Operating temperature	0—50 °C	
Store temperature	-20—60 °C	
Humidity	0—80% RH, non-condensing	
Net weight	11.7kg	
Product dimension (W × D × H)	448mm×481mm×42.5mm	
Package dimension (W × D × H)	765mm×615mm×185mm	

## Documents / Resources

 <p>Rackmount LCD Console (2 Port / 4 Port) User Manual</p>	<p><a href="#">Kinan KVM-1508XX LCD KVM Switch</a> [pdf] User Manual KVM-1508XX, KVM-1516XX, KVM-1708XX, KVM-1716XX, KVM-1508XX LCD KVM Switch, KVM-1508XX, LCD KVM Switch, KVM Switch</p>
--	--

## References

- [User Manual](#)

### [Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.