



KLEIN TOOLS VDV501-097 VDV Commander Test and Tone Kit User Guide

[Home](#) » [KLEIN TOOLS](#) » KLEIN TOOLS VDV501-097 VDV Commander Test and Tone Kit User Guide 

Contents

- [1 KLEIN TOOLS VDV501-097 VDV Commander Test and Tone Kit](#)
- [2 OVERVIEW](#)
- [3 LCD SCREEN](#)
- [4 SETUP](#)
- [5 GENERAL TESTING PROCEDURES](#)
- [6 VDV COMMANDER APP](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)








KLEIN TOOLS VDV501-097 VDV Commander Test and Tone Kit




OVERVIEW

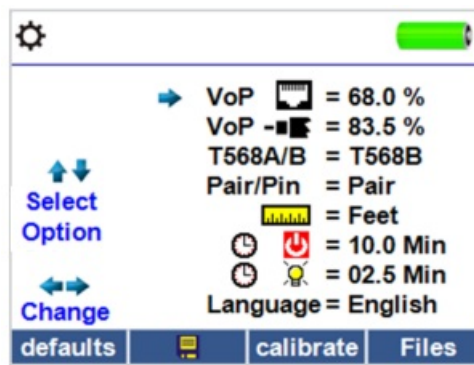









LCD SCREEN

The VDV Commander features a full-color graphic LCD screen. Press any of the four blue buttons  below the on-screen icon to select that function. Alternately, you can use the side or up/down arrows    to scroll to desired on-screen function and press the "Enter" button .

SETUP

From the main screen, press the blue function button  on the far right below the "setup" symbol . Use the up and down arrow buttons   to scroll through the Setup menu and to select an option.










- Use the up and down arrow buttons   to navigate through the settings.
- Use the left and right arrow buttons   to select setting.
- Use the up and down arrow buttons   to change the selected setting.
- Press the “Enter” button  to accept your changes.
- Press the left arrow to unselect a setting.






GENERAL TESTING PROCEDURES

Performing a Cable Test

Press the “On/Off” button to power on the VDV Commander.

- Connect a network, coax, or telephone cable to the appropriate connector on the top of the VDV Commander.
WARNING: Do NOT plug an RJ12 cable directly into the VDV Commander. A standard RJ12 cable will damage the VDV Commander’s RJ45 jack. Use the RJ adapter patch cable (VDV726-125) that is included with the VDV Commander.
- Press the “Enter” button  to display the cable test menu. The VDV Commander will automatically perform a test upon entering the cable test menu.
- To scroll through Cable Type mode, press the RJ45 function button. The icon will change with each press, from RJ45 to coax to telephone  /  / .
- If a Test-n-MapTM remote is NOT being used (a one ended test), the VDV Commander will test the length of each pair, open, short, or split pair. Performing a one ended test will not verify connectivity on the opposite end of the cable.
- If a remote is being used, connect the remote to the opposite end of the cable.
- To calibrate the VoP, connect a known length of cable to the VDV Commander and press the up/down/left/right buttons to increase or decrease the VoP. Press the left and right buttons to select and change the VoP one digit at a time.
- While adjusting the VoP, press the test button until the desired length of the cable is displayed.
- To save the calibrated VoP, enter the settings menu and press the “Save” function button .
NOTE: your adjusted VoP will be displayed next to the RJ45 or coax icon.
- Press the green test button  or the loop mode function button  to perform additional tests.







Saving a Test File

- To save a cable test, press the “Save” function button .
- Use the arrow buttons   and the “Enter” button  to name the cable test file.
- Press the “Save” function button  to save the cable test file.

Network/Power over Ethernet PoE Testing

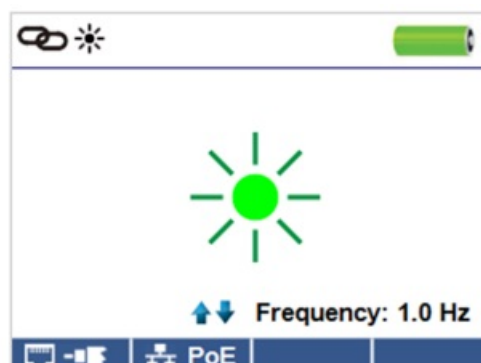
The VDV Commander PoE test identifies the link capability of a network drop and the connection status. VDV Commander detects the presence of PoE, PoE class per IEEE 802.3 af/at, and also measures PoE voltages under load. The Network/PoE tests can be saved for record keeping and printing.

PoE	
Link Capability	Link Flow Control
10Base-T	Full / Half Duplex
100Base-TX	Full / Half Duplex
Connected at	PoE A 12.95W Max
100 Base-TX	57.9 V Min Load
MDI FDX	56.5 V Max Load



- Press the “On/Off” button  to power on the VDV Commander.
- Connect the VDV Commander to a switch or active network jack.
- Use the left or right arrow buttons to select the Network/
PoE icon and press the “Enter” button  or press the Network/POE function button.
- The VDV Commander will automatically detect and display link capability, connection speed, PoE class, and PoE Min/Max voltages.
- To perform a network test only, press the PoE function button **POE** .
- To save the PoE data, press the “Save” function button .
- Use the arrow buttons and the “Enter” button  to name the PoE file.
- Press the “Save” function button  to save the PoE file.

Hub Blink

The Hub Blink test is used to help identify a hub or switch port.

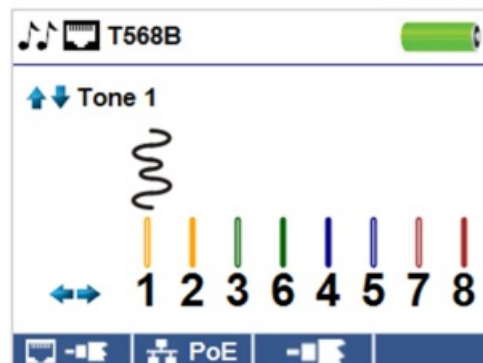









- Press the “On/Off” button  to power on the VDV Commander.

- Connect the VDV Commander to an active network cable or port.
- Press the Network/PoE function button  **PoE** , then
- press the Link Light function button 
- The Link Light will automatically begin to blink upon entering the Link menu.
- The Link LED above the LCD screen will flash at the same cadence as the port light.
- Use the up and down arrows to adjust the transmit frequency to suit the switch characteristics.

Tone Generator

Tone generation is used to trace cable runs and locate faults by sound. This mode emits a cadence from the VDV Commander through the connected cable. The tone is detected by a tone tracing probe*.



- Press the “On/Off” button  to power on the VDV Commander.
- Use the left and right arrow buttons  to select the tone generator icon  and press the “Enter” button .
- The VDV Commander will automatically activate the tone generator upon entering the tone generator menu.
- Connect your cable to either the RJ45 jack or coax connector located on the top of the VDV Commander.
- To switch between network and coax cables, press the coax cable / RJ45 function button .
- Use the up and down arrow buttons  to select tone cadences 1 through 4.
- Use the left and right arrow buttons  to select which pin or pair to place the tone.
- Use a tone tracing probe* (PROBEplus VDV500-123) alongside the cable or at the end of the cable to hear an audible tone.

VDV COMMANDER APP

The VDV Commander application gives you the ability to view, save and print cable and network test results on your computer. This application can also update your VDV Commander’s firmware.

To install the VDV Commander App







- Go to the VDV Commander product page on www.kleintools.com to download the VDV Commander software application.
- Save the VDV Commander Application file to your computer’s desktop. Double click on the file to open it.

- Double-click on “SET-UP.exe” to begin installation.

WARNINGS

To ensure safe operation and service of the tester, follow instructions. Failure to observe these warnings can result in severe injury or death. The VDV Commander is designed for use on cabling systems with or without voltage.

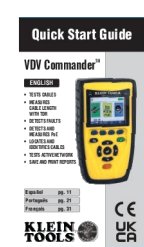
- The voltage icon ⚡ turns on when the voltage exceeds Safety Extra Low Voltage (SELV) rating of 60 Volts peak AC or DC.
- It is NOT recommended to use the VDV Commander when the voltage icon ⚡ is present. Operating the VDV Commander when a voltage source exceeds 60 Volts peak AC or DC may pose a safety hazard for the user.
- Internal components are protected up to 400 Volts peak AC or DC.
- Always wear approved eye protection.

SYMBOLS:	
	Warning or caution.
	Risk of electrical shock.
	Read instructions
	Conformité Européenne. Conforms with European Economic Area directives.
	UKCA - United Kingdom Conformity Assessment
	This symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal.

CUSTOMER SERVICE

KLEIN TOOLS, INC. 450 Bond Street Lincolnshire, IL 60069 www.kleintools.com

Documents / Resources

	<p>KLEIN TOOLS VDV501-097 VDV Commander Test and Tone Kit [pdf] User Guide</p> <p>VDV501-097 VDV Commander Test and Tone Kit, VDV501-097, VDV Commander Test and Tone Kit</p>
---	---

References

-  [Klein Tools - For Professionals since 1857 | Klein Tools](#)

