



INSTALLATION MANUAL

T203PM100-MU

T203PM300-MU

T203PM600-MU

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.



WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.



The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.



Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.



DOCUMENTATION-
T203PM100-MU



DOCUMENTATION
T203PM300-MU



DOCUMENTATION
T203PM600-MU



SENECA





SENECA s.r.l.: Via Austria, 26 – 35127 – PADOVA – ITALY: Tel. +39.049.8705359 - Fax +39.049.8706287

CONTACT INFORMATION

Technical support	support@seneca.it	Product information	sales@seneca.it
-------------------	--	---------------------	--

**This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.
The content of this document corresponds to the described products and technologies.**

MODULE LAYOUT

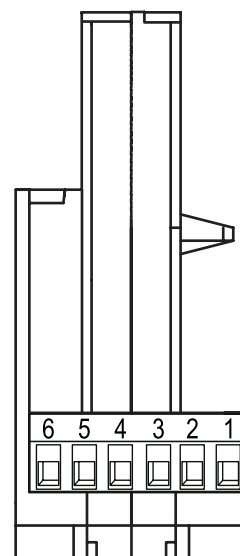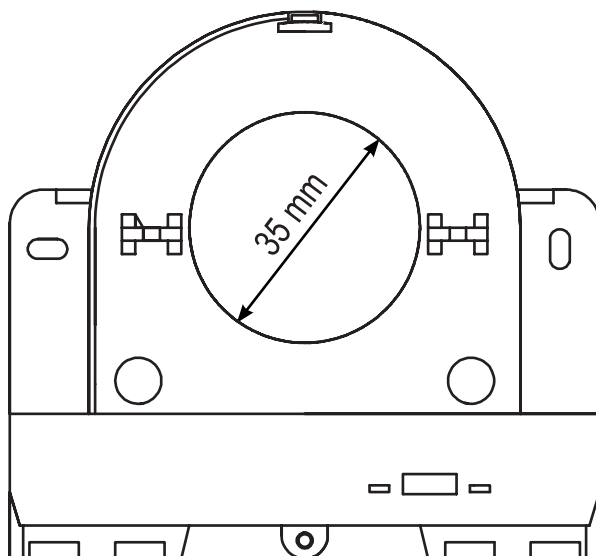

Dimensions LxHxD 95 x 75 x 35 mm; **Weight:** ≈ 150 g; **Enclosure:** PA6, black

SIGNALS VIA LED ON FRONT PANEL

LED	STATUS	LED meaning
PWR/COM Green	ON	The device is powered correctly
PWR/COM Green	Flashing	Communication via RS485 port
D-OUT Yellow	ON	Digital output activated

ASSEMBLY


The device can be mounted in any position, in compliance with the expected environmental conditions.



Magnetic fields of considerable magnitude can alter the measurement: avoid proximity to permanent magnetic fields, solenoids or ferrous masses which induce strong alterations of the magnetic field; possibly, if the zero error is greater than the declared error, try a different arrangement or change orientation.

USB PORT

The front USB port allows easy connection to configure the device using the configuration software. If it is necessary to restore the initial configuration of the instrument, use the configuration software. Through the USB port it is possible to update the firmware (for further information please refer to the Easy Setup 2 software).

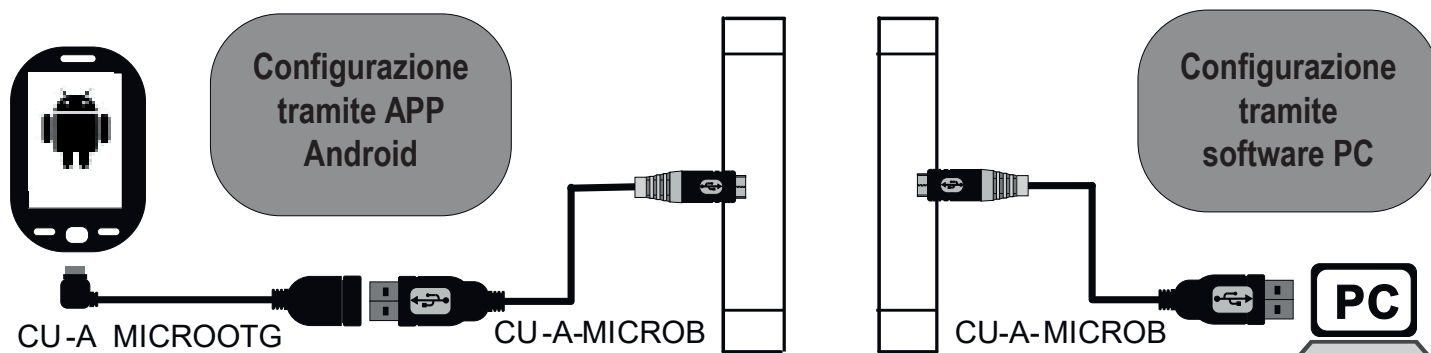

Check that the device in question is included in the list of products supported by the Easy Setup APP in the store.

TECHNICAL SPECIFICATIONS

STANDARDS	EN61000-6-4 Electromagnetic emissions, industrial environment. EN61000-6-2 Electromagnetic immunity, industrial environment. EN61010-1 Safety.	
INSULATION	Using an insulated conductor, its sheath determines the insulation voltage. An insulation of 3 kVac is guaranteed on bare conductors.	
ENVIRONMENTAL CONDITIONS	<i>Temperature:</i> -25 ÷ +65 °C <i>Humidity:</i> 10% ÷ 90% non condensing. <i>Altitude:</i> Up to 2000 m above sea level <i>Storage temperature:</i> -30 ÷ +85°C <i>Degree of protection:</i> IP20.	
ASSEMBLY	35mm DIN rail IEC EN60715, suspended with ties	
CONNECTIONS	Removable 6-way screw terminals, 5 mm pitch for cable up to 2.5 mm ² micro USB	
POWER SUPPLY	Voltage: on Vcc and GND terminals, 11 ÷ 28 Vdc; Absorption: Typical: < 70 mA @ 24 Vdc	
COMMUNICATION PORT	RS485 serial port on terminal block with ModBUS protocol (see user manual)	
INPUT	<i>Type of measurement:</i> AC/DC TRMS or DC Bipolar Live: 1000Vdc; 290Vac <i>Crest factor:</i> 100A = 1.7 ; 300A = 1.9 ; 600A = 1.9 <i>Pass-band:</i> 1.4 kHz <i>Overload:</i> 3 x IN continuous	
CAPACITY	AC/DC True RMS	TRMS DC Bipolar (DIP7=ON)
T203PM600-MU	0 – 600A / 0 – 290Vac	-600 – +600A / 0 – +1000Vdc
T203PM300-MU	0 – 300A / 0 – 290Vac	-300 – +300A / 0 – +1000Vdc
T203PM100-MU	0 – 100A / 0 – 290Vac	-100 – +100A / 0 – +1000Vdc
ANALOGUE OUTPUT	<i>Type:</i> 0 – 10 Vdc, minimum load R _{LOAD} =2 kΩ. <i>Protection:</i> Reverse polarity protection and over voltage protection <i>Resolution:</i> 13.5 full scale AC <i>EMI error:</i> < 1 % The type of output can be selected via software	
DIGITAL OUTPUT	<i>Type:</i> active, 0 – Vcc, maximum load 50mA The type of output can be selected via software	
ACCURACY	below 5% of full scale	1% of full scale at 50/60 Hz, 23°C
	above 5% of full scale	0,5% of full scale at 50/60 Hz, 23°C
	<i>Coeffic. Temperature:</i>	< 200 ppm/°C
	<i>Hysteresis on measurement:</i>	0.3% of full scale
<i>Response speed:</i>		500 ms (DC); 1 s (AC) al 99,5%
OVERVOLTAGE CATEGORIES	<i>Bare conductor:</i> CAT. III 600V <i>Insulated conductor:</i> CAT. III 1kV	

⚠ WARNING

Disconnect the high voltage before carrying out any work on the instrument.

⚠ CAUTION

Switch off the module before connecting the inputs and outputs.

To meet electromagnetic immunity requirements:

- use properly insulated and dimensioned cables;
- use shielded cables for signals;
- connect the shield to a preferred instrumentation ground;
- Keep shielded cables away from other cables used for power installations (transformers, inverters, motors, etc.).

POWER SUPPLY	ANALOGUE OUTPUT	DIGITAL OUTPUT	RS485
MEASUREMENT INPUT	<div> <p>Connect just a pair of terminals for the measurement.</p> </div> <div> </div> <div> <h3>⚠ CAUTION</h3> <p>Make sure that the direction of the current flowing through the cable is that shown in the figure (incoming). To increase the sensitivity of the current measurement, insert the cable several times into the central hole of the instrument, creating a series of loops. The current measurement sensitivity is proportional to the number of cable passages through the hole.</p> </div>		