

**LAB12
MIGHTY Class A
Single Ended Power
Amplifier**



LAB12 MIGHTY Class A Single Ended Power Amplifier Owner's Manual

[Home](#) » [LAB12](#) » LAB12 MIGHTY Class A Single Ended Power Amplifier Owner's Manual 

Contents

- [1 LAB12 MIGHTY Class A Single Ended Power Amplifier](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Features](#)
- [5 Installation & Placement](#)
- [6 Front Panel](#)
- [7 Main Connections](#)
- [8 Specifications](#)
- [9 Warranty](#)
- [10 CONTACT](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

LAB12

LAB12 MIGHTY Class A Single Ended Power Amplifier



Product Usage Instructions

- Mighty should be removed from its box with care.
- Remove all the foam protective pieces of the box before you unpack mighty.
- Unpack mighty with your hands on both sides of the device.
- No user-serviceable parts are included inside.
- Do not unscrew the cover; high voltages remain after disconnecting from the mains.
- In case your device requires any kind of service or upgrade, please ship or take your equipment directly to Lab12 or to one of our authorized dealers.
- Always use the same type of fuse for replacement.
- Insert the tubes carefully in each position.
- All tubes are marked with position numbers. V1: EL34, V2: EL34, V3: 6n1p, V4: 6n1p.
- The front panel features three indication LEDs and two VU meters for monitoring output levels accurately.
- The rear panel includes connection inputs and outputs, IEC AC input, main fuse holder, power switch, RCA connectors for signal input, and speaker outputs for 4 or 8-ohm matching.
- Connect a High-Grade Power cable to the IEC input and your wall socket.
- Ensure a good ground before connecting. Supply 230 to 240 Volt AC/50Hz (115 to 120 AC Volts / 60Hz).
- Connect the preamplifier analog output to the analog line level input of your mighty Power Amplifier.

FAQ

- **Q:** Can I use a different power cable than the Lab12 Knack mk2 Power Cable?
- **A:** While Lab12 strongly suggests using the Lab12 Knack mk2 Power Cable for tuning and calibration purposes, you can use a different high-grade power cable that meets the required specifications.
- **Q:** What should I do if one of the tubes needs replacement?
- **A:** If one of the tubes needs replacement, ensure to use tubes that match the specified positions (V1, V2, V3, V4) and consider contacting Lab12 or an authorized dealer for assistance.

IT IS YOURS

- Thank you for selecting Lab12 Mighty, a real audiophile Class A power amplifier.

- Every component on it is designed to provide smooth and untreated sound.
- Mighty is a full-tube amplifier with 6n1p NOS Russian driver tubes and EL34 Russian on the power stage.
- Mighty can cooperate gratefully with any preamplifier on the market and it is the perfect match for Lab12 true or hpa.
- Mighty can nail you down on your couch and make you listen to all your music collection again.
- All the power you need for a normal range pair of speakers is here, but the most remarkable point is that you will receive a fluid, wide, and addictive consonant sound with any choice of music style.
- All components are carefully chosen after hours of listening and testing while paying great attention to every detail affecting the outcome. As with every Lab12 device, mighty has an ultra-solid construction with glass-blasting anodized finishing and retro analog V/U meters.
- Do not forget that your mighty is handcrafted with perfectly matched parts of the finest selections.
- To reach optimal performance, your mighty needs at least 150 hours of listening. In this time all components go from a “burn in” period to stable.
- Before setting up your new mighty, we encourage you to thoroughly read this manual to properly acquaint yourself with its features. We love music and audio devices; we have built your new device with emotion and personal treatment.
- The information contained in this manual is subject to change without notice. The most current version of this manual is available on our official website at <http://www.lab12.gr>

Unpacking

Mighty should be removed from its box with care. Remove all the foam protective pieces of the box before you unpack mighty. Unpack mighty with your hands on both sides of the device.

Warnings

- No user-serviceable parts are included inside. Do not unscrew the cover; high voltages remain after disconnecting from the mains. In case your device requires any kind of service or upgrade, please ship or take your equipment directly to Lab12 or to one of our authorized dealers.
- Always use the same type of fuse for replacement.

Features

- EL34, 6550, KT88 compatible (EL34 from factory)
- Triode / Ultra-Linear selector switch
- No feedback design
- SRSG® implementation
- Fine symmetry® implementation
- Analog retro Nissei VU meters
- 5mm Aluminum face panel
- Five Years Guarantee

Installation & Placement


- Mighty should be placed on a solid flat surface. You should avoid placing it near a heat source as this could compromise the mighty performance and reliability.
- Insert the tubes carefully in each position. All tubes are marked with position number placed during calibration

and burn-in of mighty.

- Due to the high power tubes' design, mighty chassis could be hot so you should never place another hot component directly near this device. Make sure the device has enough space to ventilate.
- Tubes will be hot, this is normal. Be careful not to touch the tubes during the operation to avoid any injuries.
- Take care of the finest glass blasting anodized finish of the front panel with a soft cloth. No need to use any sprays or polishes. Never use cleaners containing abrasives, as this will damage the surface.

Mighty Tubes Positions


- Insert the tubes carefully in each position.
- All tubes are marked with the position number placed during calibration and burn-in of Mighty.

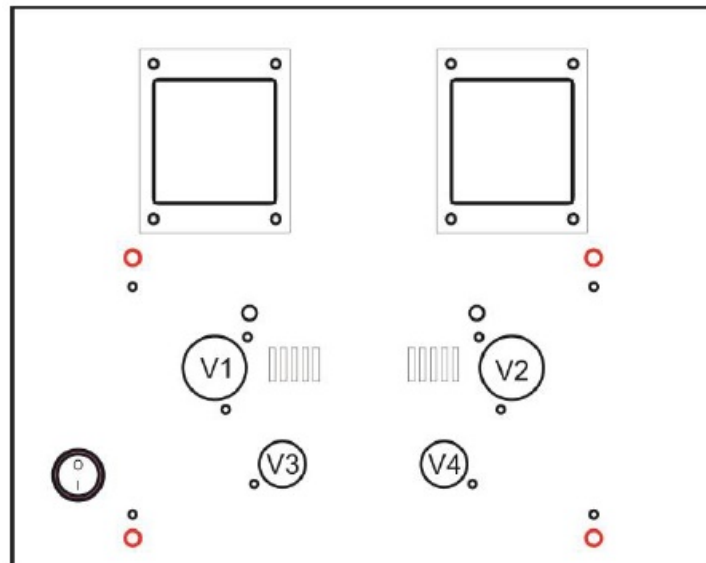

All inbox tubes are perfectly matched during calibration to achieve a perfectly balanced operation.

- V1 : EL34
- V2 : EL34
- V3 : 6n1p
- V4 : 6n1p

Front Panel

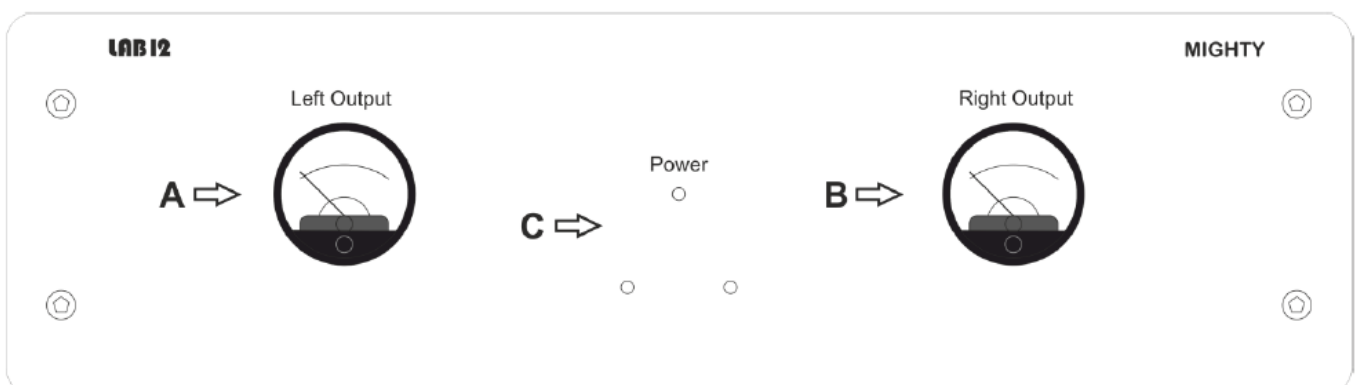


MIGHTY Front panel

- On the front panel, you will see three indication LEDs and two VU meters.
- The three LEDs (C) indicate that the device is powered on.
- On the left of the 3 LEDs, you see a retro analog VU meter (A). You can accurately monitor the output level of the left channel on a dB scale.
- On the right of the 3 LEDs, you see a retro analog VU meter (B). You can accurately monitor the output level of the right channel on a dB scale.

An optional tube cage (LAB12 TG2) for increased safety and a different aesthetic approach to your amplifier is available to obtain.

Rear Panel

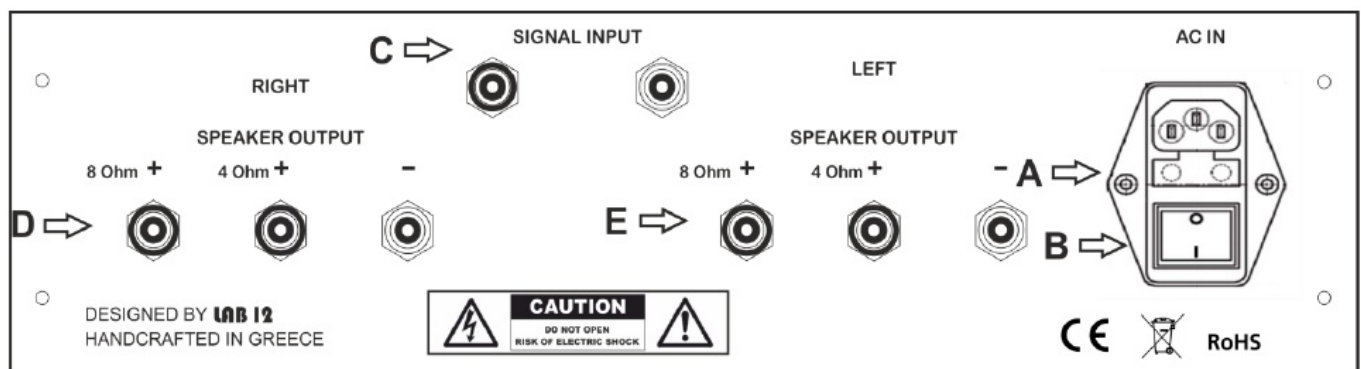

MIGHTY Rear panel

- On the rear panel, you will find the connection inputs and outputs.
- On the right side, you will find an IEC AC input. Below the IEC input, the main fuse holder (A) and the Power switch (B) are located.
- A pair of RCA connectors (C) is located about in the middle of the back panel. It is the input of a signal from your preamplifier.
- Below the signal input, you can find the speaker outputs (D & E). You have the choice of 4 or 8-ohm output for perfect matching with your speaker impedance.

Main Connections

- Connect a High-Grade Power cable to the IEC input and to your wall socket.
- Make sure that your wall socket provides good ground before connecting the power cable.
- You must supply 230 to 240 Volt AC/50Hz (115 to 120 AC Volts / 60Hz). (Every mighty is tuned and calibrated using the Lab12 Knack mk2 Power Cable. We strongly suggest using this cable).

Connect to your Preamplifier

- Connect the preamplifier analog output to the analog line level input of your mighty Power Amplifier.
- Make sure about the correct channel connections. We suggest using a good-quality interconnect cable pair.

Connect your Speakers

- Connect your speakers to the additional output of Mighty (connect speakers from 2 to 6 ohm at 4ohm positive bind, speakers from 6 to 16 ohm at 8ohm bind).
- Make sure about the phase and polarity of speakers, always connect the “plus” (red) bind of Mighty to the “plus” (red) bind of a speaker and same with black.

Notes

- You can choose the operation of Mighty between Triode or Ultra Linear pentode mode, to tune the sound closest to your taste.
- This can be done through two toggle switches on the back of power tubes. Position both switches towards to transformers for triode mode or towards tubes for Ultra Linear pentode mode.
- You can change the operation even when the amplifier is turned on by just lowering the volume.
- Mighty is fully compatible with the best octal tubes (EL34, 6550, KT88). You can use any of these three types of tubes with no problem.

For the safety of your equipment

- Make sure that all your equipment is turned off before any connection.
- To avoid damaging your speakers you have to turn on mighty some seconds after turning on your preamplifier and turn it off some seconds before turning off your preamplifier.
- Never turn on mighty without connected speakers or preamplifier on it. It is possible to damage tubes or even output transformers.

Specifications

- **Power:** 230VAC 50Hz (115VAC 60Hz)
- **Power consumption:** 150 VA max
- **Output power:** 10 Watt per channel
- **Frequency response:** 20 Hz-25 KHz (-0.9dB)
- **Input impedance:** 100K ohm
- **Recommended speakers:** 4-8 ohm
- **Tube complement:** 2x 6n1p dual triodes, 2x EL34 Power Pentodes
- **Input sensitivity:** 600mV triode mode / 400mV Ultra Linear mode
- **Inputs:** 1x line stereo (RCA connectors)
- **Available Colours:** Matt Black
- **Dimensions (WxHxD):** 32x17x29 cm
- **Weight:** 9Kg

Warranty

- Lab12 products are designed and manufactured to the highest standards and deliver high-quality performance, ease of use, and ease of installation. We are confident that you will enjoy many years of good service from your

product.

- In the unlikely event of a failure of the product, we will arrange for your product to be serviced, free of charge, provided that the product was used under the instructions in the owner's manual.
- Lab12 could modify the design or specifications of any product without obligation to purchasers of previously manufactured products.
- This Warranty is provided for the benefit of the first and original purchaser of the covered product and is not transferable to a subsequent purchaser.
- Vacuum tubes are warranted for the original 90-day period only.
- This warranty does not affect your statutory rights. EU rules 1999/44/EK.
- This Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.
- Lab12 reserves the right to change or modify any of the terms and conditions contained in this Warranty Statement, at any time and in our sole discretion.
- Any changes or modifications will be effective immediately upon posting of the revisions on the Lab12 website, and you waive any right you may have to receive specific notice of such changes or modifications.
- If there is a difference between this warranty and the provisions in any owner's manuals, warranty leaflets, or packaging cartons, the terms of this warranty, as published on the official Lab12 website, will prevail to the fullest extent allowed by law.

For the warranty to be valid

1. The Warranty card, which is placed outside the box of the unit, must be filled out by the authorized seller with the Model of the device, Serial Number, Color, Date of Purchase, Customer's Name and Customer's Address, as well as the authorized seller's point sign.
2. A copy of the purchase receipt must also be attached to this card.
3. A photo of the completed Warranty card, along with the purchase receipt, must be sent to contact@lab12.gr by the end consumer within one month from the date of purchase.

What is Covered and how long this coverage lasts?

Only new products purchased through an authorized Lab12 dealer, importer or distributor are entitled for warranty coverage. The Warranty is limited to the first original purchaser and is inapplicable for secondhand products. This warranty covers defects in materials and workmanship in this product for 5 years (or a 90-Days Limited Warranty for vacuum tubes) after the date of purchase or no later than 6 years of the date of shipment to the authorized Lab12 dealer or distributor, whichever comes first.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing, and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any Tubes Swaps, Repairs or Modifications attempted by anyone unauthorized by Lab12, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.

This limited warranty does not cover vacuum tubes (after the 90-day Limited Warranty), cartons, scratches on equipment enclosures, cables or accessories used in conjunction with this product.

What we will do to correct the problem

During the Warranty Period, we will repair or replace, at no charge, products or parts of a product that proves defective due to defects in materials or workmanship, under normal use and maintenance.

How To Obtain Service Under This Warranty:

You are responsible for transporting your product to (as well as from, if Lab12 finds no defect covered by this warranty) either Lab12 or an authorized point and for payment of all shipping charges. Lab12 will pay the return shipping charges (in the event you return the product to Lab12) if the repairs are covered by warranty, provided that, Lab12 reserves the right to choose the mode, the carrier and the timing of such return shipping (if Lab12 finds that there are no defects covered by this warranty, then you shall be responsible for all shipping charges). Lab12 has authorized distribution in many countries of the world. In each country, the authorized importing retailer or distributor has accepted the responsibility for the warranty of products sold by that retailer or distributor. Warranty service should normally be obtained from the importing retailer or distributor from whom you purchased your product. In the unlikely event that the technical service required is not possible to be fulfilled through the importer/distributor, this product must be returned to Lab12's main factory in Greece to fulfill the terms of this Limited Warranty at the purchaser's expense (except purchasers that purchase their product directly from our main facilities in Greece), along with the Warranty card and a copy of the proof of purchase for the product. As mentioned above, the Warranty card must list the date of purchase, the model, color, and serial number of the product, the name and address of the purchaser, and the authorized dealer/importer/retailer detailed sign. Additionally, you must provide detailed information on the symptoms or difficulties you have observed with the product's performance by completing a technical support form that will be provided to you by the authorized importing retailer, distributor or LAB12. To obtain warranty service, you can also contact directly Lab12 at contact@lab12.gr or +30-2102845173, to determine the most appropriate solution for you. All warranty claims must be made in writing accompanied by the Warranty card and a copy of the proof of purchase.


- Lab12 Single Member Private Company
- Contact@lab12.gr
- www.lab12.gr

We wish you to enjoy your new device exactly as we enjoyed it when we built it for you!

CONTACT

- K. Varnali 57A, Metamorfosi,
- 14452, Athens, Greece
- Tel: +30 210 2845173
- Email: contact@lab12.gr
- Web: www.lab12.gr

Documents / Resources

	LAB12 MIGHTY Class A Single Ended Power Amplifier [pdf] Owner's Manual MIGHTY Class A Single Ended Power Amplifier, MIGHTY, Class A Single Ended Power Amplifier, Single Ended Power Amplifier, Ended Power Amplifier, Power Amplifier, Amplifier
---	--

References

-  [Home - lab12](#)
-  [Home - lab12](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.