



# LamasaTech CT-1081D Pass Management Module oF Temperature Measurement & Face Recognition User Manual

[Home](#) » [LamasaTech](#) » LamasaTech CT-1081D Pass Management Module oF Temperature Measurement & Face Recognition User Manual 

## Contents

- [1 LamasaTech CT-1081D Pass Management Module oF Temperature Measurement & Face Recognition](#)
- [2 Parameters](#)
- [3 Installation Notes](#)
- [4 Port description](#)
- [5 Installation method](#)
- [6 Care and Maintenance](#)
- [7 Precautions](#)
- [8 Warranty Card](#)
- [9 product](#)
- [10 FCC Statement](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



## LamasaTech CT-1081D Pass Management Module of Temperature Measurement & Face Recognition



### Parameters

|           |                      |   |
|-----------|----------------------|---|
| Camera    | Resolution           | 2 million pixels                                  |
|           | Type                 | Binocular wide dynamic camera                     |
|           | Aperture             | F2.4  |
|           | Focusing distance    | 50–150cm  |
|           | White balance        | auto  |
|           | Photo flood light    | LED and IR dual photo flood light                 |
| Screen    | Size                 | 8.0 inch IPS LCD screen                           |
|           | Resolution           | 800 × 1280  |
|           | Touch                | Not supported (optional support)                  |
| Processor | CPU                  | RK3288 quad-core (optional RK3399 six-core)       |
|           | Storage              | EMMC 8G   |
| Interface | Network module       | Ethernet and 5.0 G (WIFI)                         |
|           | Audio                | 2.5W / 4R speakers                                |
|           | USB                  | 1 USB OTG, 1 USB HOST standard A port             |
|           | Serial communication | 1 RS232 serial port                               |
|           | Relay output         | 1 door open signal output                         |
|           | Wiegand              | One Wiegand 26/34 output, one Wiegand 26/34 input |
|           | Upgrade button       | Support Uboot upgrade button                      |
|           | Wired network        | 1 RJ45 Ethernet socket                            |

|                                 |   |  |
|---------------------------------|---|--|
| Function                        | Credit card reader  | None (optional I Ccard reader, I Dcard, ID card)                                       |
|                                 | Face library  | Up to 20,000   |
|                                 | 1: N face recognition   | Support  |
|                                 | 1: 1 face comparison  | Support  |
|                                 | Stranger detection  | Support  |
|                                 | Identify distance configuration   | Support  |
|                                 | UI interface configuration  | Support  |
|                                 | Upgrade remotely  | Support  |
|                                 | Interface   | Interfaces include device management, personnel / photo management, record query, etc. |
|                                 | Deployment method   | Support public cloud deployment, privatized deployment, LAN use, stand-alone use       |
| Infrared thermal imaging module | Temperature detection   | Support  |
|                                 | Temperature detection distance  | 0.8 meter (optimal distance 0.5 meter)   |
|                                 | Temperature measurement accuracy  | $\leq \pm 0.5^{\circ}\text{C}$   |
|                                 | Temperature measurement range   | $10^{\circ}\text{C}\sim 42^{\circ}\text{C}$  |
|                                 | Pixels  | 32 X 32 dots (total 1024 pixels)   |
|                                 | Visitors' temperature is normal and released directly                     | Support  |
|                                 | Abnormal temperature alarm  | Support (temperature alarm value can be set)   |
| General parameters              | Power   | DC12V ( $\pm 10\%$ )   |
|                                 | Operating temperature   | $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$   |
|                                 | Storage temperature   | $-20^{\circ}\text{C}\sim 60^{\circ}\text{C}$   |
| General parameters              | Power consumption   | 13.5W ( Max )  |
|                                 | Installation method   | Gate bracket installation  |
|                                 | Size  | Standard: 269*133*24.5 ( mm )<br>IC card / ID card: 396*133*24.5 ( mm )                |
| Packing list                    | Machine * 1, power adapter * 1, manual * 1, certificate of conformity * 1 |  |


## Installation Notes

Module structure description



Optional credit card (ID) version, size: 396\*133\*24.5 (mm)

## Port description

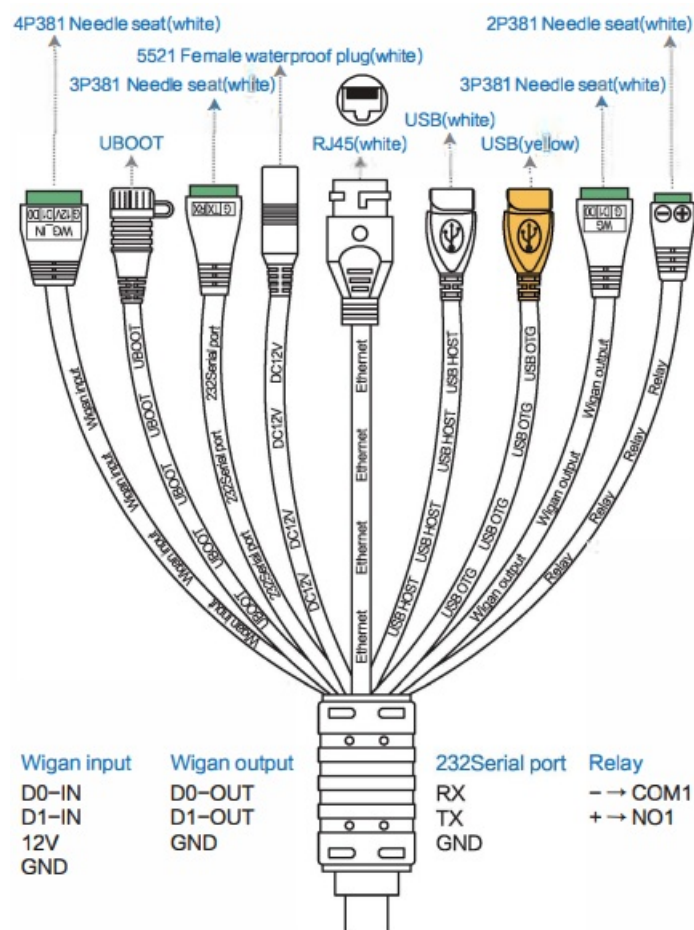


## Installation method

1. According to the requirements of the installation site, open a 35mm diameter hole (as shown in the figure below) in the space position of the gate (usually the middle or front side).

**Note:** The position of the opening should be based on the actual gate type and scene, and 35mm is for

reference only.

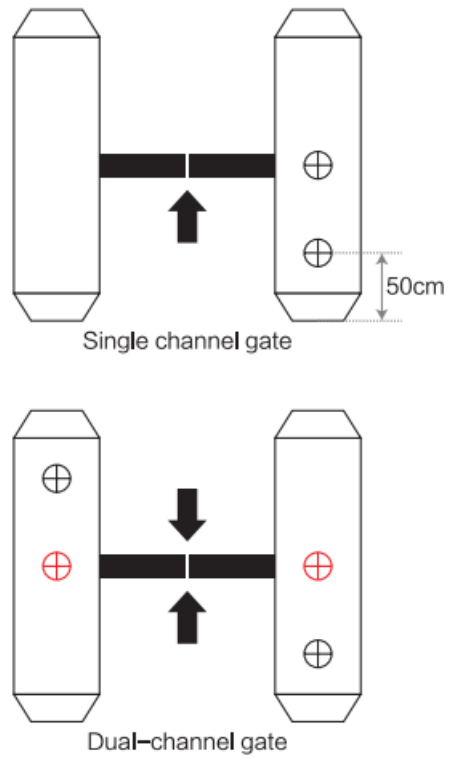

2. Unscrew the nut at the bottom of the gate head post, thread the cable out of the nut, and remove the nut.



3. Under the gate, insert the cable and cable interface into the gasket and nut in turn, tighten the nut, connect the power supply, and the screen will start.



**Note: The brackets in the figure above are for installation reference only, non-standard accessories.**

## Care and Maintenance

1. During the installation and use of the product, all electrical safety regulations must be strictly observed.
2. Please use the power adapter provided by the regular manufacturer. For specific requirements of the power adapter, see the product parameter table.
3. When installing on the gate, please make sure that the product is installed firmly.
4. If the product does not work properly, please contact the after-sales service personnel. Do not disassemble or modify the product in any way. (The company does not assume any responsibility for problems caused by unauthorized modification or repair.)
5. Do not immerse the product in water. When the product is installed outdoors, try to use it with the rain cover provided by our company.
6. Please understand that you are responsible for properly configuring passwords and other related product security settings, and keeping your username and password properly.
7. If the equipment does not work properly, please do not disassemble it for repair, otherwise it will affect the equipment warranty.
8. Avoid extreme or extreme environments such as extreme high temperature (or low temperature), high humidity, vibration, radiation, and chemical corrosion during installation and use.

## Precautions

1. This product is not suitable for use in places exposed to direct sunlight.
2. This product is not suitable for outdoor or semi-outdoor use.
3. The best use environment for this product is indoor, with no wind temperature measurement distance of 50cm.
4. If the ambient temperature is below 15°C (or over 30°C), the temperature measurement error will increase.
5. The subject should have no strong light source directly on the forehead and face, and no other high/low heat sources interfere.

6. When the tested person comes from outdoors or from a place where the temperature of the measuring environment is very different, the measured object should stay in the measuring environment for at least 5-10 minutes, and then measure the temperature after the temperature is consistent with the environment, otherwise it will affect Accuracy of test results
7. The tested object should keep the forehead dry and free from hair, dust, hats and other sundries.
8. The temperature measurement equipment cannot be promoted to the air outlet, and the hot and cold air affects the accuracy of the temperature measurement of the equipment.
9. Do not put this product close to or on high-temperature objects
10. Although the data measured by the human body infrared thermal imaging body temperature test equipment is only used for preliminary screening, it cannot be used as medical diagnosis data. Once a person with a high body temperature is found, further screening and confirmation are required
11. Calibration method 1: Before using this product for temperature screening, follow the steps below to calibrate
  - Use a traditional calibrated high-precision forehead temperature gun under the product environment to measure your forehead temperature, assuming get 36.3°C
  - Use this product to measure your own temperature in the environment where the product is used, assuming 36.0°C
  - Repeat step 1.2 more than three times to calculate the difference between the average value. If the error range between the average value measured by the forehead thermometer and the average value measured by this product is within  $0.3^{\circ}\text{C}$ , the product can be used normally. If you get a value that is too different, such as 1 redundant, you need to press and hold the middle mouse button to pop up a dialog box, enter 123456, enter the application setting, and set the compensation in the "body temperature detection setting".

## Warranty Card

Dear customer, thank you for purchasing the Face Recognition Pass Management Module. In order to better serve you, please read, fill in and properly keep the warranty card after purchasing the

### product

- Your name
- Contact person
- Telephone
- Address
- Date of purchase
- Serial number
- Maintenance
- records
- Cause of issue
- Warranty description:

1. This warranty card is required to be properly kept by the user as proof of repair.
2. This product is guaranteed for one year from the date of purchase.
3. Warranty Equipment During the warranty period, under normal use and maintenance conditions, the machine



ItseW malfunctions. Upon inspection, the company will provide free repair and parts replacement.

4. During the warranty period, if the following events occur, the company has the right to refuse service or charge materials and maintenance service fees as appropriate.
  1. This warranty card and valid proof of purchase cannot be provided.
  2. Product failure and damage caused by improper user use.
  3. Damage due to abnormal external forces.
  4. It is not our maintenance service, and the user dismantles It to cause damage.
  5. Failures and damage caused by natural disasters or other force majeure factors.
  6. Others were intentionally damaged.
5. The company reserves the right to modify and interpret all content.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).


This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## FCC Radiation Exposure Statement:

The equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

## Documents / Resources

|   |   |
|---|---|
|  | <a href="#">LamasaTech CT-1081D Pass Management Module oF Temperature Measurement &amp; Face Recognition</a> [pdf] User Manual<br>LT-ZENTRON, LTZENTRON, 2AXWR-LT-ZENTRON, 2AXWRLTZENTRON, CT-1081D, Pass M<br>anagement Module oF Temperature Measurement Face Recognition |
|---|---|