




LANCOM Systems 1790VA Highest Availability of Supervectoring Connections User Guide


[Home](#) » [LANCOM SYSTEMS](#) » LANCOM Systems 1790VA Highest Availability of Supervectoring Connections User Guide 



SECURE. NETWORKS.

LANCOM 1790VA
Quick Reference Guide

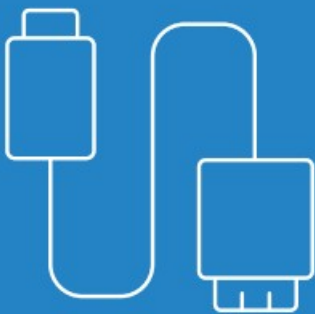

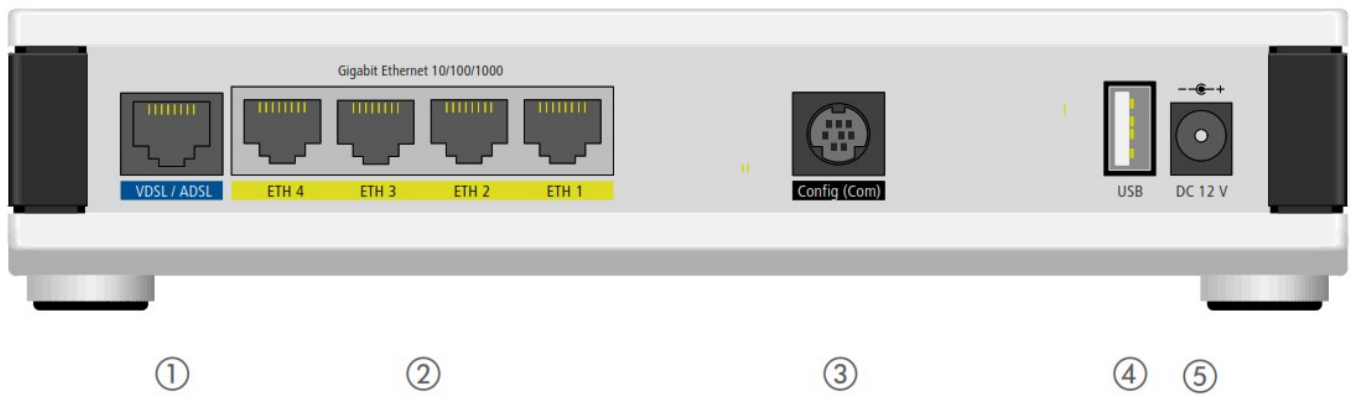

1. VDSL / ADSL interface

Use the supplied DSL cable for the IP-based line to connect the VDSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.



2. Ethernet interfaces

Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.



3. Configuration interface

Use a serial configuration cable to connect the serial interface (COM) to the serial interface of the device you want to use for configuring / monitoring (separately available).



4. USB interface

Connect compatible USB devices either directly to the USB interface, or use a suitable USB cable.



5. Power

After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.




Please observe the following when setting up the device

- Do not rest any objects on top of the device
- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- In case of wall mounting, use the drilling template as supplied
- Keep the ventilation slots of the device clear of obstruction

- Rack installation with the optional LANCOM Rack Mount (separately available)

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

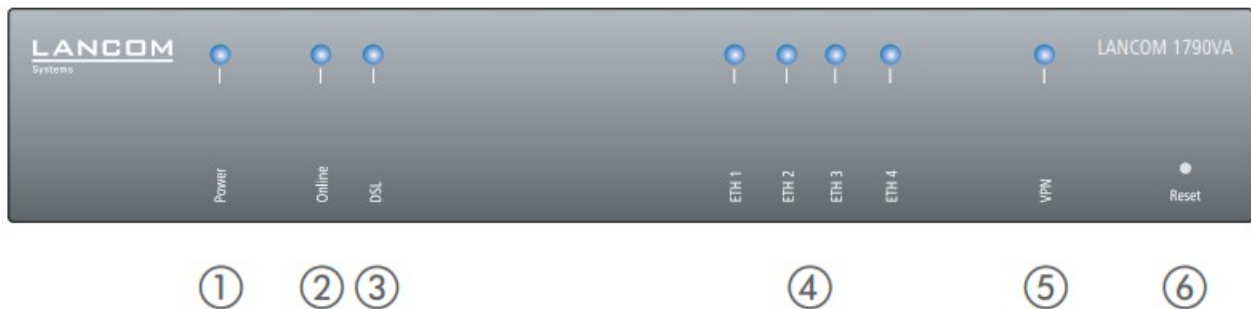

1. Power

Off	Device switched off
Green, permanently*	Device operational, resp. device paired /claimed and LANCOM Management Cloud (LMC) accessible
Red / green blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Red blinking	Charge or time limit reached
1x green inverse blinking*	Connection to the LMC active, pairing OK, device not claimed
2x green inverse blinking*	Pairing error, resp. LMC activation code not available
3x green inverse blinking*	LMC not accessible, resp. Communication error

2. Online

Off	WAN connection inactive
Green, blinking	WAN connection is established (e.g. PPP negotiation)
Green, permanently	WAN connection active
Red, permanently	WAN connection error

3. DSL

Off	Interface deactivated
Green, permanently	DSL connection active
Green, flickering	DSL data transfer
Red, flickering	DSL transfer error
Red / orange, blinking	DSL hardware error
Orange, blinking	DSL training
Orange, permanently	DSL sync
Green, blinking	DSL connecting

4. **ETH**

Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission

5. **VPN**

Off	VPN connection inactive
Green, permanently	VPN connection active
Green, flashing	VPN connecting

6. **Reset**

Reset button	Operated e.g. with a paper clip • short press: Restart the device • long press: Reset the device
--------------	--------------------------------------------------------------------------------------------------------

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

Contents

- [1 Hardware](#)
- [2 Interfaces](#)
- [3 WAN protocols](#)
- [4 Declaration of Conformity](#)
- [5 Package content](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Hardware

Power supply	12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection
Power consumption	Max. 14 W
Environment	Temperature range 0–35 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	None; fanless design, no rotating parts, high MTBF

Interfaces

WAN: VDSL2	<ul style="list-style-type: none">• VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 35b• VDSL Supervectoring as per ITU G.993.2 (Annex Q)• VDSL2 vectoring as per ITU G.993.5 (G.Vector)• Compatible to VDSL2 from Deutsche Telekom• Compatible to U-R2 from Deutsche Telekom (1TR112)• ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO, ITU G.992.3, and ITU G.992.1• ADSL2+ over POTS as per ITU G.992.5 Annex A/M with DPBO, ITU G.992.3, and ITU G.992.1• Supports just one virtual connection at a time in ATM (VPI-VCI pair)
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration.
USB	USB 2.0 hi-speed host port
Config (Com) / V.24	Serial configuration interface/COM-port (8-pin mini-DIN): 9,600 – 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.

WAN protocols

VDSL, ADSL, Ethernet	PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN
----------------------	----------------------------------------------------------------------------------------------------------------

Declaration of Conformity

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc

Package content


Documentation	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 Ethernet cable, 3 m (kiwi colored connectors); 1 DSL cable for an IP-based line, 4.25 m
Power adapter	External power supply adapter 12 V / 2 A DC/S; barrel / bayonet (EU), LANCOM item no. 111303 (not for WW devices)

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice.

No liability for technical errors and / or omissions. 111780/01/22

Documents / Resources

	LANCOM Systems 1790VA Highest Availability of Supervectoring Connections [pdf] User Guide 1790VA, Highest Availability of Supervectoring Connections, Availability of Supervectoring Connections, Supervectoring Connections, 1790VA, Connections
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [L DoC - LANCOM Systems GmbH](#)