



LANCOM 1800EF Site Networking Via fiber Optics and Ethernet User Guide


[Home](#) » [LANCOM](#) » LANCOM 1800EF Site Networking Via fiber Optics and Ethernet User Guide 

LANCOM

SYSTEMS




Hardware Quick Reference
LANCOM 1800EF

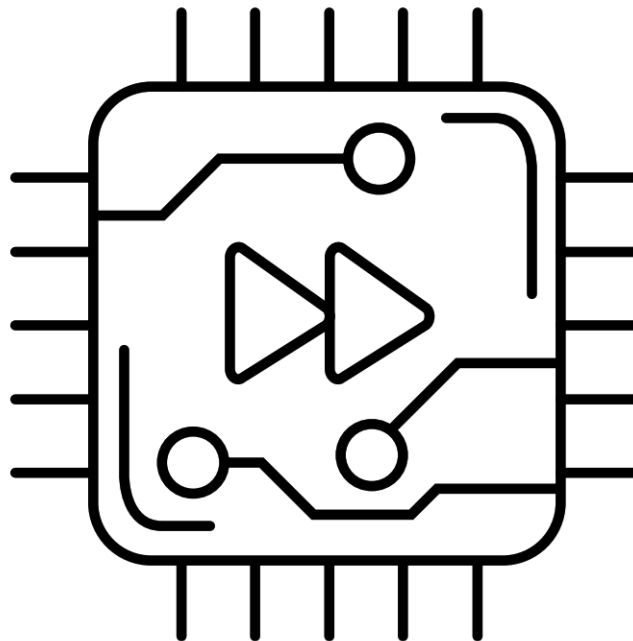

Contents

- [1 Mounting & connecting](#)
- [2 LED description & technical details](#)
- [3 Hardware](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Mounting & connecting

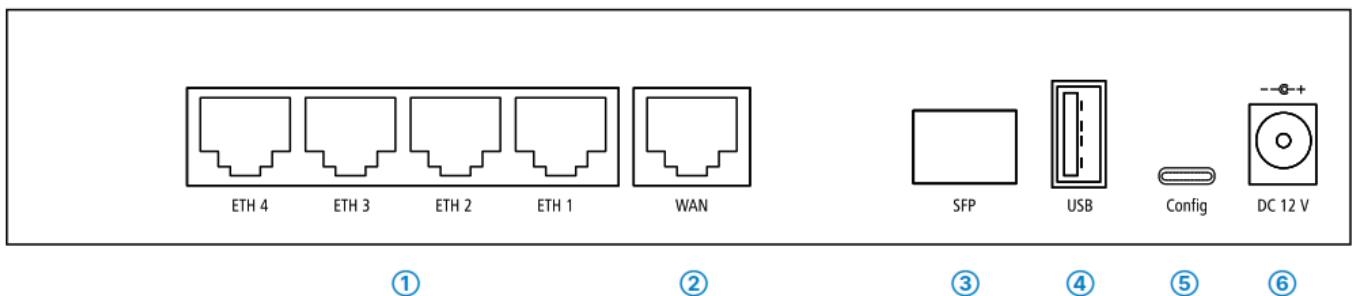

1. Ethernet interfaces

Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.



2. WAN interface

Use the cable with the green connectors to connect the WAN interface to your WAN modem.




3. SFP interface

Insert a suitable LANCOM SFP module (e.g. 1000Base-SX or 1000Base-LX) into the SFP port. Choose a cable compatible with the SFP module and connect it as described in the SFP module's mounting instructions www.lancom-systems.com/SFP-module-MI. SFP module and cable are not included.



4. USB interface

Connect a USB data medium or a USB printer to the USB interface. (cable not supplied)




5. USB-C configuration interface

A USB-C cable is required to configure the device (cable not supplied)



6. Power

After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.

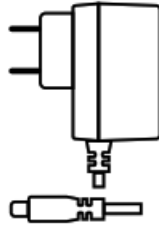

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.



Please observe the following when setting up the device

- The power plug of the device must be freely accessible.
- For devices to be operated on the desktop, please attach the adhesive rubber footpads → Do not rest any objects on top of the device
- Keep all ventilation slots on the side of the device clear of obstruction
- In case of wall mounting, use the drilling template as supplied
- Rack installation with the optional LANCOM Rack Mount (separately available)
- Please note that support service for third-party accessories is excluded.

LED description & technical details

LANCOM Systems										LANCOM 1800EF	
○	○	○	○		○	○	○	○		○	
Power	Online	SFP	WAN		ETH 1	ETH 2	ETH 3	ETH 4		VPN	Reset
①	②	③	④		⑤					⑥	⑦

① Power

Off	Device switched off
Green, permanently*	Device operational, resp. the device is paired/claimed and LANCOM Management Cloud (LMC) is accessible
Red/green, blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Red, blinking	Hardware error
Red, blinking slowly	Time or charge limit reached/error message occurred
1x green inverse blinking*	Connection to the LMC active, pairing OK, device not claimed
2x green inverse blinking*	Pairing error, resp. LMC activation code not available
3x green inverse blinking*	LMC not accessible, resp. communication error

② Online

Off	WAN connection inactive
Green, blinking	WAN connection is established (e.g. PPP negotiation)
Green, permanently	WAN connection active
Red, permanently	WAN connection error

③ SFP

Off	SFP deactivated in the configuration or SFP module present, no connection to network device
Red, permanently	SFP is enabled in the configuration but no SFP module present
Green, permanently	SFP module present, connected to the network exists, no data transmission
Green, blinking	Data transmission
Red, blinking	SFP module present, hardware error

④ WAN

Off	Interface deactivated
Orange, blinking	Synchronization with the modem
Orange, permanently	Synchronization with the modem successful
Green, permanently	WAN connection established
Green, flickering	WAN data transmission
Red/orange, blinking	Hardware error, ext. modem

⑤ ETH1 – ETH4

Off	No link
Green, permanently	Network connection ready (link)
Green, flickering	Data transmission

⑥ VPN

Off	No VPN connection active
Green, permanently	VPN connection active
Green, blinking	Establishing VPN connection

⑦ Reset

Pressed up to 5 seconds	device restart
Pressed until first flashing up of all LEDs	configuration reset and device restart

Hardware

Power supply	12 V DC, external power adapter (110 or 230 V) with bayonet connector to secure against disconnection
Environment	Temperature range 0 – 40 °C; humidity 0 – 95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; (W x H x D) 210 x 45 x 140 mm
Fan	1 quiet fan

Interface

WAN	10 / 100 / 1000 Mbps Gigabit Ethernet
ETH	4 individual 10 / 100 / 1000-Mbps Fast Ethernet ports; operate as switch ex-factory to 3 ports can be switched as additional WAN ports.
USB	USB 2.0 Hi-Speed host port for connecting USB printers (USB print server), serial devices (COM-port servers), USB data media (FAT file system), or supported UMTS USB modems
SFP	Socket for small form-factor pluggable Gigabit-Ethernet transceiver (mini-GBIC). Compatible with optional LANCOM SFP modules for optical connections over short distances (SX) or longer distances (LX). Set as a LAN port ex-factory, can be configured as a WAN port.
Configuration interface	USB-C configuration interface

WAN protocols

Ethernet	PPPoE, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN, IP
----------	---

Package content

Cable	2x Ethernet cables, 3m (LAN: kiwi-colored connector; WAN: green connector)
Power adapter	External power supply adapter (230 V), 12 V / 5 A DC/S; barrel / bayonet (EU), LANCOM item no. 112112 (not for WW devices)

*) The additional power LED statuses are displayed in a 5-second rotation if the device is configured to be managed by the LANCOM Management Cloud.


This product contains separate open-source software components which are subject to their own licenses, in particular, the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon

request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc

LANCOM, LANCOM Systems, LCOS, LAN community, and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions. 112100/0622

Documents / Resources

	LANCOM 1800EF Site Networking Via fiber Optics and Ethernet [pdf] User Guide 1800EF, Site Networking Via fiber Optics and Ethernet, 1800EF Site Networking Via fiber Optics and Ethernet
---	---

[Manuals+](#).