



LASER 6802 Brake Fluid Boiling Point Tester User Manual

[Home](#) » [Laser](#) » LASER 6802 Brake Fluid Boiling Point Tester User Manual 

Contents

- [1 LASER 6802 Brake Fluid Boiling Point Tester](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Components](#)
- [5 Controls](#)
- [6 Instructions](#)
- [7 Test Results](#)
- [8 To Finish](#)
- [9 Precautions](#)
- [10 Guarantee](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

LASER[®]

LASER 6802 Brake Fluid Boiling Point Tester



Product Information

Specifications

- **Part No.:** 6802
- **Product Name:** Brake Fluid Boiling Point Tester
- **Manufacturer:** Laser Tools
- Compatible with all grades of brake fluid
- Digital accuracy

Components

Code	Description
A	6802 Brake Fluid Analyser
B	Battery Connectors
C	Syringe
D	PU tube (150mm)
E	Brake Fluid test container

Controls

Code	Description
1	LCD Display
2	ENTER key
3	EXIT key
4	Arrow (Select) keys
5	Tester Probe
6	Metal stand

Product Usage Instructions

Setup

1. Refer to Figure 2: pull back the metal stand (6) and set up the instrument on a flat, level, and secure workplace within reach of the vehicle battery or another suitable 12V power source.

Fluid Preparation

2. Refer to Figure 1: fit the clear polyurethane tube (D) to the syringe (C). Using the syringe, remove approximately 25ml of brake fluid from the vehicle's brake fluid reservoir, then evacuate this fluid into the supplied brake fluid test container (E). Note: recommended volume of brake fluid to be tested is 20-25ml.

Test Procedure

3. Refer to Figure 3: place the test container under the instrument and place the tester probe (5) into the brake fluid.
Note: take care with the tester probe, do not drop or knock, which may damage sensor and ceramic components.
4. Start the test by connecting the battery clips to the vehicle battery or a 12V power source. Connect the RED clip to POSITIVE and the BLACK clip to NEGATIVE (ground).
5. The instrument will switch on, and the LCD will display as shown in Figure 4A.
6. Use the arrow keys (4) to select the grade of brake fluid being tested (DOT 4, DOT5.1, etc). Refer to Figure 4B.
7. Once the correct grade has been selected, press the ENTER key (2) three times. The instrument will start the test (Figure 4C).
8. When the test is completed, the screen will display the standard Dry and Wet boiling points for the grade of brake fluid selected, as well as the results of the test in degrees Celsius and Fahrenheit (refer to Figure 5).

Test Results Interpretation

Note: Be aware that the tester probe, test container, and the fluid in the container will be very hot when the test has completed. Use appropriate heat-resistant gloves to handle.

- **Dry Boiling Point:** Refers to the temperature that brake fluid will boil at when it is new and fresh (unopened container) and no water is present in the fluid.
- **Wet Boiling Point:** Refers to the temperature that brake fluid will boil at when the fluid has 3% water by volume (real-world conditions, fluid in service). This figure is typically reached after approximately two years of service (most vehicle manufacturers recommend replacing the brake fluid in the system every two years).

The test result offers a recommendation as to the suitability of the brake fluid in the vehicle's braking system:

- **Figure 5D:** 'OK' symbol is displayed — brake fluid is within the safe range.
- **Figure 5E:** 'X' symbol is displayed — brake fluid is out of range and must be replaced immediately.
- **Figure 5F:** Warning symbol is displayed — brake fluid is going out of range — replacement is recommended.

FAQ

- **Q: What is the purpose of the Brake Fluid Boiling Point Tester?**

A: The Brake Fluid Boiling Point Tester is designed to test the boiling point of the brake fluid in the vehicle quickly and with digital accuracy.

- **Q: What grades of brake fluid does it work on?**

A: It works on all grades of brake fluid.

- **Q: How much brake fluid should be tested?**

A: The recommended volume of brake fluid to be tested is 20-25ml.

- **Q: How often should the brake fluid be replaced?**

A: Most vehicle manufacturers recommend replacing the brake fluid in the system every two years.

Brake Fluid Boiling Point Tester

Instructions

- Identifies the boiling point of any brake fluid sample.
- Powered from the vehicles own battery.
- Clear accurate digital read out.
- Sampling syringe and glass sampling container included.

www.lasertools.co.uk

Brake Fluid Analyser – Boil Test

The Laser 6802 Brake Fluid Analyser is designed to test the boiling point of the brake fluid in the vehicle very quickly and with digital accuracy. It works on all grades of brake fluid, shows clearly the temperature the brake fluid has boiled at, and recommends whether the brake fluid in the vehicle should be replaced or not.

Why test brake fluid?

Brake fluid is designed to have a high boiling point, to withstand the high temperatures generated during braking. Non-silicone-based brake fluids have one major drawback – due to its chemical composition the fluid absorbs moisture. This can be moisture from the air (via the vent hole in the master cylinder cap) or via the rubber brake hoses. As the level of moisture in the brake fluid increases, the boiling point gets lower, and the fluid cannot safely perform its vital function. This increases the risk of 'brake fade'; under heavy braking conditions, such as towing, or on steep, downhill, winding roads or stop-start braking at high speeds. Brake fade is when (with its reduced boiling point due to the increased moisture level), the brake fluid boils and turns to vapour. Then the brake pedal feels spongy, with dangerously reduced braking action, or in extreme brake fade the brake pedal goes straight to the floor with no braking action.

Components

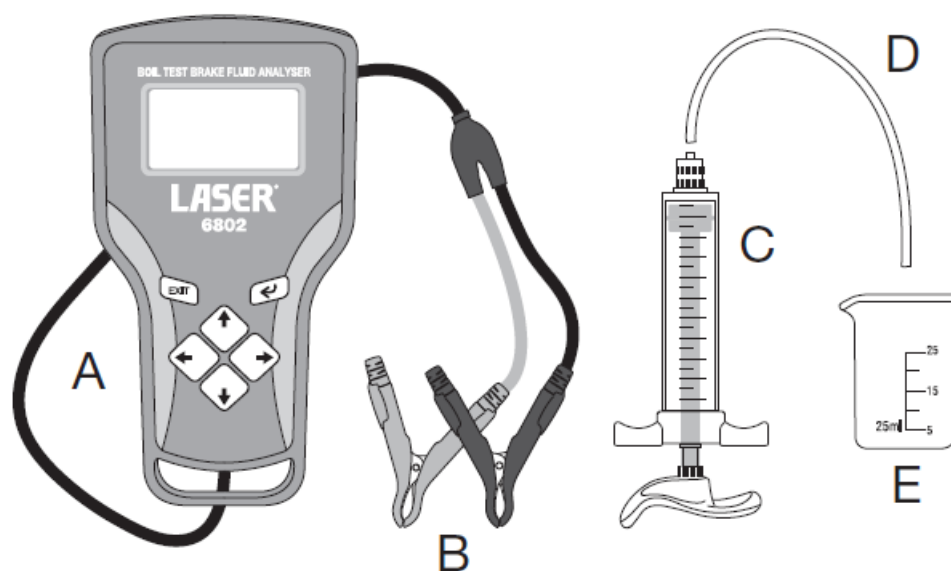


Fig 1

Code	Description
A	6802 Brake Fluid Analyser
B	Battery Connectors
C	Syringe
D	PU tube (150mm)
E	Brake Fluid test container

Controls

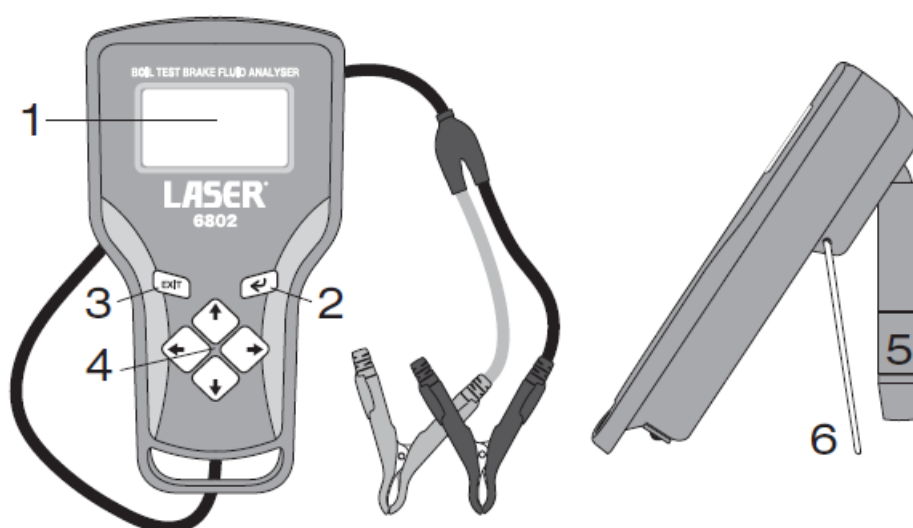


Fig 2

Code	Description
1	LCD Display
2	ENTER key
3	EXIT key
4	Arrow (Select) keys
5	Tester Probe
6	Metal stand

Instructions

1. Refer to Figure 2: pull back the metal stand (6) and set up the instrument on a flat, level and secure workplace, within reach of the vehicle battery, or another suitable 12V power source.
2. Refer to Figure 1: fit the clear polyurethane tube (D) to the syringe (C). Using the syringe, remove approximately 25ml of brake fluid from the vehicle's brake fluid reservoir, then evacuate this fluid into the supplied brake fluid test container (E). Note: recommended volume of brake fluid to be tested is 20-25ml.

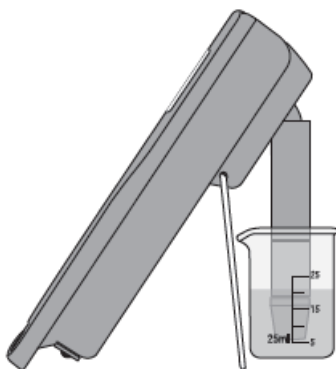


Fig 3

3. Refer to Figure 3: place test container under the instrument, and place the tester probe (5) into the brake fluid. Note: take care with the tester probe, do not drop or knock, which may damage sensor and ceramic components.
4. Start test: connect battery clips to vehicle battery or a 12V power source, RED to POSITIVE, BLACK to NEGATIVE (ground).
5. Instrument will switch on and LCD will display as Figure 4A.

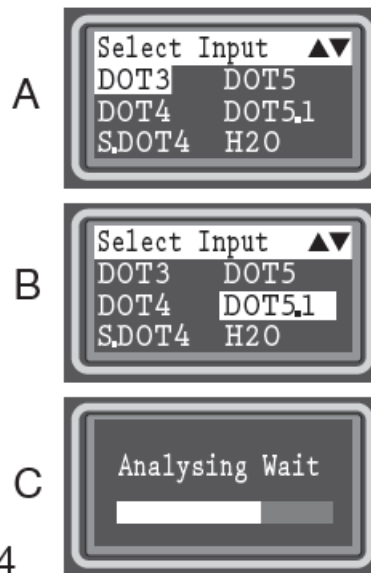


Fig 4

6. Refer to Figure 2: use arrow keys (4) to select grade of brake fluid being tested (DOT 4, DOT5.1, etc). Refer to Figure 4B.
7. When correct grade has been selected, press ENTER key (2) three times. Instrument will start test (Figure 4C).
8. When test is completed, the screen will display the standard Dry and Wet boiling points for the grade of brake fluid selected, plus the results of the test in degrees Celsius and Fahrenheit. (Refer to Figure 5.)

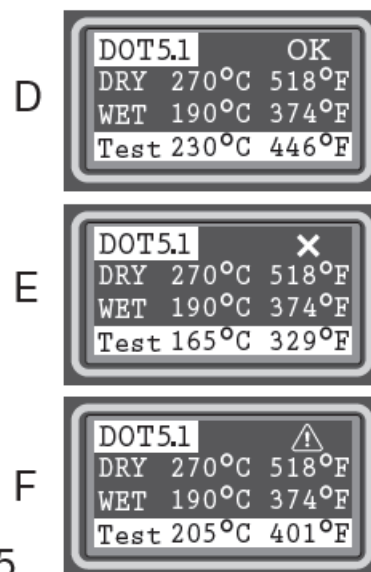


Fig 5

Test Results

- **Note:** Be aware that the tester probe, test container and the fluid in the container will be very hot when test has completed: use appropriate heat resistant gloves to handle.

Dry Boiling Point refers to the temperature that brake fluid will boil at when it is new and fresh (unopened container) and no water present in the fluid.

Wet Boiling Point refers to the temperature that brake fluid will boil at when the fluid has 3% water by volume (real world conditions, fluid in service). This figure is typically reached after approximately two years of service (most vehicle manufacturers recommend replacing the brake fluid in the system every two years).

Refer to Figure 5: The test result offers a recommendation as to the suitability of the brake fluid in the vehicle's braking system:

- **Figure 5D:** 'OK' symbol is displayed — brake fluid is within the safe range.

- **Figure 5E:** 'X' symbol is displayed — brake fluid is out of range and must be replaced immediately.
- **Figure 5F:** Warning symbol is displayed — brake fluid is going out of range — replacement is recommended.

To Finish

- When the test is completed, before packing away the instrument and accessories, carry out a (H₂O) test on clean, plain water. Clean the test container before filling with approximately 25ml of water.
- Press the EXIT key (3) to reset the instrument, then select H₂O with the arrow keys and carry out test as above.
- This will clean the corrosive brake fluid from the tester probe internals and also confirm the accuracy of the device. The result of the H₂O test should be 100°C (212°F) with a tolerance of $\pm 2\%$.
- Let the tester probe air dry before packing away.

Brake Fluid Grade	Dry Boiling Point	Wet Boiling Point
DOT3	205 °C / 401 °F	140 °C / 284 °F
DOT4	230 °C / 446 °F	155 °C / 311 °F
Super DOT4	230 °C / 446 °F	155 °C / 311 °F
DOT5	260 °C / 500 °F	180 °C / 356 °F
DOT5.1	270 °C / 518 °F	190 °C / 374 °F

Measurement Range: 0°C (32°F) to 330°C (572°F)

Precautions

- Wear hand and eye protection when working with brake fluid.
- Do not conduct a boil test if there is less than 20-25ml of brake fluid or water in the test container.
- Be aware that the tester probe, test container and the fluid in the container will be very hot when test has completed: use appropriate heat resistant gloves to handle.
- Do not return the tested brake fluid to the vehicle's brake fluid reservoir; the boil test changes the structure of the fluid and it must be disposed of after the test.
- Dispose of used brake fluid according to local authority guidelines.
- Testing a single sample of brake fluid more than once will yield different results as the structure of the fluid and the moisture level changes. The first result is the only accurate result and reflects the condition of the brake fluid in the vehicle's braking system.
- Never mix poly-glycol based brake fluids (DOT3, DOT4, SuperDOT4 and DOT5.1) with a silicone-based brake fluid (DOT5).
- When the test is completed, before packing away the instrument and accessories, carry out a (H₂O) test on clean, plain water (refer to instructions above).
- Keep instrument and accessories clean and dry, and pack carefully in supplied case.
- Take care with the tester probe, do not drop or knock, which may damage sensor and ceramic components. Take particular care when inserting into packing case.



- Our products are designed to be used correctly and with care for the purpose for which they are intended. No liability is accepted by the Tool Connection for incorrect use of any of our products, and the Tool Connection cannot be held responsible for any damage to personnel, property or equipment when using the tools. Incorrect use will also invalidate the warranty.
- If applicable, the applications database and any instructional information provided has been designed to offer general guidance for a particular tool's use and while all attention is given to the accuracy of the data no project should be attempted without referring first to the manufacturer's technical documentation (workshop or instruction manual) or the use of a recognised authority such as Autodata.
- It is our policy to continually improve our products and thus we reserve the right to alter specifications and components without prior notice. It is the responsibility of the user to ensure the suitability of the tools and information prior to their use.



Safety First. Be Protected.



www.lasertools.co.uk

Guarantee

- If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.


Distributed by

The Tool Connection Ltd 11240) 92681500 at 928 8158380R info@toolconnection.co.uk

www.toolconnection.co.uk

www.lasertools.co.uk

Documents / Resources

 <p>LASER Brake Fluid Boiling Point Tester Instructions</p> <p>Part No. 6802</p> <ul style="list-style-type: none">• Identifies the boiling point of any brake fluid sample.• Provides fast, accurate test results.• Clear, accurate digital readout.• Durable, rugged and easy to use. <p>www.laserhvac.co.uk</p>	<p>LASER 6802 Brake Fluid Boiling Point Tester [pdf] User Manual</p> <p>6802 Brake Fluid Boiling Point Tester, 6802, Brake Fluid Boiling Point Tester, Fluid Boiling Point Tester, Boiling Point Tester, Point Tester, Tester</p>
---	---

References

- [LASER Tools | Premier Automotive Hand Tools designed to make easy work of difficult and awkward jobs.](#)
- [User Manual](#)