

## LCD wiki MSP4030 4.0inch Capacitive SPI Module User Manual


[Home](#) » [LCD wiki](#) » LCD wiki MSP4030 4.0inch Capacitive SPI Module User Manual 

# LCDWIKI

### Contents

- [1 MSP4030 4.0inch Capacitive SPI Module](#)
- [2 Introduction to Testing Platform](#)
- [3 Pin connection instructions](#)
- [4 Demo Function Description](#)
- [5 Demo Usage Instructions](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

### MSP4030 4.0inch Capacitive SPI Module

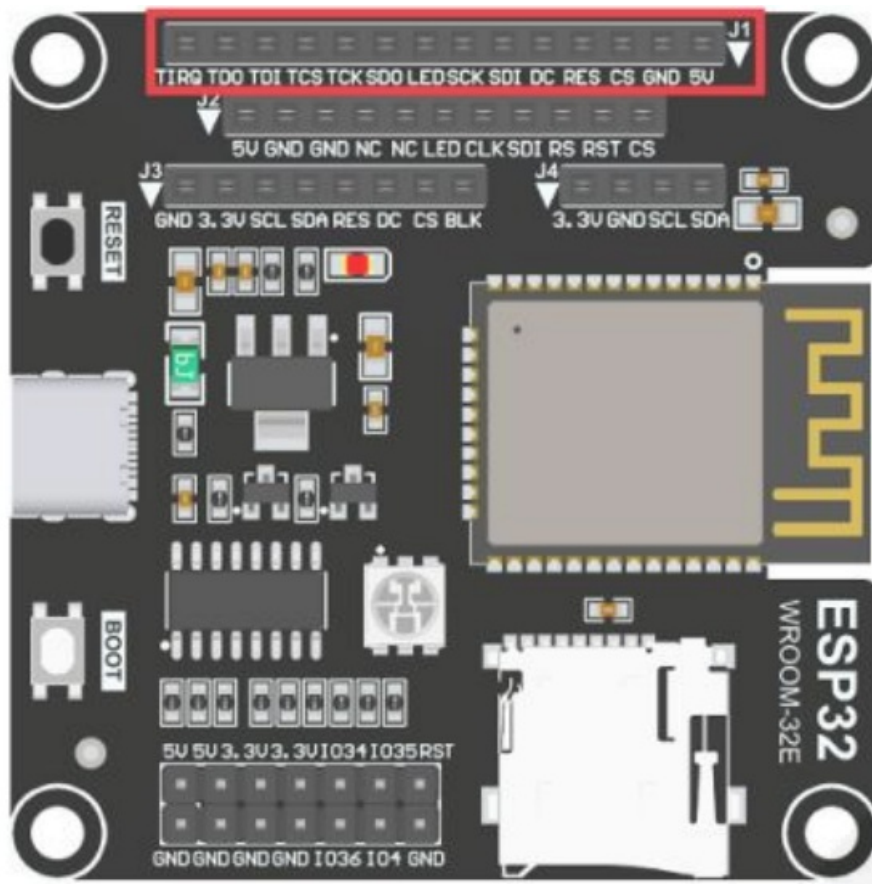

**MSP4030\_MSP4031**  
**ESP32 Demo Instructions**  
**CR2023-MI4035**

## Introduction to Testing Platform

Development Board : ESP32-WROOM-32E devKit  
 MCU : ESP32-32E module  
 Frequency : 240MHz

## Pin connection instructions

The module can be directly plugged into the ESP32-32E development board, as shown in the following figure:

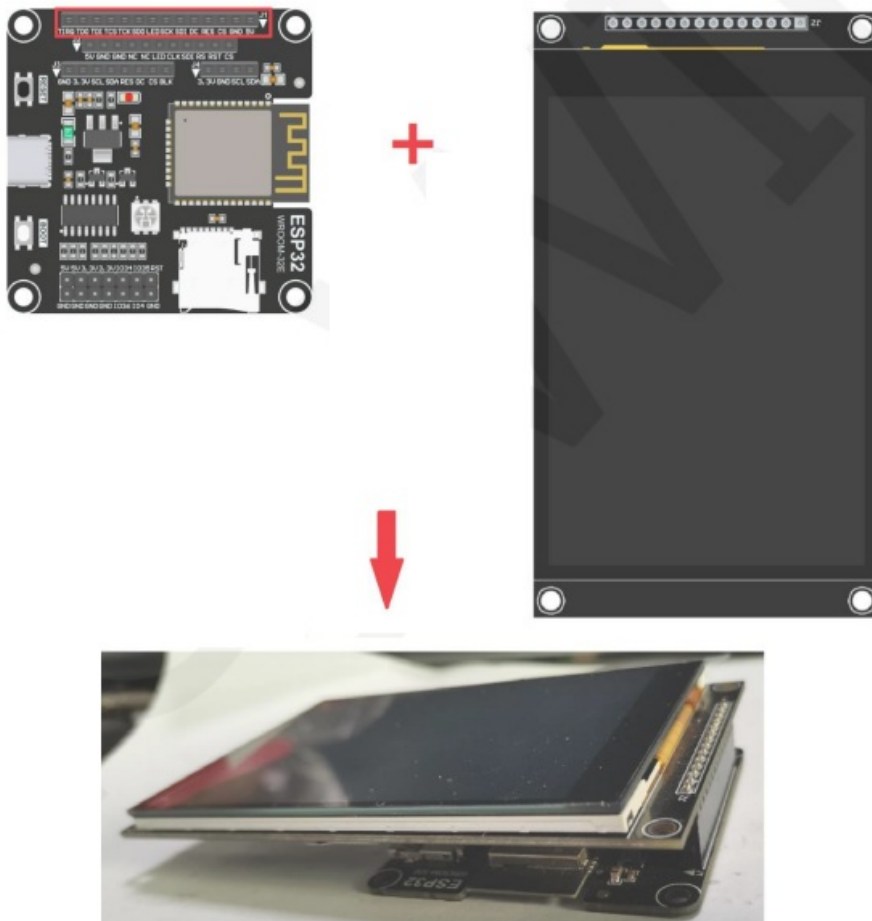


Figure 1: Module Inline ESP 32-32E Development Board

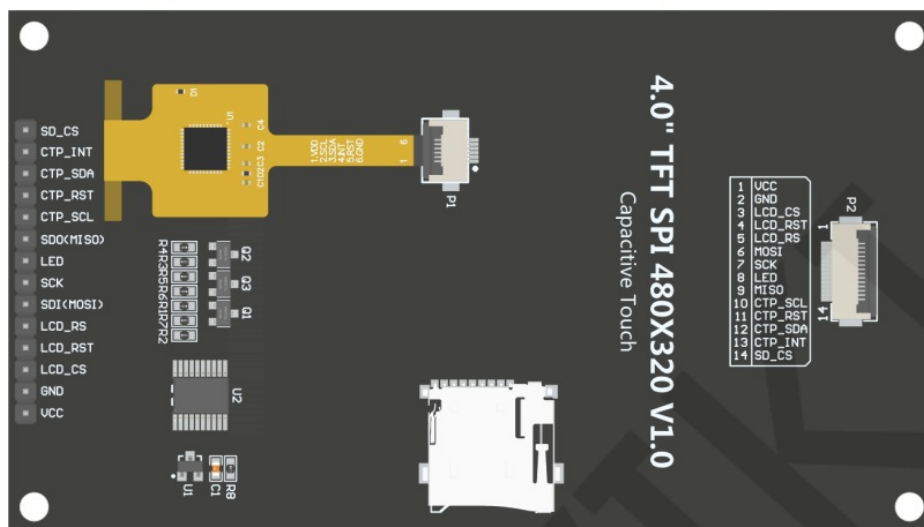


Figure 2 Module Back Pins


## ESP32-32E Test Program Pin Direct Insertion Instructions

Number	Module pins	Corresponding ESP32-32E development board wiring pins	Remarks
1	VCC	5V	LCD power positive
2	GND	GND	LCD Power ground
0	LCD CS	1015	LCD selection control signal, Low level active
1	LCD RST	1027	LCD reset control signal, Low level reset
	LCD RS	102	LCD command / data selection control signal High level: data, low level: command
	SDI(MOSI)	1013	SPI bus write data signal(SD card and LCD screen used together)
	SCK	1014	SPI bus clock signal(SD card and LCD screen used together)
	LED	1021	LCD backlight control signal (If you need control, please connect the pins. If you don't need control, you can skip it)
()	SDO(MISO)	1012	SPI bus read data signal (SD card and LCD screen used together)

10	CTP-SCL	1025	Capacitive touch screen IIC bus clock signal (modules without touch screens do not need to be connected)
11	CTP RST	1033	Capacitor touch screen reset control signal, low-level reset (modules without touch screens do not need to be connected)
12	CTP_SDA	1032	Capacitive touch screen IIC bus data signal (modules without touch screens do not need to be connected)
13	CTP_INT	1039	Capacitor touch screen IIC bus touch interrupt signal, when generating touch, input low level to the main control (modules without touch screens do not need to be connected)
14	SD_CS	1022	SD card selection control signal, low level active (without SD card function, can be disconnected)

## Demo Function Description

This sample program uses the ESP32 hardware HSPI bus, which is located in Demo\_MSP4030\_MSP4031\_ESP32-WROOM-32E\_HSPI directory, as shown in the following figure:

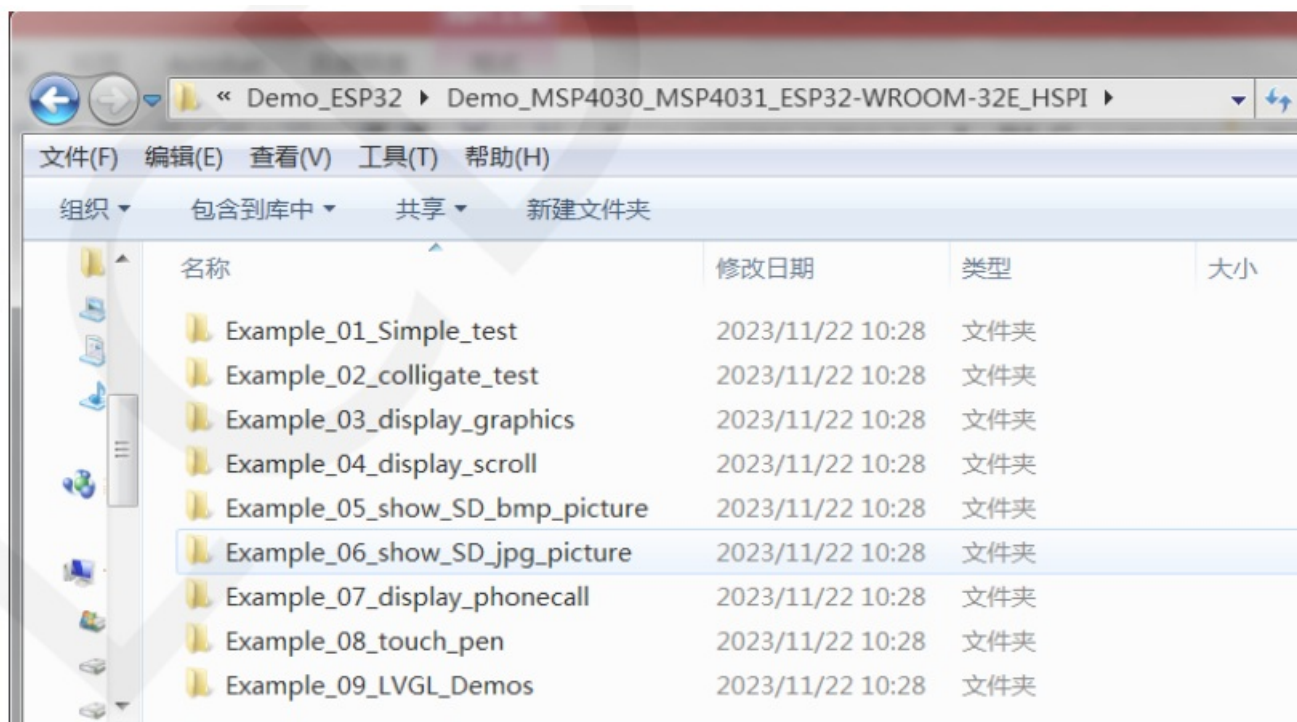

### Description of sample program content

- A. Example\_01\_Simple\_Test is a screen brushing test program, which does not rely on any software library;
- B. Example\_02\_colligate\_Test is a comprehensive testing program that displays graphics, lines, and counts program runtime;
- C. Example\_03\_display\_Graphics is a graphic display testing program that displays various graphics;
- D. Example\_04\_display\_Scroll is a scrolling test program that displays text scrolling;
- E. Example\_05\_show\_SD\_bmp\_Picture is a BMP image display program that displays BMP format images within SD;
- F. Example\_06\_show\_SD\_jpg\_Picture is a JPG image display program that displays images in jpg format within SD;
- G. Example\_07\_display\_Phonecall is a touch testing program for telephone dialing, which simulates the dialing function through touch;
- H. Example\_08\_touch\_Pen is a touch stroke test program that draws on the LCD screen through touch;
- K. Example\_09\_LVGL\_Demos is an LVGL example display program that allows you to experience the powerful UI design features of LVGL. The bin file for this example has been extracted and can be directly burned using the corresponding tool.


## Demo Usage Instructions

### Building Development Environment

For specific methods of building a development environment, please refer to the "Arduino\_development\_environment\_construction\_for-ESP32-EN" document in this directory.

### Installing software library

After the development environment is set up, the software library used by the sample program needs to be copied to the project library directory so that the sample program can be called. The software library is located in the Install libraries directory, as shown in the following figure:

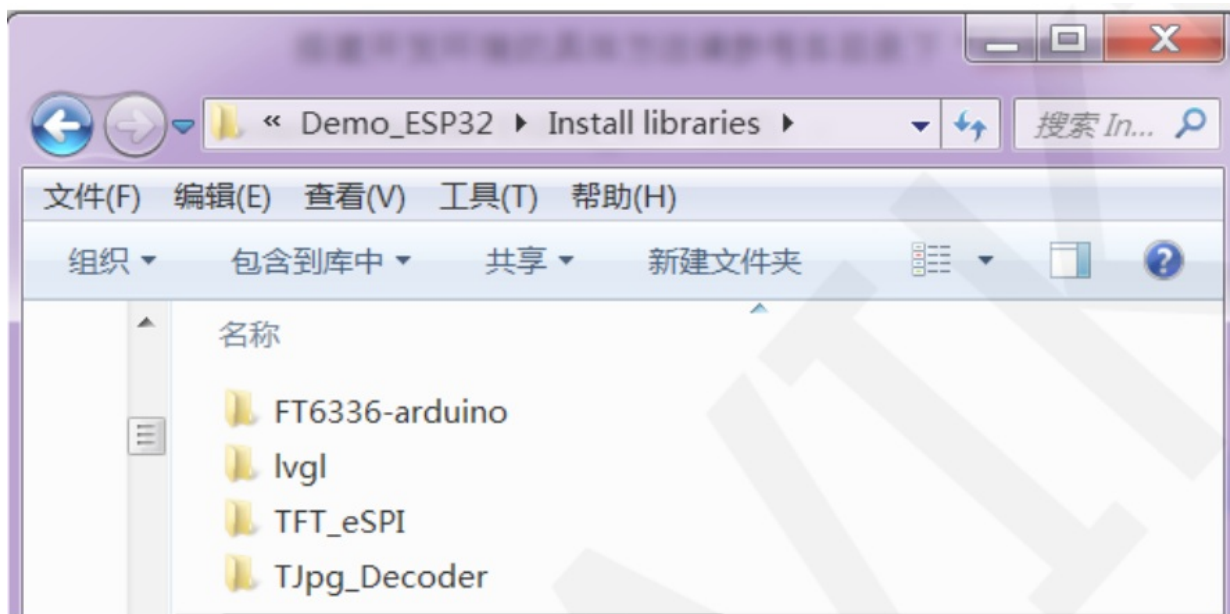

### Among them:

FT6336 arduino is the driver of FT6336 capacitive touch IC


LVgl is LVGL GUI graphics software library

TFT\_ ESPI is an Arduino graphics library for TFT-LCD LCD screens, supporting multiple platforms and LCD driver ICs

TJpg\_ Decoder is a JPG format image decoding library for the Arduino platform

These software library have been configured and can be directly copied to the project library directory for use. The default path for the engineering library directory is C:\Users\Administrator\Documents\Arduino\libraries.

You can also change the project library directory: open the Arduino IDE software, click File ->Preferences, and reset the Sketchbook location in the pop-up interface, as shown in the following figure:

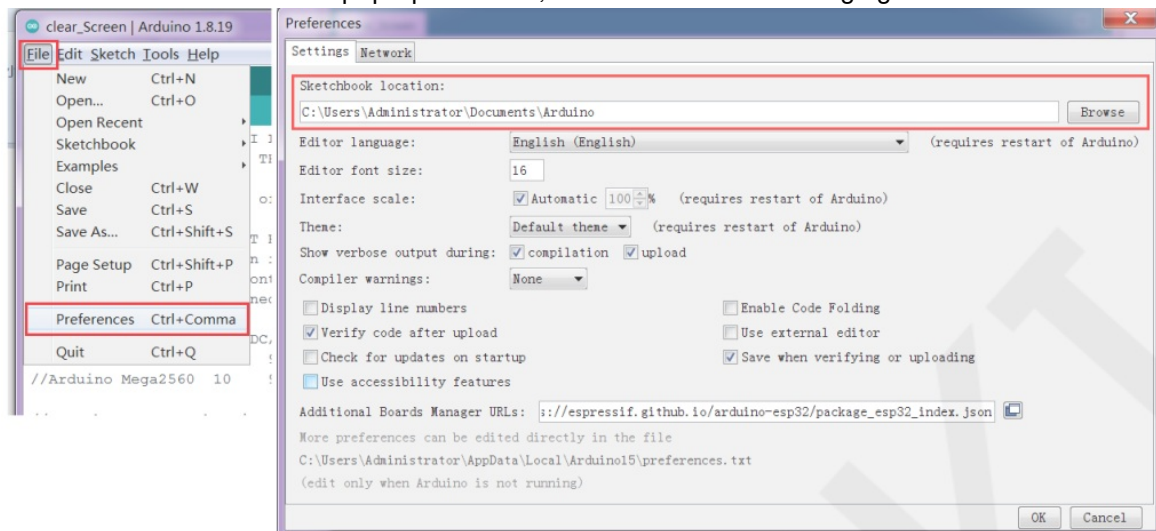

If you do not want to use the already configured library, you can download the latest version of the library (excluding FT6336 arduino) from Github at the following download address and then configured:


lvgl: <https://github.com/lvgl/lvgl/tree/release/v8.3> (Only V8. x version can be used, V9. x version cannot be used)

TFT\_eSPI: [https://github.com/Bodmer/TFT\\_eSPI](https://github.com/Bodmer/TFT_eSPI)


TJpg\_Decoder: [https://github.com/Bodmer/TJpg\\_Decoder](https://github.com/Bodmer/TJpg_Decoder)

After the library download is completed, unzip it (for easy differentiation, rename the unzipped library folder, as shown in the Install libraries directory), and then copy it to the engineering library directory. Next, proceed with library configuration. The files that need to be replaced are located in the Replaced files directory, as shown in the following figure:




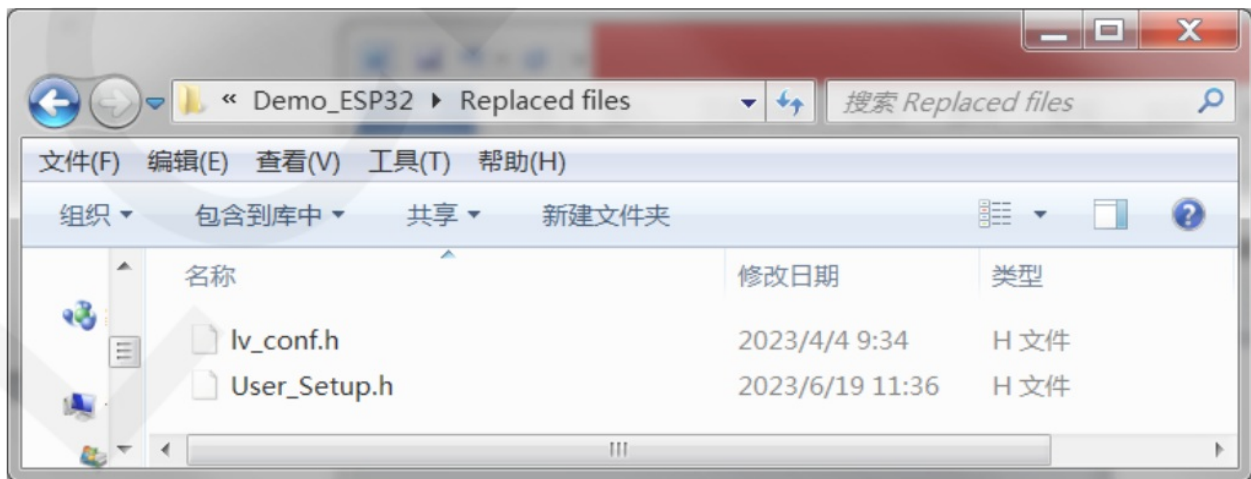

LVGL library configuration: Copy the lv\_conf.h file which is in the Replace files directory to the top-level directory of the lvgl library in the engineering library directory,As shown in the following figure:

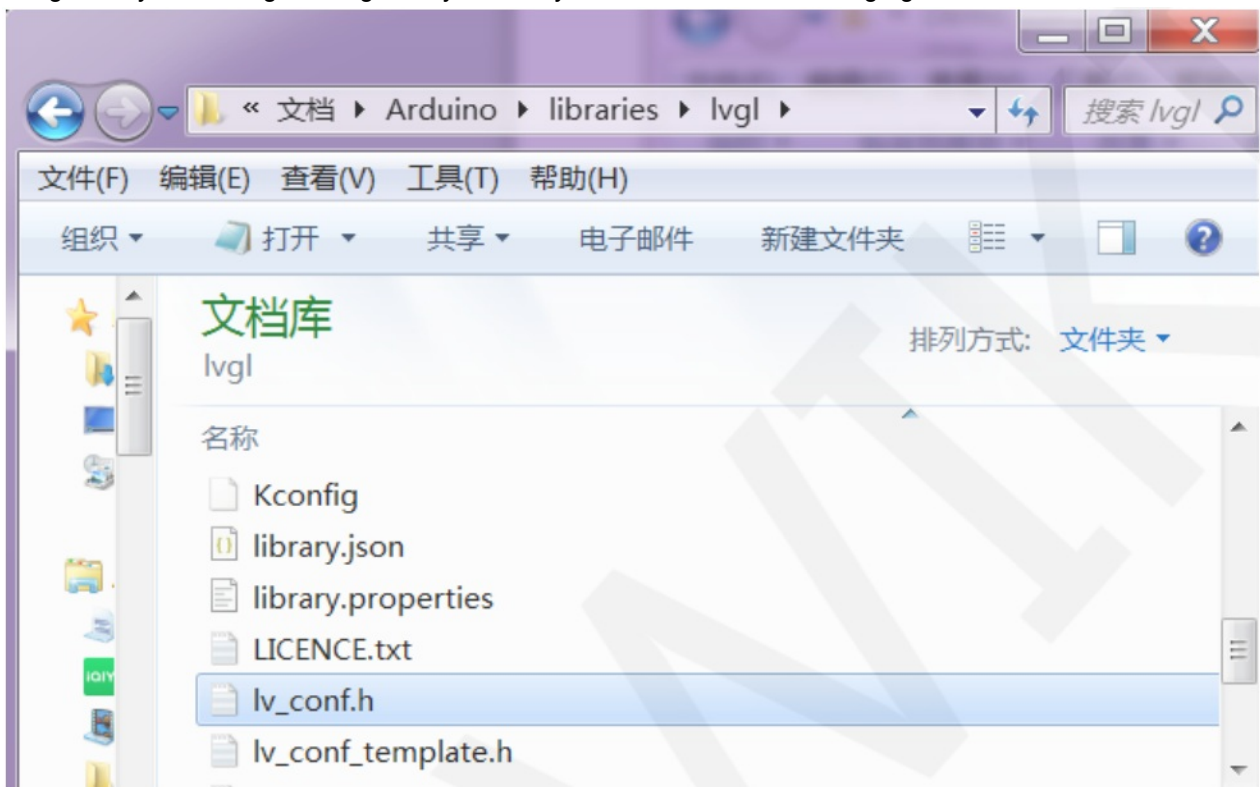

Open the lv\_conf\_internal.h file which is in the Lvgl library src directory under the engineering library directory,As shown in the following figure:

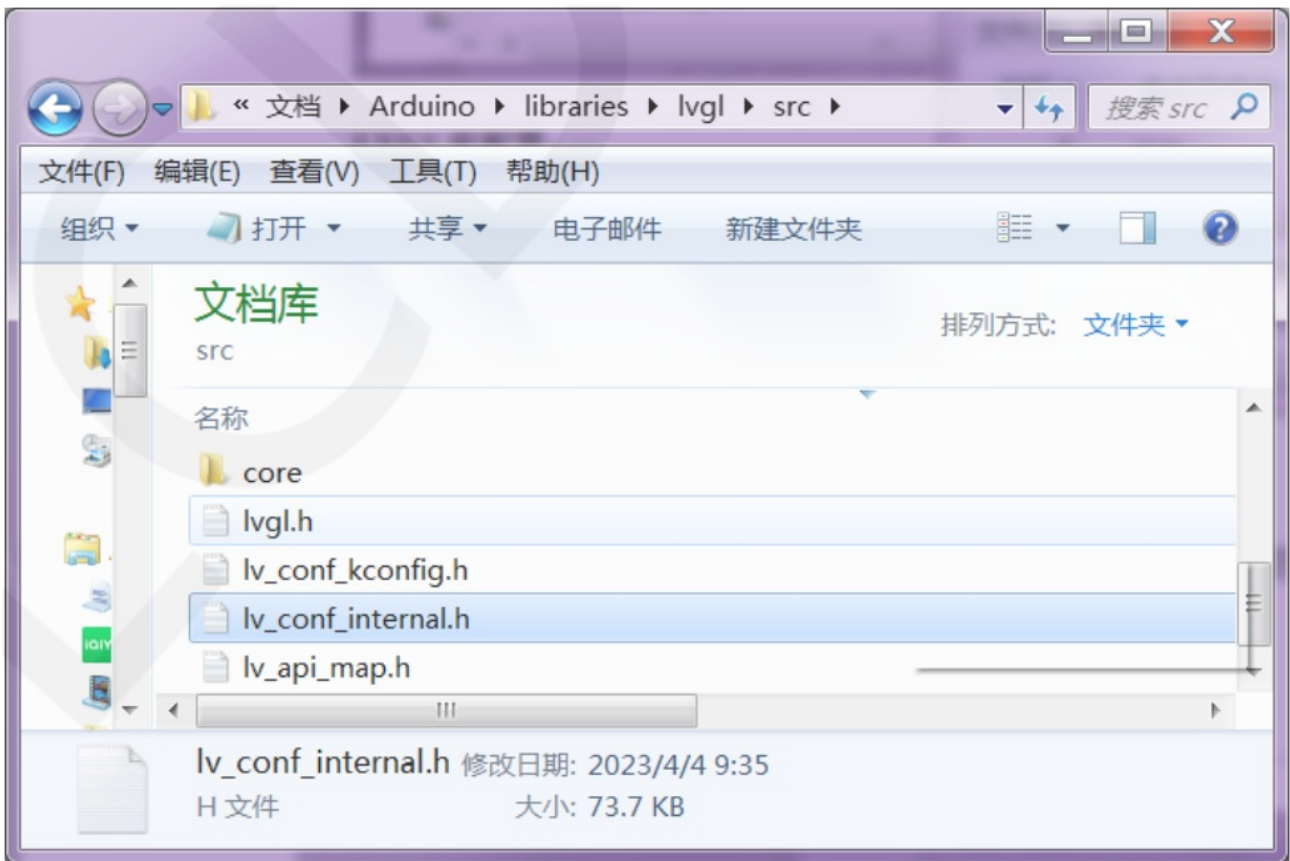

After opening the file, modify the content of line 41 as shown in the following figure (from “../lv\_conf.h” to “./lv\_conf.h”), and save after the modifications are completed.


```

/*If lv_conf.h is not skipped include it*/
#ifndef LV_CONF_SKIP
    #ifndef LV_CONF_PATH
        /*If there is a path defined for lv_conf.h */
        #define __LV_TO_STR_AUX(x) #x
        #define __LV_TO_STR(x) __LV_TO_STR_AUX(x)
        #include __LV_TO_STR(LV_CONF_PATH)
        #undef __LV_TO_STR_AUX
        #undef __LV_TO_STR
    #elif defined(LV_CONF_INCLUDE_SIMPLE)
        /*Or simply include lv_conf.h is enabled*/
        #include "lv_conf.h"
    #else
        #include "../lv_conf.h"
    #endif
    #if !defined(LV_CONF_H) && !defined(LV_CONF_SUPPRESS_DEFINE_CHECK)
        /* #include will sometimes silently fail when __has_include is used */
        /* https://gcc.gnu.org/bugzilla/show_bug.cgi?id=80753 */
        #pragma message("Possible failure to include lv_conf.h, please read the comment in the file")
    #endif
#endif


```

Copy the examples and demos directories under the engineering library directory to the src directory under the lvgl library. These two directories are shown in the following figure in the lvgl library:



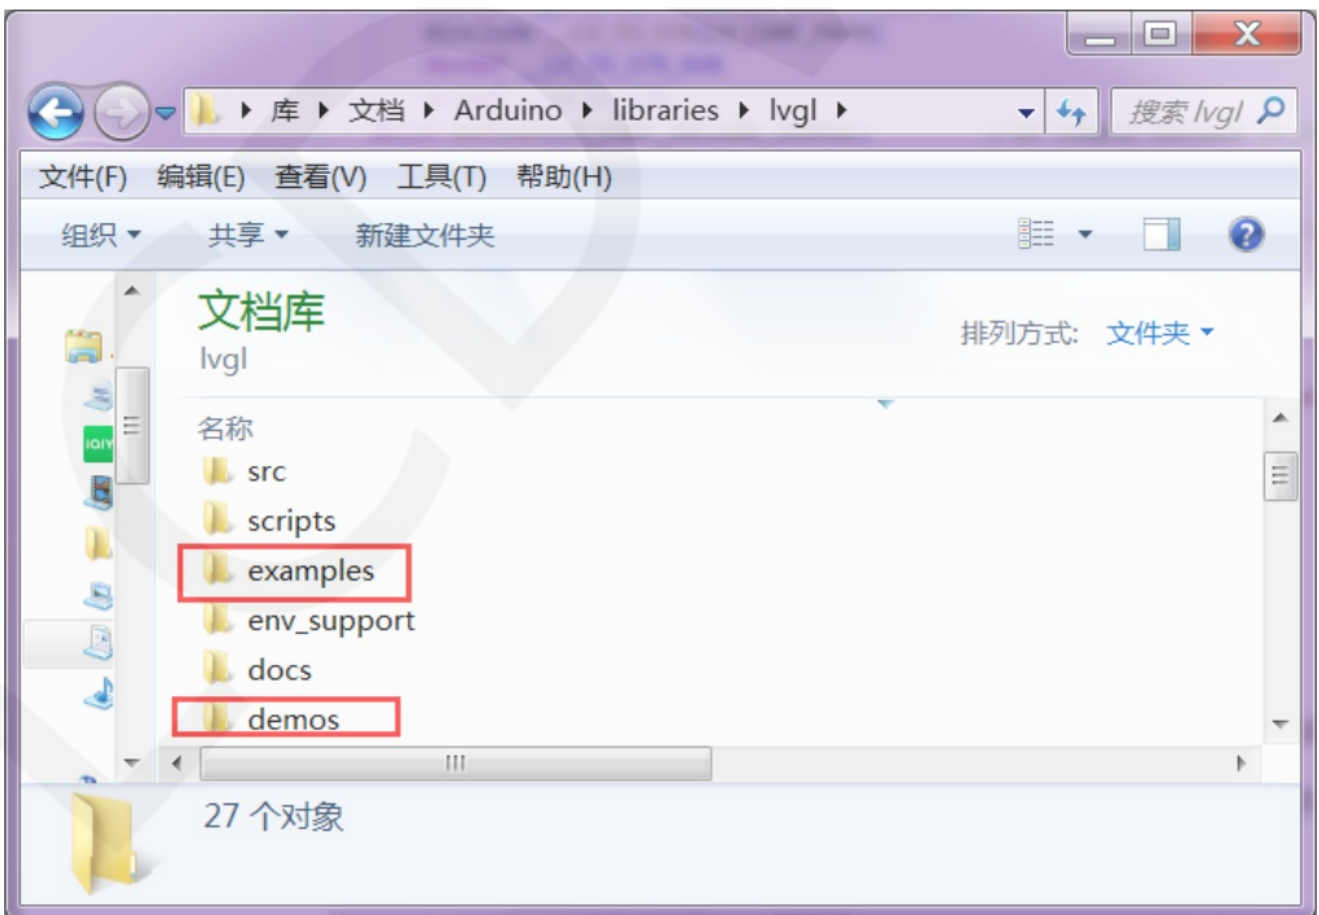

The directory status after copying:

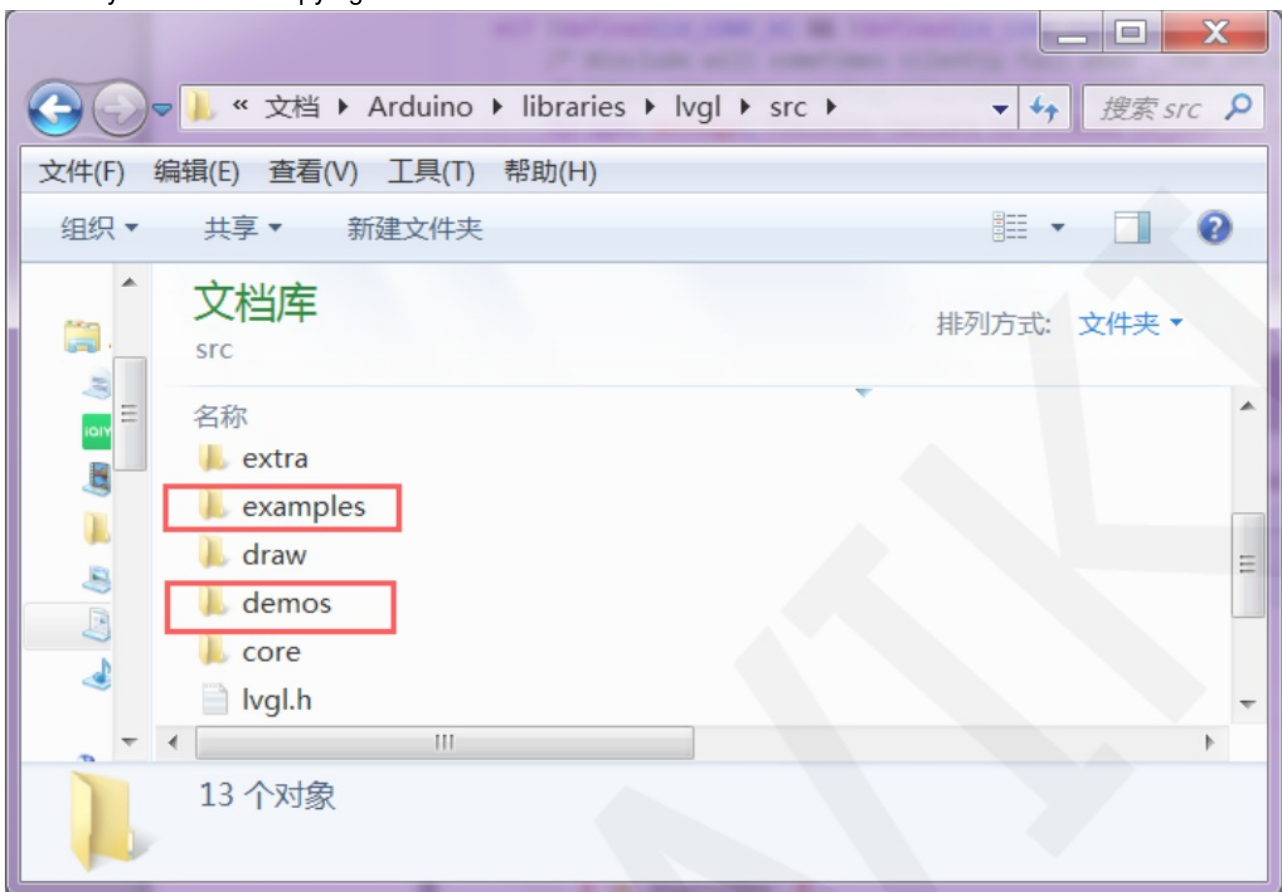

#### TFT\_ESPI library configuration:

First rename the User\_Setup.h file which is in the top-level directory of the TFT\_eSPI library of the engineering library directory to User\_Setup\_bak.h, then copy the User\_Setup.h file which is in the Replaced files directory to the top-level directory of the TFT\_eSPI library, As shown in the following figure:




### Compile and Run Programs

After the library installation is completed, the sample program can be compiled and run as follows:


- A. Plug the display module directly into the ESP32 development board, and connect the development board to a PC to power on;
- B. Open Any sample program in the Demo\_MSP4030\_MSP4031\_ESP32-WROOM-32E\_HSPI directory, as shown in the following figure (using the colligate test test program as an example):




- C. After opening the sample program, select the ESP32 device, as shown in the following figure:

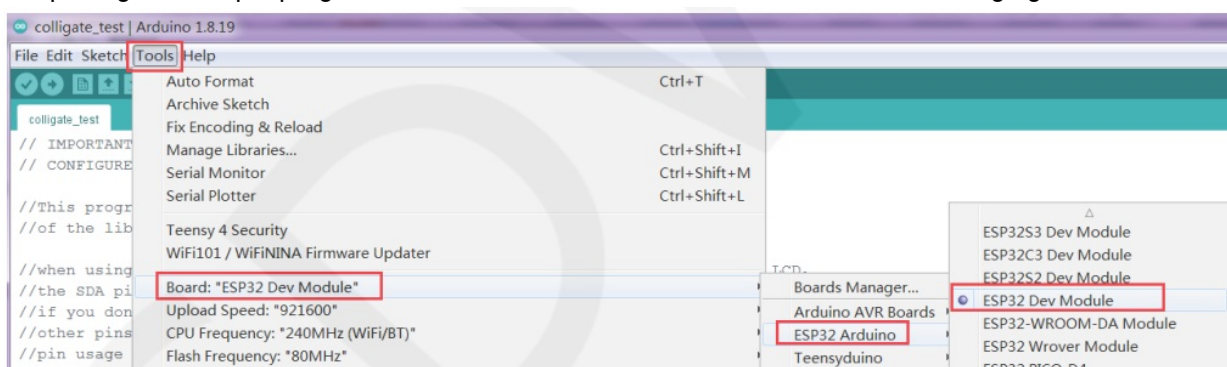

- D. Configure ESP32 Flash, PSRAM, ports, etc. as shown in the following figure:

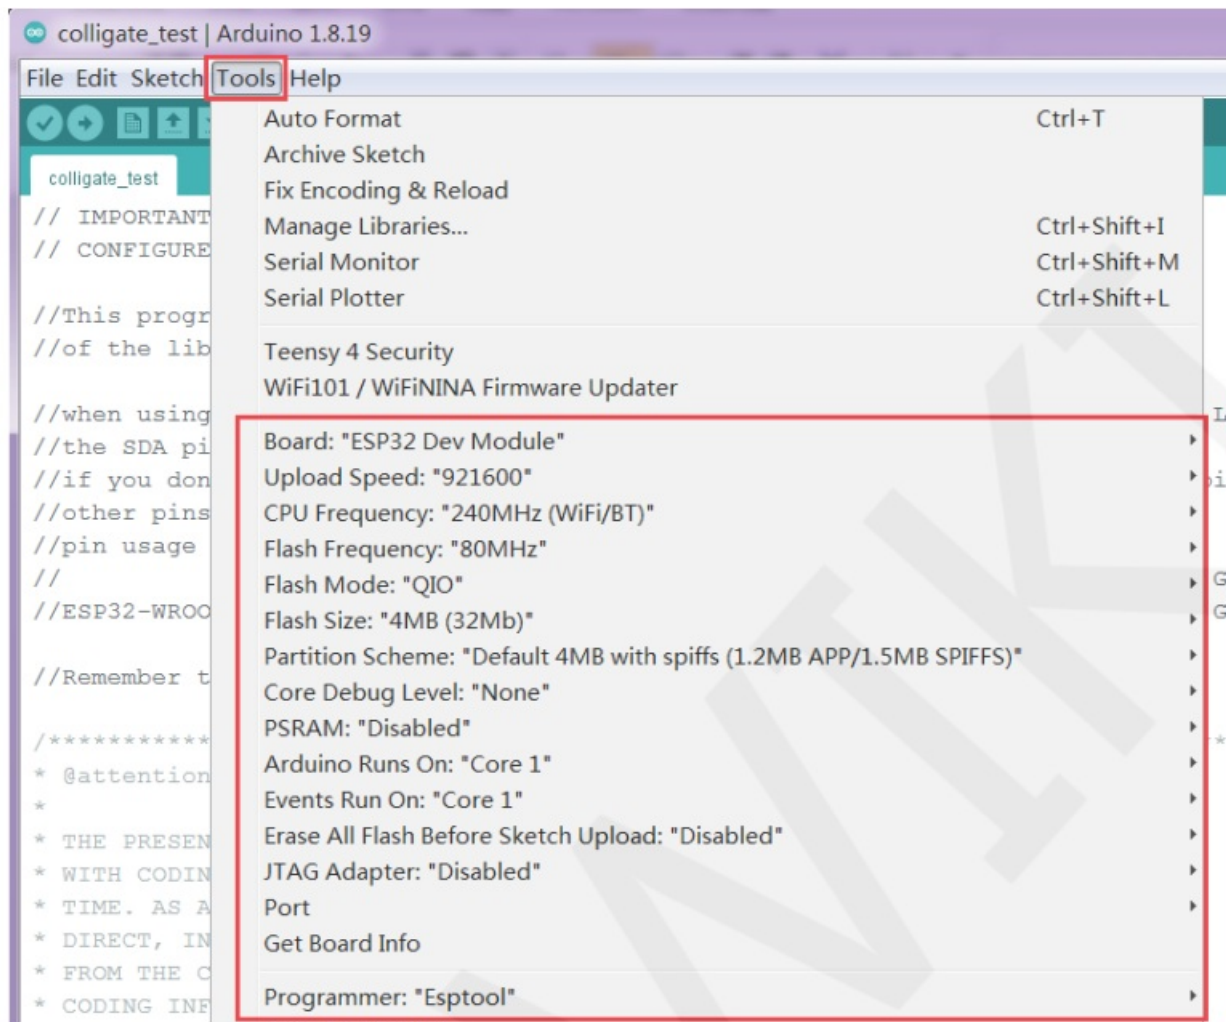


E. Click the upload button to compile and download the program, as shown in the following figure:

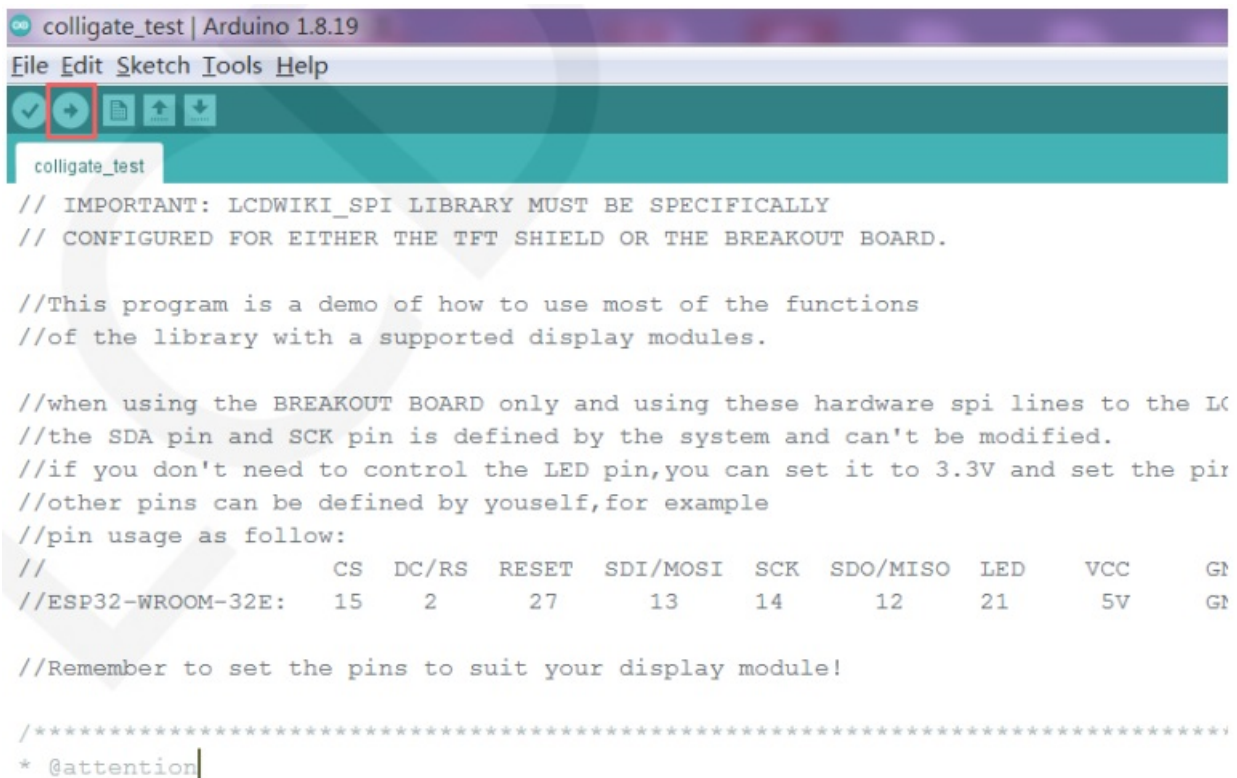

F. If the following prompt appears, it indicates that the program has been compiled and downloaded successfully, and has already been run:




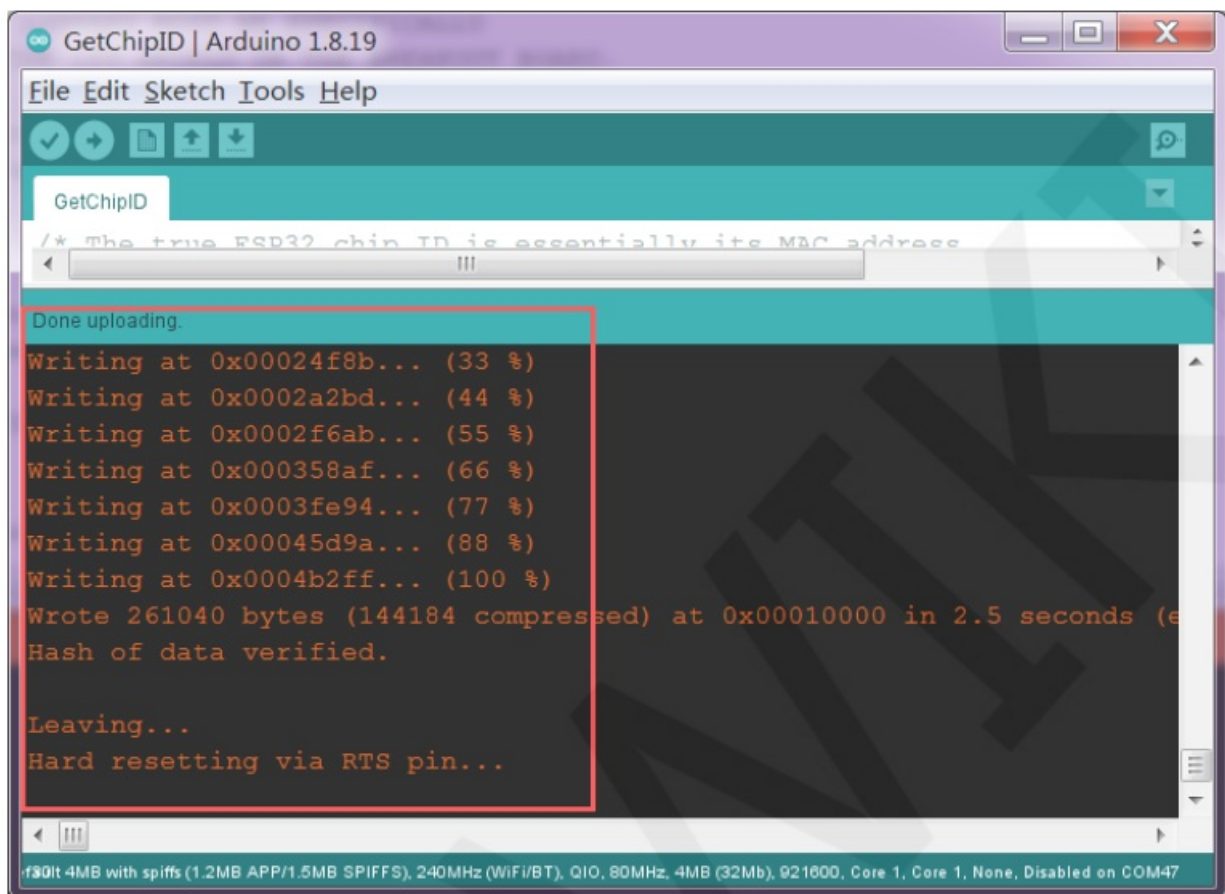


G. If the display module displays content, it indicates that the program has run successfully.

#### LVGL example bin file burning

Due to the long compilation time of the LVGL sample program, the compiled bin file has been extracted and can be directly burned using the flash download tool. Bin file located in Demo\_ESP32Flash\_Download\_LVGL\_Demosbin directory, as shown in the following figure:

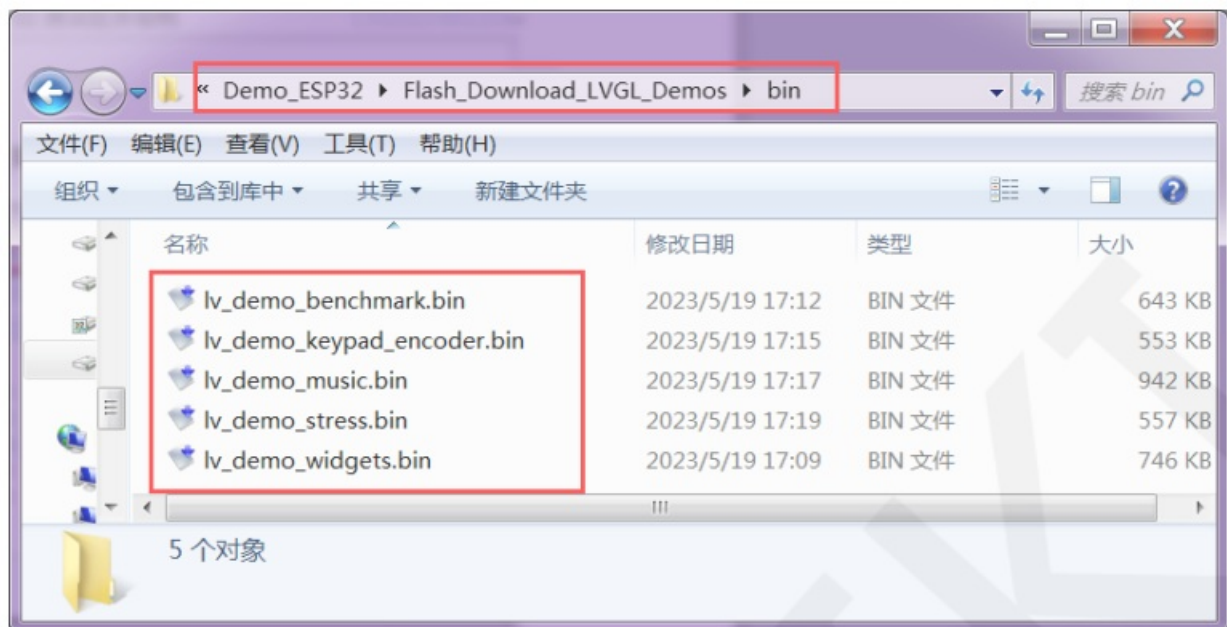


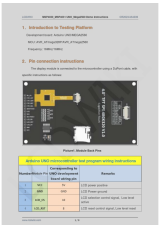

Using the flash\_download\_tool can burn in the Demo\_ESP32Flash\_Download\_LVGL\_Demos directory, as shown in the following figure:

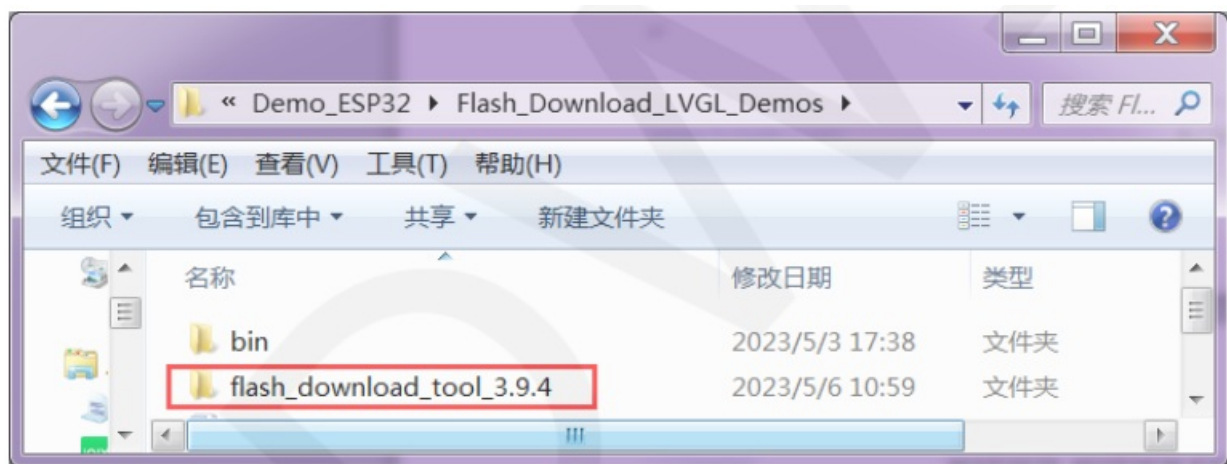

# LCDWIKI

[www.lcdwiki.com](http://www.lcdwiki.com)

## Documents / Resources

	<p><a href="#">LCD wiki MSP4030 4.0inch Capacitive SPI Module</a> [pdf] User Manual MSP4030 4.0inch Capacitive SPI Module, MSP4030, 4.0inch Capacitive SPI Module, Capacitive SPI Module, SPI Module, Module</p>
	<p><a href="#">LCD wiki MSP4030 4.0inch Capacitive SPI Module</a> [pdf] User Manual MSP4030 4.0inch Capacitive SPI Module, MSP4030, 4.0inch Capacitive SPI Module, Capacitive SPI Module, SPI Module, Module</p>
	<p><a href="#">LCD wiki MSP4030 4.0inch Capacitive SPI Module</a> [pdf] User Manual MSP4030 4.0inch Capacitive SPI Module, MSP4030, 4.0inch Capacitive SPI Module, Capacitive SPI Module, SPI Module, Module</p>

## References

- [User Manual](#)