


^v Lightwave
LP92 Smart Switch



Lightwave LP92 Smart Switch Instruction Manual

[Home](#) » [Lightwave](#) » Lightwave LP92 Smart Switch Instruction Manual 

Contents

- 1 [Lightwave LP92 Smart Switch](#)
- 2 [Product Specifications:](#)
- 3 [Product Usage Instructions](#)
- 4 [Frequently Asked Questions \(FAQ\)](#)
- 5 [Preparation](#)
- 6 [Specification](#)
- 7 [EU Declaration of Conformity](#)
- 8 [Installing the Smart Switch & Linking](#)
- 9 [Linking the Smart Switch & other functions](#)
- 10 [ABOUT COMPNAY](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)

^v Lightwave

Lightwave LP92 Smart Switch



Product Specifications:

- **RF frequency:** 868 MHz
- **Input rating:** 230V~ 50Hz
- **Output rating:** 3 W (16A)
- **Standby energy use:** Less than 1W
- **Warranty:** 2 year standard warranty
- **Switching:** 3680W (16A) or Volts free contacts
- **Situation:** Indoor use only

Product Usage Instructions

Installation:

If you plan to install the Smart Switch yourself, follow the electrical wiring instructions provided in the manual carefully. If you are unsure, consult a qualified electrician to ensure safe installation.

Requirements:

- A safe place to situate the Switch
- Suitable electrical screwdrivers
- Mains electricity
- Your Link Plus and smartphone for remote control

Applications:

The Smart Switch can manually or remotely switch loads of up to 3 W via the Lightwave App. It features a built-in temperature sensor for automatic operation based on temperature changes.

Loading:

Ensure the load does not exceed 3 W (16A) to prevent damage to the device.

Location:

The Smart Switch is designed for indoor use only. For optimal performance, place it away from direct heat sources.

Buttons:

- **Linking button:** Located on the side of the device for linking purposes
- **Boost button:** Programmable button for custom functions via the Lightwave App
- **Main button:** Press to switch the circuit

Help & Support:

For additional guidance and installation videos, visit the support section on www.lightwaverf.com.

Disposal:

When disposing of old electrical appliances, do not mix them with residual waste. Use communal collecting points for proper disposal.

Frequently Asked Questions (FAQ)

- **Can the Smart Switch be used with high-power inductive loads?**

No, high-power inductive loads can potentially damage the device and are not recommended for use with the Smart Switch.





- **What should I do if I need help with installation?**

Visit www.lightwaverf.com for additional guidance and installation videos to assist you through the process.

Preparation

Installation

- If you plan to install this product yourself, please follow the electrical wiring instructions carefully to ensure the product is installed safely, if in any doubt please consult a qualified electrician.
- It is important to install this product by these instructions. Failure to do so may risk personal safety, create a fire hazard, violate the law, and will also void your warranty. LightwaveRF Technology Ltd will not be held responsible for any loss or damage resulting from not correctly following the instruction manual.
- **IMPORTANT:** Any electrical installation must comply with Building Regulations, BS 7671 (IET Wiring Regulations) or local equivalent.
- **IMPORTANT:** If conducting an insulation resistance test, any hard-wired Lightwave devices must be disconnected from the mains, or damage to the unit may occur.
- **IMPORTANT:** High-power inductive loads can potentially damage the device and are not recommended.
- You will need

	A safe place in which to situate the Switch
	Suitable electrical screwdrivers
	Knowledge of how to safely turn off/on mains electricity
	Your Link Plus and smartphone

Applications

- The Smart Switch is designed to switch a load of up to 3 W (max) manually at the switch or remotely using the Lightwave App.
- The Switch has a built-in temperature sensor. This allows it to operate automatically based on changes in local temperature and is ideal for use as a room thermostat operating electric (panel) heaters. It can also be used to remotely operate a gas boiler and AC units.


Loading

The max load should not exceed 3

Location

- The Smart Switch is a Class II device that does not require a separate housing. It should only be installed and used indoors.
- If the Smart Switch is to be utilized as a thermostat, for optimum temperature monitoring the Internal Temperature Sensor (located behind the grille on the right side of the Switch) should not be positioned adjacent to a direct heat source.
- If the Switch is used to control a panel heater, it should ideally be positioned either below or adjacent to the bottom corner of the panel heater at a distance greater than 150mm (6"). Where it is not possible to isolate the Switch from direct heat sources, it can be operated in conjunction with a separate thermostat.

Overview

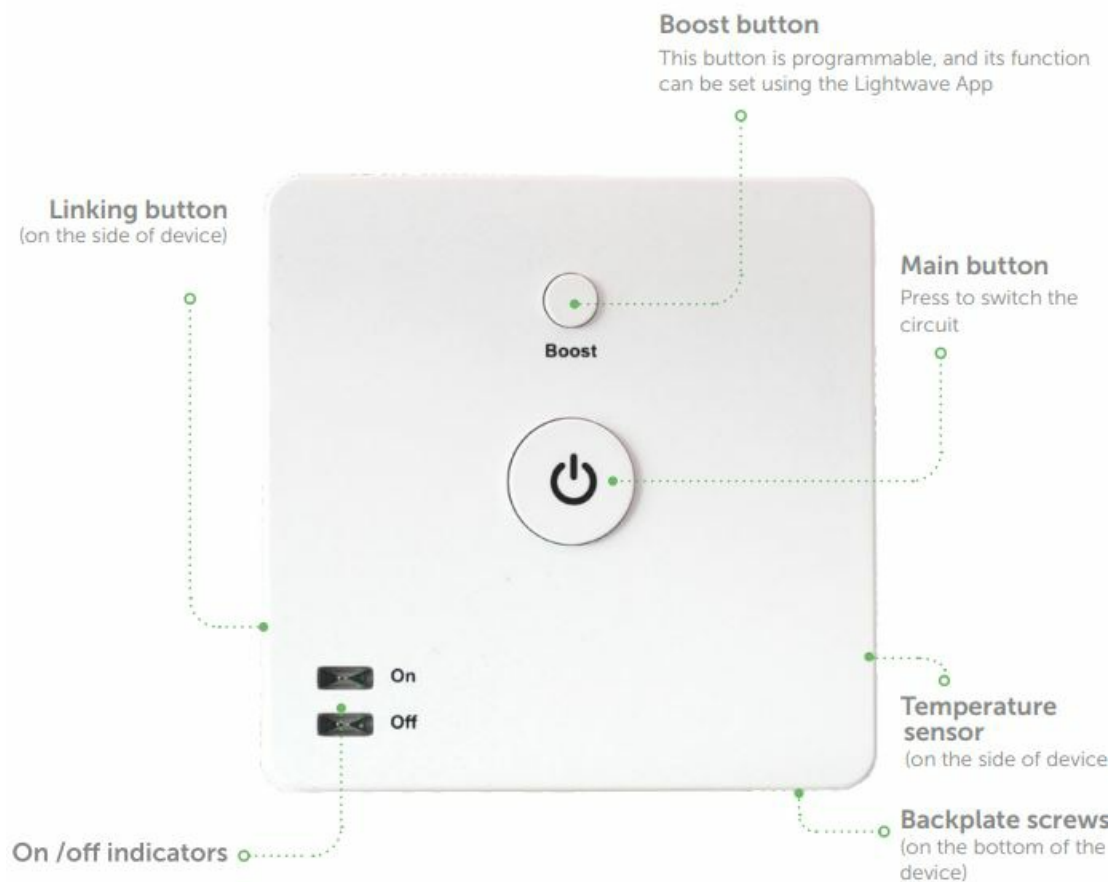

Specification

- **RF frequency:** 868 MHz
- **Input rating:** 230V~ 50Hz
- **Terminals:** Max 2.5mm² wires
- **Output rating:** 3680W (16A)
- **Standby energy use:** Less than 1W
- **Switching:** 3680W (16A) or Volts free contacts
- **Situation:** Indoor use only
- **Warranty:** 2 year standard warranty

Help video & further guidance

For additional guidance, and to watch a video that will help guide you through the installation process, please visit the support section on www.lightwaverf.com.

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible for bringing the appliances to these collection points or to similar collection points. With this little personal effort, you contribute to recycling valuable raw materials and the treatment of toxic substances.

EU Declaration of Conformity

Product: Smart Switch
Model/Type: LP92
Manufacturer: LightwaveRF
Address: Unit 1a Coppice Lane, Aldridge, Walsall,
WS9 9AA

This declaration is issued under the sole responsibility of LightwaveRF. The object of the declaration described above is in conformity with the relevant union harmonisation legislation.

Directive 2011/65/EU ROHS,
Directive 2014/53/EU: (The Radio Equipment Directive)
Conformity is shown by compliance with the applicable requirements of the following documents:

Reference and date:
EN 60669-1:1999+A1:2002+A2:2008,
EN 60669-2-1:2004+A1:2009+A12:2010,
EN 55015:2013/A1:2015,
EN 61547:2009, EN 61000-3-2:2014, EN 61000-3-3:2013, EN 50663:2017,
EN 62479:2010, EN 301 489-1 V2.2.3 (2019-11),
EN 300 220-2 V3.2.1 (2018-06), EN 300 220-1 V3.1.1 (2017-02), EN 300 220-2 V3.1.1 (2017-02)

Signed for and on behalf of:
Place of Issue: Birmingham
Date of Issue: 5th August 2024
Name: John Shermer
Position: CTO



Installing the Smart Switch & Linking

- Carefully follow the instructions in this section to install the Smart Switch. Please remember that mains electricity is dangerous. Do not take any risks. For other advice, please contact our dedicated technical support team at www.lightwaverf.com.

- The easiest way to learn how to install the Lightwave Smart Switch is to watch our short installation video which is accessible at www.lightwaverf.com/product-manuals

Turn off the electricity supply

Turn off the mains power supply to your existing power circuit at the consumer unit.

Remove the Backplate and clamp

Remove the backplate by un-tightening the screws located at the bottom edge of the cover and carefully unhooking from the main unit.

Wire the Switch


Carefully wire the Socket as shown in the diagrams. Be aware that existing cables can vary in colour and may not always be correctly labeled. If in any doubt, always consult a qualified electrician.

Replace the Clamp and backplate


Screw in the cable clamp to secure the cables, and replace the backplate by hooking it onto the top edge of the Switch and clipping in the bottom. Tighten the screws at the bottom to secure the plate.

Linking

To be able to command the Smart Switch, you will need to link it to the Link Plus.

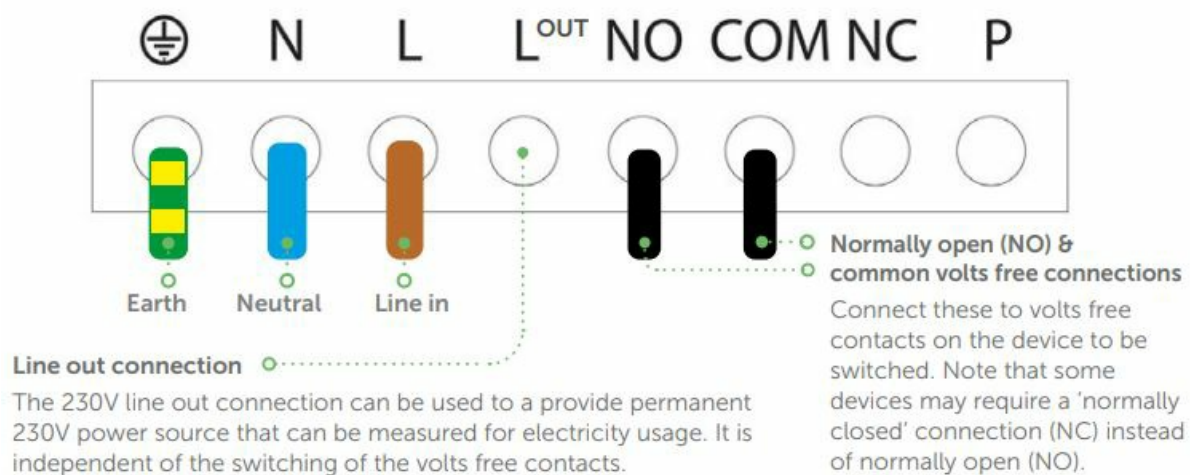

Circuit diagram 2: switching a load in-line

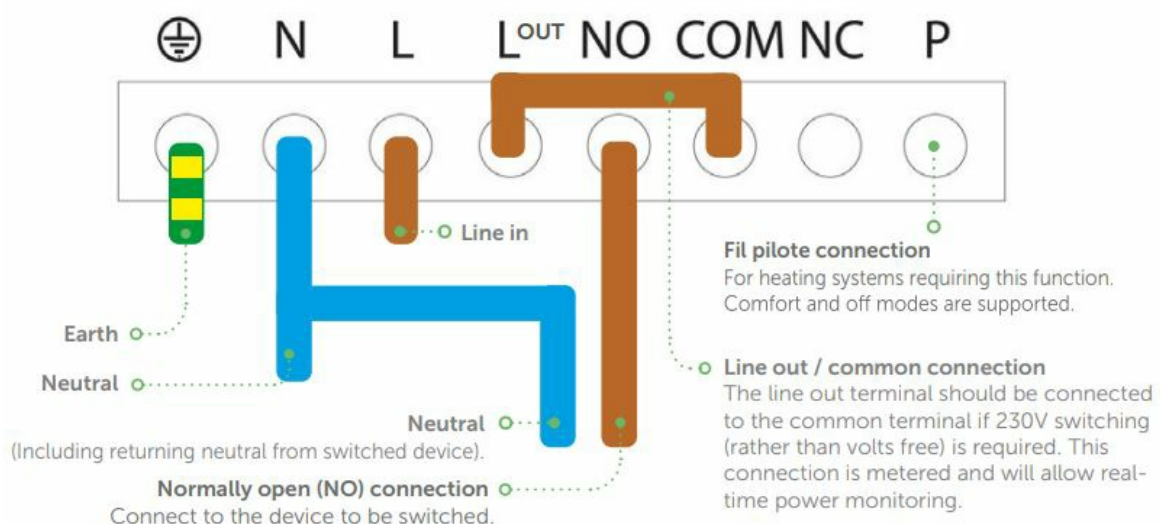

Linking the Smart Switch & other functions

Firmware updates

Firmware updates are over-the-air software improvements that keep your device up to date as well as providing new features. Updates can be approved from the App before being implemented, and generally take 2-5 minutes. The LED will flash cyan in colour during an update. Please do not interrupt the process during this time.

Error reporting

Permanently slow flashing red LEDs indicate that a software or hardware error has been encountered. Press the main button to reset the device. If the error lights persist, please contact Lightwave support via www.lightwaverf.com/support.









Energy Monitoring

Similar to Lightwave Smart Sockets, the Smart Switch can monitor the energy usage of electrical devices that are connected to each independent circuit. The data for each circuit is then displayed in the Lightwave App.

Locking the Relay

The Smart Switch can be 'locked' using the App so that the manual buttons will not operate any of the circuits. A locked switch is signified by a slow flashing magenta LED. To lock / unlock the Switch, press the 'lock' button on the Smartphone App. Clearing the memory will remove the lock.

LED indicator light summary

Off LED (only) red: Circuit off	
On LED (only) blue: In manual mode circuit is on, in controller mode the controller is active	
On LED (only) pulsating blue: In controller mode circuit is active	
On & off LED flashing magenta: device locked	
On & off LED flashing blue & red: device in linking mode	
On & off LED flashing red: memory full	
On & Off LED slow flashing red: Error	
On & Off LED flashing cyan: firmware update in progress (do not interrupt)	

ABOUT COMPNAY

- support@lightwaverf.com
- www.lightwaverf.com
- +44 (0)121 250 3625

Documents / Resources



[Lightwave LP92 Smart Switch](#) [pdf] Instruction Manual
LP92 Smart Switch, LP92, Smart Switch, Switch

References

- ^ [Lightwave - Intelligent Living, Beautiful Design.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.