



Lumens RM-TT Array Microphone User Guide

Home » Lumens RM-TT Array Microphone User Guide 🖺

Contents

- 1 Lumens RM-TT Array Microphone
- 2 Set up Yamaha RM-TT array microphone
- 3 Download RMDeviceFinder
- 4 Find Device IP by RMDeviceFinder
- **5 Login in Yamaha RM-TT Webpage**
- 6 CamConnect Pro (Al-Box1) Settings
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



Lumens RM-TT Array Microphone



Specifications

• Product Name: Yamaha RM-TT Array Microphone

• Power Source: POE switch

• Network Connectivity: Requires connection to the same network

as CamConnect Pro

• Audio Trigger Level: 50dB

Product Usage Instructions

1. Powering On:

Use a POE switch to power on the Yamaha RM-TT array microphone.

1. Network Setup:

Ensure that the RM-TT is on the same network as the CamConnect Pro. Use RMDeviceFinder to find the IP address of the RM-TT.

1. Logging In:

Enter the RM-TT IP address into a browser. Input the password in the login window and click the [LOGIN] button.

1. Check Connection:

Confirm the LED status to ensure the RM-TT is connected.

1. CamConnect Pro Settings:

- Go to Array Microphone Numbers and select the number for RM-TT.
- Choose [Yamaha RM-TT] from the Device options.
- Enter the IP address of the RM-TT.
- Set Audio Trigger Level to 50dB.
- Switch the [Connect] button to connect with Yamaha RM-TT.

FAQ

Q: How do I power on the Yamaha RM-TT microphone?

A: Use a POE switch to power on the device.

YAMAHA RM-TT Setting Guide

Yamaha RM-TT

tabletop array microphone setting

Set up Yamaha RM-TT array microphone



- Use POE switch to power on RM-TT.
- RM-TT with CamConnect Pro need in the same network


Download RMDeviceFinder

Download Link:


https://info.uc.yamaha.com/rm-device-finder

***YAMAHA** Windows 10 (32bit/64bit) / Windows 11 Compatible Models • RM-OG RM-CRCTI RM-TT RM-WAP-8 "I) rear port only Important Notice • If the [ETHERNET SWITCH SETTINGS] is set to [Separated] mode (default) and you want to set an RM-CR Dante terminal and corporate terminal to the same IP segment, connect both terminals to the same network switch. If you connect them to different network switches, "RM Device Finder" and "ProVisionaire Control" will not be able to detect the device. Main Revisions and Enhancements The RM-TT and RM-WAP-8 can now be detected and the Web GUI can be displayed. Added a firmware update function (compatible with the RM-CR, RM-CG, RM-TT, and VXL1-16P). Licensing Agreement & Download ■ Lagree to the licensing terms outlined below.* DOWNLOAD

Find Device IP by RMDeviceFinder

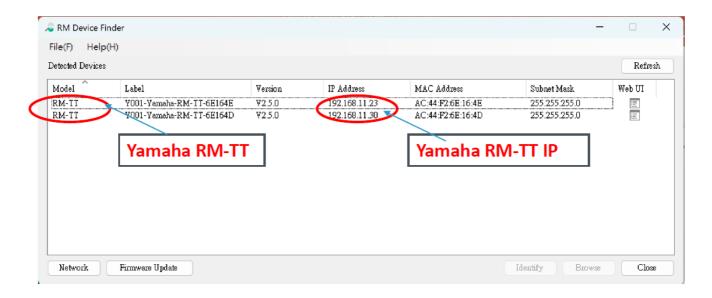

Login in Yamaha RM-TT Webpage

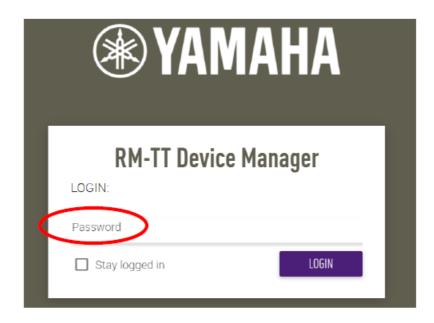


- Enter RM-TT IP address into browser.
- Type the password into the login window, and then click the [LOGIN] button.

Check RM-TT connect

· Confrim the LED status.

Home


View status of system

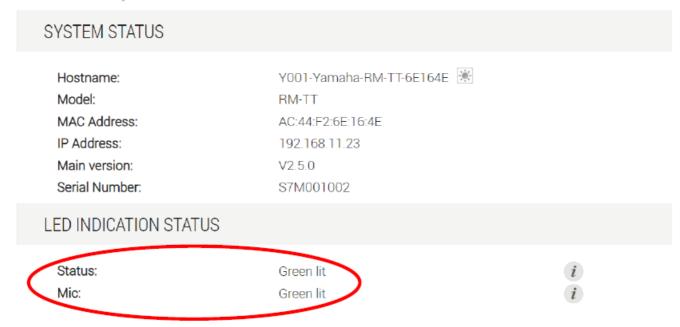

CamConnect Pro (Al-Box1) Settings

Microphone Status & Support Device & Settings


1. Go to Array Microphone Numbers, select the number for RM-TT.

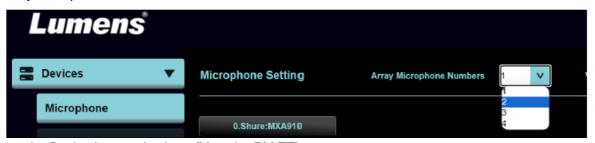

2. Pull down the Device item and selects [Yamaha RM-TT]



- 3. Enter the IP address of Yamaha RM-TT
- 4. Set Audio Trigger Level to 50dB
- 5. Switch the [Connect] button to connect with Yamaha RM-TT

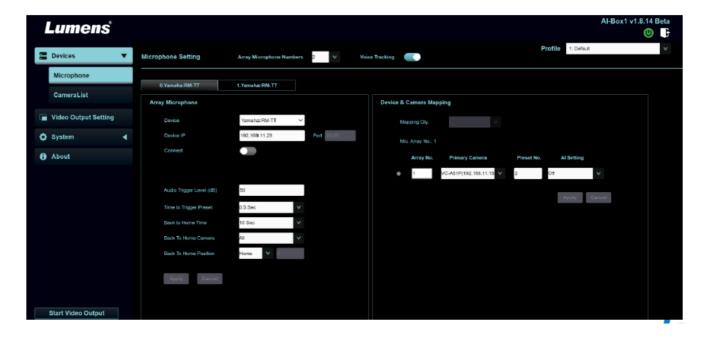

Thank You!



MyLumens.com

Contact Lumens

Documents / Resources



<u>Lumens RM-TT Array Microphone</u> [pdf] User Guide RM-TT, Al-Box1, RM-TT Array Microphone, RM-TT, Array Microphone, Microphone

References

- O Lumens Pro AV Technology | Lumens
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.