


Biometric Enabled Deadbolt with Keypad



**Important**  
Use the QR code below for the most up to date instructions:

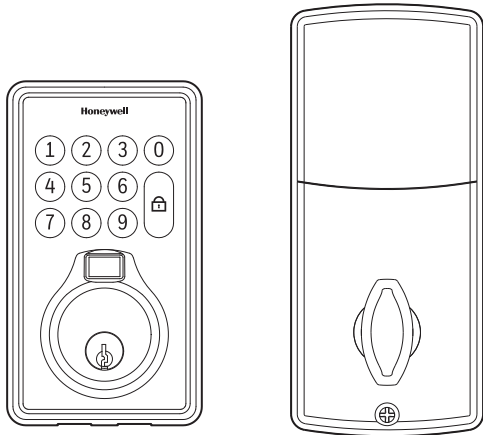


**Tools Needed for Lock Installation:**

- #2 Phillips Screwdriver




Read this manual carefully before installing and operating!  
Models 8733501 8635100

① Installation Overview

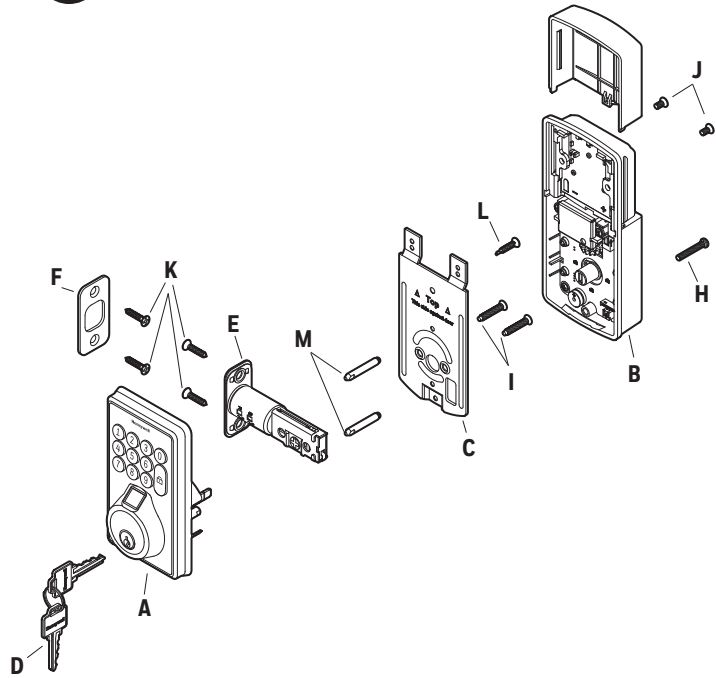

Package Includes:


- |                       |                    |                        |
|-----------------------|--------------------|------------------------|
| 1 - Exterior Assembly | 1 - Strike Plate   | 2 - 5/16" Screws       |
| 1 - Interior Assembly | 1 - Mounting Plate | 2 - 1" Screws          |
| 1 - User Guide        | 1 - Latch          | 4 - 3/4" Screws        |
| 2 - Keys              | 1 - 1 3/8" Screw   | 2 - Mounting Posts     |
|                       |                    | 1 - Optional Set Screw |

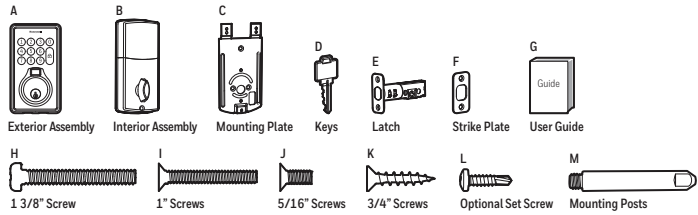


Please carefully check the above list to confirm all items have been received. If any items are missing, please contact Consumer Assistance. (See reverse page for contact information)

Read this manual carefully before installing and operating!

② Install Enclosed Latch and Strike Plate

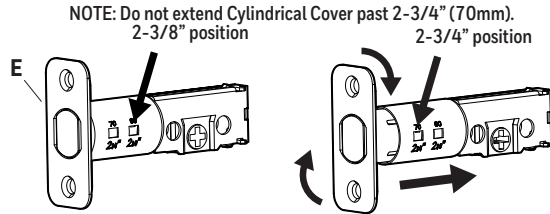


- TO CONVERT FROM 2-3/8" (60mm) BACKSET TO 2-3/4" (70mm) BACKSET:
1. Hold latch with numbers facing forward and thumb pressing on the bolt.
  2. Rotate the cylinder cover clockwise.
  3. Pull and twist the extension plate all the way out.
  4. Rotate the cylinder counter clockwise so that the marking aligns with the 2-3/4" position indicator.

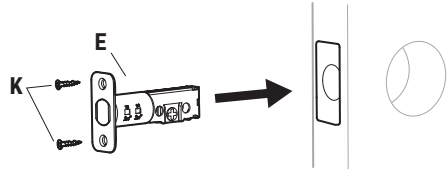


Preparation for Interior Assembly


Remove (J) Screw from inside the battery compartment within the (B) Housing to release the Mounting Plate (C).

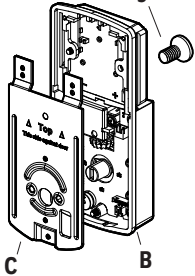

If Mounting Posts (M) are not pre-installed, screw Mounting Posts (M) into holes on Mounting Plate (C).

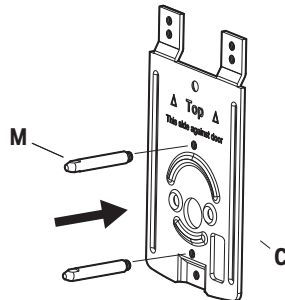


③ Install Exterior Assembly

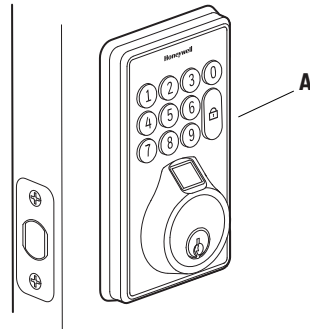


Check that the Rubber Gasket is secured on the Exterior Assembly (A). Insert the Exterior Assembly onto the door with the tailpiece going through the Deadbolt Latch in the

Route the Control Wire through the door UNDER the Deadbolt Latch.

If not, go back to step 2 and ensure you followed the steps.


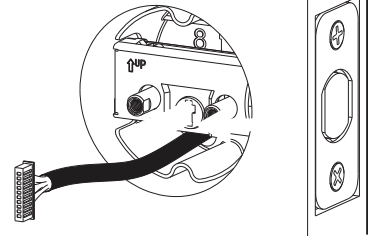


(L) screw goes into the door to prevent the lock from shifting and is optional.

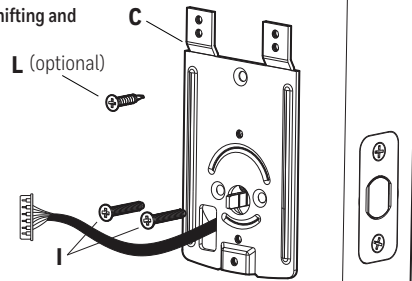


Secure mounting plate to door

④ Install Interior Assembly

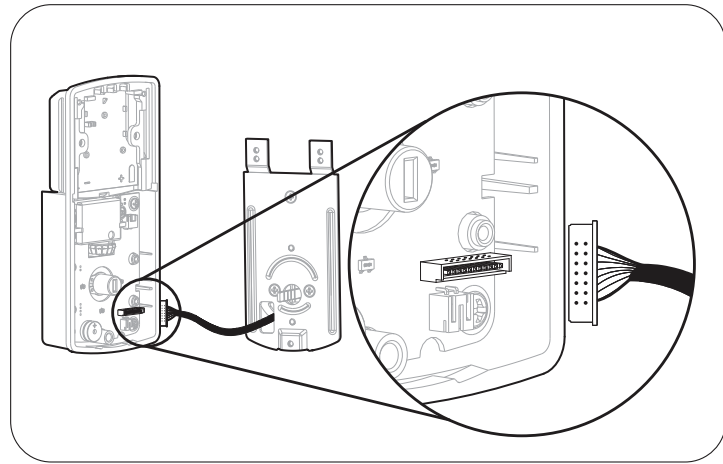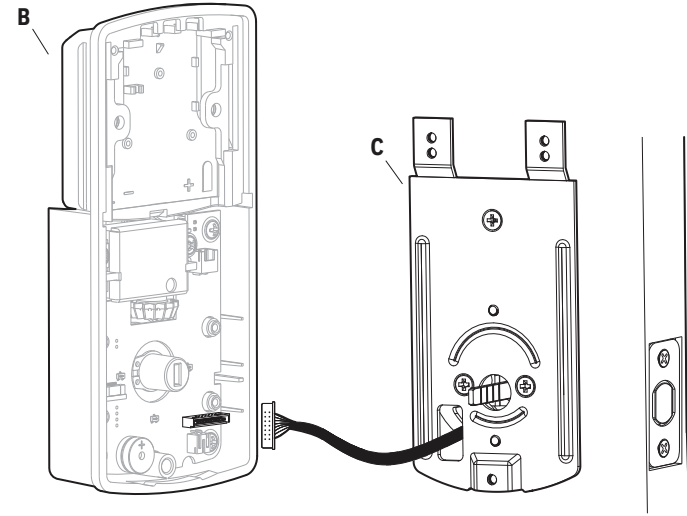


⑤ Install Interior Assembly

NOTE: Make sure the Turn Knob is in the vertical position. Be careful not to pinch the control wire when assembling.

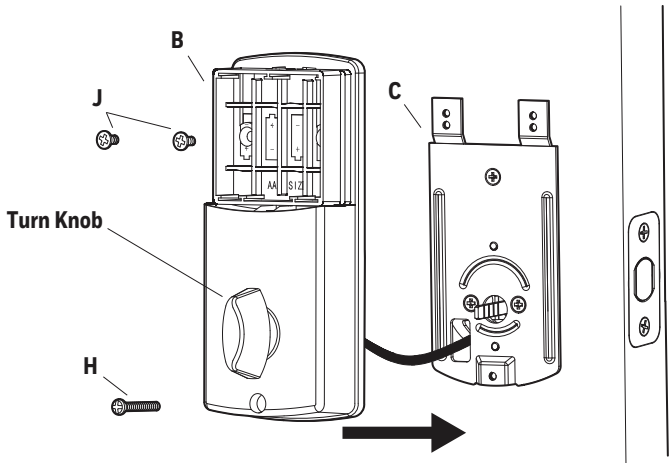

⑥ Install Batteries and Cover

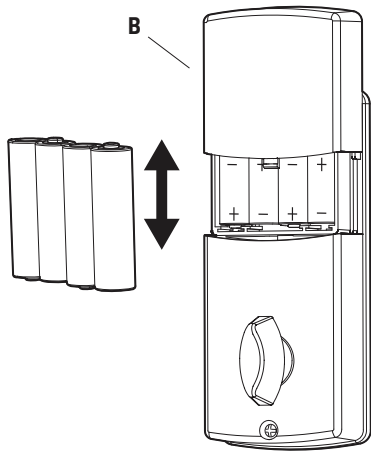


This Electronic lock requires (4) High Quality AA Alkaline batteries. **Rechargeable batteries may negatively impact performance.** When all 4 batteries are installed in the correct position, you should hear 2 beeps and the keypad will illuminate.

The Lock motor will engage and do a series of locking and unlocking motions in order to automatically determine your door "Handing" (left or right handed door). When completed the lock will beep and the keypad will flash.




**Before Opening Door  
Let Motor Complete Cycle**

⑦ Testing Operation

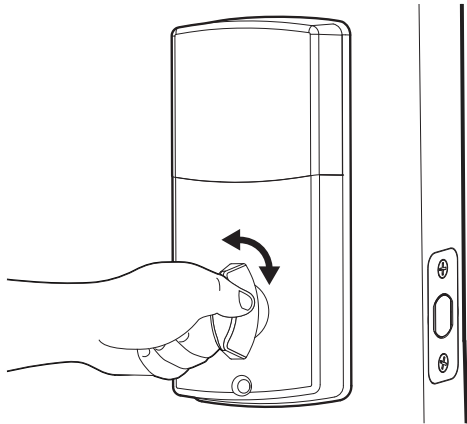

Lock and unlock using the knob, make sure the latch is opening and closing easily. If not, go back to step 2 and ensure you followed the steps.

Test the lock button with door open

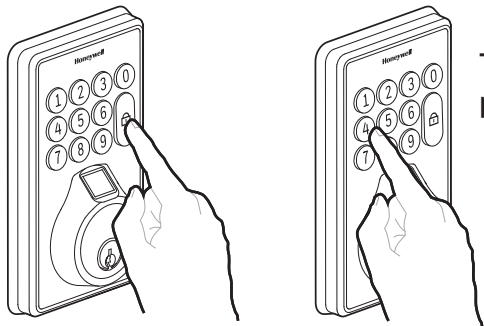


To test locking, press the Lock button

To test unlocking, press 1-2-3-4.

Troubleshooting

Issue	Solution
Keypad will not function	<ul style="list-style-type: none"><li>• Check that all batteries are fresh high quality Alkaline Batteries</li><li>• Check for proper polarity (+ -) of all batteries</li><li>• Check that the Control Wire is attached to the Interior Assembly</li></ul>
The Latch is sticking	<ul style="list-style-type: none"><li>• Installation screws of the lock may be too tight and have to be loosened</li><li>• Remove Interior Assembly</li><li>• Slightly loosen the Mounting Plate screws</li><li>• Lock and unlock using the Key</li><li>• Reattach Control Wire and Interior Assembly</li></ul>
No space to store more users	<ul style="list-style-type: none"><li>• Delete old Passcodes or fingerprints</li></ul>
Fingerprint is invalid	<ul style="list-style-type: none"><li>• Make sure your fingers and the fingerprint reader are both clean</li><li>• Keep your finger on the reader until you hear 1 beep</li><li>• Try using another recorded fingerprint</li><li>• For consistent failures, delete and reprogram the fingerprint</li></ul>
Latch is not locking in inclement weather	<ul style="list-style-type: none"><li>• Push or pull door to direct latch</li><li>• Re-adjust latch for smoother operations</li></ul>
Admin Code does not work	<ul style="list-style-type: none"><li>• Press numbers slowly and carefully</li></ul>
Fingerprint does not work	<ul style="list-style-type: none"><li>• Hold fingerprint on reader pad longer</li></ul>
Locked out due to wrong code entry	<ul style="list-style-type: none"><li>• Wait 60 seconds and then try again</li></ul>
Lock is frozen and will not operate	<ul style="list-style-type: none"><li>• Remove one battery for 30 seconds to refresh lock</li></ul>
Batteries are dead	<ul style="list-style-type: none"><li>• Open the lock with your key and replace batteries</li></ul>
Forgot Admin Code	<ul style="list-style-type: none"><li>• Reset to factory settings</li></ul>
Fingerprint does not work reliably in low temperatures	<ul style="list-style-type: none"><li>• Blow on fingers to warm</li></ul>

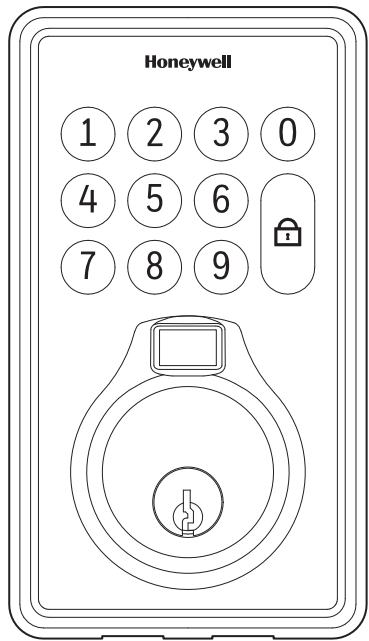


### In order to program the lock, select a 6 digit Admin Code

It is best to write down your Admin Code prior to step 2. Code cannot be less than 6 digits:


--	--	--	--	--	--

## 1 Create A New Admin Code

Change Admin Code from factory setting to Admin Code of your choice.

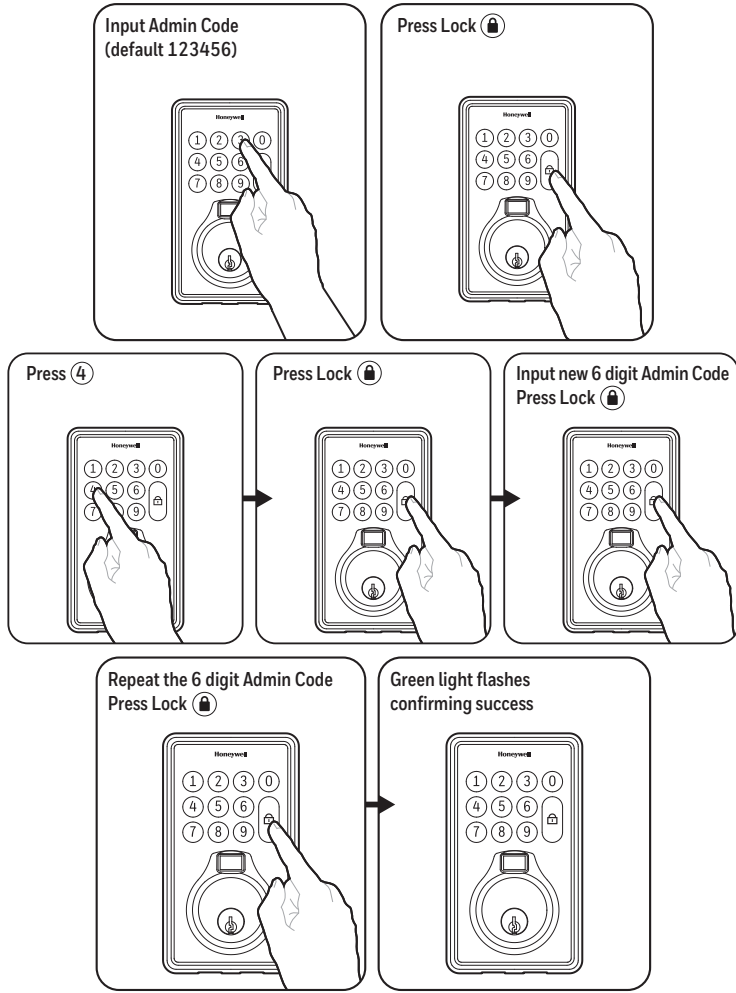


## 2 Adding a Passcode

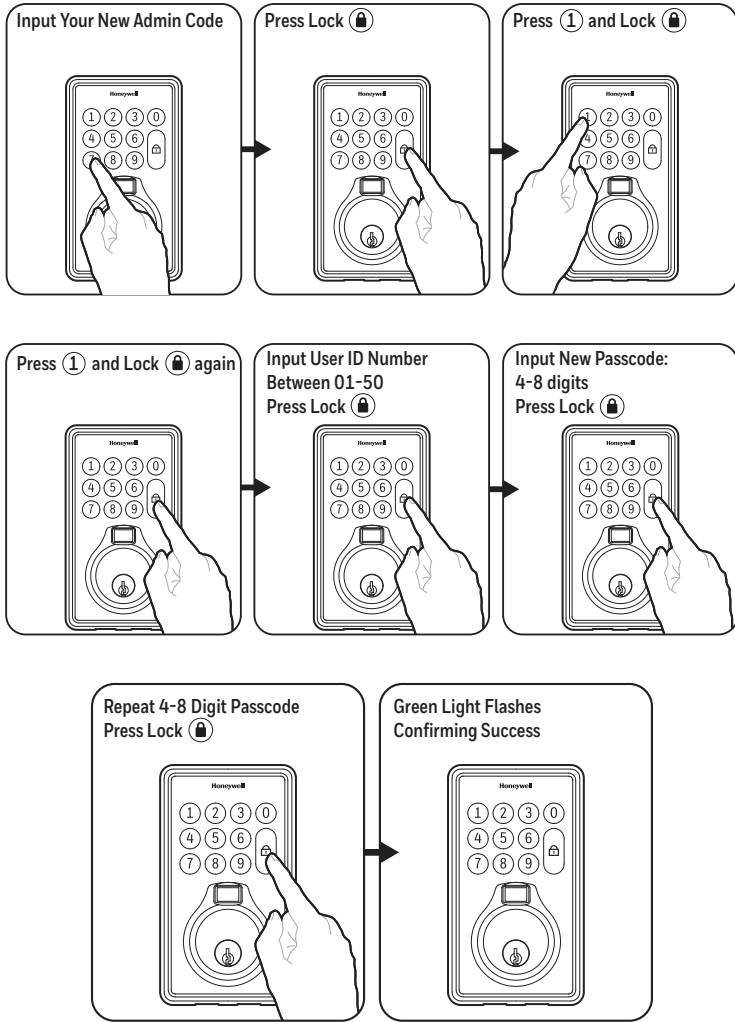

## 3 Adding a User Fingerprint

Use the same User ID Number that was used for your Passcode.

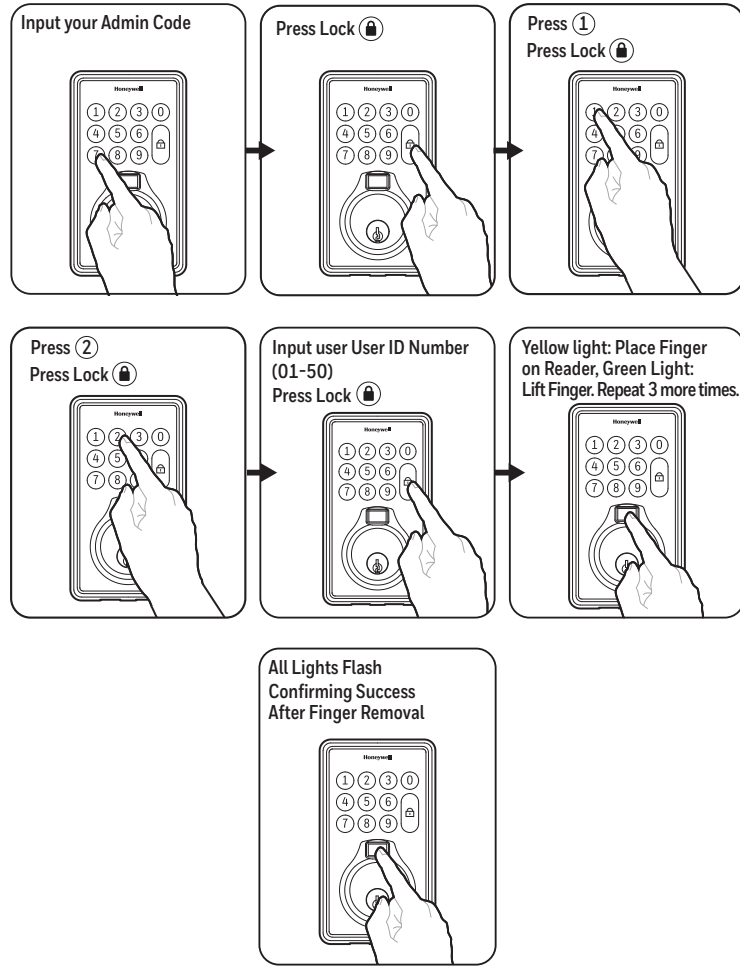

### Passcode Record

Passcodes Must be 4-8 Digits Long

User ID Number	User Name	Passcode	Fingerprint Assigned? (Y/N)
01			
02			
03			
04			
05			
06			
07			
08			
09			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

## 4 How to Operate Your New Lock


To Lock your lock - press the Lock button.

To Unlock your lock - enter your Passcode (not the Admin Code).

OR

Place your finger on the fingerprint reader.


## 5 Deleting a Passcode

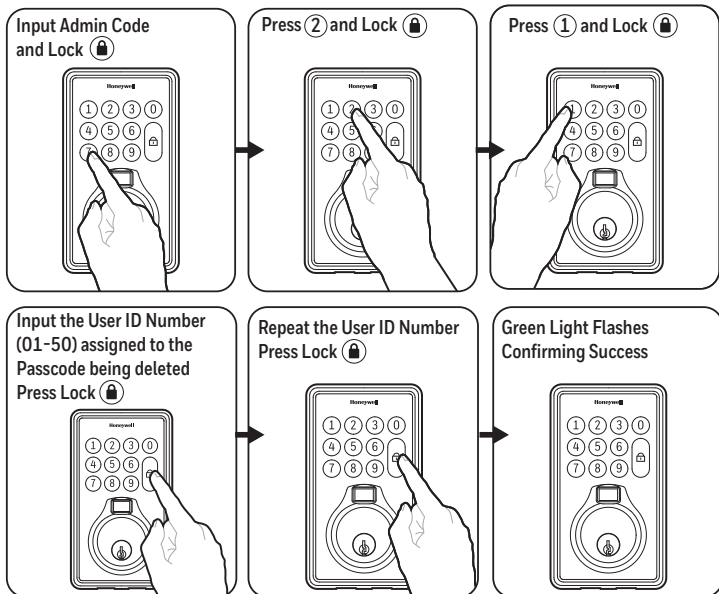

## 6 Deleting a User Fingerprint

- 1) Input Admin Code, then press Lock
- 2) Press 2, then press Lock
- 3) Repeat step 2
- 4) Input the User ID Number (01-50) assigned to the fingerprint being deleted, then press Lock
- 5) Repeat step 4

## 7 Deleting All Passcodes and Fingerprints

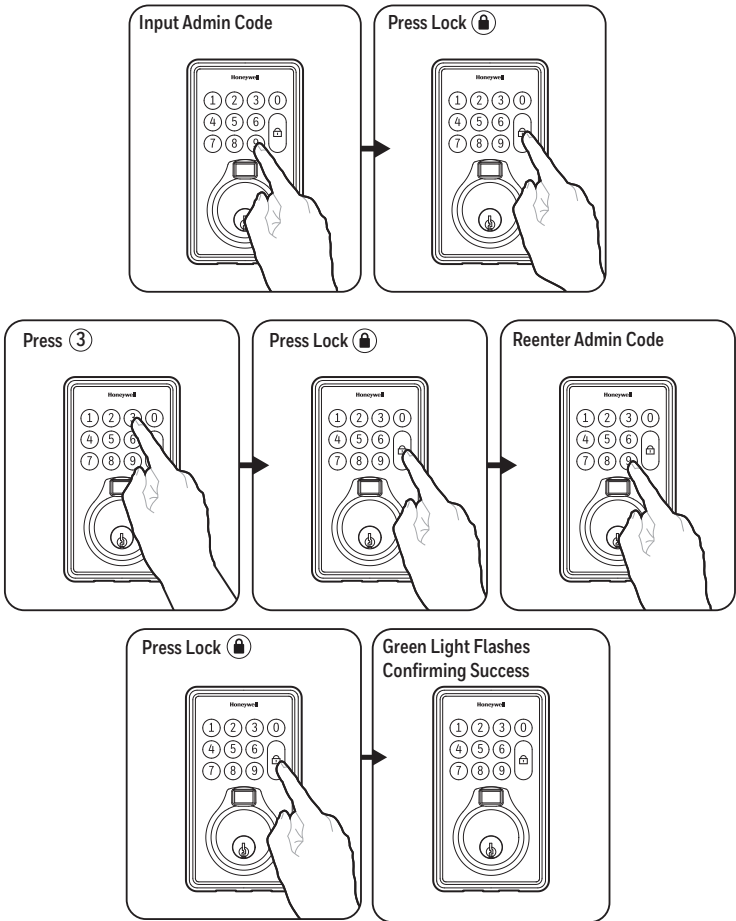

## 8 Additional Programming Functions

### Programming Symbols

- Lock / Clear / Programming
- Admin Code

### Automatic Lock Function

#### SET OR CANCEL AUTO LOCK

You can set the lock to automatically close after each time the lock is opened. Time value range = 20 - 900 seconds, enter the following:

Set Auto Lock: → Lock → 5 → Lock → Time Value → Lock  
Hear 1 beep and Light Indicator illuminates green.

To cancel Auto Lock set the time to 00, enter the following:

Cancel Time Value Auto Lock: → Lock → 5 → Lock → 00 → Lock  
Hear 1 beep and Light Indicator illuminates green.

#### TEMPORARILY DISABLE:

While in Auto-Lock mode, unlock door using . Within 10 seconds you must turn the locking knob by hand to the locked position, wait more than 2 seconds then turn the locking knob back to the unlock position. The Auto-Lock mode is now disabled.

#### RESTORE:

To restore the Auto-Lock function, turn the locking knob by hand to the locked position, wait more than 2 seconds or press the Lock button on the keypad.

### Vacation Mode

With Vacation Mode enabled, the system enters into low-power consumption mode. During this mode, all buttons and functions will be disabled until they are re-enabled.

#### ENABLE:

→ Lock → 10 → Lock → 1 → Lock

Once the door is locked then vacation mode will be engaged and all buttons and functions will be disabled.

#### DISABLE:

To disable the Vacation Mode, you must press and hold Lock for more than 3 seconds, then input followed by Lock to unlock the door. Vacation Mode is now disabled.

### Secure Lock-Out Period

Warning sounds and LED flashes red after 4 incorrect code attempts: Keypad shuts down for 60 seconds.

## 9 Additional Programming Functions

### Sound On And Off

You can "mute" or turn the "sound on" on your lock by entering the following. (Factory setting is sound on).

→ Lock → 6 → Lock → 1 or 2 → Lock  
1 - Sound Off  
2 - Sound On

Sound Off (1) - Hear 1 beep and Light Indicator illuminates green.  
Sound On (2) - Hear 1 beep and Light Indicator illuminates green.

### Restore Factory Settings

To reset the lock to the original factory settings including the Admin Code and all Passcodes follow these steps:

1. Remove one battery for 10 seconds.
2. Reinsert the battery and wait for a long beep and a short beep.
3. Press Lock 3 times within 3 seconds.
4. The lock will beep and the light indicator will turn green.

### Low Battery Warning

Beeps and LED flashes red 7 times. Replace with high quality AA alkaline batteries.

**Note:** Removing batteries does not erase active Admin Codes or Passcodes.

## Contact Us First! Do Not Return to Store Consumer Assistance

EMAIL: LHLPCustomerService@LHLInc.com WEBSITE: www.honeywellsafes.com

ADDRESS: Consumer Assistance Dept. LH Licensed Products, Inc., 860 East Sandhill Avenue Carson, CA 90746 USA

TELEPHONE: US/Canada 1-800-860-1677 Ext. 1801 (Toll Free)

Mexico 01-800-288-2872 After English voice recording steps you must then enter 800-860-1677 to complete your call. (Toll Free)

Australia 0011-800-5325-7000 (Toll Free)

Germany/New Zealand 00-800-5325-7000 (Toll Free)

Other Countries XX\*-310-323-5722 (Toll Charges Apply)

XX\*- Dial U.S. Country Code first

CALL CENTER HOURS: US/Canada 8am - 5pm (Pacific\*\*) Mon - Fri

(Subject to change)

CALL BACK HOURS: Other Countries 8am - 5pm (Pacific\*\*) Mon - Fri

(Subject to change)

Pacific\*\*: Local time in Los Angeles, CA, USA

\* Insert correct Country Code

\*\* Local Time based on Los Angeles, CA, USA

INTERNATIONAL CALL BACK HOURS:

If you need to speak with a consumer assistant and cannot contact us during the Call Center hours above, please send an email or leave a telephone message, including your Name, Telephone Number and the best time for us to contact you during the Call Back hours above and we will make our every effort to contact you and help answer any of your questions or concerns.

### Limited Lifetime Mechanical and Finish Warranty / 1 Year Limited Electronics Warranty

This product comes with a limited lifetime mechanical and finish warranty and a one year limited electronics warranty to the original residential consumer against defects in material and workmanship under normal use as long as the original residential purchaser occupies the residential premises upon which the product was originally installed.

#### ORIGINAL RESIDENTIAL CONSUMER

This warranty is not transferable, and applies to the original purchaser only, as long as the original purchaser occupies the residential premises upon which the product(s) was originally installed. Proof of purchase (original sales receipt) and ownership must accompany all warranty claims. All non-homeowner purchasers (including purchasers for industrial, commercial and business use) are not covered under the terms of this warranty.

#### WHAT IS NOT COVERED


This warranty is null and void if the product was used for purposes for which it was not designed. This warranty DOES NOT COVER normal wear and tear of parts or damage resulting from any of the following: negligent use, misuse or abuse of the product, or use contrary to or in violation of written instructions provided by LH Licensed Products, Inc. Further, this warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. This warranty DOES NOT COVER scratches, abrasions, deterioration due to the use of paints, solvents or use of cleaners containing abrasives, alcohol or other solvents, whether performed by a contractor, service company, or yourself. This warranty DOES NOT COVER product(s) used in commercial applications, used in common area applications, disassembly, repair or alteration by anyone other than LH Licensed Products, Inc., improper installation or exposure to extremes of heat or humidity. This warranty DOES NOT COVER any losses, injuries to persons or loss of property, general damages or costs, and shipping and freight expenses required to return product(s) to LH Licensed Products, Inc. LH Licensed Products, Inc. shall not be liable for any indirect, incidental or consequential damages of any nature relating to this lock. LH Licensed Products, Inc. is also not responsible for costs associated with removing or reinstalling the product.

#### ADDITIONAL TERMS

LH Licensed Products, Inc. does not authorize any person to create for it any obligation or liability in connection with the Product. LH Licensed Products, Inc.'s maximum liability here under is limited to the original purchase price of the Product. No action arising out of any claimed breach of this warranty by LH Licensed Products, Inc. may be brought by the original residential purchaser more than one (1) year after the cause of action has arisen.

#### AUSTRALIAN CONSUMER LAW

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.  
www.honeywellsafes.com

M8733501 8635100 E V1