
## **XBA-PHP6 Option Switch Settings**

Supported bill PHP 20, 50, 100, 200, 500, 1000 6bills.

- 1									
	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject PHP 20	ON							
*	Accept PHP 20	OFF							
	Reject PHP 50		ON						
*	Accept PHP 50		OFF						
	Reject PHP 100			ON					
*	Accept PHP 100			OFF					
	Reject PHP 200				ON				
*	Accept PHP 200				OFF				
	Reject PHP 500 & 1000					ON			
*	Accept PHP 500 & 1000					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
*	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
*	Reject Banknote when Power-up							OFF	
	Reserved							ON	
*	Reserved							OFF	

#### This dip switch is located at the side of XBA.

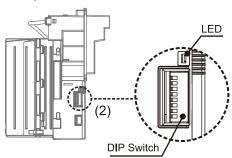

### **Currency Assign Data**

Interface Bill value	Pulse	MDB	ICT104U	ICT104V	ICT002U	
BV1	P 20	P 20	P 20	P 20	P 20	
BV2	P 50	P 50	P 50	P 50	P 50	
BV3	P 100	P 100	P 100	P 100	P 100	
BV4	P 200	P 200	P 500	P 500	P 500	
BV5	P 500	P 500	P 1000	P 1000	P 1000	
BV6	P 1000	P 1000	P 200	P 200	P 200	

# XBA-PHP6 (Pulse/MDB/ICT002U/ICT104U/ICT104V)


	ELINICTION	SW1	SW2	SW3	SW4	SW5		SW6	SW7	SW8
	FUNCTION		SVVZ	SVV3	5004	5005		SVV6	SVV7	SVV8
	Inhibit Active HIGH	ON								
*	Inhibit Active LOW	OFF								
	Reserved		ON							
*	Reserved		OFF							
	Reserved			ON						
*	Reserved			OFF						
	Reserved				ON					
*	Reserved				OFF		_			
	Pulse Mode	MDB Mode			ICT104V Mode					
*	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 1 Decimal Point Position (DP		PP) = 2	Connect with coin changer	ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0				Connect with ICT JPSTD converter board	OFF			
*	Pulse Mode							ON		
	Other Mode							OFF		
	Pulse Mode	Other Mode								
*	1 pulse / PHP 10	MDB Mode							OFF	OFF
	5 pulses / PHP 10	ICT002U Mode							OFF	ON
	10 pulses / PHP 10	ICT104U Mode						ON	OFF	
	20 pulses / PHP 10	ı	ICT104V Mode						ON	ON

#### ★ Manufacture setting

Note: 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.

2. Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

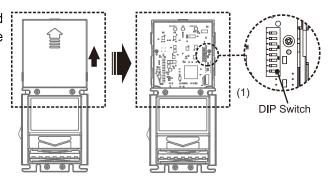

© 2016 International Currency Technologies Corporation Vol. 3.0 Part Number : SWT8PH63000-R