

WIRELESS TV HEADSET

Important Tips for Audio Setup

You can connect your transmitter to your TV in these 3 ways

Best - Optical Audio

Optical Audio Port

Better - Aux Audio

Line Out Audio Port

Good - Coax Audio

Coax Audio Port


PLEASE REMOVE PROTECTIVE PLASTIC TIPS FROM OPTICAL CABLE THAT IS INCLUDED

Important Note for Optical Audio Connections

If you don't hear sound audio from your HearSound headset and you've used the optical cable to connect your TV and HearSound transmitter, check the following settings in your TV's menu system and your TV's instruction manual.

- Set the TV's Audio format to optical audio or PCM (not Dolby Digital or DTS)
- Set Dolby/DTS to OFF (if your TV has a separate setting for this)

NOTE: Different TV's have different names for settings. See your TV's owners manual for information about your specific model.

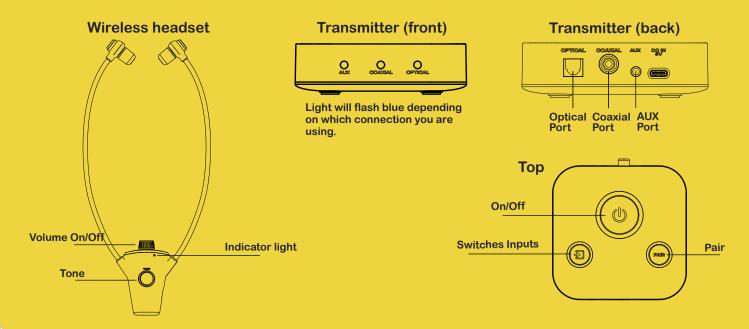



Important Tips for Pairing your Transmitter and Headset

- Once you have connected power and the audio cable of your choice you are ready to pair your headset.
- You will see a blue light on the front of your transmitter that will indicate which connection you are using (AUX/COAXIAL/OPTICAL)
- The blue light should be blinking indicating that it is in Pairing Mode
- Turn the volume knob to the right to turn it ON and rotate to right to increase volume.
- In a few moments you should see that the light on the transmitter AND the headset are both SOLID BLUE.
- You should hear audio coming out of the headset.
- If you are not receiving audio through your headset and the indicator light is not solid blue, your system is not paired. To pair, press the hold button on the transmitter for at least 2 seconds and the indicator lights start flashing. Then you will press the tone button on the headset until you hear a BEEP and let go. Then the indicator light on the headset should start blinking. Once paired, both units will turn solid blue.
- You should hear audio coming out of the headset.
- IF both indicator lights are solid BLUE your system is paired. IF THERE IS NO AUDIO your TV likely has additional Audio settings that need to be adjusted. Please refer to your TV's owner manual or you can utilize your TV's remote to go into settings for AUDIO and activate your audio settings to Optical Out/Optical Digital/PCM.
- Once this has been adjusted you will have audio coming out of the headset.

PLEASE CHARGE YOUR HEADSET FOR 8 HOURS TO ENSURE IT IS FULLY CHARGED