


XBA-OMR5 Option Switch Settings

Supported bill OMR 0.1, 0.5, 1, 5, 10 5bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject OMR 0.1	ON							
★ Accept OMR 0.1	OFF							
★ Reject OMR 0.5		ON						
★ Accept OMR 0.5		OFF						
★ Reject OMR 1			ON					
★ Accept OMR 1			OFF					
★ Reject OMR 5				ON				
★ Accept OMR 5				OFF				
★ Reject OMR 10					ON			
★ Accept OMR 10					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★ Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★ Stack Banknote when Power-up						ON		
★ Reject Banknote when Power-up						OFF		
★ Reserved							ON	
★ Reserved							OFF	

This dip switch is located at the side of XBA.

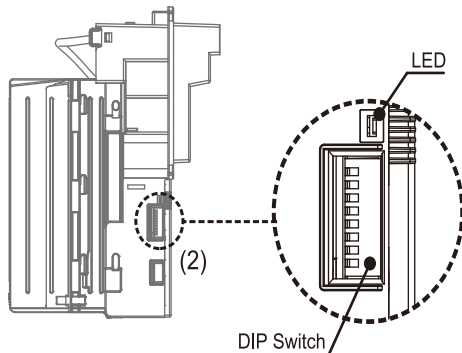


Currency Assign Data

Interface Bill value	ICT104U	MDB	ICT104V	Pulse
BV1	OMR 0.1	OMR 0.1	OMR 0.1	OMR 0.1
BV2	OMR 0.5	OMR 0.5	OMR 0.5	OMR 0.5
BV3	OMR 1	OMR 1	OMR 1	OMR 1
BV4	OMR 5	OMR 5	OMR 5	OMR 5
BV5	OMR 10	OMR 10	OMR 10	OMR 10

XBA-OMR5 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION		SW1	SW2	SW3	SW4	SW5		SW6	SW7	SW8	
★	Inhibit Active HIGH	ON									
	Inhibit Active LOW	OFF									
★	Reserved		ON								
	Reserved		OFF								
★	Reserved			ON							
	Reserved			OFF							
★	Reserved				ON						
	Reserved				OFF						
Pulse Mode		MDB Mode			ICT104V Mode						
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 3			Connect with coin changer					ON	
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 1			Connect with ICT JPSTD converter board		OFF				
★	Pulse Mode							ON			
	Other Mode							OFF			
★	Pulse Mode	Other Mode									
	1 pulse / OMR 0.1	MDB Mode									
	5 pulses / OMR 0.1	Reserved									
	10 pulses / OMR 0.1	ICT104U Mode									
	25 pulses / OMR 0.1	ICT104V Mode									

This dip switch is located on the CPU board, remove the CPU board cover first.

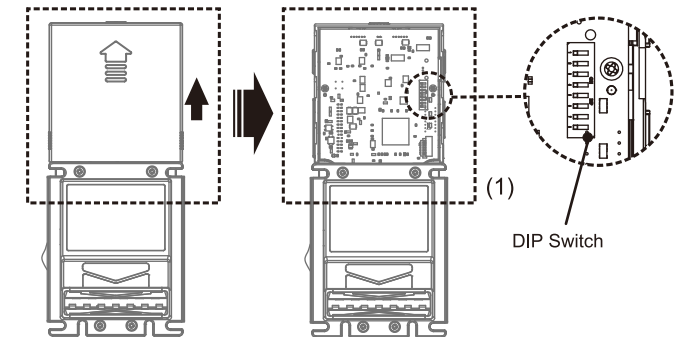

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.Calibrate card is needed.