



GYROCOPTERS

PIXAI ELECTRIC BIKE INSTRUCTION

Do not use this product without carefully reading this instruction manual and understanding the performance of electric bike.
Please keep the instruction manual properly.

HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your Gyrocopters electric bike.




Correct Fitting:
Make sure your helmet
covers your forehead.



Incorrect Fitting:
Forehead is exposed
and vulnerable to
serious injury.

INSTRUCTIONS

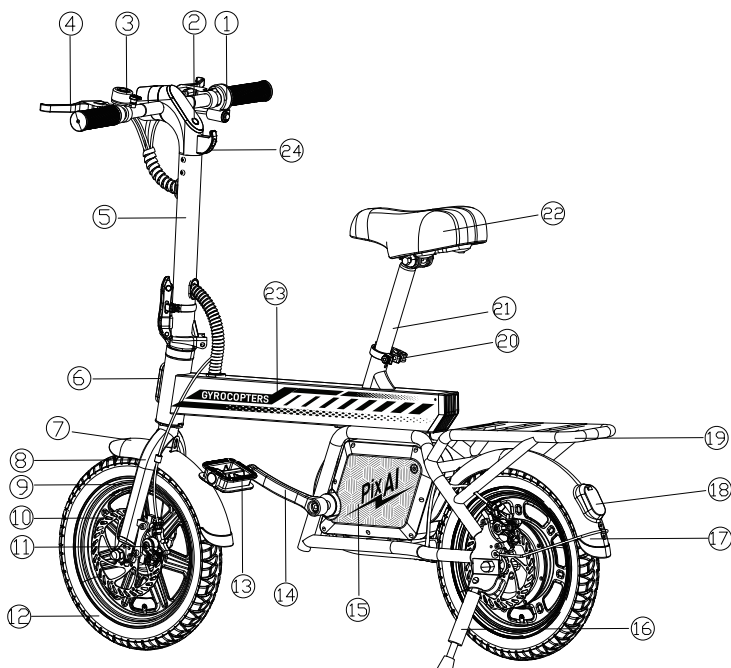

1. Power Button

2. Display

3. Bell

4. Brake Handle

5. Standpipe

6. Front Reflector

7. Front Fender

8. Front Fork

9. Front Wheel

10. Disc Brake Pads

11. Disc Brake

12. Front Tire

13. Pedal

14. Crankset

15. Battery box

16. Kick Stand

17. Rear Fender

18. Taillight

19. Back Seat

20. Seat Tube Clamp

21. Seat Tube

22. Seat

23. Frame

24. Hook

SPECIFICATIONS

Build	
Model Name	PixAI
Body Material	Iron Frame
Expanded Size	1240×530×1010 mm
Packing Size	1060×215×505 mm
Wheelbase	848 mm
Wheel Hub	14×2.1 inches
Body Color	Black
Performance	
Weight	21.3 kg
Max Load	120 kg
Max Speed	32 km/h
Operating Temperature	-10~45 degrees Celsius
IP Rating	IP54



Remark:

The maximum speed of the electric bike is influenced by various factors, including power, load, tire pressure, road conditions, chain, lubrication level, riding habits, temperature, and more.

SPECIFICATIONS

Core	
Battery Type	18650 lithium-ion
Battery Capacity	7.8 Ah
Battery Rated Voltage	DC36 V
Charging Voltage	DC42 V
Charger Input Voltage	AC100-220 V
Charging Time	5-6 Hours
Motor Type	Brushless DC Motor
Motor Rated Voltage	36 V
Controller undervoltage Value	30 ± 1 V
Controller Overcurrent Value	15 ± 1 A
Features	
Headlight	Yes
Taillight	Yes
Brakes	Dual Disc Brakes
Mode	Pedal Assist / Throttle / Regular

FUNCTIONS

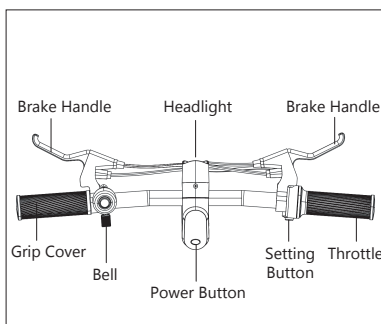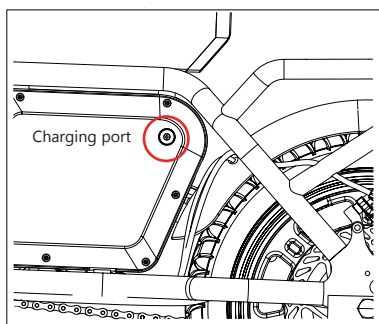

MODE INDICATOR

Display the current speed in level. Press the setting button 1 time to switch modes:

1. 15 km/h
2. 20 km/h
3. 25 km/h
4. 32km/h (when unlocking speed)


DISPLAY KM/H OR MPH

Press the power button 3 times to switch km/h or mph.

HEADLIGHT INDICATOR

Indicates the headlight is activated.

Press and hold the setting button for 3 seconds to turn on / off the headlight.

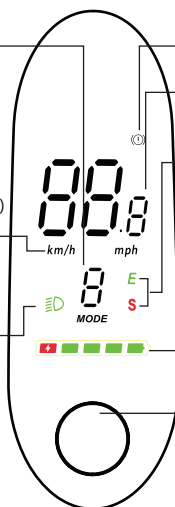

BRAKE INDICATOR

SPEED INDICATOR

Display the current speed in km/h or mph.

START MODE INDICATOR

Press the power button 2 times to switch the soft start mode (E) or hard mode (S).

Soft Start Mode (E): When the throttle is turned, the speed increases gradually.

Hard Start Mode (S): When the throttle is turned, the speed increases rapidly.

BATTERY INDICATOR

Display the current battery level.

POWER BUTTON

Press and hold for 3 seconds to turn the e-bike on or off.

Charging


Connect the charger's DC end to the e-bike's charging port, then plug the AC end into a power outlet. Charging starts automatically. The indicator light will be red during charging and turn yellow-green when fully charged.

Lock / Unlock Speed

Power off the product, then press and hold the power button for 10 seconds to lock or unlock the maximum speed at 32 km/h.

PREPARATION


PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

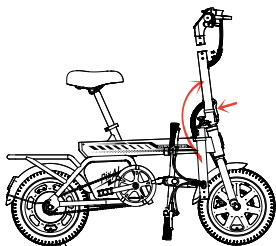

Unfold the E-bike


Unfold the handlebar. Lift the safety lock and push it in to secure the steering column.

A "click" will confirm it's locked. Make sure the column is firmly in place.

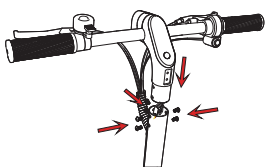


Install the Handlebar

Tighten the 4 screws into place using the allen key provided in the box.

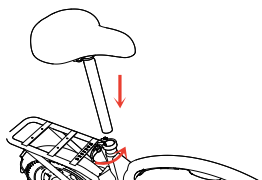

Install the Seat


Insert the seat into the seat tube, then secure it by pushing the seat tube clamp.

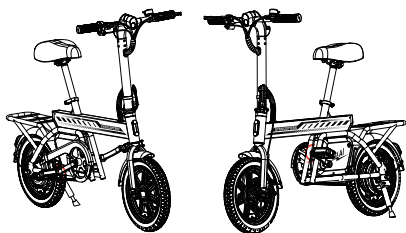

Install the Pedals

Right Pedal: Rotating Clockwise

Left Pedal: Rotating Anticlockwise

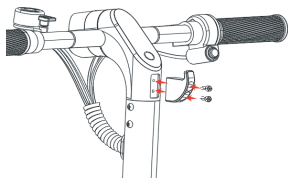

Install the Hook

Tighten the 2 screws into place using the allen key provided in the box.

PREPARATION

1. Read this instruction carefully to know the product performance and requests.

- 1) **Check the tire pressure:** Whether the pressure is sufficient. In case of insufficient tire pressure, the tire requires to be inflated to the normal state; Whether the tire lace is overly worn, or the tire surface is overly damaged or cracked, the new tire should be replaced immediately at the relevant maintenance place to prevent the vehicle from skidding on the wet or smooth road.
- 2) **Check the circuit system:** Battery power should be always sufficient to support the completion of your required mileage. Charge it first if the battery is not enough. Check if the dashboard (non-standard configuration,) of the digital tube and battery indicator light works normally, if there is a fault, eliminate it first for maintenance.
- 3) **Check the brake system:** Check whether the power function of the brake is normal or not. If the brake power failure function is invalid, please do not use it. Please send it to the relevant maintenance place in time for maintenance.
- 4) **Check other items:** Make sure that the entire vehicle's (mainly front and back wheel) screws are tight; the handlebar is adjusted well; the wheel lock has been opened; the foot has been put in place; the quick dismantling folding device is fine, and the safety buckle is in place.

2. Warning

- 1) During driving on an uphill surface, adverse wind and bad road conditions, manpower should be used to assist power riding to reduce the battery load.
- 2) If there is any kind of abnormal condition during the riding, the emergency brakes should be made on both the front and rear brakes, and the power switch should be turned off immediately. Continue riding only after ensuring that the vehicle is in normal condition.
- 3) Gyrocopters electric bike is comfortable with water and snow but it should not be misled to be completely soaked in water. The wading depth should not exceed the lower edge of the motor hub or it would cause internal leakage of the motor hub.
- 4) For your safety and others, please ride on the non-motorized lane, and do not carry people while obeying the traffic rules.
- 5) Before driving your Gyrocopters electric bike as a newbie, you should thoroughly understand the performance of the electric vehicle.
- 6) Do not drive with motor vehicles or drive too close to automobiles. Avoid driving into the blind spot area of motor vehicle drivers.

Note:

Turn off the power while parked to save electricity.



PREPARATION

3. Brake

- 1) Brake the rear wheel first, then brake the front wheel.
- 2) When the emergency brake is needed, the front and rear brakes should be used at the same time because the braking effect will be reduced if used alone.

Note:

- While braking, speeding or turning, you must be very careful. Try not to increase the manpower at this time.
- Drive at a slower speed and leave enough distance for others.
- Pay more attention to slippery and smooth roads, and keep enough brake distance.

4. Parking

- 1) When you get off the Gyrocopters electric bike, you should turn off the power switch to ensure the service life of batteries, motors and electrical switches as well as to prevent accidents.
- 2) When opening the kickstand, it's recommended to park the vehicle in a spacious place. When temporary parking is made, please use the safety lock to lock the vehicle (the safety lock is not provided as an accessory).
- 3) Do not park your electric bike in the building hall, evacuation staircase, or safety exit and follow the safety code of a park correctly.

MAINTENANCE

1. About the Charger

- 1) When charging, please use a designated special charger it should not be charged in residential buildings, and place it where the children can not touch it safely.
- 2) Pay attention to the charger plug when the charger is used, to avoid damaging the plug and causing poor input or output. At the same time, please pay attention to ensure it is moistureproof and waterproof.
- 3) The charger cannot be used in unstable, excessive oil fumes and dust, humid, direct sunlight environments do not connect electrical appliances. At the same time, there is lightning and maintain good ventilation conditions.
- 4) While using and storing the charger, pay attention to avoid external objects entering, and strictly prohibit any liquid or metal and other objects into the charger, to prevent the internal short circuit of the charger Beware of an impact or a violent shock.
- 5) There is a high voltage inside the charger Please do not open it without professionals. Please do not change the plug and wire of the charger by yourself.

- 6) The charger should not be carried in the car when possible. If it is necessary to take it, it should be placed in the toolbox where the shock absorption is done well, and the device in the charger should not be dismantled or replaced by yourself.

2. Charging Process

- 1) While charging, put the charger in the ventilation place first, then plug the charger outlet into the charging hole, then plug the charger into the electricity.
- 2) When the indicator changes from red to green, the battery charge is full. It should be recharged for 1-2 hours to ensure that the battery is fully charged. The longest time should not exceed 6 hours.
- 3) After charging, the input plug of the charger should be unplugged and then the output plug should be connected to the Gyrocopters electric bike. It is forbidden to connect the charger to the electric power outlet for a long time without charging. If you smell the odour in the charging process or find the charger temperature is too high, please stop charging immediately and send it back to the maintenance department to repair it.

3. About the Battery(Non professionals shouldn't dismantle it)

- 1) Between the limit of 0 degrees ~ 45 degrees, the battery should be charged; Between -20 degrees ~ 60 degrees discharge, keeping the battery dry and strictly forbidden to put the battery in the acid and alkaline liquid, avoiding the rain, away from the fire source, the heat source and the high-temperature environment. It is strictly forbidden to reverse the positive and negative electrodes of the battery. It is strictly prohibited to destroy, disassemble the battery or make the battery short-circuited. When charging, please use the original special charger. Charging should not be more than 6 hours, and the charging current should not be more than 2A. In the long run, please keep the battery in a cool and dry place, and charge the battery for five hours a month. When charging, the battery must be handled according to the instructions. Otherwise, the user will be responsible for the result.
- 2) The newly purchased Gyrocopters electric bike may not be ready to ride so please charge then ride the electric bike.
- 3) Users must charge according to the requirements of the instructions when charging, otherwise the consequences will be conceited. Pay attention to the battery type and applicable voltage charged by the charger, and strictly prohibit mixing. When charging, it should be placed in a ventilated environment. It is strictly prohibited to recharge in residential buildings, confined spaces or hot weather.
- 4) When the vehicle is folded, the two metal contacts on the battery box end can not touch at the same time, which will result in an accident caused by the short circuit of the battery.
- 5) Batteries should not be stored or used under high temperatures for more than 60°C in the sun. If you don't need it for a long time, please charge the battery once a month and charge it to half full at a time.

4. About the Motor

Attention should be paid to protecting the motor outlet to avoid short circuits of motor line wear and burning the motor. At the same time, attention should be paid to avoiding motor immersion in water for a long time.

5. About the Controller

Attention should be paid to the protection of the exposed wires of the vehicle, to avoid causing the shortcircuit burn out of the controller, and strictly prohibit the flushing of the controller with water.

BATTERY CARE INSTRUCTIONS

Use

- Use the original lithium-ion battery that came with your e-bike.
- Handle battery with care. Don't drop, modify, or use battery that is swollen, dented, torn, or damaged.
- Do not modify battery, as it can cause overheating, fire, or explosion.

Charging

- Avoid charging your e-bike longer than recommended—overcharging may cause overheating, fires, or explosions.
- Charge your e-bike at room temperature and on a hard surface. Soft surfaces, like couches or beds, can trap heat and cause overheating.
- Charge your battery before it drops below 30% to extend its lifespan. Avoid keeping it plugged in at 100% for long periods.
- Avoid fully discharging lithium-ion batteries, as it can damage them.
- Charge your e-bike away from exit doors in case of fire.

Storage

- Bring battery to room temperature before use. Avoid charging them in below-zero temperatures. Remove it from e-bike in extreme temperatures.
- Store battery at 50% charge when not in use long-term. Check every 3 months and recharge if needed.
- Store battery in a dry, room-temperature (between 5-20°C) place. Avoid heat, cold, sun, and moisture on the terminals
- Store battery safely, away from children, other batteries, flammable materials, and heavy objects. Use a protective, non-metal case when carrying it.

NOTICE

- 1) You must wear a helmet, gloves, kneecap and elbow protectors before riding.
- 2) It is best to ride at medium speed. Do not continue pedalling when slowing down.
- 3) It is not allowed to ride on motorways, pedestrians and steep slopes. (The climbing gradient should be less than 30 degrees)
- 4) It is not allowed to ride over the maximum weight of the body as mentioned. (Maximum load 120kg)
- 5) It is not allowed to be used in extremely hot and cold environments It is not suitable to ride on a bumpy wet road.
- 6) Strictly prohibit to be used by children under 16 years of age. Illegal use may encounter many unexpected dangers. The company does not undertake any liability for damage to life or personal injury and property damage when not following this manual.

DECLARATION OF RESPONSIBILITY

The company has the right to amend the product type, specification or related information mentioned in the manual and reserves the final interpretation right.

- 1) The specific type of functions mentioned in this manual applies to this particular type only.
- 2) Any changes or changes in the product type, the specification or related information mentioned in this manual will not be noticed by the user.
- 3) Without the written permission of the company, no copy, modification, retransmission, dissemination or release of the version manual shall be made in any form.
- 4) Please read the handbook carefully before using the product and operate it by the manual. Otherwise, the company is not responsible for the damage to the products caused by improper use or error or the loss of personal property.
- 5) For product-related information, please inquire on Gyrocopters.ca

WEIGHT AND SPEED LIMITATIONS

Speed and weight limits are set for your own safety. Please do not exceed the limits listed in the "Specifications" section of this manual.

WARNING

Overweight exertion on the device may increase possibility of injury or product damage.

OPERATING RANGE

The following are some of the major factors that will affect the operating range of your device.

- 1) **Terrain:** Riding distance is highest when riding on a smooth, flat surface. Riding uphill and/or on rough terrain will reduce distance significantly.
- 2) **Weight:** A lighter user will have further range than a heavier user.
- 3) **Ambient temperature:** Please ride and store the device under recommended temperatures, which will increase driving distance; battery life, and overall performance of your device.
- 4) **Speed and Riding Style:** Maintaining a moderate and consistent speed while riding produces maximum distance. Travelling at high speeds for extended periods, frequent starts and stops, idling and frequent acceleration or deceleration will decrease the overall distance.

Note:

Do not attempt to stop suddenly as this may lead to damage to your brake discs.

WARNING

Proper use of your brake is vital to ensure safe, efficient stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brake. Apply the brake gradually and give yourself enough room to come to a complete stop safely.

OPERATING RANGE

Please follow all local, state and federal laws in regard to recycling, handling and disposing of Lead-acid batteries.

WARNING

**SEEK IMMEDIATE MEDICAL ASSISTANCE IF
YOU ARE EXPOSED TO ANY SUBSTANCE
THAT IS EMITTED FROM THE BATTERY.**

SAFETY ALERTS

While riding your Gyrocopters electric bike, if there is a system error or illegal operation performed the device will prompt the user in a variety of ways.

The following are common occurrences where you will see Safety Alerts. These notices should not be ignored, but appropriate action should be taken to correct any illegal operation, failure or errors.

- 1) Prohibited riding surfaces (uneven, too steep, unsafe, etc.)
- 2) The battery voltage is too low.
- 3) The device is still charging.
- 4) Overheating or motor temperature is too high.
- 5) When the battery is about to run out of power, the battery icon will flash.
- 6) If any or both tires are blocked, the device will stop after 10 seconds.
- 7) When the battery level has depleted below protection mode, the device motor will power off after 15 seconds.

Note:

While sustaining a high discharge current during use (such as riding up a steep slope for a long period), the device motor will power off after 15 seconds.

WARRANTY

The manufacturer's warranty does not cover any physical/accidental damage due to improper usage. The warranty does not cover normal wear and tear, wheel, fender, or any other physical damage or water/liquid damage to your parts and unit.

For warranty information,

Please visit us at www.gyrocopters.ca or www.imgadgets.com

email us at customercare@gyrocopters.ca or customercare@imgadgets.com



SERIAL NUMBER

Website: Gyrocopters.ca

Phone: +1 647 797 3804

Address: 11-2340 Meadowvale Blvd, Mississauga, Ontario, Canada