


# PTZ IP Camera Manual

## [Part 1: Connect and manage cameras using mobile APP]

Please go google play or Apple store download mobile APP,the name is Videolink and install it into your mobile phone  
The first time you run the APP,you need to register an account. You can use your email or mobile phone number to register an account, and then use the registered account to log in to the APP.


### [1], Add a camera by scanning a QR code

If your camera does not have WIFI function, please connect the ethernet cable to your switch/router and connect the power adapter. Select "Wired connection camera", as shown in Figure 9, enter the interface of scanning the QR code to add a camera, point the mobile phone at the QR code on the camera body to scan (as shown in Figure 10), after scanning is successful, please provide your Customize a name for the camera, and click "BIND IT" to complete the addition (as shown in Figure 12)

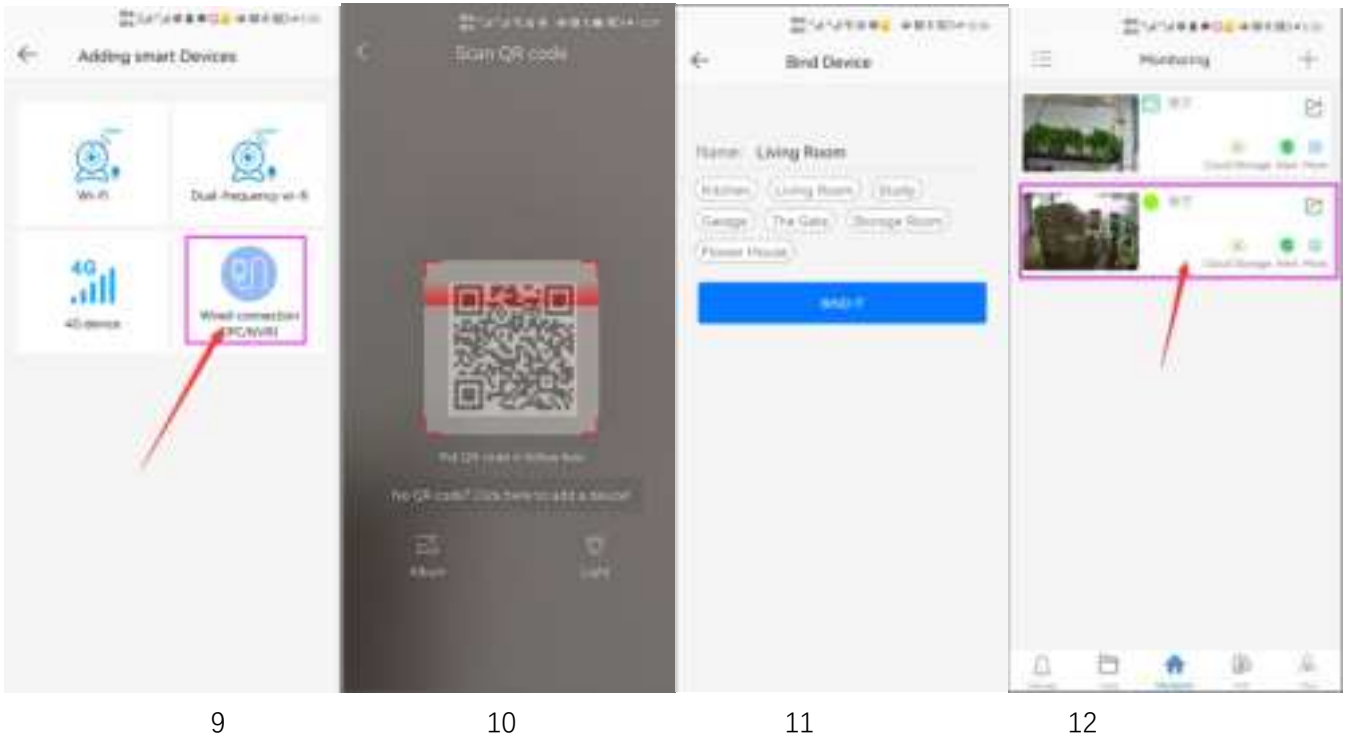


### [2], Add cameras via LAN connection

If the QR code cannot be found on the camera, you can click "Click here to add a device" to add the camera through the LAN search (as shown in Figure 12), enter the search page, and the APP will automatically search for the camera, as shown in Figure 13 display, and then click the camera to complete the addition.

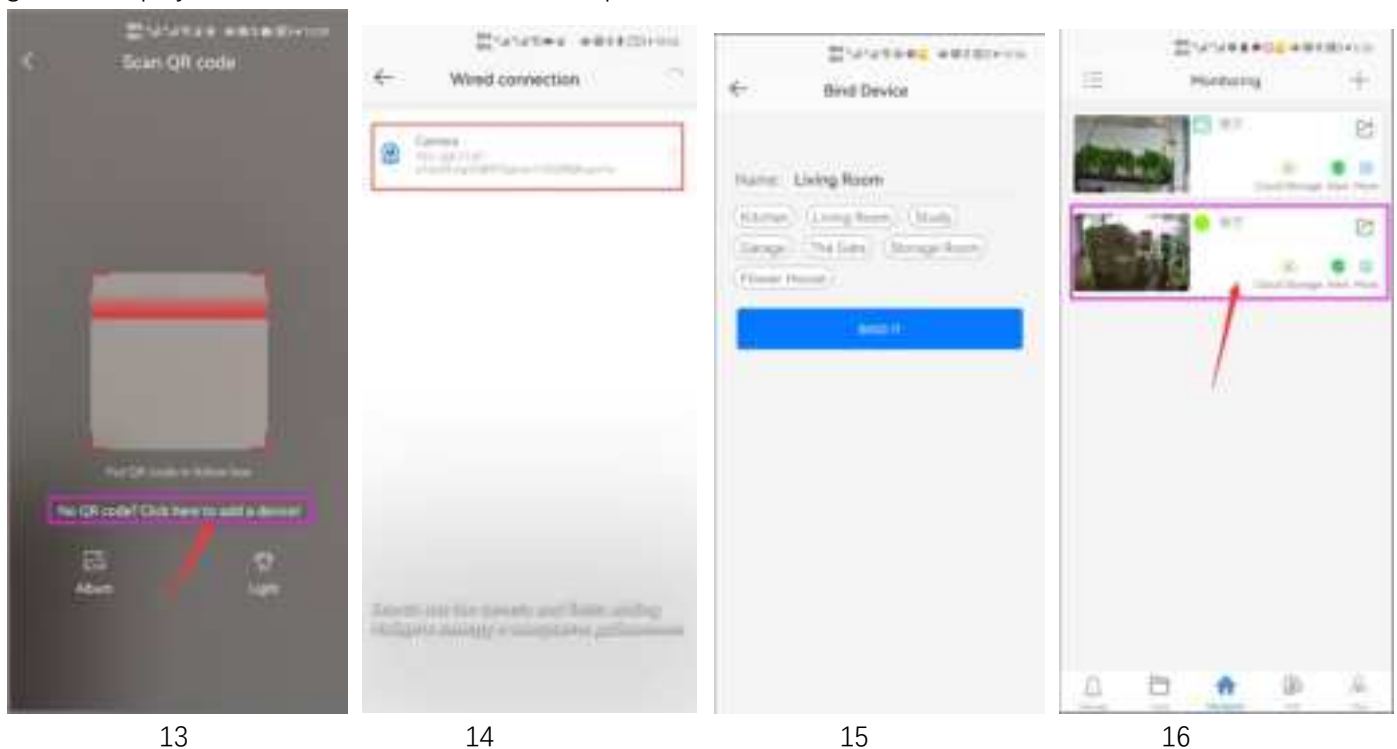

[3],How to Turn on/off auto humanoid Tracking

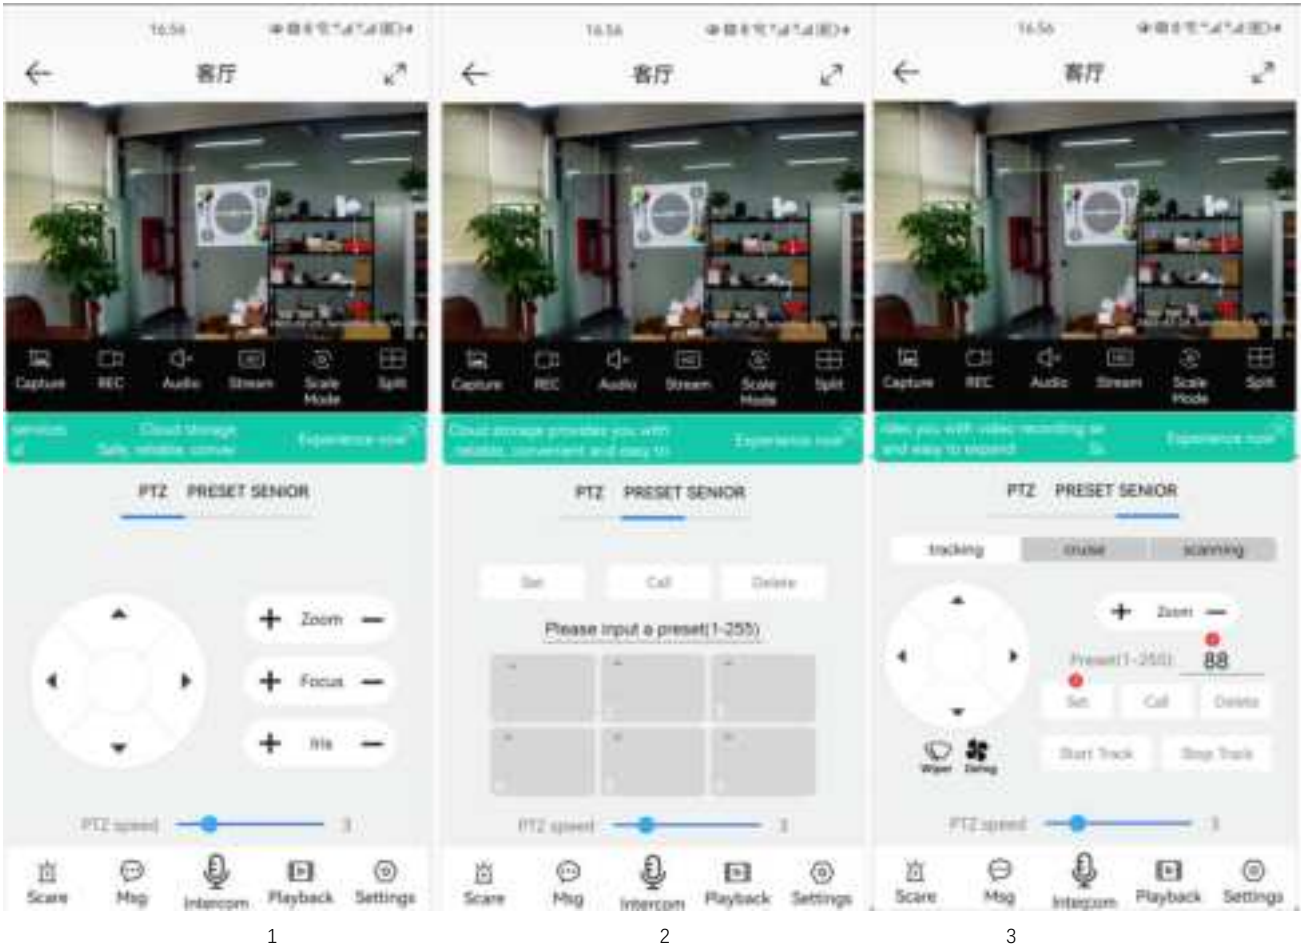

**Fixed Position Tracking**

- 1,Control the PTZ button to rotate the camera to your desired position (set a Return position)
2. Switch the PTZ control interface to “SENIOR” setting interface.
- 3,Click "Start Track" button, The camera will automatically turn on the tracking function (Based on the current location)
- 5,Click "Stop Track" button,the camera will automatically turn off the tracking function



**Cruise tracking:**

Before turning on cruise tracking, you need to set the camera's cruise point in “Preset”. A maximum of 64 preset points can be set. These cruise points are the few locations you want to monitor. The camera will cruise back and forth between these locations to find a tracking target. Really made a camera monitors multiple angles of demand. Turn on cruise trackingfunction,The camera will cycle moving through the preset cruise points. When the person is detected, the camera will turn on the tracking. After the tracking is completed, the camera automatically resumes the cruise until the next time the person is detected, the tracking is turned on again

Set 1,2,3,4...max 64 preset position,Then call 98<sup>th</sup> preset camera will auto turn on cruise tracking. Setting method: [98]+[Call] for turn on cruise

**Wiper and defogging:**



- Click “”the wiper button on the app, and the camera will automatically turn on the wiper and continue to operate 3 times to clear any debris on the glass.(Repetitive operations can be performed.)
- Click“” the fan button on the APP will automatically activate the fan defogging function. Every time it is turned on, the fan defaults to working for 1 hour and supports customization (1-24 hours)

## Part 2: Add and manage cameras using PC software

Software download website: <http://www.yucvision.com/video-link-Download.html>



### [1], Install search tool on your PC

1, Run "AjDevTools\_V5.1.9\_20201215.exe" and complete the installation



1



2




3

2, Run the software, as shown below (4)



4

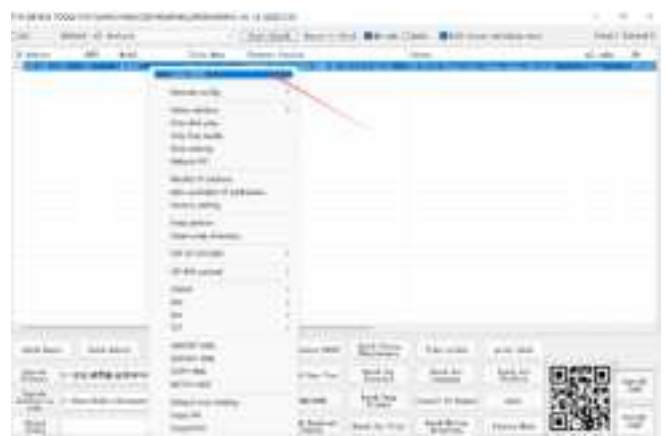

5

3, Here you can modify the IP address of the camera, upgrade the firmware and other parameter settings. Right-click on the IP address to open the camera with a browser, as shown in the figure 5.

4, Enter the browser login interface, login user name: admin, password: 123456, as shown in the following figure (if the browser prompts you to download and install the plug-in, please download and install it): Then click login, as shown in the figure 7



6



7

### [2], Use PC software to search and add cameras([http://www.yucvision.com/upload/file/LMS\\_install\\_v5.0.9\\_20220923\(KP\).exe](http://www.yucvision.com/upload/file/LMS_install_v5.0.9_20220923(KP).exe))

1, Install the LMS computer software.



8



9


The software supports English, Simplified Chinese and Traditional Chinese (if you want to support other languages, we can provide you with language packs, you can translate into the language you want, and then we can provide you with software customization)

2, Follow the prompts to complete the software installation

3, Run the LMS software:user:admin,password:123456



Click LOGIN to log in to the software

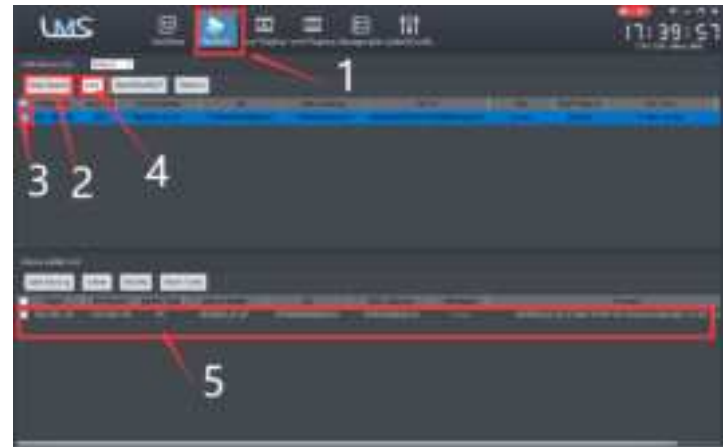

10



11

4. Search and add cameras.Click “Devices>””Start Search”>click“3”>add >successfully added, as shown in the figure 10

Then click”  ” go to Liveview, as shown in the figure 11

Double click on the IP address and the video will automatically appear in the video box on the right.

**[3], Preview and control cameras with videolink PC software**

1, Double-click the Videolink PC software in the directory, follow the prompts to complete the installation of the camera, and then run the camera. [http://www.yucvision.com/upload/file/Videolink\\_install\\_V2.0.0\\_20230613.exe](http://www.yucvision.com/upload/file/Videolink_install_V2.0.0_20230613.exe)

**2,run and login Videolink,**

The username and password here are the account you registered for the first time on your mobile phone.

Click login button go to Videolink

You will see all the cameras under your account, you can preview the

cameras and view the video playback in this way





### Part 3 【OSD menu operation】

1. Enter the PTZ control interface, enter 80 at the preset position, and then click "Call". The control menu will appear on the right side of the video.

2. On the PTZ control interface, click the up (▲) or down (▼) button to move the cursor of the menu,

and click left (◀) or right (▶) to execute parameter selection.



3. The control menu interface is as follows:

## OSD MENU LIST

### Main Menu

### INFORMATION

### CAMERA

### CONFIGURATION

### IR LED

### WIPER START

### SCAN

### Cruise

### Tracking

### Reboot

### Factory Reset

### Exit

### PATTERN

HOME VERSION

KAM VERSION

5.0.1.0

Focus: 1000mm/1000mm/1000mm/1000mm

Focus Limit: 1000mm/1000mm/1000mm/1000mm

Zoom Display: ON/OFF

IRIS Mode: Fix

IRIS SIZE: DAY: 10MM

IRIS SIZE: NIGHT: 10MM

OSD SET

COORDINATE DISPLAY: ON/OFF

MANUAL CALIBRATION: ON/OFF

MANUAL SPEED: 1-10

MODE ACTION: OFF/PRESET-1/CRUISE/SCAN

MODE TIME: 1-10 (seconds)

GUARD

FAN

GUARD PRESET: IS NOT SET

GUARD TIME: 1-30

GUARD PRESET SET — CALL NO SET GUARD

GUARD PRESET CLEAR

PAN OFF (COUNTDOWN) 00:00:00

PANDOME: OFF/ON

DEV DELAY: HOUR: 1-24

LED WORK: ON/OFF

CURRENT ILLUMINANCE: 1-10

LED ON ILLUMINANCE: 1-10

WHITE OFF ILLUMINANCE: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

WIPER POWER: 1-10

PATTERN GROUP: 1

PATTERN SET

PATTERN DELETE

PATTERN START

CALL NO SET START RECORDING

## Part 4 【Function Operation and Description】

**Professional name explanation:** Settings/Add:set preset, Call:Call preset, [N]+[set]=Enter N first and then click SET,“+”=Then



### 1.Preset settings

Rotate the camera to the position you want, then set this position to “N” preset

[N] +[SET], N is preset point, 1-255 number can be optional (But the command Preset isn't include). Set= set preset

### 2.Call preset( need set the corresponding preset point) : [N]+[CALL]

N for preset point, 1-255 number can be optional, camera can move to preset point after call, Zoom, focus and aperture lens will automatically change to preset parameters, camera preset display on the monitor.

### 3.Delete all preset point: [100] +[CALL], Call no.100 preset, clear the all preset :[1]+[0]+[0]+[CALL] .

### 4.Auto scan(Horizontal rotation)

[120]+[CALL], call No.120, the lever of 360 degree clockwise automatic scanning

**Modify speed of Auto scan :**

[121]+[Set] +[N]+[Set]; (N=1-10; N represents scan speed percentage,default is 8=80%)

If you want to change speed of auto scan to **50%**; Setting method: [121]+[Set] +[5]+[Set]

### 5.The inspection group programming

Before you start cruising, you first need to set the preset position in the cruise path.**Please refer to “ 3.Preset settings”**

[101]+[CALL] for Open the first Cruise of 1-64 to scan ;

**Modify the stay time of the Cruise:**

[123] +[Set] + [N]+[Set]; (N=3-10; N represents the dwell time at each preset,default is 5 seconds)

If you change the dwell time to **10 seconds**. Setting method:[123]+[Set] + [10]+[Set]

**Modify speed of the Cruise:**[115]+[Set] + [N]+[Set]; (N=1-10; N represents Cruising speed percentage,default is 8=80%)

If you change speed of the Cruise to **40%**; Setting method:[115]+[Set] + [4]+[Set]

### 6,Left and right limit scan settings

The users can set left and right limit point in the range of the rotation, the speed dome can return scan in setting range

[81]+[SET]: left limit; [82]+[SET]: right limit, [83]+[CALL]: start right and left limit scan

**Modify the speed of right and left limit scan:**

[141] +[SET]+[N] +[SET]; (N=1-10; N represents Cruising speed percentage,default is 5=50%)

If you change speed of the limit scan to **100%**; Setting method:[141]+[Set] + [10]+[Set]

### 7.Idle action settings:The camera performs a certain function in standby mode

[131]+[Call]:OFF Idle position set

**Idle position setting:**[131]+[Set]+[N]+[Call],

N=Function preset;When N=98, the camera Open the first Cruise of 1-16 to scan function. Setting method:[131]+[SET]+ [98]+[CALL]

Set the time when the idle action start: [132]+[set]+[N]+[SET]; (N=1-30; N represents Idle time,default is 5 minutes)

### 8.Restore factory settings for Speed dome

[106]+[Call]+[64]+[CALL] for restore PTZ speed dome to factory setting; Setting method:[106]+[Call]+[64]+[CALL]

## Part 5 Speed dome Command Table

Command Name	Function description	NO.	Call	Set
<b>Tracking Command</b>				
Set a Return Position	This position is the initial position where the camera starts tracking/the automatic return position after tracking:88+set	88		√
Turn on fixed-point tracking	Turn on tracking based on initial position:97+call	97	√	
Set tracking return time	The time when the camera automatically returns to the initial position after the tracking target disappears:153+set+N+set,N=1-30 seconds, default N=10	153		√
Turn on cruise Tracking	Camera activation is based on preset position cruise tracking (some preset positions need to be set first (range: 1-32):98+call	98	√	
Turn off all Tracking	96+set	96		√
tracking Enable ZOOM	The camera automatically ZOOM when tracking:95+set (default)	95		√
Tracking invalid ZOOM	The camera invalid ZOOM when tracking , 95+call	95	√	
Set tracking Pan speed	150+set+N+set, N=1-100,default N=60	150		√
Set tracking Tilt speed	151+set+N+set, N=1-100, default N=50	151		√
<b>Idle action</b>				
Settings idle action <b>Automatically turn on after successful setting</b>	131+set+N+Call; N= Function command N=1 The camera automatically stays at preset position 1 when idle N=101 Turn on cruise; N=97 Turn on Fixed tracking N=83 Turn on area scanning; N=120 Turn on 360°Pan scanning;N=85 Turn on 360°Pan Tracking N=98 Turn on cruise tracking	131		√
Wiper contro l(if support)	71+call (after executing once, the wiper will automatically stop after wiping 3 times, and can be operated repeatedly)	71	√	
Defog control	72+call: Enable defogging function. 72+Settings: Turn off the defogging function. Set the working duration of defogging: 73+settings+N+settings, N=1-24 hours, default N=1 hour	72	√	
Defog time	Set the working duration of defogging: 73+settings+N+settings, N=1-24 hours, default N=1 hour (automatically closed after 1 hour of activation)	73		√
OSD Menu control	Called by 80+, the screen camera control menu can be opened, and the PTZ control direction key is used for rotation and setting.	80	√	
<b>General function setting of Speed dome</b>				
Modify manual control Pan Speed	160+set+N+set, N=1-10, N=Speed ,default N=5	160		√
Modify manual control tilt Speed	161+set+N+set, N=1-10, N=Speed ,default N=5	161		√
360°Pan scanning	120+call	120	√	
Modify Pan scanning	121+set +N+set, N=1-10,default N=5	121		√
<b>Area scanning</b>				
Set Left Border	Set the leftmost position of area scanning , 81+set	81		√
Set right Border	Set the rightmost position of area scanning , 82+set	82		√
Turn on area scanning	83+call,	83	√	
Modify Area scan speed	Modify Area scan speed , 141+set+N+set, N=1-40, default N=6	141		√
Modify automatic recovery time	126+Set+N+set,N=1-10(minute),default N=5			
<b>Cruise</b>				
Turn on cruise	101+call	101	√	
Modify cruise speed	115+set+N+set, N=1-10,default N=5	115		√
Modify cruise dwell time	Modify the dwell time at each preset position :123+set+N+set, N=1-200 seconds, default N=10	123		√
Turn on speed ratio	he larger the ZOOM, the slower the rotation speed(default)	108	√	
Turn off speed ratio	ZOOM changes, rotation speed remains unchanged	108		√
Focus mode setting	Focus mode setting: 250+Set+N+Call, When N=1, the camera will only automatically focus when ZOOM is triggered When N=2, any PTZ action triggered will automatically focus the camera When N=3, changes in PTZ or image transmission will also trigger radial basis function autofocus	107		√
Minimum focus distance setting	Minimum focus distance setting: 251+Set+N+Call, When N=1, the minimum focusing distance is 1.5 meters When N=2, the minimum focusing distance is 3 meters When N=3, the minimum focusing distance is 6 meters			
Del all preset	100+call/140+call	100	√	
Reset speed dome	106+call+64+call	106	√	
Reboot LENS and speed dome	107+set+64+call	107		√