

YAESU

The radio

144/430 MHz
DUAL BAND TRANSCEIVER

FT-65R

FT-65E

Operating Manual



Contents

General Description	1
Features of the FT-65R/E	1
About this manual	2
Downloading the "Advance Manual"	3
Accessories & Options	4
Supplied Accessories	4
Available Options	4
Safety Precautions (Be Sure to Read)	5
Control & Connections (Top & Front Panel) ...	11
Controls & Connections (Side Panel)	12
Controls & Connections (LCD)	13
Normal operation display	13
The Set Mode and Preference Mode display ..	13
Display of features and settings	14
Controls & Connections (Keypad)	15
Installation of Accessories	16
Antenna Installation	16
Preparation of SBR-25LI Battery Pack	16
Installing the Battery Pack	16
Removing the Battery Pack	17
Attaching the Belt Clip	17
Charging the Battery Pack	18
About Desktop charger lamp	18
Low Battery Indication	19
About Battery Indicator Icons	19
Approximate Operating Time and Remaining	
Charge Level Indication	19
Basic Operation	20
Turn the Power ON and OFF	20
Adjust the Audio Volume Level and Squelch	
Setting	20
Changing between VFO mode and Memory	
mode	20
Selecting the Operating Band	20
Frequency Navigation	21
(1) Tuning Frequency	21
(2) Direct Keypad Frequency Entry	21
(3) Scanning	21
Transmission	22
Changing the Transmit Power Level	22
Activating the Set Mode	23
How to use the [P1]-[P4] keys	23
(1) One touch recall of the preferred status	
.....	23
(2) Set Mode Recall feature	23
Preset Functions assigned to the [P1] to [P4]	
keys	24
Setting the Preferred Operating Mode	24
Advanced Operation	25
Turning the Keylock Feature ON and OFF	25
Change the key locking scheme	25
Change the LCD and keypad back light setting ..	
.....	25
Disabling the Keypad and Scan Stop Beeper ..	
.....	26
Repeater Operation	27
Repeater Shifts	27
Automatic Repeater Shift (ARS)	27
Manual Repeater Shift Setting	28
Tone Calling (1750 Hz)	29
Memory Mode	30
Memory Storage	31
Memory Recall	32
Changing the memory label (tag) name	32
HOME Channel Memory Recall	33
Changing the Home Channel Frequency ..	
.....	33
Memory Offset Tuning	33
Deleting Memories	34
Weather Broadcast Channels	35
Severe Weather Alert	35
Scanning	36
Setting the Scan-Resume Technique	36
VFO Scanning	37
Manual VFO Scan	37
Programmed Mode (VFO) Scan	37
Input Character/Symbol List	39
Set (Menu) Mode	40
Troubleshooting	44
The transceiver does not turn on	44
There is no sound	44
There is no transmission of radio waves	44
The keys or PTT do not respond	44
The battery pack cannot be charged or	
battery power depletes immediately after	
charging	45
Specifications	46
General	46
Transmitter	46
Receiver	47
"AUTO" Mode Preset Operating Parameter	47
USA Version	47
Asian/European Version	47

Features of the FT-65R/E

Congratulations on your purchase of the **FT-65R/FT-65E** Yaesu amateur transceiver!

FT-65R/E is a dual band FM transceiver, ruggedly constructed to meet commercial specifications. It is packed with the following popular and valuable features demanded by Amateur Radio operators around the world.

- ☐ Long-Life Battery
 - Supplied 7.4 V 1,950 mAh lithium ion battery.
 - Optional 7.4 V 2,500 mAh lithium ion battery.
- ☐ 5 Watts of Reliable RF Power
 - RF Power Output 5.0 W (High) / 2.5 W (Middle) / 0.5 W (Low) (@7.4 V)
- ☐ Four Quick Recall Keys (User Programmable) for Individual Preferences
 - Set Mode Recall feature and Quick Memory Feature.
- ☐ Powerful Audio
 - Bridged Transless (BTL) amplifier provides One Full Watt of Audio for operation in noisy environments.
- ☐ Rugged Body Construction
 - IP54 Rating and MIL-STD-810-C, D, E certified.
- ☐ Lockout Capabilities
 - Keypad/PTT Lockout.
- ☐ Emergency Features
 - Emergency Operation (Alarm, SOS Flash and HOME channel display), LED Flash light equipped.
- ☐ FM Radio Broadcast Receiver Feature

General Description

About this manual

This manual contains symbols and conventions to call attention to important information.

Symbols	Description
	This icon indicates cautions and alerts the user should be aware of.
	This icon indicates helpful notes, tips and information.
	This icon indicates other pages containing relevant information.
	This icon refers users to the FT-65R/E Advance Manual on the YAESU Website containing relevant information.

- The settings of the transceiver at the time of purchase are referred to as the “default” or “default setting”.
- The names of Set Mode items that are displayed on the LCD, and the transceiver key names, are printed in bold characters in this manual.

Downloading the “Advance Manual”

The Advance Manual provides detail information and features beyond the scope and descriptions in this manual. Download the **FT-65R/E** Advance Manual from the YAESU website and refer to it along with this Operating Manual.

<http://www.yaesu.com/>

The features described in the **FT-65R/E** Advance Manual are below.

RF Squelch	Emergency Channel Operation
Checking the Battery Voltage	ARTS (Automatic Range Transponder System)
VOX Operation (with earpiece mic or Internal / External mic)	Basic ARTS Setup and Operation
VFO Split Mode	DTMF Operation
Using the Squelch Feature	Miscellaneous Settings
Selecting the Squelch Type	Password
Setting CTCSS Tone frequency	Changing the Channel Steps
Setting DCS CODE number	TX Battery Saver
CTCSS/DCS/PAGER/ARTS Bell Operation	Disabling the TX/BUSY LED Indicator
EPCS (Enhanced Paging & Code Squelch)	Automatic Power-Off (APO) Feature
Memory Bank Operation	Transmitter Time-Out Timer (TOT)
Memory Only Mode	Busy Channel Lock-Out (BCLO)
Scanning	Changing the TX deviation Level
Memory scanning	Voice Compander Feature
Weather Alert Scan	Inversion Scramble (Asian version only)
Programmable (Band Limit) Memory Scan (PMS)	Cloning
“Priority Channel” Scanning	Set (Menu) Mode
Automatic Lamp Illumination on Scan Stop	

Accessories & Options

Supplied Accessories

☐ 7.4V, 1,950 mAh Rechargeable Li-Ion Battery Pack	SBR-25LI
☐ AC Adapter (for USA model)	SAD-20B*
AC Adapter (for European / Asian model)	SAD-20C/U*
AC Adapter (for Chinese model)	SAD-20G*
☐ Rapid Charger	SBH-22
☐ Belt Clip	SHB-18
☐ Antenna	SRA-15
☐ Operating Manual	
☐ SBR-25LI/SBR-26LI Manual	
☐ Warranty Card	

Available Options

☐ 7.4V, 1,950 mAh Rechargeable Li-Ion Battery Pack	SBR-25LI
☐ 7.4V, 2,500 mAh Rechargeable Li-Ion Large-Capacity Battery Pack	SBR-26LI
☐ Rapid Charger	SBH-22
☐ AC Adapter (for USA model)	SAD-20B*
AC Adapter (for European / Asian model)	SAD-20C/U*
AC Adapter (for Chinese model)	SAD-20G*
☐ Programming cable	SCU-35
☐ Cloning Cable	SCU-36
☐ VOX Earpiece Microphone	SSM-512B

*B: for 120 VAC, C: for 220-240 VAC, U: for 220-240 VAC w/BF plug, G: for 230 VAC

Availability of accessories may vary. Some accessories are supplied as standard for specific local requirements, while others may be unavailable in some regions. This product is designed to perform optimally when used with genuine Yaesu accessories. Yaesu shall not be liable for any damage to this product and/or accidents such as fire, leakage or explosion of a battery pack, etc., caused by the malfunction of non-Yaesu accessories. Consult your Yaesu dealer for details regarding these and any newly-available options. Connection of any non-Yaesu-approved accessory, should it cause damage, may void the Limited Warranty on this apparatus.

Safety Precautions (Be Sure to Read)

Be sure to read these important precautions, and use this product safely.

Yaesu is not liable for any failures or problems caused by the use or misuse of this product by the purchaser or any third party. Also, Yaesu is not liable for damages caused through the use of this product by the purchaser or any third party, except in cases where ordered to pay damages under the laws.

Types and meanings of the marks



DANGER

This mark indicates an imminently hazardous situation, which, if not avoided, could result in death or serious injury.



WARNING

This mark indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



CAUTION

This mark indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury or only property damage.

Types and meanings of symbols



These symbols signify prohibited actions, which must not be done to use this product safely. For example:  indicates that the product should not be disassembled.



These symbols signify required actions, which must be done to use this product safely. For example,  indicates that the power plug should be disconnected.

Safety Precautions (Be Sure to Read)



DANGER



Do not use this product in an area where RF transmitters are prohibited, e.g., inside of a hospital, airplane, or train.

This product can affect electronic or medical devices.



Do not use this product while riding a bicycle or driving a car. Accidents can result.

Be sure to stop the bicycle or car at a safe place before using this product.



Do not perform transmission in a crowded place for the safety of persons using a medical device such as a cardiac pacemaker.

The radio wave emitted from this product can cause the medical device to malfunction and result in an accident.



Do not touch any material leaking from the LCD display with bare hands.

The chemical may adhere to your skin or enter your eye, and cause chemical burns. In such a case, consult the doctor immediately.



Do not touch any material leaking from the battery pack with bare hands.

The chemical that has stuck to your skin or entered your eye can cause chemical burns. In such a case, consult the doctor immediately.



Do not use this product or the battery charger anywhere inflammable gas is produced.

A fire or explosion can occur.



Do not solder or short-circuit the terminals of the battery pack.

A fire, leak, overheating, explosion, or ignition may result.

Do not carry the battery pack together with a necklace, hairpin, or small metal objects. A short circuit can result.



If thunder and lightning develop nearby when an external antenna is used, immediately turn this transceiver OFF, and disconnect the external antenna from it.

A fire, electrical shock, or damage may result.

Safety Precautions (Be Sure to Read)



WARNING



Do not power this transceiver with a voltage other than the specified power supply voltage.

A fire, electric shock, or damage may result.



Do not use the battery pack for any model other than the specified transceiver.

A fire, leak, overheating, explosion, or ignition can result.



Do not make very long transmissions.

The main body of the transceiver may overheat, resulting component failure or operator burns.



Do not disassemble or make any alteration to this product.

An injury, electric shock, or failure may result.



Keep the terminals of the battery pack clean.

If terminal contacts are dirty or corroded, a fire, leak, overheating, explosion, or ignition can result.



Do not handle the battery pack or charger with wet hands. Do not insert or remove the power plug with wet hands.

An injury, leak, fire, or failure may result.



If smoke or a strange odor is emitted from the main body, battery pack, or battery charger, immediately turn the transceiver off; remove the battery pack, and remove the power plug from the outlet.

A fire, chemical leak, overheating, component damage, ignition, or failure may result. Contact the dealer from which you purchased this product or Yaesu Amateur Customer Support.



Do not use the battery pack which is externally damaged or deformed.

A fire, leak, heating, explosion, or ignition can result.



Do not use any battery charger which is not specified by Yaesu.

A fire or failure can result.



When transmitting, keep the transceiver at least 5.0 mm (3/16 inch) away from your body.

Use only the supplied antenna. Do not use modified or damaged antennas.



If charging of the battery pack cannot be completed within the specified charging time, immediately remove the power plug of the battery charger from the outlet.

A fire, leak, overheating, explosion, or ignition can result.

Safety Precautions (Be Sure to Read)



CAUTION



Do not dangle or throw the transceiver by holding its antenna.

This may injure others and may also result in damage and failure of the transceiver.



Do not use the transceiver in a crowded place.

The antenna may strike others and result in an injury.



Do not place this transceiver in direct sunlight or near a heater.

The case may be deformed or discolored.



Do not place this transceiver in a humid or dusty place.

A fire or failure may result.



While transmitting, keep the antenna as far from you as possible.

Long-time exposure to electromagnetic waves may have a negative impact on your health.



Do not wipe the case using thinner and benzene etc.

Use only a soft, dry cloth to wipe stains from the case.



If the transceiver will not be used for an extended period, turn it OFF and remove the battery pack for safety.



Do not drop, strike, or throw the transceiver.

A failure or damage may result.



Keep magnetic cards and video tape away from the transceiver.

The data recorded on cash cards or videotapes may be erased.



Charge the battery pack within the temperature range from +5 °C to +35 °C (+41 °F to +95 °F).

Charging the battery pack outside this temperature range can cause leak, overheating, decrease in performance, or reduction in service life can result.



When unplugging the power cord of the battery charger, be sure to hold the power plug.

Pulling the power cord can damage it and cause a fire or electronic shock.



Do not use the earpiece microphone, earphones, or headphones at an extremely high volume level.

Hearing impairment can result.



Keep this product out of the reach of children.

Injury to the child, or damage to the transceiver may result.



Install the hand strap and belt clip securely.

Improper installation may cause the FT-65R/E to fall or drop, resulting in an injury or damage.

Safety Precautions (Be Sure to Read)



CAUTION



Do not place a heavy object on the power cord of the battery charger.

The battery cord can be damaged, resulting in a fire or electric shock.



Do not use the included battery charger to charge any battery pack which is not specified for use with the charger.

A fire can result.



Do not operate the transceiver near the TV or radio.

Radio disturbance can occur in the transceiver, the TV, or the radio.



Do not use any products other than the specified options and accessories.

Failure or miss operation may result.



When the battery charger is not in use, remove its power plug from the outlet.



Before discarding a depleted battery pack, affix tape or insulating covering to its terminals.



Be sure to check with the manufacturer of any hybrid or fuel-saving automobile regarding use of the transceiver in that car.

Noise generated by an onboard electrical device (inverter, etc.) can disrupt the normal operation of the transceiver.



This product has splash, water, and dust resistant features and conforms to "IP54" when the included antenna and battery pack are installed and rubber caps are securely attached to the MIC/SP jack. If this transceiver gets wet, dry it with a soft cloth, do not leave it exposed to the moisture.

Exposure to excessive moisture may degrade the transceiver performance, shorten its life, or cause a failure or electrical shock.

About Splash, Water, and Dust Resistant Features Conforming to IP54

When the included antenna and battery pack are installed, and the MIC/SP jack is securely covered with rubber caps, this product is dust and splash resistant. To ensure continued Splash, Water, and Dust Resistant Features be sure to check the following points before each use.

☐ **Check for damages, deterioration, and dirt.**

Antenna rubber, key switch rubber, MIC/SP jack rubber cap, and battery pack seals.

☐ **Cleaning**

Wipe with a dry soft cloth.

When this product is contaminated with seawater, sand or dirt, clean it with a soft damp cloth immediately.

☐ **Recommended maintenance interval**

To insure continued optimal performance, it is recommended that maintenance be performed annually, or when any damage or deterioration is found. Note that the maintenance service is subject to fees.

☐ **Do not pour or immerse this product in the following liquids:**

Sea, pool, hot spring, water containing soap, detergent, or bath additive, alcohol, or chemicals.

☐ **Do not leave this product for an extended time in a very humid location:**


Bathroom, kitchen, or humid place.

☐ **Other precautions**

Do not remove the rubber cap from the battery pack, the MIC/SP jack when water drops have accumulated on the transceiver, or when it is placed in a wet environment. This may result in water penetrating the transceiver, and causing equipment failure.


This product is not totally waterproof, and must never be immersed in water.

Control & Connections (Top & Front Panel)

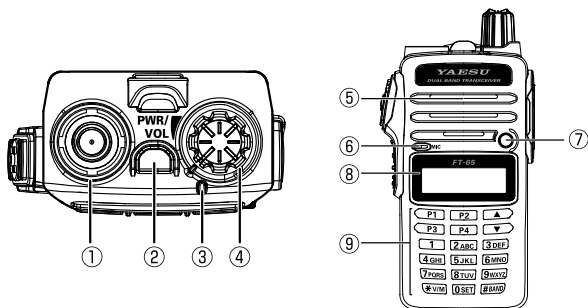


- ① **Antenna Jack** 16
Connect the supplied SMA male antenna (or another antenna presenting a 50-Ohm impedance) here.
- ② **Emergency key** Refer to the Advance Manual
 - Press this switch briefly to turn the LED Flash-Light.
 - Press and hold it for three seconds to enable the Emergency Alarm beep functions.
 - Press the keypad F key, and then press this switch to blink the LED Flash-Light for SOS.
- ③ **TX/BUSY Indicator Lamp**..... 20
This indicator glows green when the squelch opens, and it glows red during transmit.
- ④ **PWR/VOL Knob**..... 20
Turn this control clockwise to turn the transceiver ON and to increase the volume. Counter-clockwise rotation into the click-stop will turn the transceiver OFF.
- ⑤ **Speaker** 20
The internal speaker is located here.
- ⑥ **Microphone**..... 22
The internal microphone is located here.
- ⑦ **LED Flash-Light**
- ⑧ **LCD (Liquid Crystal Display)** 13
The display shows current operating condition.
- ⑨ **Keypad** 15
These 18 keys select the important operating functions of the FT-65R/E.

Controls & Connections (Side Panel)

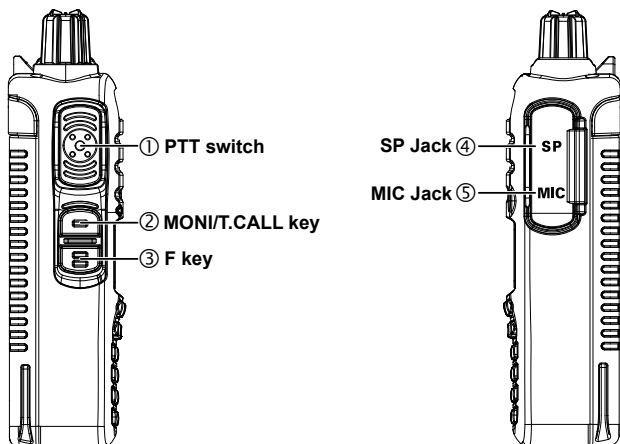


- ① **PTT (Push To Talk) Switch** 22
- Press this switch to transmit, and release it (to receive) after your transmission is completed.
 - In the Set mode, press the PTT switch to save the new setting and return to normal operation.
- ② **MONI/T.CALL Key (Function is selectable from Set mode)** 29
- **USA/Asian Version:**
Press this switch to open the squelch, and listen for very weak signals near the background noise level.
- **European Version:**
Pressing this switch activates the T-CALL (1750 Hz) for repeater access.
- ③ **F key** 23
- Press and hold this key to enter the Set Mode.
- ④ **SP Jack**
This three-conductor miniature jack provides connection for an earpiece microphone.
- ⑤ **MIC Jack** Advance Manual
- This three-conductor miniature jack provides connection for an earpiece microphone and clone cable.

Normal operation display

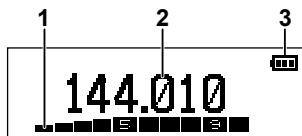

Single Display Mode (Default)

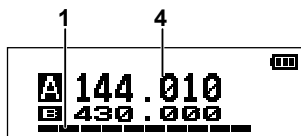

Dual Display Mode

- | | |
|---------------------------------|------------------------------|
| 1 S & PO Meter..... 22 | 3 Battery Indicator..... 19 |
| 2 Operating Frequency 21 | 4 VFO-A / VFO-B 24 |

The Set Mode and Preference Mode display



Set Mode




Preferred Operating Mode

- | | |
|---------------------------|---------------------------------------|
| 5 Set Mode Menu 23 | 6 Preferred Operating Mode Menu.. 24 |
|---------------------------|---------------------------------------|

Control & Connections (LCD)

Display of features and settings

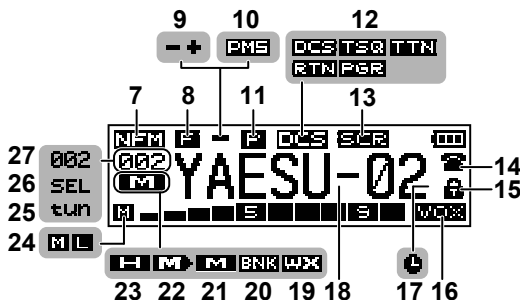

7	Operating Mode	18	Memory Tag Name
8	Secondary Keypad Active	19	Weather Channel
9	Repeater Shift Direction....	20	Memory Bank
10	Programmable Memory (Mode (VFO)) Scan	21	Memory Mode
11	Priority Channel	22	Skipped Memory Channel.....
12	Squelch Operation.....	23	Home Channel
13	Scramble Feature*	24	TX Power Level Indicator
14	DTMF Mode	25	Memory Offset Tuning.....
15	Keypad Lock	26	Selecting ICON indicator
16	VOX Feature	27	Memory (BANK) Channel Number
17	Automatic Power-Off Feature..		

* This feature is displayed depending on the transceiver version.

Controls & Connections (Keypad)

Key	Primary Function (PRESS Key)	Secondary Function (PRESS F + Key)	Third Function (Press and Hold Key)
1	Frequency entry digit "1"	—	Recalls the "Weather" broadcast channel bank
2 ABC	Frequency entry digit "2"	—	Activates the ARTS feature
3 DEF	Frequency entry digit "3"	—	—
4 GHI	Frequency entry digit "4"	—	—
5 JKL	Frequency entry digit "5"	—	—
6 MNO	Frequency entry digit "6"	—	Key Lock feature
7 PQRS	Frequency entry digit "7"	—	—
8 TUV	Frequency entry digit "8"	—	—
9 WXYZ	Frequency entry digit "9"	—	—
0 SET	Frequency entry digit "0"	—	—*1
P1	recall the stored or assigned setting	HOME (Fixed setting)	store or assign a setting to the key
P2		TX PWR (Fixed setting)	
P3		SQL TYPE (Fixed setting)	
P4		REV (Fixed setting)	
* V/M	Switches the frequency control between the VFO and Memory Systems	Activates the Priority function	Memory write mode
# BAND	Switches the band control between VHF, UHF and FM RADIO Broadcast	PMS(Program Memory (Mode) Scan)	Program Scan Setting


*1 : When entering a frequency from the keypad, there is a short-cut for frequencies ending in zero - after the last non-zero digit, press and hold the [0/SET] key to enter all the zeros at once.

Installation of Accessories

Antenna Installation

The supplied antenna provides good results over the entire frequency range of the transceiver. However, for enhanced reception on certain non-Amateur frequencies, you may wish to connect an antenna designed specifically for that frequency range, as the supplied antenna is necessarily a compromise outside the Amateur bands, and cannot be expected to provide high performance at all frequencies.

To install the supplied antenna, hold the bottom end of the antenna, then screw it onto the mating connector on the transceiver until it is snug. Do not over-tighten by using of extreme force.

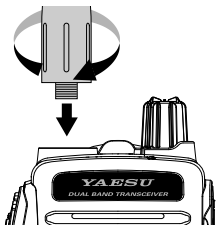


- Never transmit without having an antenna connected.
- When installing the supplied antenna, never hold the upper part of the antenna while screwing it onto the mating connector on the transceiver.
- If using an external antenna for transmission, ensure that the SWR presented to the transceiver is 1.5:1 or lower, to avoid excessive feedline loss.

Preparation of SBR-25LI Battery Pack

The **SBR-25LI** is a high-performance Li-Ion battery providing long operating time in a compact package. Under normal use, the **SBR-25LI** may be used for approximately 300 charge cycles, after which operating time may be expected to decrease. When an old battery pack exhibits diminished capacity, replace the pack with a new one.


Installing the Battery Pack

1. Insert the battery pack into the battery compartment on the back of the transceiver(①).
2. Push the battery in until the battery latch on the lower back side of the transceiver clicks securely(②).

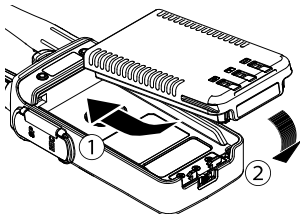


Removing the Battery Pack

To remove the battery, turn the transceiver OFF. While sliding the latch in the direction of the arrow, as shown in the illustration, slide the battery pack downward and out of the transceiver.

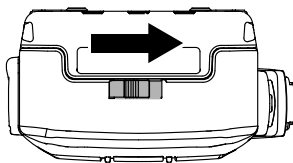


Attaching the Belt Clip

Attach the belt clip on the back of transceiver using the supplied screws (two).

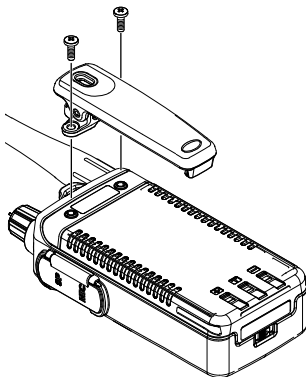

Charging the Battery Pack

If the battery has never been used, or its charge is depleted, it may be charged by placing the **FT-65R/E** in the **SBH-22** Rapid Charger desktop cradle, connected with the **SAD-20B/C/U/G** AC adapter.

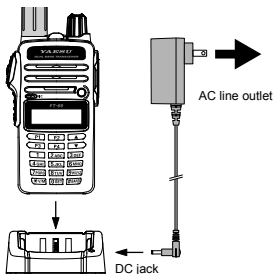

FT-65R/E / SBH-22 with SAD-20B
(Example of USA model)

A fully-discharged **SBR-25LI** Battery Pack will be charged completely in about **3.5 hours** (depending on the battery being charged). Disconnect the **SAD-20B/C/U/G** from the DC jack and the AC line outlet.




- The **SAD-20B/C/U/G** is not designed to power the transceiver for operation (reception or transmission).
- Please be advised that the **SAD-20B/C/U/G** may contribute noise to TV and radio reception in the immediate vicinity, so we do not recommend its use adjacent to such devices.
- It takes about **4.5 hours** to charge the **SBR-26LI** (optional).

About Desktop charger lamp


The battery charging status is indicated by the desktop charger lamp, as shown in the below table:

Lamp Status	Description
Red lighting	Charging
Green lighting	Charge Complete
Red blinking	Charge Error

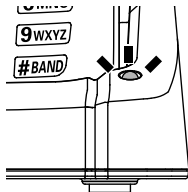

Low Battery Indication

- As the battery discharges during use, the voltage will gradually become lower. When the battery voltage is too low for reliable operation, the “” icon will blink on the LCD display, indicating that the battery pack must be recharged before further use.
- Avoid recharging Li-Ion batteries before the “” indicator is observed, as this can degrade the charge capacity of your Li-Ion battery pack.



About Battery Indicator Icons

Battery charge indicator icons are shown below:

Icons	Description
	Full battery power
	Enough battery power
	Low battery power
 (w/blink)	charge (or replace) the battery

Approximate Operating Time and Remaining Charge Level Indication

Approximate operating time for the transceiver with the fully charged battery pack is as follows.


Frequency Band		SBR-25LI	SBR-26LI
Amateur Band	144 MHz band	Approx. 10.0 hours	Approx. 12.5 hours
	430 MHz band	Approx. 9.0 hours	Approx. 11.5 hours
FM Broadcast Band		Approx. 11.5 hours	Approx. 15.0 hours

Transmit 6 seconds; Receive 6 seconds; Stand by 48 seconds.

Basic Operation

Turn the Power ON and OFF


- Be sure the Battery Pack is installed, and is fully charged. Connect the antenna to the top panel Antenna jack.
- Rotate the **PWR/VOL** knob out of the click-stop to turn the transceiver ON. The current DC supply voltage will be shown on the display for two seconds. After the two second interval, the display will commence the normal operating frequency indication.
- To turn the transceiver OFF, turn the PWR/VOL knob fully counter-clockwise into the click-stop position.

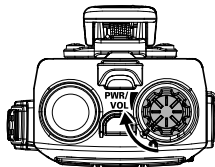

Adjust the Audio Volume Level and Squelch Setting

Rotate the **PWR/VOL** knob to adjust the receiver volume. Listen to the open squelch background noise to adjust the audio to a comfortable level.

1. To set the squelch level, press the **F** key and then press the **MONI/T.CALL** key, to open the SQ LEVEL set mode.
2. Press the [**▲**] or [**▼**] key to adjust to a level at which the background noise is muted.
3. Press the **PTT** switch to save the squelch setting and return to normal operation.

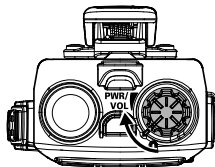


Changing between VFO mode and Memory mode

Press the [***V/M**] key repeatedly to toggle the frequency control between the VFO mode and the Memory mode.

Selecting the Operating Band

- Press the [**#BAND**] key repeatedly to change the operating frequency between the 144 MHz Band, the 430 MHz Band, and the 95 MHz (FM Radio Broadcast) Band.
- Frequency ranges are shown in the table.

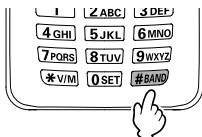

Frequency Range				
	RX	TX	RX	TX
USA model	136-174 MHz	144-148 MHz	400-480 MHz	430-450 MHz
European model	136-174 MHz	144-146 MHz	400-480 MHz	430-440 MHz
Asian model	136-174 MHz	136-174 MHz	400-480 MHz	400-480 MHz

Frequency Navigation

The **FT-65R/E** will initially be operating in the “VFO” mode. The VFO permits free tuning throughout the currently-selected operating band in designated frequency steps (operating channels).

Three basic frequency navigation methods are provided on the **FT-65R/E**.

(1) Tuning Frequency

Pressing the [▲] key tunes the **FT-65R/E** toward a higher frequency, while pressing the [▼] key will lower the operating frequency, in steps preprogrammed for the current operating band.

(2) Direct Keypad Frequency Entry

The operating frequency may be entered directly from the keypad by pressing the numbered digits on the keypad in the proper sequence.

Examples:

To enter 145.560 MHz, press [1] → [4] → [5] → [5] → [6] → [0]

To enter 145.000 MHz*, press [1] → [4] → [5] → [0] → [0] → [0]

*There is a short-cut to enter frequencies ending in zeros - after the last non-zero digit, press and hold the [0/SET] key to enter the remaining zeros.


(3) Scanning

Manual VFO Scan:

To manually initiate VFO scanning, press and hold either the [▲] or [▼] key to begin upward or downward scanning, respectively.

Programmed Mode VFO Scan:

To begin scanning within a limited sub-band range from the VFO mode, press and hold the [#BAND] key to select the bandwidth for the Programmed Mode (VFO) scanner. Then press the **F** key and the [#BAND] key to start scanning.

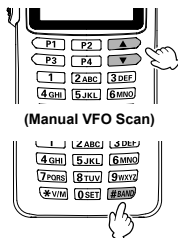

The scanner will stop when it receives a signal strong enough to open the Squelch threshold.

The **FT-65R/E** will then hold on that frequency in accordance with the “RESUME” mode setting (Set Mode Item “**25 RESUME**”).

Press the **PTT** switch momentarily to cancel the scanning (this only stops the scan; it does not cause a transmission to occur).

Basic Operation



The direction of the scan may not reverse while **FT-65R/E** is scanning.



For more details on the scanning, see page 36.

Transmission

- To transmit, press the **PTT** switch, and speak into the front panel microphone (located in the lower left-hand corner of the speaker grille) in a normal voice level. The TX/BUSY indicator will glow red during transmission.
- To return to the receive mode, release the **PTT** switch.
- During transmit, the power level will be indicated relatively on the bar graph at the bottom of the LCD. Full scale deflection confirms “High Power” operation. Five bars indicate “Medium Power” operation, while one bar indicates “Low Power” operation. Additionally, while operating on the “Low Power” or “Medium Power” setting, the “**L**” icon or “**M**” icon will appear at the bottom-left of the display.

Changing the Transmit Power Level

To change the power level:

1. Press the **F** key and then press the [**P2**] key.
 - The present TX power output level will appear on the display.
 - To adjust the TX power in the Set Mode, press and hold the **F** key. Then repeatedly press the [**▲**] or [**▼**] key to select Set Mode item “**32 TX PWR**” and then press the **F** key.
2. Press the [**▲**] or [**▼**] key to select the desired power output level. Available selections are “**HI**” (5 W), “**MID**” (2.5 W), and “**LOW**” (0.5 W).
3. Press the **PTT** switch to save the new setting and return to normal operation.

Activating the Set Mode


Use the following procedure to activate the Set Mode and configure the transceiver parameters.

1. Press and hold the **F** key to enter the Set Mode.
2. Repeatedly press the [**▲**] or [**▼**] key to select the Set Mode Item to be adjusted.
3. Press the **F** key momentarily to enable adjustment of the Set Mode Item.
4. Press the [**▲**] or [**▼**] key to adjust the level, or choose the parameter, of the selected Set Mode Item.
5. After completing the selection and adjustment, press the **PTT** switch to save the new setting and exit to normal operation.

How to use the [P1]-[P4] keys

[P1], [P2], [P3] and [P4] keys may be used for the followings:

- One Touch Recall of a preferred setting
- One Touch Recall of the Mode settings

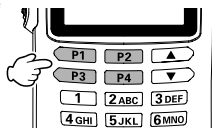

Key	Store (Press and hold)	Recall (Press)
P1 P2 P3 P4	Store a preferred operating status or a Set Mode	Recall the stored operating status or the Set Mode

(1) One touch recall of the preferred status

1. To store a preferred setting, Press and hold one of the [P1], [P2], [P3] or [P4] keys.
2. To recall a stored one touch preferred status, press the associated [P1], [P2], [P3] or [P4] key.

(2) Set Mode Recall feature

1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select the Set Mode Item you frequently use.
3. When the desired Set Mode item is displayed on the screen, press and hold one of the [P1], [P2], [P3] or [P4] keys to store the Set Mode item.
4. To recall a stored one touch preferred Set Mode, press a [P1], [P2], [P3] or [P4] key to recall the assigned Set Mode Item.

Basic Operation

Preset Functions assigned to the [P1] to [P4] keys

Press the **F** key, then press the **[P1]**, **[P2]**, **[P3]** or **[P4]** keys to recall the preset functions as listed in the table at the right. These **F** key functions may not be changed.

Key	Function
F key + P1	HOME channel
F key + P2	TX PWR setting
F key + P3	SQL TYPE setting
F key + P4	REV

Setting the Preferred Operating Mode

The following reset or preferred operating modes may be selected.

Display	Description
F1:SET RESET	Reset the Set Mode settings to factory defaults.
F2:MEM RESET	Clear the Memory settings to factory defaults.
F3:BANK RESET	Clear the Memory Bank assignments.
F4:ALL RESET	Clear the All memories and other settings to factory defaults.
F5:MEM-ONLY	Operation on the Memory mode only.
F6:VHF-ONLY	Operation on the VHF Band only.
F7:UHF-ONLY	Operation on the UHF Band only.
F8:DUAL DISP	Display both VFO-A and VFO-B.
F9:CLONE	Clone mode.

1. Turn the transceiver OFF.
2. Press and hold the **MONI/T.CALL** key and the **PTT** switch simultaneously, while turning the radio ON.
3. When the LCD backlight comes on, release the **MONI/T.CALL** key and **PTT** switch.
4. Referring to the above table, press the **[▲]** or **[▼]** key to select the desired operating mode.

F1:SET RESET
F2:MEM RESET
F3:BANK RESET
F4:ALL RESET

5. Press the **F** key momentarily to activate the selected operating mode.

After becoming familiar with the basic operations of the **FT-65R/E**, you will want to learn about some of the really handy operating and convenience features.

Turning the Keylock Feature ON and OFF

The **FT-65R/E** keypad may be locked to prevent accidental frequency change or inadvertent transmissions,

1. Press and hold the **[6]** key to lock the keys and switches.

- The  icon will appear on the LCD display.
- To unlock, press and hold the **[6]** key again.



Change the key locking scheme

The following locking schemes may be selected.

Display	Description
KEY(default setting)	Only the front panel keypad is locked out.
PTT	The PTT switch is locked out (TX not possible).
P+K	Both the PTT switch and the keypad are locked out.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the **[▲]** or **[▼]** key to select Set Mode Item "**15 KEY LOCK**".
3. Press the **F** key momentarily to enable adjustment of this Item.
4. Press the **[▲]** or **[▼]** key to choose one of the above listed locking schemes.

15 KEY LOCK
→KEY

5. Press the **PTT** switch to save the new setting and return to normal operation.

Change the LCD and keypad back light setting

Display	Description
5secKEY (default setting)	Keypad and LCD Lamp lights for 5sec.
10secKEY	Keypad and LCD Lamp lights for 10sec.
30secKEY	Keypad and LCD Lamp lights for 30sec.
CONT	Keypad and LCD Lamp lights continually.
OFF	Disable the Keypad and LCD Lamp function.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the **[▲]** or **[▼]** key to select Set Mode item "**16 LAMP**".
3. Press the **F** key to enable adjustment of this Item.

Advanced Operation

- Press the [▲] or [▼] key to select one of the modes described above.

16 LAMP

→ 5secKEY

- Press the **PTT** switch to save the new setting and return to normal operation.

Disabling the Keypad and Scan Stop Beeper

An audible beep tone will sound when a keypad button is pressed, and also when the receiver scanning stops. The beep tone operation may be changed as shown in the below table:

Display	Description
KEY	The beeper sounds when a keypad button is pressed.
KEY+SC(default setting)	The beeper sounds when a keypad button is pressed, or when the receiver scanning stops.
OFF	The beeper does not sound.

- Press and hold the **F** key to enter the Set Mode.
- Press the [▲] or [▼] key to select Set Mode item "**5 BEEP**".
- Press the **F** key to enable adjustment of this Item.
- Press the [▲] or [▼] key to select "**OFF**".
- Press the [▲] or [▼] key to select one of the modes described above.
- Press the **PTT** switch to save the new setting and return to normal operation.
- To turn the beep back on again, select "**KEY**" or "**KEY+SC** (Default setting)" in step 4 above.

5 BEEP

→OFF

Repeater stations are often located on mountaintops or other high locations, and provide a dramatic extension of the communication range for low-powered hand-held or mobile transceivers. The **FT-65R/E** includes a number of features which make repeater operation simple and enjoyable.

Repeater Shifts

The transceiver has been configured at the factory for the repeater shifts customary in the sales destination country. For the 144 MHz band the repeater shift will be 0.6 MHz. On the 430 MHz band, the shift may be 1.6 MHz, 7.6 MHz, or 5 MHz (depending on the transceiver version).

Automatic Repeater Shift (ARS)

The **FT-65R/E** provides a convenient Automatic Repeater Shift feature, which automatically applies the appropriate repeater frequency shift when tuning in the repeater sub-bands of the designated country. The ARS setting options are listed below:

Display	Description
ARS : ON (default setting)	Enable the Automatic Repeater Shift function.
ARS : OFF	Disable the Automatic Repeater Shift function.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the **[▲]** or **[▼]** key to select Set Mode item "**24 REPEATER**".
3. Press the **F** key to enable adjustment of **ARS**.
4. Press the **[▲]** or **[▼]** key to select "**ON**" or "**OFF**".
5. Press the **PTT** switch to save the new setting and return to normal operation.

24 REPEATER
→ ARS : ON
MODE : SIMPLEX
SHIFT : 0.600M

Repeater Operation

Manual Repeater Shift Setting

If the ARS feature has been deactivated, or if a repeater shift direction other than the established ARS setting is desired, the repeater shift direction may be set manually.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode item "**24 REPEATER**", then press the **F** key to enable this item.
3. Press the [**▲**] or [**▼**] key to select **MODE**, and press **F** key to enable this item.
4. Press the [**▲**] or [**▼**] key to select the Shift Mode, and press the **F** key to enable adjustment of this Item.

24 REPEATER
ARS : ON
→MODE : SIMPLEX
SHIFT : 0.600M

Display	Description
MODE : SIMPLEX (default setting)	Disable the Manual Repeater Shift function.
MODE : +REP	Enable the Manual Repeater Shift + direction.
MODE : -REP	Enable the Manual Repeater Shift - direction.

5. To change the repeater shift magnitude, press the [**▲**] or [**▼**] key to select **SHIFT** in step 4 (shown above).
6. Press the **F** key to enable adjustment of this Item.
7. Press the [**▲**] or [**▼**] key to select the repeater shift magnitude (0.05 MHz ~ 99.95 MHz(USA/European version)/0.025 MHz ~ 99.975 MHz(Asian version)).
8. Press the **PTT** switch to save the new setting and return to normal operation.

Tone Calling (1750 Hz)

For operation in counties that require a 1750-Hz burst tone for repeater access (typically in Europe), the **MONI/T.CALL** key may be programmed to serve as a “Tone Call” key instead. Use Set Mode item “**19 MON/T-CL**”, to change the configuration of this key.

Display	Description
MONITOR (default setting (USA and Asian version))	Pressing the MONI/T.CALL key opens the receiver noise squelch.
T-CALL1750 (default setting (European version))	Pressing the MONI/T.CALL key activates the 1750 Hz burst tone.
T-CALL2100	Pressing the MONI/T.CALL key activates the 2100 Hz burst tone.
T-CALL1000	Pressing the MONI/T.CALL key activates the 1000 Hz burst tone.
T-CALL1450	Pressing the MONI/T.CALL key activates the 1450 Hz burst tone.

1. Press and hold the **F** key to enter the Set mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode item “**19 MON/T-CL**”.
3. Press the **F** key to enable adjustment of this Item.
4. Press the [**▲**] or [**▼**] key to select a Tone Calling feature.
5. Press the **PTT** switch to save the new setting and return to normal operation.


19 MON/T-CALL
→**MONITOR**

To access a tone burst controlled repeater, press and hold in the **MONI/T.CALL** key for the time duration specified by the repeater owner/operator. The transmitter will automatically be activated, and the 1750-Hz audio tone will be superimposed on the carrier. Once the repeater is accessed, release the **MONI/T.CALL** key and use the **PTT** switch to activate the transmitter thereafter.

Memory Mode

The **FT-65R/E** provides a wide variety of memory system resources. These include:

- 200 “Standard” memory channels, numbered “001” through “200”.
- 3 “Home” channels, providing storage and quick recall of one prime frequency on each operating band.
- 10 sets of band-edge memories, also known as “Programmable Memory Scan” channels, labeled “L01/U01” through “L10/U10”
- 10 Memory Banks, labeled “BANK 1” through “BANK10” Each Memory Bank can be assigned up to 200 channels from the “standard” and “PMS” memory channels.
- 10 “Weather Broadcast” Channels.

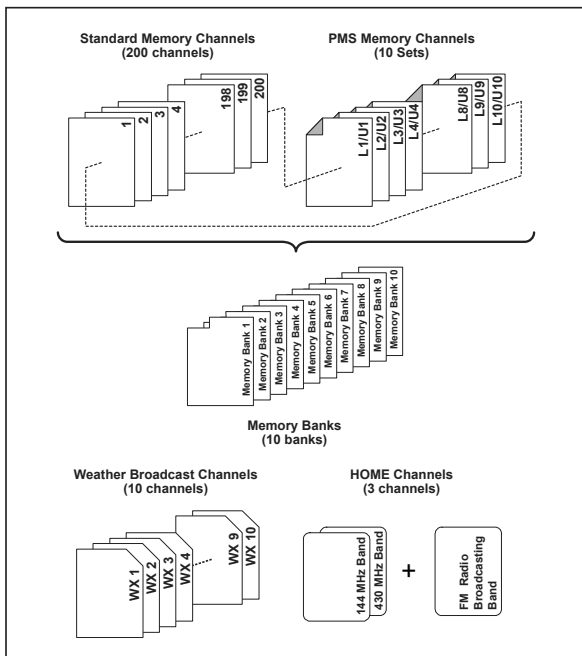

Memory Storage

1. Select the desired frequency, while operating in the VFO mode.
Be sure to set up any desired CTCSS or DCS tones, as well as any desired repeater offset. The power level may also be set at this time, if you wish to store it.
2. Press and hold the [***V/M**] key.
A blank memory channel will be displayed automatically.
3. If it is desired to change to another channel number, press the [**▲**] or [**▼**] key.
4. Press the Alphabet / Numeric keys to input characters and create a “Tag” (label) for the memory channel.



If not inputting a “Tag” (label), proceed to step 5.



- To move the cursor to the next character, press the **F** key.
- To correct a mistake, press the **F** key repeatedly until the cursor returns to the character position.



For more details on the character/symbol, see page 39.

5. Press and hold the [***V/M**] key to store the frequency and settings into the selected memory channel.
“**MEM-IN**” on the display will blink twice and the tone will sound to complete the memory setting.

Memory Recall

1. While operating in the VFO mode, press the [***V/M**] key to enter the Memory mode.
2. Press the [**▲**] or [**▼**] key to select the desired memory channel.
3. To return to the VFO mode, press the [***V/M**] key.



When the transceiver is already set to the Memory mode, an easy way to recall a memory channel is to enter the memory channel number using the numeric keypad.

For example: in the Memory Mode to recall memory channel #002, press the [**2**] key.



To recall Memory Channel #200, enter “200”. To recall Programmable Memory channels “**L1/U1**” through “**L10/U10**” enter “**201/202**” through “**210/220**”.

Changing the memory label (tag) name

1. Press the [***V/M**] key to recall the memory channel that you wish to label or rename.
2. Press and hold the **F** key to enter the Set Mode.
3. Press the [**▲**] or [**▼**] key to select Set Mode item “**20 NAME TAG**”.
4. Press the **F** key to enter (or edit) the channel name tag.



“**NAME-TAG**” message will appear.

5. Press the Alphabet / Numeric keys to enter the characters or symbols for the memory channel “Tag” (label).
 - To move the cursor to the next character, press the [**▲**] key.
 - To correct a mistake, press the [**▼**] key repeatedly until the cursor returns to the character position.



For more details on character/symbol input, see page 39.

6. Press the **PTT** switch to save the new setting and return to the memory channel.

HOME Channel Memory Recall

A “HOME” channel memory is provided for each operating band, to allow quick recall of a favorite operating frequency on each band. The default home channels are below:

Default Home Channels	
Band	Frequency
144 MHz Band	144.000 MHz
430 MHz Band	430.000 MHz
FM Radio Band	95.000 MHz

1. Press the **F** key, then press the [**P1**] key.

The default home channel, as listed above, is displayed.



2. Press the **F** key, then press the [**P1**] key to exit to normal operation.
Repeat this process to recall the HOME channel on any operating band.

Changing the Home Channel Frequency

The home channel frequencies may be changed from the default settings.

1. While operating in the VFO mode, select the desired frequency.
2. Press and hold the [***V/M**] key.

A blank memory channel will be displayed.

3. Press the [**P1**] key.

- “HOME-IN” will be displayed, and then exit to normal operation.



- The home channel frequency is changed and overwriting is complete.

Memory Offset Tuning

Once a particular memory channel is recalled, it is easy to tune off that channel, as though you were in the “VFO” mode.

1. Recall the memory channel.
2. Press the [**#BAND**] key to activate the “Memory Channel Tuning” feature.

The Memory Channel number on the LCD display will be replaced by “tun”.





When an alpha-numeric Tag is shown in place of the memory channel operating frequency display, the display will automatically revert to display the operating frequency along with the “tun” indication. It is not necessary to enter the Menu and change from the alpha-numeric Tag display to the operating frequency display.

3. Press the [**▲**] or [**▼**] key to tune to the desired frequency.
4. To return to the original memory frequency, just press the [**#BAND**] key. The display will revert to a display of the alpha-numeric Tag (if any) that may have originally appeared on the LCD.



To store the new frequency while using Memory Offset Tuning, press and hold the [***V/M**] key (per the normal memory storage procedure). The next-available clear memory location will be displayed. Then press and hold the [***V/M**] key again to save the new frequency the available memory channel.

Deleting Memories

All excerpt the Memory Channel “001” and the Home Channels may be easily deleted.



Once deleted, the channel data cannot be recovered, so make a note of the information (Memory Channel settings, etc), before deleting the memories.


1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode item “**18 MEM DEL**”.
3. Press the **F** key to enable adjustment of this Item.
4. Press the [**▲**] or [**▼**] key to select the memory channel to be “deleted”.
5. Press the **F** key to delete the selected memory channel.
6. Press the **PTT** switch to return to normal operation.

18 MEM DELETE
→ 24: LONDON
25: 145 . 215
26: 618590W

Weather Broadcast Channels

In the USA, the VHF Weather Broadcast Station Memory Channel Bank has been pre-programmed at the factory for immediate access to NOAA weather information stations.

1. Press and hold the [1] key to recall the Weather Broadcast Memory Bank.
2. Press the [▲] or [▼] key to select the desired Weather Broadcast channel.



3. To scan for additional or stronger Weather stations, just press the **PTT** switch (or press and hold the [▲] or [▼] key).

When the scanner pauses on a station, press the **PTT** switch once to halt the scan, or press it again to restart the scan.

CH	Frequency	CH	Frequency
01	162.550 MHz	06	162.500 MHz
02	162.400 MHz	07	162.525 MHz
03	162.475 MHz	08	161.650 MHz
04	162.425 MHz	09	161.775 MHz
05	162.450 MHz	10	163.275 MHz

4. To return to normal operation, press the [*V/M] key, or press and hold the [1] key again.

Severe Weather Alert

In the event of extreme weather disturbances, such as severe thunderstorms and hurricanes, the NOAA (National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050 Hz tone and subsequent weather report on one of the NOAA weather channels.

Scanning

The **FT-65R/E** makes available scanning of the stored memory channels, or scanning of the entire operating band, or scanning of a programmable sub band portion. Scanning will halt when signals are encountered, and communication may be initiated on that frequency.

Operation is basically the same in each of the above scanning modes. Before beginning, take a moment to select the way the scanning will resume after it halts on a signal.

Setting the Scan-Resume Technique

Three options for the Scan-Resume mode are available:

Display	Description
BUSY (default setting)	In BUSY mode, the scanner will halt on a signal it encounters. Scanning will resume one second after the other station signal ceases transmitting. In the case of constant-carrier signals like Weather Station broadcasts, the scanner will likely remain on this frequency indefinitely.
HOLD	In HOLD mode, the scanner will halt on a signal it encounters. Scanning will only resume when it is manually re-initiated.
TIME	In TIME mode, the scanner will halt on a signal it encounters, scanning will resume after five seconds even if a signal is still on the frequency. To cancel scanning, press the the PTT switch, [▲] or [▼] key.

1. Press and hold the **F** key to enter the Set mode.
2. Press the [**▲**] or [**▼**] key to select Set Mode Item "**25 RESUME**".
3. Press the **F** key to enable adjustment of this Set Mode Items.
4. Press the [**▲**] or [**▼**] key to select the desired scan-resume mode.
5. Press the **PTT** switch to save the setting and exit to normal operation.

25 RESUME
→BUSY

VFO Scanning

The **FT-65R/E** provides two VFO scanning functions: "Manual VFO Scanning" and "Programmed Mode (VFO) Scanning."

Manual VFO Scan

1. If necessary, press the [***V/M**] key to change to the VFO mode.
2. Press and hold the [**▲**] or [**▼**] key to initiate upward or downward scanning, respectively.
3. When scanning encounters a signal strong enough to open the squelch, the scanner will halt temporarily; the decimal point of the frequency display will blink to indicate this "Resuming" condition.
4. The scanning will resume according to the Scan-Resume mode selected in the Set Mode Item "**25:RESUME**".
5. To cancel scanning, press the **PTT** switch, [**▲**] or [**▼**] key.

Programmed Mode (VFO) Scan

1. Press and hold the [**#BAND**] key.
2. Press the [**▲**] or [**▼**] key to select the bandwidth for Programmed Mode (VFO) scanner.

PROG VFO SCAN →BAND

Available selections are +1 MHz, +2 MHz, +5 MHz, ALL, PMS-X, and BAND.

Display	Description
BAND (default setting)	The scanner will sweep frequencies on the current operating band.
+1MHz	The scanner will sweep ± 1 MHz from the operating frequency.
+2MHz	The scanner will sweep ± 2 MHz from the operating frequency.
+5MHz	The scanner will sweep ± 5 MHz from the operating frequency.
ALL	The scanner will sweep all frequencies.
PMS-X	The scanner will sweep frequencies designated by the currently selected PMS (Programmable Memory Scan) frequency pair.



PMS-X will appear in the [**#BAND**] selections after setting a PMS frequency pair.

Scanning

3. Press the **[#BAND]** key to save the new setting and return to normal operation.
4. Press the **F** key, then press the **[#BAND]** key to start scanning.
5. When scanning encounters a signal strong enough to open the squelch, the scanning will halt temporarily; the decimal point of the frequency display will blink during this "Pause" condition.
6. The scanner will then resume according to the Scan-Resume mode selected in the "RESUME" setting.
7. To cancel scanning, press the **PTT** switch, **[▲]** or **[▼]** key.

Input Character/Symbol List

On a character inputting display such as the memory mode “tag” display, the characters and symbols may be input as below:

Key	Key Assignment	Key	Key Assignment
1	1	7 PQRS	7 P Q R S p q r s
2 ABC	2 A B C a b c	8 TUV	8 T U V t u v
3 DEF	3 D E F d e f	9 WXYZ	9 W X Y Z w x y z
4 GHI	4 G H I g h i	0 SET	0 (blank character)
5 JKL	5 J K L j k l	* V/M	* + - , . / : ; @ (blank character)
6 MNO	6 M N O m n o		

Set (Menu) Mode

The **FT-65R/E** Set Mode, already partially described in the previous chapters, may be activated to select or change various transceiver functions. Many of the useful parameter configurations have not been fully detailed in this manual. Refer to the chart below for a list of the Set Mode Items and their various parameters.

1. Press and hold the **F** key to enter the Set Mode.
2. Press the [**▲**] or [**▼**] key to select the Set Mode Item to be adjusted.
3. Press the **F** key momentarily to enable adjustment of the Set Mode Item.
4. Press the [**▲**] or [**▼**] key to adjust or select the parameter to be changed on the Set Mode Item selected in above step.
5. After completing your selection and adjustment, press the **PTT** switch momentarily to save the new setting and exit to normal operation.



Press and hold the **F** key to move from the lower menu contents to the upper menu contents in the Set Mode.

Item (lower menu item)	Function	Values	Default Value
1 APO	Setting of the Automatic Power-Off feature.	OFF / 0.5H to 12.0H (Step 0.5H)	OFF
2 ARTS	Selects the Beep option and the Polling Interval during ARTS operation.	BEEP= INRANG / ALWAYS / OFF INTV= 25SEC / 15SEC	BEEP=OFF INTV= 25SEC
3 BATTSAVE	Selects the Receive-mode Battery Saver interval ("sleep" ratio)	200mS / 300mS / 500mS / 1SEC / 2SEC / OFF	200mS
4 B-CH.L/O	Enables/Disables the Busy Channel Lock-Out feature.	OFF / ON	OFF
5 BEEP	Beep function Enable/Disable on pressing the keypad, or stopping the receiver scanning.	KEY+SC / KEY / OFF	KEY+SC
6 BELL	Select the number of CTCSS/DCS/PAGER/ARTS Bell ringer repetitions.	OFF / 1Time / 3Times / 5Times / 8Times / CONTINUE	OFF
7 COMPANDE (COMPANDER)	Enables/Disables the Voice Compander feature	OFF / ON	OFF

Set (Menu) Mode

Item (lower menu item)	Function	Values	Default Value
8 CTCSS (CTCSS TONE)	Setting the CTCSS Frequency TX and RX	50 CTCSS tones / OFF	TX=100.0Hz RX=100.0Hz
9 CW ID	CW Identifier during ARTS operation.	TX= OFF / ON ID= ----- (6 characters)	TX= OFF ID= blank
10 DC VOLT	displays Battery DC Voltage.	-	-
11 DCS CODE	Setting the DCS CODE TX and RX	104 DCS CODEs / OFF	TX=023 RX=023
12 DTMF SET	Selects the MANUAL or AUTO DTMF tones. Setting the DTMF autodialer sending delay time and Speed.	MODE= MANUAL / AUTO DELAY= 50mS / 250mS / 450mS / 750mS / 1000mS SPEED= 50mS / 100mS	M=MANUAL D=450mS S=50mS
13 DTMF WRT	Programming to DTMF autodialer.	-	-
14 EDG.BEEP	Enables/Disables the Band-edge beeper while selecting the frequency via the [▲] or [▼] key.	BEEP OFF / BEEP ON	BEEP OFF
15 KEY LOCK	Keyboard Lock function	KEY / PTT / P+K	KEY
16 LAMP	Selects the LCD/ Keypad Lamp mode.	5secKey / 10secKey / 30secKey / CONT / OFF	5secKey
17 LED	Selects the enable or disable TX/BUSY LED function.	TX= ON / OFF BUSY= ON/ OFF	TX=ON BUSY=ON
18 MEM DEL (MEM DELETE)	Deletes Memory Channel	-	-
19 MON/T-CL (MON/T-CALL)	Selects the MONI or T.CALL switch function.	MONITOR / T-CALL1750 / T-CALL2100 / T-CALL1000 / T-CALL1450	MONITOR (*) or T-CALL1750 (*)
20 NAME TAG	Renames Alpha-Numeric "Tags" for the Memory channels.	-	-

Set (Menu) Mode

Item (lower menu item)	Function	Values	Default Value
21 PAGER	Setting the TX CTCSS of 2 tone and the RX CTCSS of 2 tone. Enables/disables the Answer Back function.	TX: ** ** RX: *** ACK : ON / OFF	TX=05 47 RX=05 47 ACK=OFF
22 PASSWORD	Enables/disables the Password feature	OFF / ON /	OFF
23 PRI.RVT	Enables/disables the Priority Revert feature.	RVT.OFF / RVT. ON	RVT.OFF
24 REPEATER	ARS / MODE / SHIFT function setting	ARS= ON / OFF MODE=SIMPLEX / +RTP / -RTP SHIFT= 0.05 MHz - 99.95 MHz/0.025 MHz - 99.975 MHz*(per **KHz*)	ARS=ON MODE=SIMPLEX SHIFT=**.***M (*)
25 RESUME	Selects the Scan Resume mode.	BUSY / HOLD / TIME	BUSY
26 RF SQL	Adjusts the RF Squelch threshold level.	S-1 / S-2 / S-3 / S-4 / S-5 / -6 / S-8 / S-FULL / OFF	OFF
27 SCN.LAMP	Enables/Disables the Scan lamp while paused.	ON / OFF	ON
28 SKIP (SKIP SCAN)	Selects the Memory Scan "Skip" channel-selection mode.	-	-
29 SQL TYPE	Selects the Tone Encoder and/or Decoder mode.	OFF / R-TONE / T-TONE / TSQL / REV TN / DCS / PAGER	OFF
30 STEP	Setting of the frequency steps.	5 / 6.25 / 10 / 12.5 / 15 / 20 / 25 / 50 / 100 kHz, or AUTO	AUTO
31 TOT	Setting of the TOT time.	1 min - 30 min (per 1 min) or OFF	3min
32 TX PWR	Selects TX Power	HI(5W) / MID(2.5W) / LOW(0.5W)	HI(5W)

Set (Menu) Mode

Item (lower menu item)	Function	Values	Default Value
33 TX SAVE	Enables/Disables the Transmitter Battery Saver.	SAVE OFF / SAVE ON	SAVE OFF
34 VFO.SPL	Enables or disables "VFO Split" operation.	VSP.OFF / VSP.ON	VSP.OFF
35 VOX	Enable / Disable VOX function.	VOX OFF / VOX ON	VOX OFF
36 WFM.RCV	Broadband FM Radio(WFM) function Enables/Disables	WFM.ON / WFM.OFF	WFM.ON
37 WIDE/NAR	Select Wide (± 5 kHz) or Narrow (± 2.5 kHz) TX Deviation.	WIDE / NARROW	WIDE
38 WX ALERT	Enables/Disables the Weather Alert Scan feature.	ALT.OFF / ALT. ON	ALT.OFF
39 SCRAMBLE(*)	Inversion scrambling (Encryption)	SCRB.OFF/SCRB.ON	SCRB.OFF

(*) : This function may be displayed, depending on the transceiver version.

Troubleshooting

If you suspect a malfunction, check the following items before requesting a repair.

The transceiver does not turn on.

- Is the battery depleted?
- Charge the battery pack after purchase, and when the transceiver has not been used for a long time.
- Is the battery pack properly attached?
Refer to “Installing the Battery Pack” and securely mount the battery pack.

There is no sound.

- Is the squelch level (or S meter squelch) set too high?
Press the **MONI/T.CALL** key and verify that you can hear white noise.
Adjust the squelch level (or S meter squelch) when receiving a weak signal.
- Is the volume low?
Rotate the **PWR/VOL** knob clockwise to increase the volume.
- Is the tone squelch or DCS on?
When the tone squelch or DCS is on, the sound is not output until the transceiver receives a signal containing the same tone frequency or DCS code set.
For more details on the DCS code, refer to the Advance Manual.

There is no transmission of radio waves.

- Are you pressing the **PTT** switch properly?
- Is the PTT lock on?
- Is the Busy TX Block (BCLO function) on?
When the Busy TX Block (BCLO function) is on, transmission is inhibited when receiving a signal, even if the **PTT** switch is pressed. Wait until the signal being received stops and then press the **PTT** switch.
- Is the transmission frequency on a ham radio band?
- Is the voltage of the battery pack correct?
Check the remaining charge on the battery pack.

The keys or PTT do not respond.

- Is the Keypad Lock or PTT Lock on?

The battery pack cannot be charged or battery power depletes immediately after charging.

- Is the battery pack being charged with a charger specified by Yaesu? Charge the battery pack using the accessory AC Adapter (SAD-20B/C/U/G) or the rapid charge cradle (SBH-22).
- Is the battery pack in use exhausted?

If the “Charging Error” appears on the desktop charger lamp when charging, there is a chance the battery pack is over discharged. If the error is repeatedly displayed after charging the battery pack several times, the battery pack may have reached its service life or be defective. Battery packs are consumables. Please replace an exhausted battery pack with a new one immediately. Battery packs can be charged and reused up to approximately 300 times.

Some specific combinations of signals may cause internal beats (“birdies”) from high frequencies, caused by the internal oscillator. This is not a malfunction.

(See the calculation formula below: “n” is for the arbitrary integer). Also, depending on the combination of simultaneously received signals, there may be fluctuations in receive sensitivity.

- Receive Frequency = 13 MHz × n multiplicative
- Receive Frequency = 19.2 MHz × n multiplicative

Specifications

General

Frequency Ranges:	RX 136 - 174 MHz 400 - 480 MHz
	TX 136 - 174 MHz (Asian version) 144 - 146 MHz (European version) 144 - 148 MHz (USA version) 400 - 480 MHz (Asian version) 430 - 440 MHz (European version) 430 - 450 MHz (USA version)
	FM Broadcast 65-108 MHz
Channel Steps:	5 / 6.25 / 10 / 12.5 / 15 / 20 / 25 / 50 / 100 kHz
Frequency Stability:	±5 ppm (−10 °C to +60 °C, +14 °F to +140 °F)
Repeater Shift:	±600 kHz (144 MHz) ±1.6 / 5.0 / 7.6 MHz (430 MHz)
Emission Type:	F2D, F3E, F2A
Antenna Impedance:	50 Ohms
Supply Voltage:	Nominal: 7.4V DC, Negative Ground
Current Consumption:	205 mA (Receive) 200 mW Output (Approx. @7.4V) 100 mA (Standby, Saver Off) 18 mA (Standby, Saver On) 4 mA (Auto Power Off) 1.5 A (5 W Tx , 144 MHz) 7.4 V DC 1.7 A (5 W Tx , 430 MHz) 7.4 V DC
Operating Temperature:	− 4 °F to +140 °F (− 20 °C to + 60 °C)
Case Size:	2.0" (W) x 4.1" (H) x 1.2" (D) (52 x 104.5 x 30 mm) (W/O knob and antenna)
Weight:	9.17 oz (260 g) with SBR-25LI and antenna

Transmitter

RF Power Output:	5.0 W (High) / 2.5 W (Middle) / 0.5 W (Low) (@ 7.4 V with SBR-25LI)
Modulation Type:	Variable Reactance
Maximum Deviation:	±5.0 kHz
Spurious Emission:	At least 60 dB down (@ High and Middle power) At least 40 dB down (@ Low power)
Microphone Impedance:	2 kOhms

Receiver

Circuit Type:	Direct-Conversion
Sensitivity :	0.2 μ V for 12 dB SINAD (140 - 150 MHz, NFM) 0.2 μ V for 12 dB SINAD (420 - 470 MHz, NFM)
Selectivity:	12 kHz / 35 kHz (-6 dB / -60 dB)
AF Output:	0.8 W @ 16 ohms for 10% THD (@ 7.4 V) (Internal SP Max Power 1 W) 0.8 W @ 16ohms for 10%THD (@ 7.4 V) (EXT SP Jack Max Power 1 W)

Specifications are subject to change without notice, and are guaranteed within the 144 and 430 MHz amateur bands only. Frequency ranges will vary according to transceiver version; check with your dealer.

"AUTO" Mode Preset Operating Parameter

USA Version

Frequency Range (MHz)	Mode	Step
136.000-144.000	FM	12.5 kHz
144.000-148.000	FM	5k Hz
148.000-156.000	FM	12.5 kHz
156.000-157.450	FM	25 kHz
157.450-160.600	FM	12.5 kHz
160.600-160.975	FM	25 kHz
160.975-161.500	FM	12.5 kHz
161.500-162.900	FM	25 kHz
162.900-174.000	FM	12.5 kHz

Frequency Range (MHz)	Mode	Step
400.000-420.000	FM	12.5 kHz
420.000-450.000	FM	25 kHz
450.000-470.000	FM	12.5 kHz
470.000-480.000	FM	50 kHz
65.000-108.000(RX only)	WFM	100 kHz

Asian/European Version

Frequency Range (MHz)	Mode	Step
136.000-160.600	FM	12.5 kHz
160.600-162.025	FM	25 kHz
162.025-174.000	FM	12.5 kHz

Frequency Range (MHz)	Mode	Step
400.000-430.000	FM	12.5 kHz
430.000-440.000	FM	25 kHz
440.000-470.000	FM	12.5 kHz
470.000-480.000	FM	50k Hz
65.000-108.000(RX only)	WFM	100 kHz

EU Declaration of Conformity

We, Yaesu Musen Co. Ltd of Tokyo, Japan, hereby declare that this radio equipment **FT-65E** is in full compliance with EU Radio Equipment Directive 2014/53/EU. The full text of the Declaration of Conformity for this product is available to view at <http://www.yaesu.com/jp/red>

ATTENTION – Conditions of usage

This transceiver works on frequencies that are regulated and not permitted to be used without authorisation in the EU countries shown in this table. Users of this equipment should check with their local spectrum management authority for licensing conditions applicable for this equipment.

					
AT	BE	BG	CY	CZ	DE
DK	ES	EE	FI	FR	UK
GR	HR	HU	IE	IT	LT
LU	LV	MT	NL	PL	PT
RO	SK	SI	SE	CH	IS
LI	NO	–	–	–	–

Disposal of Electronic and Electric Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electrical Equipment should be recycled at a facility capable of handling these items and their waste by-products.

Please contact a local equipment supplier representative or service center for information about the waste collection system in your country.



1. Changes or modifications to this device that are not expressly approved by YAESU MUSEN could void the user's authorization to operate this device.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference including received, interference that may cause undesired operation.
3. The scanning receiver in this equipment is incapable of tuning, or readily being altered, by the User to operate within the frequency bands allocated to the Domestic public Cellular Telecommunications Service in Part 22.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

DECLARATION BY MANUFACTURER

The Scanner receiver is not a digital scanner and is incapable of being converted or modified to a digital scanner receiver by any user.

WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.



Copyright 2017
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.

1710C-FC
Printed in China

