

iConverter® XM5 Aggregation Demarcation Device

Quick Start Guide

General and Copyright Notice

This publication is protected by U.S. and international copyright laws. All rights reserved. The whole or any part of this publication may not be reproduced, stored in a retrieval system, translated, transcribed, or transmitted, in any form, or by any means, manual, electric, electronic, electromagnetic, mechanical, chemical, optical or otherwise, without prior explicit written permission of Omnitron Systems Technology, Inc.

The following trademarks are owned by Omnitron Systems Technology, Inc.: FlexPoint™, FlexSwitch™, HybridNID®, iConverter®, miConverter™, NetOutlook®, OmniLight®, OmniConverter®, RuggedNet®, Omnitron Systems Technology, Inc.™, OST™ and the Omnitron logo.

All other company or product names may be trademarks of their respective owners.

The information contained in this publication is subject to change without notice. Omnitron Systems Technology, Inc. is not responsible for any inadvertent errors.

Warranty

This network product and the included AC/DC power adapter are warranted to the original purchaser (Buyer) against defects in material and workmanship for a period of two (2) years from the date of shipment. The warranty for the network product can be extended to three (3) years by registering the product at www.omnitron-systems.com/support within ninety (90) days from the date of shipment. During the warranty period, Omnitron will, at its option, repair or replace a product which is proven to be defective with the same product or with a product with at least the same functionality.

For warranty service, the product must be sent to an Omnitron designated facility, at Buyer's expense. Omnitron will pay the shipping charge to return the product to Buyer's designated US address using Omnitron's standard shipping method.

Limitation of Warranty

The foregoing warranty shall not apply to product malfunctions resulting from improper or inadequate use and/or maintenance of the equipment by Buyer, Buyer-supplied equipment, Buyer-supplied interfacing, unauthorized modifications or tampering with equipment (including removal of equipment cover by personnel not specifically authorized and certified by Omnitron), or misuse, or operating outside the environmental specification of the product (including but not limited to voltage, ambient temperature, radiation, unusual dust, etc.), or improper site preparation or maintenance.

No other warranty is expressed or implied. Omnitron specifically disclaims the implied warranties of merchantability and fitness for any particular purpose.

The remedies provided herein are the Buyer's sole and exclusive remedies. Omnitron shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any legal theory.

Environmental Notices

The equipment covered by this manual must be disposed of or recycled in accordance with the Waste Electrical and Electronic Equipment Directive (WEEE Directive) of the European Community directive 2012/19/EU on waste electrical and electronic equipment (WEEE) which, together with the RoHS Directive 2015/863/EU, for electrical and electronic equipment sold in the EU after July 2019. Such disposal must follow national legislation for IT and Telecommunication equipment in accordance with the WEEE directive: (a) Do not dispose waste equipment with unsorted municipal and household waste. (b) Collect equipment waste separately. (c) Return equipment using collection method agreed with Omnitron.

The equipment is marked with the WEEE symbol shown to indicate that it must be collected separately from other types of waste. In case of small items the symbol may be printed only on the packaging or in the user manual. If you have questions regarding the correct disposal of equipment go to www.omnitron-systems.com/support or e-mail to Omnitron at intlinfo@omnitron-systems.com.



Safety Warnings and Cautions



ATTENTION: Observe precautions for handling electrostatic discharge sensitive devices.



WARNING: Potential damage to equipment and personal injury.



WARNING: Risk of electrical shock.

PRODUCT OVERVIEW

This document describes the basic installation and configuration of the XM5 Aggregation Demarcation Device.

The iConverter XM5 is an intelligent Aggregation Demarcation Device, that delivers advanced Carrier Ethernet services and provides demarcation at the edges of a network.

The XM5 supports two 10G SFP+ or XFP ports, twelve 1G SFP ports and two 10/100/1000 RJ-45 ports. The two SFP+ or XFP ports support 10G Ethernet fiber transceivers up to power level 4 and/or 1000BASE-X fiber transceivers. The twelve 1G SFP ports support 100BASE-FX, 1000BASE-X fiber transceivers and/or 10/100/1000BASE-T copper transceivers.

[See data sheet for available models and options.](#)

For more information including the complete User Manual on the XM5 models, [access Omnitron's registration page and register the product.](#)

INSTALLATION PROCEDURE

- 1) AC/DC Power Installation
- 2) Installing SFP/SFP+/XFP Transceivers and Connecting the Cables
- 3) Configure Module via Command Line Interface
- 4) Verify Operation

1) AC/DC POWER INSTALLATION

AC Power

A power source should be available within 5 ft. of the XM5 and installed per the National Electrical Code ANSI/NFPA-70.


The XM5 requires a 80-264VAC, 0.8 Amps, 50-60Hz power outlet. Appropriate overloading protection should be provided on the AC power source outlets utilized

The standard operating temperature of this equipment is 0 to 50 degrees C. If installed in a closed or multi-module rack assembly, the operating ambient temperature of the rack must not exceed the maximum rated 50 degrees C. See specifications on page 8 for wide and extended temperature ranges.

Installation of the equipment should be such that the air flow in the front, back and side vents of the XM5 are not compromised or restricted.

Never use this equipment to carry any weight except its own. Never use it as a shelf to support the weight of other equipment.

Attach the AC power cord to the power receptacle on the front of the XM5. The XM5 will illuminate the power LED.

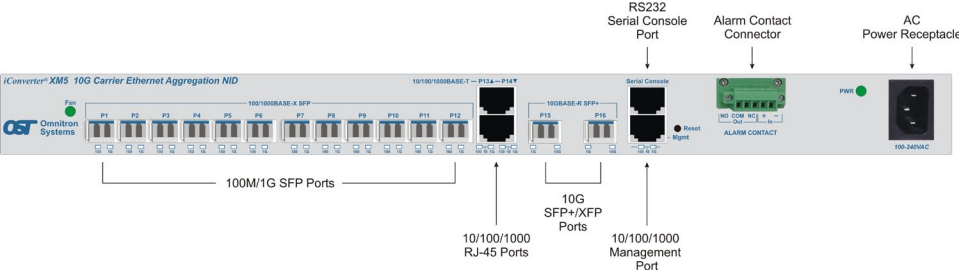

Front View with AC Power Connector

WARNING!!!

NEVER ATTEMPT TO OPEN THE CHASSIS OR SERVICE THE POWER SUPPLY OR FAN MODULE. OPENING THE CHASSIS MAY CAUSE SERIOUS INJURY OR DEATH. THERE ARE NO USER REPLACEABLE OR SERVICEABLE PARTS IN THIS UNIT.

DC Power

A power source should be available within 5 ft. of the XM5. The over current protection for connection with centralized DC shall be provided in the building installation, and shall be a UL listed circuit breaker rated 20 Amps, and installed per the National Electrical Code, ANSI/NFPA-70.

The XM5 requires +/- 20 to 60VDC (48VDC @ 1.2 Amp max rated power). Appropriate overloading protection should be provided on the DC power source outlets utilized.

WARNING: Only a DC power source that complies with safety extra low voltage (SELV) requirements can be connected to the DC-input power supply.

WARNING REGARDING EARTHING GROUND:

- This equipment shall be connected to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode is connected.
- This equipment shall be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system shall not be earthed elsewhere.
- The DC supply source is to be located within the same premises as this equipment.
- There shall be no switching or disconnecting devices in the earthed circuit conductor between the DC source and the earthing electrode conductor.

Locate the DC circuit breaker of the external power source, and switch the circuit breaker to the OFF position.

Prepare a power cable using a three conductor insulated wire (not supplied) with a 14 AWG gauge minimum. Cut the power cable to the length required.

Strip approximately 3/8 of an inch of insulation from the power cable wires.


Connect the power cables to the terminal by fastening the stripped ends to the DC power connector.

WARNING: Note the wire colors used in making the positive, negative and ground connections. Use the same color assignment for the connection at the circuit breaker.

Connect the power wires to the circuit breaker and switch the circuit breaker ON. The Power LED will indicate the presence of power.

Depending on the model number of the XM5, a second power source is available. Use the same power supply installation procedure above for the second power supply.

Installation of the equipment should be such that the air flow in the front, back and side vents of the XM5 are not compromised or restricted.

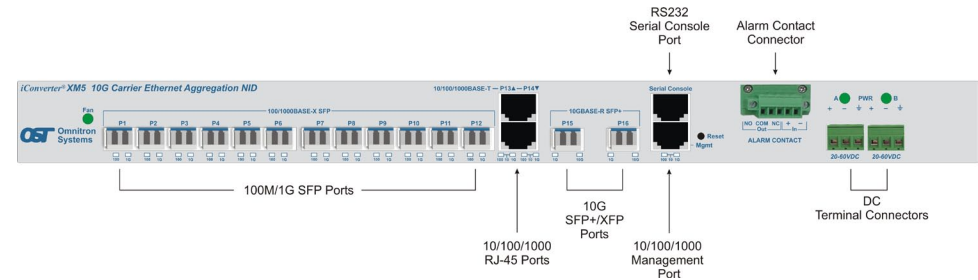

Front View with Dual DC Terminal Connector

WARNING!!!

NEVER ATTEMPT TO OPEN THE CHASSIS OR SERVICE THE POWER SUPPLY OR FAN MODULE. OPENING THE CHASSIS MAY CAUSE SERIOUS INJURY OR DEATH. THERE ARE NO USER REPLACEABLE OR SERVICEABLE PARTS IN THIS UNIT.

2) INSTALLING SFP/SFP+/XFP TRANSCEIVERS AND CONNECTING THE CABLES


- a. Insert the fiber or copper transceivers into the 10G/1G receptacles on the module.
NOTE: The release latch of the transceiver must be in the closed (up) position before insertion.
The XM5 has the ability to detect the speed and automatically configure the port to match the speed of approved transceivers. Some fiber transceivers will need to be configured using the *port* CLI commands to configure the speed of the port to match the speed of the installed SFP transceiver.
- b. Connect the appropriate multimode or single-mode fiber cable to the fiber port of the installed module. When using dual fiber, it is important to ensure that the transmit (TX) is attached to the receive side of the device at the other end and the receive (RX) is attached to the transmit side. Single-fiber (SF) transceivers operate in pairs. The TX wavelength must match the RX wavelength at the other end and the RX wavelength must match the TX wavelength at the other end.
- c. For models with fixed RJ-45 ports or copper SFP transceivers, connect the RJ-45 port via a Category 5 or better Ethernet cable to a 10BASE-T, 100BASE-TX or 1000BASE-T Ethernet device (depending on the configuration of the port).

3) CONFIGURE MODULE via COMMAND LINE INTERFACE

To configure the XM5 using the serial port, attach a serial RS-232 equipped computer with terminal emulation software such as Procomm or Putty to the serial console port on the XM5. The Serial Console Port (DCE) is a RJ-45 connector (per EIA/TIA-561).

The serial console port is located on the front of the XM5. Attach the ends of the serial adapter cable to the serial port of the PC and the RJ-45 connector to the XM5. The port is a standard RS-232 asynchronous serial interface.

The serial adapter cable pin-outs are illustrated below.

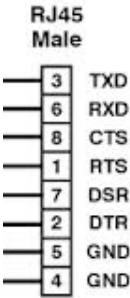

Serial Adapter Cable Pin Outs

Serial Console Port Settings

Start the terminal emulation program and select the correct COM Port. Set the serial port to the following:

Bits Per Second	115,200
Stop Bits	1
Data Bits	8
Parity	NONE
Hardware Flow Control	NONE

4) VERIFY OPERATION

Verify the module is operational by viewing the status of the LED indicators. The table on the next page provides a description for each LED indicator.

The Power LED(s) indicate the module is receiving power from the external power source.


The port LEDs indicate the state of connection between link partners. A blinking port activity LED indicates the presence of data.

LED Indicators

LED Function "Legend"	Color	OFF State	ON/Blinking State
Power "Pwr A"	Green/ Yellow	No power	Solid Green: Module has power Blinking Yellow (10Hz): Fan Alarm
Power "Pwr B" (Dual power models only)	Green/ Yellow	No Power	Solid Green: Module has power Blinking Yellow (10Hz): Fan Alarm
P1 - P12 Link Activity "100"	Green	Port not linked at 100M	Solid Green: Port linked at 100M Blinking Green (10Hz): Data activity Blinking Green (1Hz): Far-end fault detected but no link
P1 - P12 Link Activity "1G"	Green	Port not linked at 1G	Solid Green: Port linked at 1G Blinking Green (10Hz): Data activity Blinking Green (1Hz): Auto-negotiation detected but no link
P13 and P14 Link Activity "100"	Green	Port not linked at 100M	Solid Green: Port linked at 100M Blinking Green (10Hz): Data activity Blinking Green (1Hz): Far-end fault detected but no link
P13 and P14 Link Activity "1G"	Green	Port not linked at 1G	Solid Green: Port linked at 1G Blinking Green (10Hz): Data activity Blinking Green (1Hz): Auto-negotiation detected but no link
P13 and P14 Link Activity "100" and "1G"	Green	Port not linked at 10M	Solid Green: Port linked at 10M Blinking Green (10Hz): Data activity
P15 and P16 Link Activity "10G"	Green	Port not linked	Solid Green: Port linked at 10G Blinking Green (10Hz): Data activity Blinking Green (1Hz): Energy detected but no link
P15 and P16 Link/Act "1G"	Green	Port not linked	Solid Green: Port linked at 1G Blinking Green (10Hz): Data activity Blinking Green (1Hz): Energy detected but no link
Mgmt "100"	Green	Port not linked at 100M	Solid Green: Port linked at 100M Blinking Green (10Hz): Data activity Blinking Green (1Hz): Far-end fault detected but no link
Mgmt "1G"	Green	Port not linked at 1G	Solid Green: Port linked at 1G Blinking Green (10Hz): Data activity Blinking Green (1Hz): Auto-negotiation detected but no link
Mgmt "100" and "1G"	Green	Port not linked at 10M	Solid Green: Port linked at 10M Blinking Green (10Hz): Data activity

LED Indicators

Mechanical

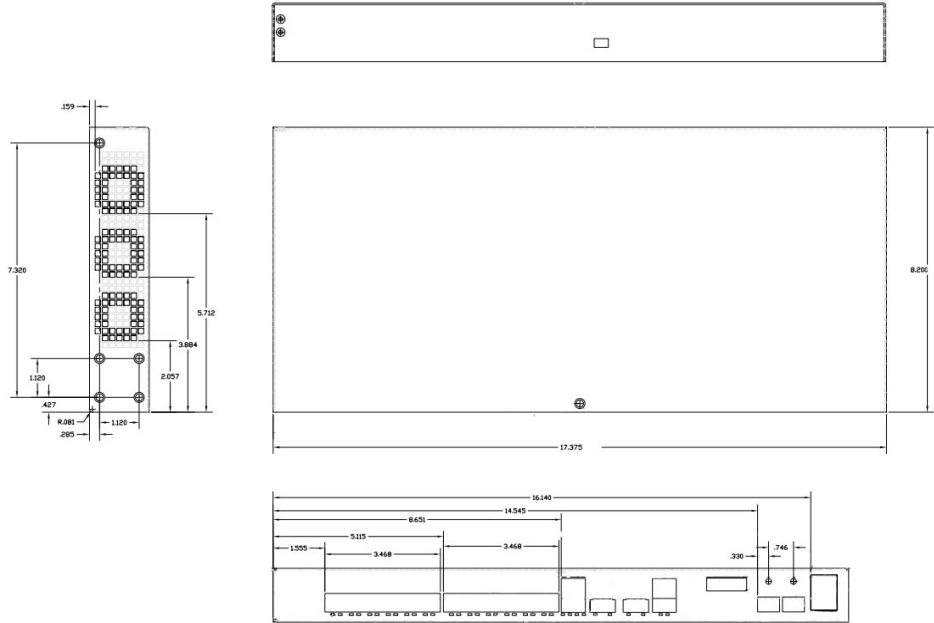

Specifications

Standard Compliances	IEEE 802.1Q, 802.1ad, 802.1AX, 802.1p, 802.3, 802.3ad, 802.3ah, 802.1ag, 1588v2 RFC 2819 (RMON), 2863 (IF-MIB), 2131 (DHCP), 2544 ITU-T G.8031, G.8032, G.8262, Y.1731, Y.1564 MEF 9, 14, 21, 31, Carrier Ethernet 2.0²	
Management	Telnet, SNMPv1, SNMPv2c, SNMPv3, SSH, Serial Console	
Regulatory Compliances	Safety: EMI: ACT:	UL, CE, NEBS Level 3, UKCA FCC Class A TAA, BAA, NDAA
Environmental	RoHS, WEEE, REACH	
Frame Size	Up to 10,056 bytes	
Port Types	Copper:	10/100/1000BASE-T (RJ-45)
	Fiber:	100BASE-X (SFP) 1000BASE-X (SFP) 10GBASE-R (SFP+, XFP)
	Serial: (Management)	RS-232 (RJ-45)
	Copper: (Management)	10/100/1000BASE-T (RJ-45)
Cable Types	Copper:	EIA/TIA 568 A/B, Category 5 and higher
	Fiber:	Multimode: 50/125um, 62.5/125um Single-mode: 9/125um
	Serial: (Management)	EIA/TIA 568 A/B, Category 3 and higher
	Copper: (Management)	EIA/TIA 568 A/B, Category 5 and higher
AC Power Requirements	IEC 320 C14:	80-264VAC~ 50-60Hz 0.8A @ 110VAC
DC Power Requirements	3-Pin Terminal:	+/-20 to 60VDC 1.2A @ 48VDC (56W Max)
Temperature	Commercial: Wide: Extended: Storage:	0 to 50° C -40 to 60° C -40 to 75° C -40 to 80° C
Dimensions W x D x H	17.15" x 9.0" x 1.70" (435.61mm x 228.6mm x 43.18mm)	
Weight	1 power supply: 2 power supplies:	7.5 lbs (3.41 kg) 9.0 lbs (4.1 kg)
Humidity	5% to 95% (non-condensing)	
Altitude	-100m to 4,000m (operational)	
Warranty	3 year warranty	

Customer Service Information

If you encounter problems while installing this product, contact Omnitron Technical Support:

Phone: (949) 250-6510
 Fax: (949) 250-6514
 Address: Omnitron Systems Technology, Inc.
 38 Tesla
 Irvine, CA 92618, USA
 Email: support@omnitron-systems.com
 URL: www.omnitron-systems.com

040-09620-001B 8/23