



CBU-SKYTIME-ZG



CBU-SKYTIME-IP

CASAMBI



## FEATURES

- ◆ CASAMBI® GPS RTC (Real Time Clock) Timer
- ◆ Input voltage:
  - IP (Hensel) model: 230 Vac @50Hz
  - ZG (Zhaga) model: 12-24 Vdc
- ◆ GPS time clock to sync CASAMBI® network
- ◆ Automatic time sync at startup, useful in case of black-out or temporarily missing of power supply
- ◆ No battery needed, time sync independent from power loss duration
- ◆ Transmit over Bluetooth the actual time on CASAMBI® Network
- ◆ Internal GPS antenna
- ◆ Bluetooth Low Energy features
- ◆ Device configuration via CASAMBI® mobile application
- ◆ IP67 enclosure
- ◆ Extended Temperature Range
- ◆ 100% Functional Test - 5 years warranty

## PRODUCT DESCRIPTION


CBU-SKYTIME is a CASAMBI Bluetooth Unit (CBU) with a Real-Time Clock (RTC) that updates the CASAMBI® network's time-date from the GPS (Global Positioning System) signal. This device allows to update the CASAMBI® timers for programmed scenarios after a black-out or a temporarily missing of power supply, independently from the power loss duration. When the power supply is restored, the CBU-SKYTIME automatically synchronize the CASAMBI® Network with the time-date received by satellites over the GPS signal.

CBU-SKYTIME is available in two different configurations depending on input supply voltage and enclosure: the unit can be powered from 230 Vac @50Hz mains voltage (IP model, Hensel enclosure) or from a SELV (12 ÷ 24) Vdc constant voltage power supply (ZG model, Zhaga enclosure).

Through the CASAMBI® mobile application and smartphones equipped with Bluetooth technology, it is possible to configure multiple parameters. CASAMBI® mobile application can be downloaded free of charge from the Apple APP Store and Google Play Store.

→ For the most up-to-date manual, please visit our website [www.dalcnet.com](http://www.dalcnet.com) or scan the QR code on product label.



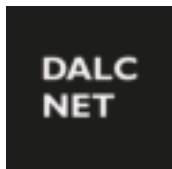

## PRODUCT CODE

CODE	POWER SUPPLY	REMOTE CONTROL	CONFIG. APP
CBU-SKYTIME-IP	85 ÷ 305 Vac @50Hz	Bluetooth Low Energy (BLE)	CASAMBI®
CBU-SKYTIME-ZG	12-24 Vdc	Bluetooth Low Energy (BLE)	CASAMBI®

Table 1: Product code

## REFERENCE STANDARDS

CBU-SKYTIME follows the regulations shown in the table below.

STANDARD	TITLE
TBD	

Table 2: Reference standards

## TECHNICAL SPECIFICATIONS

### CBU-SKYTIME-IP MODEL

Description	Acronym	Values			Units of Measure	Note
		Min		Max		
POWER SUPPLY (AC IN)						
Nominal Supply Voltage	V <sub>IN_AC</sub>	230			Vac	-
Supply Voltage range	V <sub>IN_AC-RNG</sub>	85	÷	305	Vac	-
Mains Frequency	F <sub>MAINS</sub>	50			Hz	-
Efficiency at full load	E <sub>FF_AC</sub>	> 95			%	-
Standby power absorption	P <sub>STBY_AC</sub>	< 0.5			W	-
Rated power absorption	P <sub>ABS_AC</sub>	< 4			W	-
ENVIRONMENTAL						
Operating Frequencies <sup>1</sup>	f <sub>OP</sub>	2402	÷	2483	MHz	For CASAMBI® BLE SoC
Maximum Emitted Power <sup>1</sup>	P <sub>BT-max</sub>	7			dBmW	Over Bluetooth transmission
Storage Temperature	T <sub>STOCK</sub>	-40	÷	+60	°C	Minimum values defined by design. Depends on ventilation conditions
Working Ambient temperature	T <sub>A</sub>	-20	÷	+60	°C	
Connector Type	C <sub>PWR</sub>	Screw Terminal			-	Power connector (internal)
Wiring Section	WS <sub>SOLID</sub>	0.2	÷	1.5	mm <sup>2</sup>	-
	WS <sub>STRAND</sub>	24	÷	16	AWG	
Strip length	WS <sub>STRIP</sub>	10			mm	-
Cable gland	C <sub>GLAND</sub>	IP67 cable glands			-	-
Protection class	IP <sub>CODE</sub>	IP67			-	-
Enclosure Material	M <sub>CASE</sub>	Plastic			-	-
Packaging unit (pieces/units)	UP	1			pcs	-
Dimensions	-	L	A	P		
	MD	90	90	65	mm	Hensel Enclosure
	PD	120	160	70	mm	Packaging

Table 3: Technical specifications of IP model

<sup>1</sup> The parameters are derived from the configuration of the Casambi module.

## CBU-SKYTIME-ZG MODEL

Description	Acronym	Values			Units of Measure	Note
		Min		Max		
INPUT (DC IN)						
Nominal Supply Voltage	V <sub>IN_DC</sub>	12	÷	24	Vdc	-
Supply Voltage range	V <sub>IN_DC-RNG</sub>	9	÷	36	Vdc	-
Efficiency at full load	E <sub>FF_DC</sub>	> 95			%	-
Standby power absorption	P <sub>STBY_DC</sub>	< 0.5			W	
Rated power absorption	P <sub>ABS_DC</sub>	< 1			W	
ENVIRONMENTAL						
Operating Frequencies <sup>2</sup>	f <sub>OP</sub>	2402	÷	2483	MHz	For CASAMBI® BLE SoC
Maximum Emitted Power <sup>1</sup>	P <sub>BT-max</sub>	7			dBmW	Over Bluetooth transmission
Storage Temperature	T <sub>STOCK</sub>	-40	÷	+60	°C	Minimum values defined by design. Depends on ventilation conditions.
Working Ambient temperature	T <sub>A</sub>	-20	÷	+60	°C	
Connector Type	C <sub>PWR</sub>	Zhaga			-	Power connector (external)
Protection class	IP <sub>CODE</sub>	IP67			-	-
Enclosure Material	M <sub>CASE</sub>	Plastic			-	-
Packaging unit (pieces/units)	UP	1			pcs	-
Dimensions	-	L	A	P		
	MD	80	80	38.5	mm	Zhaga Enclosure
	PD	TBD			mm	Packaging

Table 4: Technical specifications of ZG model

## INSTALLATION



**WARNING!** Installation and maintenance must always be carried out in the absence of voltage.

Before proceeding with the connection of the device to the power supply, make sure that the voltage of the power source is disconnected from the system.



The device should only be connected and installed by qualified personnel. All applicable regulations, legislation, standards, and building codes must be adhered to. Incorrect installation of the device may cause irreparable damage to the device and connected loads.

The following paragraphs show the diagrams of the module power supply connection. It is recommended to follow these steps to install the product safely.

### HOW TO INSTALL CBU-SKYTIME-IP



- Safety first:** ensure the Mains voltage is turned off to avoid any risk of electric shock.
- Unlock and lift the cover:** unlock the cover by turning the 4 pins at the corners of the case 90 degrees counterclockwise with a 5.5 mm flathead screwdriver. Once unlocked, gently lift the cover.
- Access and wiring:** after removing the cover, you will have access to the terminal inside the box.
  - Insert the 230 Vac mains voltage cable(s) into the cable gland(s) and wire the Neutral (N) and Live (L) wires to the "N" and "L" terminals of the internal AC IN connector (refer to Figure 1). To tight the connector wires, use a 3 mm flathead or Phillips screwdriver.
  - Tight the cable glands outside the case to ensure the IP protection. Fasten the Compression nut of the cable gland in such a way that the sealing gasket of the cable gland does not deform. Overtightening would risk damaging the seal.
- Check the connections:** before closing the box, ensure all connections are correct and secure.
- Position and lock cover:** place the cover on the box, aligning it properly with the edges. Lock the cover by turning the 4 pins at the corners' case clockwise. The screws will close very easily, do not force the closure. Make sure the pins are well-tightened to ensure a secure closure and the IP protection of the box.
- Final check:** verify that the cover is firmly attached and there are no gaps or openings.

Note: the installer is responsible for verifying the installation.



<sup>2</sup> The parameters are derived from the configuration of the Casambi module.

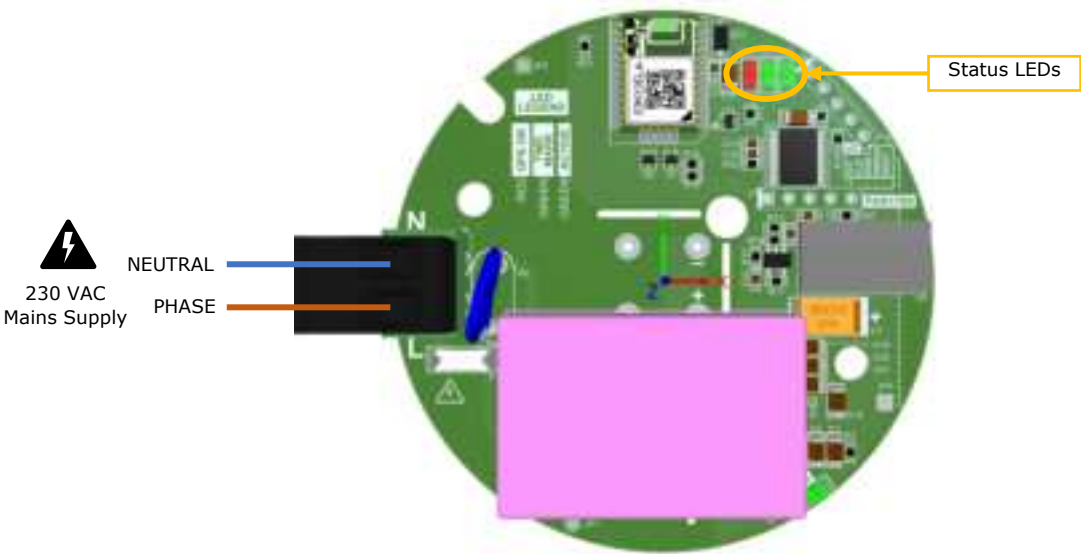


Figure 1: CBU-SKYTIME-IP Power Supply wiring

HOW TO INSTALL CBU-SKYTIME-ZG

Zhaga connectors are typically a standardized interfaces designed for plug-and-play connections, making it easy to add or replace components like sensors or communication modules.

- ⚡

  - Safety first: ensure the DC voltage is turned off to avoid any risk of electric shock.
  - Identify the socket: locate the Zhaga socket.
  - Align the enclosure: align the CBU larger locking pin with the larger locking slot of the Zhaga socket, lightly rotating the CBU until you feel the alignment pins align to the proper location.
  - Fit the enclosure: after alignment, push downward until the CBU is all the way down on the socket. It should fit snugly without forcing.
- ⚠

  - Secure the enclosure: while pressing down, rotate the CBU housing clockwise until it locks into place.
  - Final check: pull the CBU housing to check if it is locked to the socket and verify there are no gaps or openings.
- Note: the installer is responsible for verifying the installation.*

REMOTE CONTROL: CASAMBI®

CASAMBI® is a lighting control system based on Bluetooth Low Energy (BLE) technology. This technology allows for the creation of customized and flexible wireless lighting networks that can be easily configured and controlled via Android/iOS smartphones or tablets.

PROFILE MAPPING: FIXTURES


CBU-SKYTIME supports the following fixtures (selectable by CASAMBI® mobile app) that provide date-time settings on the CASAMBI® Network.


NAME OF PROFILE	# PROFILE ID	DESCRIPTION
TBD	TBD (Default)	

Table 5: Profile list

## TECHNICAL NOTES

### INSTALLATION

 **WARNING!** Installation and maintenance should always be carried out in the absence of AC/DC voltage. Before proceeding with the installation, adjustment, and connection of the device to the power supply, make sure that the voltage is disconnected from the system.

 The device should only be connected and installed by qualified personnel. All applicable regulations, legislation, standards, and building codes in force in the respective countries must be adhered to. Incorrect installation of the device may cause irreparable damage to the device and connected loads.

Maintenance must only be carried out by qualified personnel in compliance with current regulations.

Outdoor installation is recommended. For indoor installation, it is recommended to place the device near an outward-facing window with a clear view of the sky.

The external power supply must be protected. The product must be protected by a properly sized circuit breaker with overcurrent protection.

Keep 230 Vac (LV) circuits and non-SELV circuits separate from SELV safety ultra-low voltage circuits and any product connections. It is strictly forbidden to connect, for any reason, directly or indirectly, the 230 Vac mains voltage to the control terminals (DMX bus) of the product.


The product must be installed in a vertical or horizontal position, i.e. with the antenna facing upwards or laterally. No other positions are allowed. The bottom position, i.e. with the antenna facing downwards, is not allowed.

During installation, it is recommended to reserve adequate space around the device to facilitate its accessibility in case of future maintenance or updates.

 Use in thermally harsh environments may limit the functionality of the product.

For devices embedded within luminaires, the  $T_A$  ambient temperature range is a guideline to be carefully observed for the optimal operating environment. However, the integration of the device within the luminaire must always ensure proper thermal management (e.g. correct mounting of the device, proper ventilation, etc.) so that the temperature at the  $T_C$  point does not exceed its maximum limit under any circumstances. Proper operation and durability are only guaranteed if the maximum temperature of the  $T_C$  point is not exceeded under the conditions of use.

### POWER SUPPLY

 The CBU-SKYTIME-IP must be powered only with Mains AC power source, short-circuit protection and suitably sized power according to the specifications indicated in the product data sheet. No other types of power supply are permitted.

The CBU-SKYTIME-ZG must be powered only with SELV type power supplies with limited current at constant voltage, short circuit protection and power suitably sized according to the specifications indicated in the product data sheet. No other types of power are allowed.

Connecting to an unsuitable power supply may cause the device to operate outside of the specified design limits, voiding its warranty.

In the case of power supplies equipped with earth terminals, it is mandatory to connect ALL the protection earth points (PE= Protection Earth) to a state-of-the-art and certified earthing system.

The power cables of CBU-SKYTIME-IP must be correctly sized with reference to the connected load and must be isolated from any wiring or equal to SELV voltage. Use double-insulated cables.

The power cables of CBU-SKYTIME-ZG must be correctly sized with reference to the connected load and must be isolated from any wiring or equal to non-SELV voltage. It is recommended not to exceed 10m of connection between the power source and the product. Use double-insulated cables. If you want to use connection cables between the power source and the product longer than 10m, the installer must ensure the correct operation of the system. In any case, the connection between the power supply and the product must not exceed 30m.

### BLUETOOTH LOW ENERGY (BLE) AND GPS WARNINGS

 The BLE antenna is located inside the device, near the top of case.

BLE typically has a range of about 10 to 50 meters, depending on the environment and obstacles. Ensure your devices are within this range for reliable communication.

Walls, floors, and other physical barriers can significantly reduce the effective range and signal strength of BLE devices. Position devices to minimize these obstacles.

Other electronic devices, especially those operating on the 2.4 GHz frequency (like Wi-Fi routers), can interfere with BLE signals. Keep BLE devices away from such sources of interference.

Ensure that all devices in your BLE network are compatible with each other and support the same BLE version. Incompatibilities can lead to communication issues.

BLE is designed for low power consumption, but the battery life of your control devices (smartphone or tablet) can still be affected by factors like transmission frequency and data volume. Monitor and manage power settings to optimize battery life.

BLE technology works optimally with non-metallic materials. Therefore, it is not recommended to surround the device by metal objects or reflective surfaces when using BLE communication.

For reliable communication, make sure that the top surface is not covered or that it is free of metal objects, wiring, or other electronic devices. Any impediments could affect the quality of communication.



The device performs optimally in outdoor environments. However, it can also be used indoors, provided it is placed near openings such as windows or other areas with a clear view of the sky.

The GPS signal can be affected by tall buildings, adverse weather conditions, and other obstacles. Ensure that the device is positioned in an area with good signal coverage and avoid obstacles like thick walls or metallic objects that could attenuate the signal.

Avoid placing the device near other electronic equipment or sources of interference (such as microwave ovens or cordless phones). Interference can degrade signal quality.

Avoid exposing the device to extreme temperatures, excessive humidity, or violent shocks. Clean the device regularly following the manufacturer's instructions.

Periodically check if firmware or software updates are available for the device. Updates often improve stability and security.

## LEGAL NOTES

### TERMS OF USE



Dalcnet Srl (hereinafter referred to as "the Company") reserves the right to make changes to this device, in whole or in part, without prior notice to the customer. Such changes may affect technical aspects, functionality, design, or any other element of the device. The company is not required to notify you of such changes and that your continued use of the device will constitute your acceptance of the changes.

The company is committed to ensuring that any changes do not compromise the essential functionality of the device and that they comply with applicable laws and regulations. In the event of substantial changes, the company undertakes to provide clear and timely information on the same.

The customer is advised to periodically consult the [www.dalcnet.com](http://www.dalcnet.com) website or other official sources to check for any updates or changes to the device.

## SYMBOLS

	All products are manufactured in compliance with European Regulations, as reported in the Declaration of Conformity.
	"Very Low Safety Voltage" in a circuit isolated from the mains supply by insulation not less than that between the primary and secondary circuits of a safety isolation transformer according to IEC 61558-2-6 (applicable only to CBU-SKYTIME-ZG device).
	At the end of its useful life, the product described in this data sheet is classified as waste from electronic equipment and cannot be disposed of as unsorted municipal solid waste. <b>Warning!</b> Improper disposal of the product may cause serious harm to the environment and human health. For proper disposal, inquire about the collection and treatment methods provided by the local authorities.



## CASAMBI



CASAMBI® is the official application through which it is possible to configure, in addition to the functions of the CBU-SKYTIME, also all the different CASAMBI® products equipped with BLE technology.


CASAMBI® mobile app can be downloaded free of charge from the Apple App Store and Google Play Store.




## DEVICE SETTINGS

### PAIR DEVICE TO CASAMBI® NETWORK


The first time you turn ON a CBU-SKYTIME device, it will appear in the "Found a new device" section with the default profile preloaded. Perform the following procedure to Pair the device to a CASAMBI® Network.

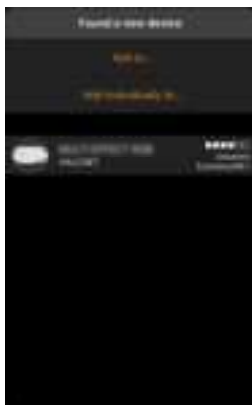

1. Open the CASAMBI® mobile app and Power ON the device. The device to be paired will appear.
2. Select "Add to..." to open the list of available networks.

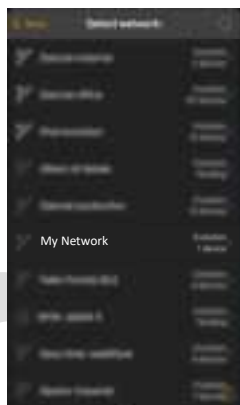

3. Select the network to pair the device with.

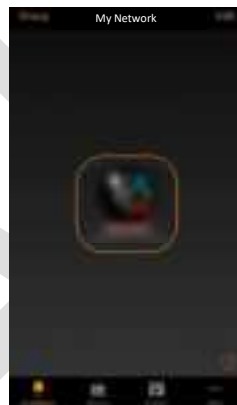

4. Once the device has been inserted in the Network, the default profile will be loaded.



5. Double tap on the profile icon to show the device configuration.

### UNPAIR DEVICE FROM CASAMBI® NETWORK

If CBU-SKYTIME is already connected to a known network and/or you wish to associate it with a new network, you need to unpair the device from the current Network first: please tap the device icon from *Nearby Devices* section, select *Unpair*, and confirm. The unpair process will be started. After the unpairing, the device can be paired to a new Network by following the instructions on [Pair device to CASAMBI® Network](#) section.

To unpair a device already connected to an unknown Network (for which you don't have the credentials), please follow these steps:

1. Tap the device icon from *Nearby Devices* section, select *Unpair*, and confirm.
2. During the unpair process, turn OFF the Power Supply connected to the CBU-SKYTIME.
3. Wait 1-2 seconds, then turn the Power Supply ON again.
4. On *Nearby Devices* section the device will be shown as unpaired.

*Note: if the power supply is switched OFF and ON again quickly, unpair may not be done properly. Repeat the unpair sequence by allowing 1 or 2 more seconds to elapse between the moment you turn OFF and re-turn ON the Power Supply.*

## CHANGE PROFILE ON PAIRED DEVICE


Once the technical data of the load to be connected to the device have been verified, it is possible to configure the date and time parameters for the selected profile by loading the Fixture on the controller. To change the Fixture on the CBU-SKYTIME, follow these steps.



1. Power ON the device and open the CASAMBI® mobile app.
2. Select *Nearby Devices*.




3. Tap on device's icon, then tap on *Unpair*.
4. Second tap on device's icon, then tap on *Change profile*.

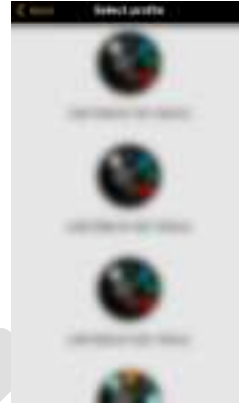


5. Select the desired profile (refer to Table 5).




6. Tap *Start Update*.

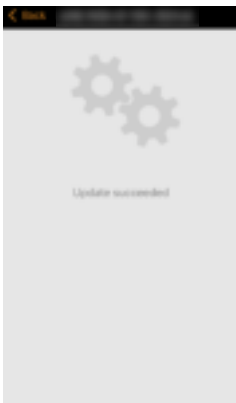

7. Wait for the profile to load correctly.
8. Back to *Nearby Devices* and select *Add to 'Network name'* to pair on the previous Network.

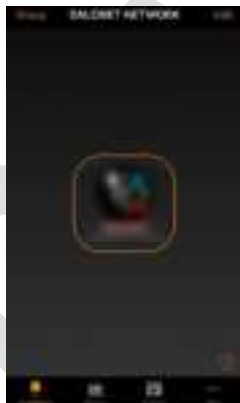

9. Once the device has been added to the Network, go back to *Luminaires* sheet and double tap on the profile icon to show the device configuration.

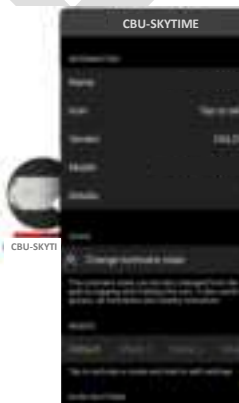

10. Hold tap on profile icon to show the profile settings.




11. Inside the profile settings, the date-time settings can be customized by the provided sliders and buttons.



## FIRMWARE UPDATE ON PAIRED DEVICE

From CASAMBI® mobile app it is possible to update the device's firmware. To check and load any update to the CBU-SKYTIME, follow these steps.

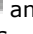


1. Power ON the device and open the CASAMBI® mobile app.
2. Select *Nearby Devices, More* sheet, then tap the Meatball menu  and *Check for updates*.




3. After checking for updates, if an update is available a small upward arrow will appear on device icon. Tap on device icon, then select *Update vendor firmware*.




4. Tap *Start Update* on the next page. The transfer of the new Firmware will start.

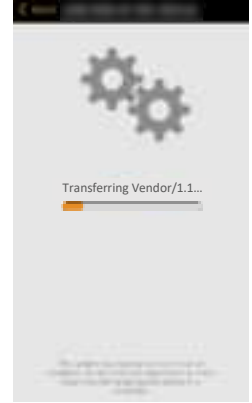


5. Please wait for the update, it may take up to three minutes or so.

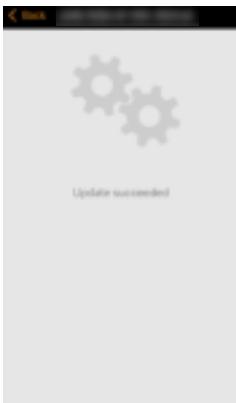


6. After the update and verification are successful, return to *Luminaires* sheet. Previous profile will be loaded.

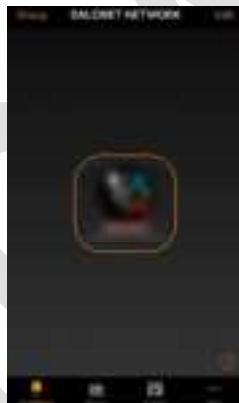

7. Double tap on the profile icon to show the device configuration settings.

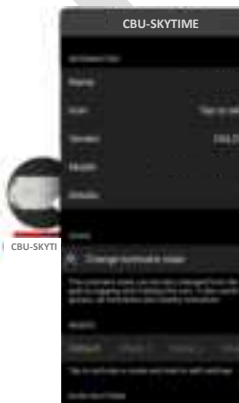

8. Tap on *Details* to show the device info.

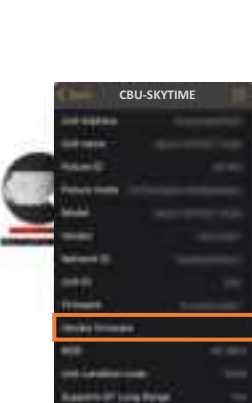

9. The firmware version can be viewed under *Vendor Firmware* item.