



# INSTALLATION MANUAL

## ZE-4DI-2AI-2DO Z-4DI-2AI-2DO ZE-2AI

### PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.




**WARNING:** The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.



The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.



Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.

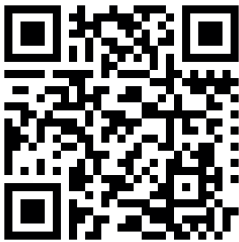

DOCUMENTATION  
ZE-4DI-2AI-2DO



DOCUMENTATION  
Z-4DI-2AI-2DO



DOCUMENTATION  
ZE-2AI



# SENECA



QUALITY MANAGEMENT SYSTEM  
**ISO 9001:2015**



SENECA s.r.l.; Via Austria, 26 – 35127 – PADOVA – ITALY; Tel. +39.049.8705359 - Fax +39.049.8706287

### CONTACT INFORMATION

Technical support

[support@seneca.it](mailto:support@seneca.it)

Product information


[sales@seneca.it](mailto:sales@seneca.it)

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.

The content of this document corresponds to the described products and technologies.

Stated data may be modified or supplemented for technical and/or sales purposes.

## MODULE LAYOUT

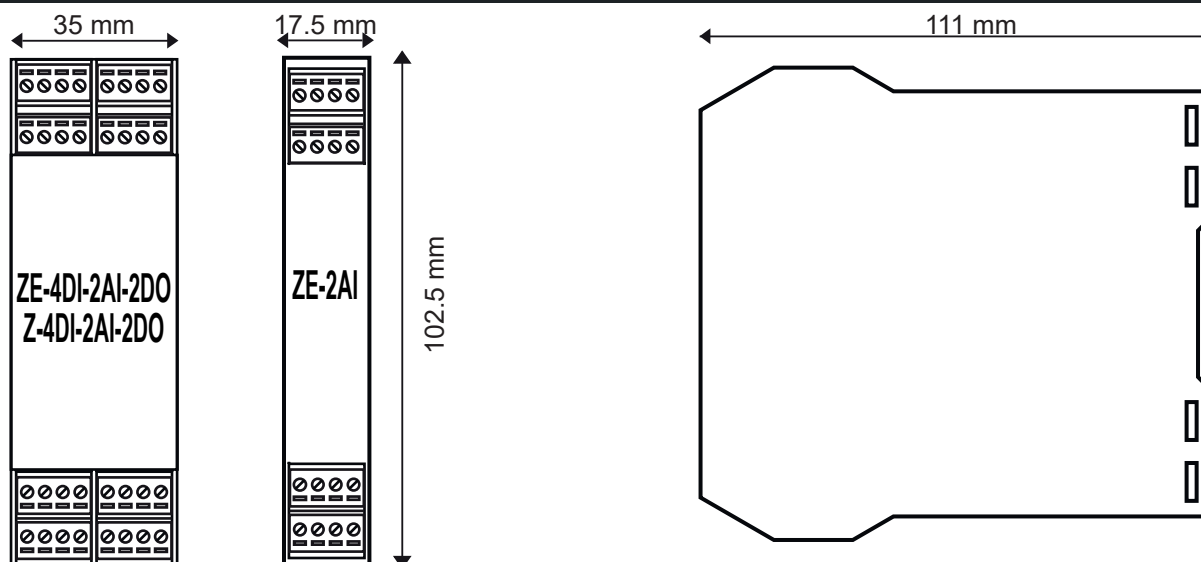

Single module dimensions LxHxD: 17.5 x 102.5 x 111 mm; **Weight:** 110 g; **Enclosure:** PA6, black

Double module dimensions LxHxD: 35 x 102.5 x 111 mm; **Weight:** 110 g; **Enclosure:** PA6, black

### LED SIGNALS ON THE FRONT PANEL (ZE-4DI-2AI-2DO)

LED	STATUS	MEANING
IP / PWR	ON	Module powered IP address acquired
IP / PWR	Flashing	Module powered Waiting for IP address from the DHCP server
Tx/Rx	Flashing	Data transmission and reception on at least one Modbus port
ETH TRF	Flashing	Packet transmission on Ethernet port
ETH LNK	ON	Ethernet port connected
DI1, DI2, DI3, DI4	On / Off	Status of digital input 1, 2, 3, 4
DO1, DO2	On / Off	Status of output 1, 2
FAIL	Flashing	Outputs in fail condition








### LED SIGNALS ON THE FRONT PANEL (Z-4DI-2AI-2DO)

LED	STATUS	MEANING
PWR	ON	Module powered
Tx/Rx	Flashing	Data transmission and reception on at least one Modbus port: COM 1 port, COM 2 port
DI1, DI2, DI3, DI4	On / Off	Status of digital input 1, 2, 3, 4
DO1, DO2	On / Off	Status of output 1, 2
FAIL	Flashing	Outputs in fail condition

### LED SIGNALS ON THE FRONT PANEL (ZE-2AI)

LED	STATUS	MEANING
IP / PWR	ON	Module powered and IP address acquired
IP / PWR	Flashing	Module powered Waiting for IP address from the DHCP server
FAIL	ON	At least one of the two analogue inputs is out of scale (underscale-overscale)
ETH TRF	Flashing	Packet transmission on Ethernet port
ETH LNK	ON	Ethernet port connected
Tx1	Flashing	Modbus packet transmission from device to COM 1 port
Rx1	Flashing	Modbus packet reception on COM 1 port
Tx2	Flashing	Modbus packet transmission from device to COM 2 port
Rx2	Flashing	Modbus packet reception on COM 2 port

# TECHNICAL SPECIFICATIONS
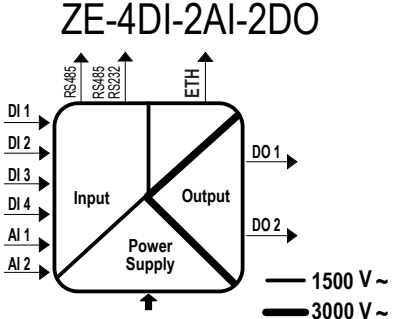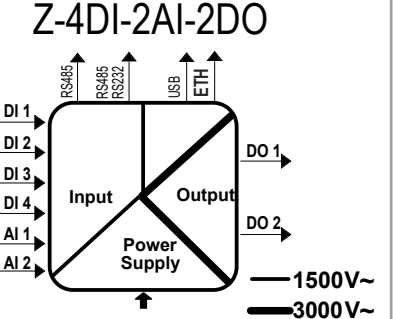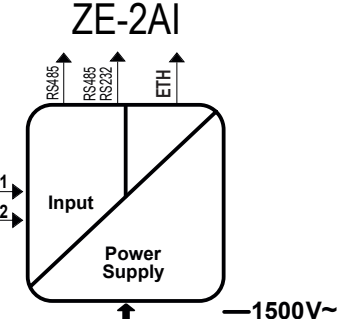
<b>CERTIFICATIONS</b>	    <p> <a href="https://www.seneca.it/products/ze-4di-2ai-2do/doc/CE_declaration">https://www.seneca.it/products/ze-4di-2ai-2do/doc/CE_declaration</a>  <a href="https://www.seneca.it/products/z-4di-2ai-2do/doc/CE_declaration">https://www.seneca.it/products/z-4di-2ai-2do/doc/CE_declaration</a>  <a href="https://www.seneca.it/products/ze-2ai/doc/CE_declaration">https://www.seneca.it/products/ze-2ai/doc/CE_declaration</a> </p>
<b>INSULATION</b>	<div> <div> <b>ZE-4DI-2AI-2DO</b>  </div> <div> <b>Z-4DI-2AI-2DO</b>  </div> <div> <b>ZE-2AI</b>  </div> </div>
<b>ENVIRONMENTAL CONDITIONS</b>	<p> Temperature: <math>-25 \div +70^{\circ}\text{C}</math>  Humidity: <math>30\% \div 90\%</math> non condensing  Altitude: Up to 2000 m above sea level  Storage temperature: <math>-30 \div +85^{\circ}</math>  Protection rating: IP20. </p>
<b>ASSEMBLY</b>	<p>IEC EN60715, 35mm DIN rail in vertical position.</p>
<b>CONNECTIONS</b>	<p> Removable 3-way screw terminals, 5 mm pitch for cable up to 2.5 mm<sup>2</sup>  Rear connector IDC10 for DIN bar 46277  RJ45  micro USB (<b>Z-4DI-2AI-2DO</b>) </p>
<b>POWER SUPPLY</b>	<p> Voltage: <math>11 \div 40\text{Vdc}</math>; <math>19 \div 28\text{Vac}</math> <math>50 \div 60\text{Hz}</math>  Absorption: Typical: 1,5 W @ 24Vdc, Max: 4 W (<b>ZE-4DI-2AI-2DO</b> <b>Z-4DI-2AI-2DO</b>)  Absorption: Typical: 1,5 W @ 24Vdc, Max: 2 W (<b>ZE-2AI</b>) </p>
<b>DIGITAL INPUTS</b> only <b>ZE-4DI-2AI-2DO</b> <b>Z-4DI-2AI-2DO</b>	<p> Number of channels 4. Configurable PNP or NPN.  Voltage input OFF &lt; 4V, ON &gt; 8V (max. 24 Vdc). Current input 20 mA.  Max frequency 5 KHz.  Absorbed current 3mA@12Vdc, 10mA@24Vdc. </p>
<b>COUNTERS</b> only <b>ZE-4DI-2AI-2DO</b> <b>Z-4DI-2AI-2DO</b>	<p>4 32bit resettable counters on non-volatile memory.</p>
<b>DIGITAL OUTPUTS</b> only <b>ZE-4DI-2AI-2DO</b> <b>Z-4DI-2AI-2DO</b>	<p> Number of channels 2. SPDT free contact relay.  Max. voltage 250Vac. Max. current 2 A. </p>
<b>ANALOGUE INPUTS</b>	<p> Number of channels 2. Voltage/Current configurable  Input Voltage <math>0 \div 30\text{ V}</math>. Precision 0.1% of full scale, Resolution: 16 bit  Current input <math>0 \div 20\text{mA}</math>— precision 0.1% of full scale, Resolution: 16bit  Input protection 40V / 25mA </p>
<b>COMMUNICATION PORTS</b>	<p> RS485 COM1 on IDC10 connector. RS485 or RS232 M10-M11-M12.  Ethernet 100 base T RJ45 front (<b>ZE-4DI-2AI-2DO</b>, <b>ZE-2AI</b>)  side micro USB port (<b>Z-4DI-2AI-2DO</b>) </p>

## INSTALLATION REGULATIONS

The module has been designed for vertical installation on a DIN 46277 rail. For optimal operation and long life, adequate ventilation must be provided. Avoid positioning ducting or other objects that obstruct the ventilation slots. Avoid mounting modules over heat-generating equipment. Installation in the bottom part of the electrical panel is recommended.

### CAUTION

These are open type devices intended for installation in a final casing/panel that offers mechanical protection and protection against the spread of fire.

## FACTORY IP ADDRESS

The default module IP address is static: **192.168.90.101**

## WEB SERVER

To access the maintenance Web Server with **192.168.90.101** factory IP address:


Default user: **admin**, Default password: **admin**, **http://192.168.90.101**

## ModBUS CONNECTION RULES

- 1) Install the modules in the DIN rail (120 max)
- 2) Connect the remote modules using cables of an appropriate length. The following table shows cable length data:
  - Bus length: maximum length of the Modbus network according to the Baud Rate. This is the length of the cables that connect the two farthest modules (see Diagram 1).
  - Derivation length: maximum length of a derivation 2 m (see Diagram 1).

Lunghezza bus	Lunghezza derivazione
1200 m	2 m

**Schema 1**

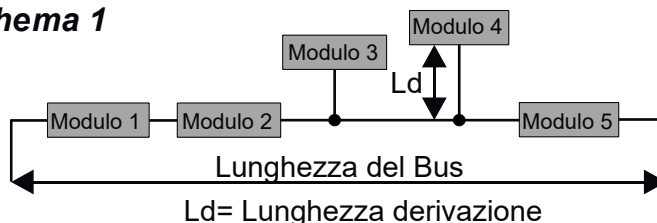


For maximum performance, it is recommended to use special shielded cables, designed specifically for data communication.

## USB PORT (Z-4DI-2AI-2DO)

The module is designed to exchange data according to the modes defined by the MODBUS protocol. It has a micro USB connector on the front panel and can be configured using applications and/or software programs.

The USB serial port uses the following communication parameters: **115200,8,N,1**.


The USB communication port responds exactly like the serial ports, with the exception of the communication parameters. For more information, visit the site shown on page 1.

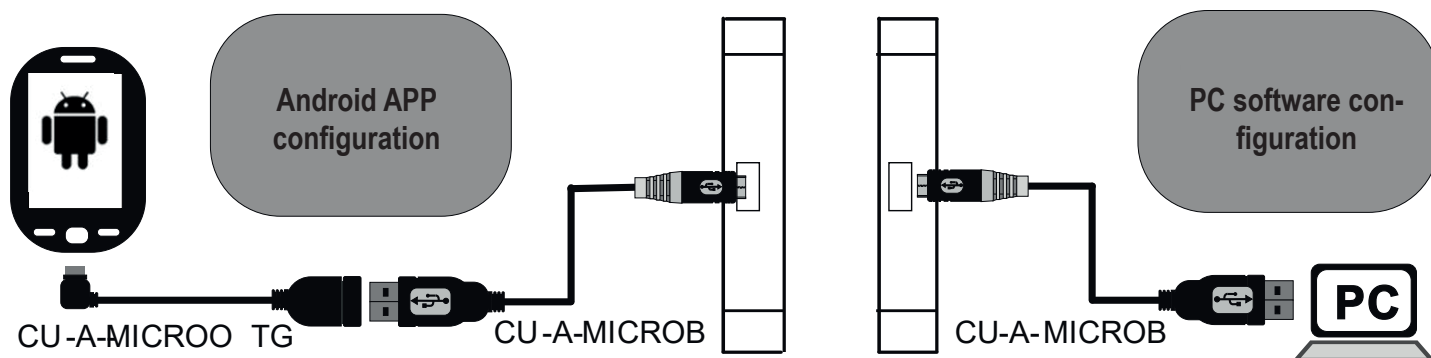

Check that the device in question is included in the list of products supported by the Easy Setup APP in the store.

## CONNECTOR IDC10

Power supply and Modbus interface are available using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL-17.5 accessory.

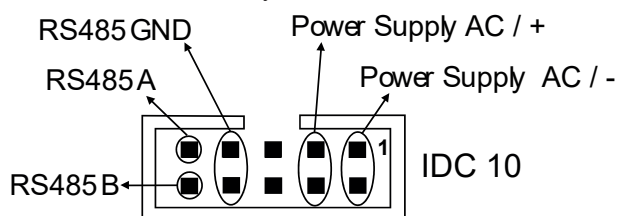

### Back connector (IDC 10)

The illustration shows the meanings of the various IDC10 connector pins if signals are to be sent via them directly.

## SETTING THE DIP-SWITCHES

### ⚠ WARNING

The DIP-switch settings are read only at boot time. At each change, perform a restart.

#### SW1 DIP-SWITCH:

Through DIP-SWITCH-SW1 it is possible to set the IP configuration of the device:

KEY		
1	ON	
0	OFF	

DESCRIPTION	DIP 1	DIP 2
To obtain the configuration from the Flash memory, both SW1 DIP switch selectors must be set to OFF		
To reset the device to factory settings both SW1 DIP switches must be set to ON		
To force the device's IP address to the standard value of SENECA Ethernet products: 192.168.90.101		
Reserved		

**RS232/RS485 SETTING:** RS232 or RS485 configuration on terminals 10-11-12 (serial port 2)

SW2			
1	ON		RS232 ACTIVATION
0	OFF		RS485 ACTIVATION

# ELECTRICAL CONNECTIONS


**Attention: the upper power supply limits must not be exceeded, as this might cause serious damage to the module.**

To meet the electromagnetic immunity requirements:



- use shielded signal cables;
- connect the shield to a preferential instrumentation earth system;
- separate shielded cables from other cables used for power installations (transformers, inverters, motors, induction ovens, etc.).

## POWER SUPPLY

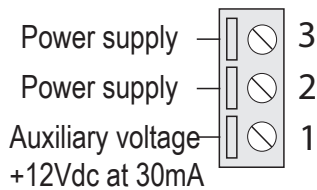

The power supply is connected to terminals 2 and 3.

The supply voltage must be between:

11 and 40Vdc (indifferent polarity), or between 19 and 28 Vac.

The power supply source must be protected from any failures in the module by means of a suitably sized fuse.

## ANALOGUE INPUTS

Voltage	Active sensor current (4 wires)	Passive sensor current (2 wires)	The module has two analogue inputs that can be configured via software as voltage or current. For the configuration software, see the user manual

## DIGITAL INPUTS (ONLY ZE-4DI-2AI-2DO and Z-4DI-2AI-2DO)

NPN INPUT	PNP INPUT	WITH EXTERNAL POWER

## DIGITAL OUTPUTS (ONLY ZE-4DI-2AI-2DO and Z4DI-2AI-2DO)

N.A.1=19 CO.1=20 N.C.1=21		N.A.2=22 CO.2=23 N.C.2=24		The has two digital outputs with free contacts. The two figures show the internal relay contacts available.

## COM2 SERIAL PORT

	<b>SERIAL PORT RS485</b> (SW2=OFF)		<b>SERIAL PORT RS232</b> (SW2= ON)	The module has a COM2 serial port configurable via the SW2 switch on terminals 10-11-12.