


MONITOR WITH RECEIVER

# KW-M950BW KW-M950BWM

### **INSTRUCTION MANUAL**

JVCKENWOOD Corporation

 Updated information (the latest Instruction Manual, system updates, new functions, etc.) is available from <a href="http://www.jvc.net/cs/car/">http://www.jvc.net/cs/car/</a>.

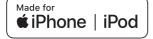















# Contents

Before Use 4
Precautions4
How to read this manual5
Basic Operations 6
Functions of the Buttons on the Front Panel $\boldsymbol{6}$
Turning on the Unit7
Initial Settings7
Adjusting the volume10
Touch screen operations10
Popup menu11
HOME screen descriptions12
Source selection screen description12
Source control screen descriptions15
List screen16
Widget 17
Widget Basic Operation17
Photo Frame Widget17
Widget Setup18
widget Setup18
APPS 19
<i>-</i>
APPS 19
APPS 19 Apple CarPlay Operation19
APPS 19 Apple CarPlay Operation

iPod/iPhone	29
Preparation	29
Pod/iPhone Basic Operation	30
Search Operation	31
Tuner	32
Tuner Basic Operation Memory Operation	
Selecting Operation	
raffic Information (FM only)	
uner Setup	
unci setup	
Other External Components	36
/iew Camera	36
external audio/video players (AV-IN)	38
Jsing the external navigation unit	38
TV tuner	39
Bluetooth Control	40
nformation for using Bluetooth® devices	40
Register the Bluetooth device	
Bluetooth Setup	
Playing the Bluetooth Audio Device	44
Jsing the Hands-Free Unit	46
Hands-Free Setup	51
Setup	52
•	
Monitor Screen Setup	
System Setup	
Jser Interface Setup	
Special Setup Display Setup	
V Setup	

Controlling Audio	60
3-way speaker system setup	60
Speaker / X'over setup	61
Controlling General Audio	63
Equalizer Control	63
Volume Offset	64
Zone Control	65
Sound Effect	66
Listening Position / DTA	67
Audio Setup memory	69
Remote control	70
Functions of the Remote control Buttons	70
Connection/Installation	72
Before Installation	72
Installing the unit	74
Troubleshooting	79
Problems and Solutions	79
Error Messages	79
Appendix	81
Playable Media and Files	81
Specifications	82
	02

## **Before Use**

### **Precautions**

#### **▲** WARNINGS

# To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metallic tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

### Precautions on using this unit

- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.
- You can select a language to display menus, audio file tags, etc. See *User Interface Setup* (P.53).
- The Radio Data System or Radio Broadcast Data System feature won't work in areas where the service is not supported by any broadcasting station.

### Protecting the monitor

• To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.

### Cleaning the unit

• If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe it with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

#### NOTE

 Applying spray cleaner directly to the unit may damage its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase the screened print.

### Acquiring GPS signal

The first time you turn on this unit, you must wait while the system acquires satellite signals for the first time. This process could take up to several minutes. Make sure your vehicle is outdoors in an open area away from tall buildings and trees for fastest acquisition. After the system acquires satellites for the first time, it will acquire satellites quickly each time thereafter.

### About GLONASS

This unit uses Global Navigation Satellite System (GLONASS) in addition to GPS.
Combining GPS and GLONASS can refine positioning accuracy than using GPS only.

### **■** Caution for Smartphone Users

Simultaneously running multiple applications on your smartphone while screen sharing places heavy demand on the microprocessor of the phone, potentially affecting communication and performance.

For best results while pairing with your JVC receiver, please be sure to close any unused applications.


4

### How to read this manual

- The screens and panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual screens or panels, or some display patterns may be different from the actual ones.
- Display language: English is used for the purpose of explanation. You can select a display language from the **SETUP** menu. See User Interface Setup (P.53).

# **Basic Operations**

## **Functions of the Buttons on the Front Panel**

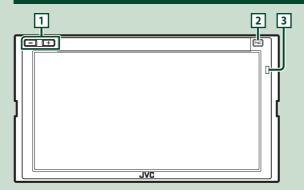


### NOTE

• The panels shown in this manual are examples used to provide a clear explanation of operations. For this reason, they may be different from the actual panels.

Number	Name	Motion
1	-, + (Volume)	Adjusts the volume. The volume will go up to 15 when you keep pressing +. (P.10)
2	FNC	Displays the popup menu screen. Pressing for 1 second starts the voice recognition function (P.48). While Apple CarPlay or Android Auto is connected, starts the function on the Apple CarPlay or the Android Auto screen. When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding displays Bluetooth pairing waiting dialog. (P.41) When the power is off, turns the power on.
3	Remote Sensor	Receives the remote control signal.

### **Turning on the Unit**

1 Press the FNC button.

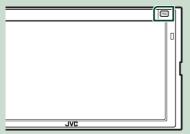

➤ The unit is turned on.

#### NOTE

- If it is your first time to turn the unit on after installation, it will be necessary to perform Initial setup (P.7).
- To turn off the unit:
- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch



- ➤ HOME screen appears.
- 3 Touch ...
- 4 Touch Power Off.



### **Initial Settings**

### **Initial setup**

Perform this setup when you use this unit first time.

1 Set each item as follows.



### **■** Language

Select the language used for the control screen and setting items. Default is "British English(en)".

- 1 Touch Language.
- 2 Touch Language select.
- 3 Select the desired language.
- (4) Touch 👣 .

For details, see *User Interface Setup* (*P.53*).

#### **■** Clock

Sets the synchronization of the clock and adjusts it.

For details, see *Calendar/clock settings* (*P.9*).

#### ■ Display

Set the button illumination color.

If it is hard to see the image on the screen even, adjust the viewing angle.

- 1 Touch **Display**.
- 2 Touch Viewing Angle.
- 3 Select a viewing angle.
- (4) Touch 👣 .

For details, see Display Setup (P.56).

#### **Basic Operations**

#### ■ Camera

Set the parameters for the camera.

- 1 Touch Camera
- ② Set each item and touch for details, see **Camera Setup (P.36)**.

#### For details, see Camera Setup (P.36

### **■ DEMO**

Set the demonstration mode. Default is "ON".

### ■ 3way X'over

Displays the message screen.

For details, see **3-way speaker system setup** (**P.60**).

### 2 Touch Finish.



#### **NOTE**

• These settings can be made from the SETUP menu. See **Setup (P.52)**.

### **Security Code Setup**

You can set up a security code to protect your receiver system against theft.

When the Security Code function is activated, the code cannot be changed and the function cannot be deactivated. Note that the Security Code can be set with a 4 to 8 digit number of your choice.

#### Preparation

- Set **DEMO** to **OFF** in the Special screen. **(P.56)**
- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.



- ➤ HOME screen appears.
- 3 Touch .



4 Touch Security.



- > Security screen appears.
- 5 Touch Security Code Set on the Security screen.
  - > Security Code Set screen appears.

6 Enter a security code with 4 to 8 digits and touch Enter.



7 Enter the same code again and touch Enter.

Now, your security code is registered.

#### **NOTE**

- · Touch BS to delete the last entry.
- · If you enter a different security code, the procedure returns to step 6 (for first code entry).
- If you have disconnected the Receiver from the battery, enter the correct security code as that you have entered in step 6 and touch Enter. You can use your receiver.

### To change the security code:

- 1 Touch Security Code Change on the Security screen.
  - ➤ Security Code Set screen appears.
- 2 Enter the current registered security code and touch Enter.
- 3 Enter a new security code with 4 to 8 digit number and touch Enter.
- 4 Enter the same code again and touch Enter.

The new security code is registered.

### To clear the security code:

- 1 Touch Security Code Cancellation on the Security screen.
  - > Security Code Set screen appears.
- 2 Enter the current registered security code and touch Enter.


The security code is cleared.

### Calendar/clock settings

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch



- ➤ HOME screen appears.
- 3 Touch ...

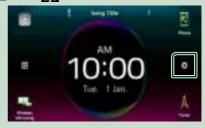

4 Touch User Interface.



- ➤ User Interface screen appears.
- 5 Touch Time Zone.
- 6 Select the time zone.
- 7 Set each item as follows. Scroll the page to show hidden items.



#### **■ Time Format**

Select the time display format.

12-Hour (Default)/24-Hour

#### **■** Clock

**GPS-SYNC** (Default): Synchronizes the clock time with the GPS.

Manual: Set the clock manually.

#### **■ Time Zone**

Select the time zone.

#### **■ Clock Adjust**

If you select **Manual** for Clock, adjust the date and time manually. **(P.55)** 

#### **NOTE**

 Please set the date and time. If they are not set, some functions may not work.

### Adjusting the volume

You can adjust the volume (0 to 40).

Press + to increase, and press - to decrease. Holding + increases the volume continuously to level 15.



### **Touch screen operations**

To perform operations on the screen, you need to touch, touch and hold, flick or swipe to select an item, display a setting menu screen or change pages.

#### Touch

Touch the screen gently to select an item on the screen.



#### Touch and hold

Touch the screen and keep your finger in place until the display changes or a message is displayed.



#### Flick

Slide your finger quickly to the left or right on the screen to change the page. You can scroll a list screen by flicking up/down on the screen.



#### Swipe

Slide your finger up or down on the screen to scroll the screen.



#### **Gesture Touch Control:**

You can also control playback by moving your finger on the touch panel as follows (for some sources, the gesture touch control function is not available).

- Sliding the finger upward/downward:
   Equivalent to the operation of pressing +/
   (Media). Tuner Preset broadcast stations are switched.
- Sliding the finger leftward/rightward:
   Equivalent to the operation of pressing I◄◄
   / ▶►I.
- Moving your finger clockwise or counterclockwise: Increases/decreases the volume.



On the HOME screen, you can control the widget by sliding two fingers. (P.17)

### Popup menu

1 Press the FNC button.



- > Popup menu appears.
- 2 Touch to display the popup menu.



The contents of the menu are as follows.



· Displays the HOME screen. (P.12)



- Switches between screens.
   The screen to be switched to depends on the DISP Key setting on the User Interface screen. (P.53).
- · Touch and hold to turns the screen off.



Displays the Screen Adjustment screen.
 (P.52)



Close the popup menu.



- Function key1 to 3: The current screen changes to the one you have set. The function key1 and 2 are set to **Camera** and **Audio** function as default. For the function setting, refer to **Customize** popup menu functions (P.55).
  - Displays the view camera screen. (P.36)
  - Displays the Audio screen. (P.60)
- Touch and hold to display the Customize FNC Menu screen. (P.55)



 Short-cut source icons: The source changes to the one you have set with a short-cut. For the short-cut setting, refer to Customize Short-cut source icons on HOME screen (P.14).

### Turn off the screen

1 Touch and hold **DISP** on the popup menu.



#### NOTE

- · Touch the display to turn on the screen.
- To display the clock while the screen is off, it is necessary to set "OSD Clock" to "ON". (P.56)

## **HOME screen descriptions**

Most functions can be performed from the HOME screen.



- Short-cut playback source icons (P.13)
- Current source information.
  - Touch to display the control screen of the current source.
- Displays the source selection screen. (P.13)
- 4 · Widget (P.17)
  - You can change the display to big or split widget mode by sliding 2 fingers upward/ downward.
- Displays the SETUP screen. (P.56)

# description

Source selection screen

You can display icons of all playback sources and options on the source selection screen. To change pages, flick your finger leftward/rightward on the screen.



- Changes playback sources.
  For playback sources, see **P.13**.
- Page indication
- Returns to the previous screen.
- Displays the SETUP screen. (P.52)

### **Display the HOME screen**

1 Press the FNC button.



- > Popup menu appears.
- 2 Touch



➤ HOME screen appears.

### Select the playback source

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- Touch ...HOME screen appears.
- Touch From the screen, you can select the following sources and functions.
  - Switches to the Apple CarPlay screen from the connected iPhone. (P.19)

    Switches to the Android Auto screen from the connected Android device. (P.21)

    Displays the Hands Free screen. (P.46)
    When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, displays Bluetooth pairing waiting dialog. \*I (P.41)

    Switches to the Radio broadcast. (P.32)
  - Plays a Bluetooth audio player. (P.40)

    Plays an iPod/iPhone. (P.29)

    Plays files on a USB device. (P.26)
  - Switches to Spotify. (P.24)
    - Switches to an external component connected to the AV-IN input terminal. \*2 (P.38)
  - Displays the Wireless Mirroring screen. (P.23)
  - Displays the Audio screen. (P.60)
  - Displays the screen you have set in the Customize Favorite Key screen. (P.54)
     Touch and hold to display the Customize
    - $\bullet$  Touch and hold to display the Customize Favorite Key screen.  $^{*3}$
  - Turns off the AV source. (P.14)
  - Turns off the unit. (P.7)

- \*1 When connecting as Apple CarPlay or Android Auto, it works as a phone provided in Apple CarPlay or Android Auto. If Apple CarPlay or Android Auto are connected during talking by the Bluetooth device, the current call will be continued.
- \*2 This can be selected when the AV-IN is set to **NONE** on the Camera Assignment Setting
- \*3 This function is enabled on the HOME screen.

# To select the playback source on the HOME screen



The 4 items displayed on the source selection screen with large icons are shown on the HOME screen.

You can change the items displayed on this area by customizing the source selection screen. (P.14)

# To select the playback source on the source control screen



Display source selection buttons by touching / or flicking left or right on the source control screen, then select a playback source.

### To turn off the AV source

- 1 Press the **FNC** button.
  - ➤ Popup menu appears.
- Z Touch ...HOME screen appears.
- 3 Touch ...
- 4 Touch AV Off.



# Customize Short-cut source icons on HOME screen

You can arrange the positions of the source icons as you like.

- 1 Press the FNC button.
  - > Popup menu appears.
- Touch .HOME screen appears.
- 3 Touch
- 4 Touch and hold the icon which you want to move in the customizing mode.
- 5 Drag the icon to the desired position.



Changes the page




# Source control screen descriptions

There are some functions which can be performed from most screens.

#### Indicators



Short-cut source icons

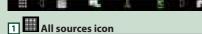

Displays the source selection screen. (P.13)

### 2 Secondary screen

- I/ : The Secondary screen changes to another one every time you touch it. You can also change the Secondary screen by flicking left or right on the screen.
- Indicators: Displays the current source condition and so on.
  - ATT: The attenuator is active.
- DUAL: The dual zone function is active.
- LOUD: The loudness control function is active.
- Short-cut source icons: The source changes to the one you have set with a short-cut. For the short-cut setting, refer to Customize Shortcut source icons on HOME screen (P.14).

#### 3 Content list

Displays the track/file/station/channel list.



Connected Bluetooth device information.

### 5 Artwork & information

You can select whether to display an artwork and song information or only song information in more detail.

Touching the artwork area switches to the VU meter. (The USB, iPod, Bluetooth audio sources only)



Change the text size of song information smaller when the "Small Audio Text" is set to "ON" in the User Interface screen (P.53).





### 6 Function panel

Touch the left side of the screen to display the function panel. Touch again to close the panel.

#### 7 HOME button

Displays the HOME screen. (P.12)

### 8 Operation keys

You can operate the current source with these operation keys. The available functions are different depending on the source type.

### List screen

There are some common function keys in the list screens of most sources.

(P.28, 31, 46)

### Display the list screen

#### For USB/iPod:

- 1 Touch Q or the item listed on the information area in the source control screen.
  - ➤ The list screen appears.

#### For Bluetooth audio:

- 1 Touch Q.
  - ➤ The list screen appears.

You can use following operation keys from this screen.





Displays the list type selection window.



Displays a music/movie file list.

3 Text scroll

Scrolls the displayed text.

4 etc.

Keys with various functions are displayed here.

- Plays all tracks in the folder containing the current track.
- Jumps to the letter you entered (alphabetical search).
- Moves to the upper hierarchy level.

## 5 Page scroll

• 🛅 / 💾 : Displays the top or bottom page.

## 6 Return

Returns to the previous screen.

#### NOTE

• Depending on the current source or mode, some function key may not appear.

# Widget

### **Widget Basic Operation**

#### **Big widget**



Split widget



### Widget list

- · Clock/Spectrum analyzer Widget
- Current source information Widget
- · Compass Widget
- · VU meter Widget
- · Photo Frame Widget

#### • To change the widget style

Touch the widget area. You can change the displayed information or design.

#### • To change the widget

Slide two fingers leftward/rightward.

When the split widget mode is selected, you should put the fingers on each of the windows before slide.



### ● To change the widget format

Slide two fingers upward/downward to switch between the big and the split widget mode.



### **Photo Frame Widget**

You can display a slideshow of the image files stored in the USB memory on the HOME screen.

### Preparation

 Select "ON" for Photo Frame Widget in the Widget SETUP screen. (P.18)

### Acceptable Picture files

		Max. Picture size
	JPEG (.jpg, .jpeg) *	5,000 × 5,000
	PNG (.png)	1,000 × 1,000
	BMP (.bmp)	1,000 × 1,000

- This unit can only play back files which are less than 50 MB.
- The maximum number of files per device is 500
- Picture files may not be played depending on their condition.
- \* A progressive format is not supported.

### **Widget Setup**

Set up the widget on the HOME screen.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 3 Touch .
  - > SETUP screen appears.
- 4 Touch User Interface.



- ➤ User Interface screen appears.
- 5 Touch **Widget SETUP** in the User Interface screen.
- 6 Set each item as follows.
  - Photo Frame Widget

Determine whether to use the photo frame widget.

"ON" (Default)/"OFF"

#### ■ Photo Frame SETUP

Make settings related to photo play display.

7 Touch 🗖

#### To Photo Frame Setup

- Touch Photo Frame SETUP on the Widget SETUP screen.
- 2 Set each item as follows.
  - Sort Order

Specify a file sorting criterion.

- "By Name(Ascending)"/
- "By Name(Descending)"/
- "By Date(Newest First)" (Default)/
- "By Date(Oldest First)"

#### ■ Slide Show Interval

Specify the slideshow interval.

"5" (Default) to "30" seconds

#### ■ Photo Frame is •••••

Display help topics about the photo frame widget.

3 Touch .

### **APPS**

### **Apple CarPlay Operation**

Apple CarPlay is a smarter, safer way to use your iPhone in the car. Apple CarPlay takes the things you want to do with iPhone while driving and displays them on the screen of the product. You can get directions, make calls, send and receive messages, and listen to the music from iPhone while driving. You can also use Siri voice control to make it easier to operate iPhone.

For details about Apple CarPlay, visit https:// apple.com/ios/carplay/.

### Compatible iPhone devices

You can use Apple CarPlay with the following iPhone models.

- iPhone X
- iPhone 6s
- · iPhone 8 Plus
- iPhone 6 Plus
- iPhone 8 • iPhone 7 Plus
- iPhone 6 • iPhone 5s
- iPhone 7 • iPhone SF
- iPhone 5c • iPhone 5
- iPhone 6s Plus

### Connecting an iPhone

#### Wired connection

- 1 Connect your iPhone using KS-U62 via the USB (Black) terminal. (P.77) When an iPhone compatible with Apple CarPlay is connected to the USB (Black) terminal, the Bluetooth Hands-Free phone currently connected is disconnected.
- 2 Unlock your iPhone.

#### Wireless connection

You can select the iPhone registered as the Bluetooth device from **Apple CarPlay Device List** and use it as the Apple CarPlay device.

#### Preparation

- · To register an iPhone by the connection via the USB (Black) terminal
  - Connect an iPhone via the USB (Black) terminal and operate the iPhone according to the confirmation messages displayed on the iPhone. The iPhone is registered in Apple CarPlay Device List. Removing the iPhone from the USB (Black) terminal and selecting the registered iPhone from Apple CarPlay **Device List**, the iPhone will be connected wirelessly.
- · To register an iPhone by the connection via Bluetooth
  - Touching on the Apple CarPlay Device List screen (P.20), displays Bluetooth pairing waiting dialog. Referring to Register the Bluetooth device (P.41) and registering the iPhone, the iPhone will be connected wirelessly.
- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 4 Touch Apple CarPlay. (P.13)

#### NOTE

- Turn on the Bluetooth function and Wi-Fi function of an iPhone.
- · If two or more iPhones have been registered, select the iPhone to be used as the Apple CarPlay source. (P.20)
- · You can also select the iPhone registered in Apple CarPlay Device List (P.20) even when the Apple CarPlay icon is not activated on the source selection screen.
- · It is necessary to connect the GPS antenna and the speed pulse input in order to use a wireless Apple CarPlay.

### To switch the current screen to the Apple CarPlay screen when connecting your iPhone

- Touch **Apple CarPlay** icon on the source selection screen. **(P.13)**
- Touch the following connection message if the message appears.



#### NOTE

- · The connection message appears when;
  - The iPhone you used previously is connected again.
  - The screen other than HOME and the source selection screen is displayed.
- The connection message is displayed for about 5 seconds.

## Select an Apple CarPlay device

If two or more iPhones compatible with Apple CarPlay have been registered, select the iPhone to be used as the Apple CarPlay source.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch ...
  ➤ SETUP screen appears.
- 4 Touch AV.



- ➤ AV screen appears.
- 5 Touch Apple CarPlay Device List.
- 6 Select a device.


The Apple CarPlay device connected via the USB and the registered Apple CarPlay devices ready for wireless connection are displayed.



- In its plays a Bluetooth pairing waiting dialog. For details, see **Register the Bluetooth device (P.41)**.
- Displays confirmation message to disconnect the device.
- Displays Device Remove screen. (P.20)

# To delete the registered Apple CarPlay device

- 1 Touch
- 2 Touch the device name to check.

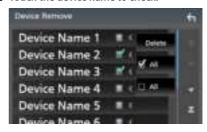

ALL

Selects all Apple CarPlay devices.

■ □ ALL

Clears all check marks.

- 3 Touch Delete.
  - ➤ Confirmation message appears.
- 4 Touch Yes.
  - ➤ All the selected device(s) is deleted.

#### NOTE

• This operation also deletes the same device(s) from the Bluetooth device list screen. (P.43)

### Operation buttons and available Apps on the home screen of Apple CarPlay

You can use the Apps of the connected iPhone. The items displayed and the language used on the screen differ among the connected devices.

To enter the Apple CarPlay mode, touch **Apple CarPlay** icon on the source selection screen. (P.13)



- 1
- Displays the home screen of Apple CarPlay.
- · Touch and hold to activate Siri.
- 2 Application buttons

Starts the application.

### **3 НОМЕ**

Exits the Apple CarPlay screen and displays the HOMF screen.

### To exit the Apple CarPlay screen

- 1 Press the **FNC** button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.

### Use Siri

You can activate Siri.

1 Press the **FNC** button for 1 second.



2 Talk to Siri.

#### To deactivate

- 1 Press the FNC button.
- Switch to the Apple CarPlay screen while listening to another source
- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch DISP.



#### NOTE

- This operation is available when DISP Key is set to Mirroring on the User Interface screen. (P.53)
- When listening to another source with the Apple CarPlay screen displayed, playing music in the Apple CarPlay mode will switch the current source to the Apple CarPlay source.

### Android Auto™ Operation

Android Auto enables you to use the functions of your Android device convenient for driving. You can easily access route guidance, make calls, listen to music, and access convenient functions on the Android device while driving. For details about Android Auto, visit https://www.android.com/auto/ and https://support.google.com/androidauto.

#### **Compatible Android devices**

You can use Android Auto with Android devices of Android version 5.0 (Lollipop) or later.

#### NOTE

 Android Auto may not be available on all devices and may not be available in all countries or regions.

#### About the placement of smartphone

Install the smartphone connected as Android Auto device in the place where it can receive the GPS signals.

When using Google Assistant, install the smartphone in the place where the smartphone easily catch a voice by the microphone.

#### NOTE

- Do not put the smartphone in a spot exposed to direct sunlight or near an air blowing out port of an air conditioner. The placement of the smartphone in such places can lead to malfunction or damage of your smartphone.
- Do not leave the smartphone in the vehicle.

### Connect Android device

Connect an Android device via the USB terminal. (P.78)

To use the hands-free function, connect the Android device via Bluetooth.

When an Android device compatible with Android Auto is connected to the USB terminal, the device is connected via Bluetooth automatically, and the Bluetooth Hands-Free phone currently connected is disconnected.


- 2 Unlock your Android device.
- **3** Press the **FNC** button.
  - ➤ Popup menu appears.
- 4 Touch 🛅.
- 5 Touch
- 6 Touch Android Auto. (P.13)

### Operation buttons and available Apps on the Android Auto screen

You can perform the operations of the Apps of the connected Android device.

The items displayed on the screen differ among the connected Android devices.

To enter the Android Auto mode, touch the **Android Auto** icon on the source selection screen. (P.13)

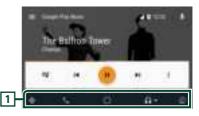

### 1 Application/information buttons

Starts the application or displays information.

#### To exit the Android Auto screen

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- **2** Touch 🛅.
  - ➤ HOME screen appears.

### Using voice control

1 Press the **FNC** button for 1 second.



#### To cancel

- 1 Press the FNC button.
- Switch to the Android Auto screen while listening to another source
- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch DISP.



#### NOTE

- This operation is available when DISP Key is set to Mirroring on the User Interface screen. (P.53)
- When listening to another source with the Android Auto screen displayed, playing music in the Android Auto mode will switch the current source to the Android Auto source.

### **Wireless Mirroring Operation**

You can display the same screen of the Android device on the monitor of the unit using the Wireless Mirroring function of the Android device.

### Preparation

- You can use the Wireless Mirroring function with Android devices compatible with this function.
- This function may be called Wireless Display, Screen Mirroring, AllShare Cast, etc., depending on the manufacturer.
- The settings on the Android device differ depending on the device type. For details, refer to the instruction manual supplied with your Android device.
- If your Android device is locked, Mirroring screen may not appear.
- If the Android device is not ready for UIBC, you cannot perform touch operation.
- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- **3** Touch **.**
- 4 Touch Wireless Mirroring . (P.13)
  - ➤ The App screen is displayed.
- 5 Operate your Android device to activate the Wireless Mirroring function, then connect to this unit.
- 6 Select "KW-M\*\*\*\*" as the network to use.
  - When the connection is established, then the same screen displayed on the Android device is displayed.

#### **NOTE**

- Apps is discontinued when the power is turned ON/OFF or you leave the vehicle. To restart Apps, operate the Android device.
- When the Apps source is displayed, you cannot register or reconnect a Bluetooth device. Switch the Apps source to another source, and then operate the Bluetooth device.

### **■** Change the device name

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch
  - > SETUP screen appears.
- 4 Touch AV.



- > AV screen appears.
- 5 Touch Wi-Fi SETUP.
- 6 Touch Device Name.
  - ➤ Change Device Name screen appears.
- 7 Touch and hold ......
- 8 Input the device name.



9 Touch Enter.

### **Spotify Operation**

You can listen to Spotify on this unit by controlling the application installed in the iPhone or Android.


To select the Spotify source, touch **Spotify** icon on the source selection screen. **(P.13)** 

#### Preparation

- Install the latest version of the Spotify application "Spotify" on your iPhone or Android.
   iPhone: Search for "Spotify" in the Apple App Store to find and install the most current version.
   Android: Search for "Spotify" in Google play to find and install the most current version.
- iPhones are connected via either USB or Bluetooth.
- · Android devices are connected via Bluetooth.
- To connect a smartphone via Bluetooth, register it as the Bluetooth device and do the App (SPP) profile setting for the connection beforehand.
   See Register the Bluetooth device (P.41) and Connect the Bluetooth device (P.43).
- When an Apple CarPlay is connected, you can use Spotify.



Close the drawer

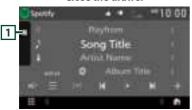

### 1 Artwork

- Displays/hides artwork area.
- Picture data is displayed if available from the current content.

### 2 Playing time

• For confirmation of play time.

### **3** Operation keys

- Displays the Menu screen
- Illustrates to the artist of the currently being played song is selected and playback starts.
- II , II : Skips the current song.
- In the current station : Plays or pauses the content of the
- Saves the currently being played song to My Music.
- III : Touch to attenuate/restore the sound.

#### 4 Content information


- Displays the information on the current content being played.
- Change the text size of the information smaller when the "Small Audio Text" is set to "ON" in the User Interface screen. (P.53)

### 5 📭 / 💼 / 🙃 / 🚈

- III : Thumbs down to the current contents and skips to the next content.
- Registers the current content as a favorite content.
- Repeats the current song.
- Randomly plays all songs in the current playlist.

### Selecting a track

- 1 Touch
  - ➤ Spotify Station List screen appears.
- 2 Select the list type, then select a desired item.

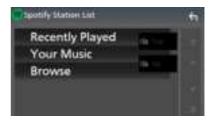

#### ■ To select the category and station

Touch the category and station name in the list.

### ■ Тор

Returns to the top of the list.



Returns to the previous list.

### **About Spotify®**


#### Note

- Ensure you are logged in to your smartphone application. If you do not have an Spotify account, you can create one for free from your smartphone or at www.spotify.com.
- Because Spotify is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of Spotify cannot be operated from this unit.
- For issues on using the application, contact Spotify at www.spotify.com.
- · Establish an Internet connection.

## **USB**

### **Connecting a USB device**

Connect the USB device with the USB cable. (P.77)

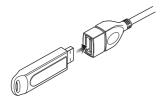

- 2 Press the FNC button.> Popup menu appears.
- 3 Touch .

  ➤ HOME screen appears.
- 4 Touch
- 5 Touch USB. (P.13)

### Disconnect the USB device

- Press the FNC button.Popup menu appears.
- 2 Touch ...HOME screen appears.
- 3 Touch a source other than USB.
- 4 Detach the USB device.

### Usable USB device

You can use a mass-storage-class USB device with this unit.

The word "USB device" appearing in this manual indicates a flash memory device.

#### About the file system

The file system should be the one of the following.

• FAT16 • FAT32 • exFAT • NTFS

#### **NOTE**

- Install the USB device in the place where it will not affect safe driving.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device.
   We shall have no compensation for any damage arising from any erased data.


### **USB Basic Operation**

Most functions can be controlled from the source control screen and playback screen.

#### Control screen



#### Open the drawer

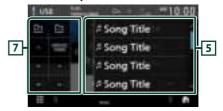

#### Close the drawer



### 1 CODEC/ 7 / 3=

- When a high-resolution source is played, its format information is displayed.
- Repeats the current track/folder. Each time you touch the key, repeat modes are switched in the following sequence:


  File repeat ( ), Folder repeat ( ), Repeat all ( )
- Each time you touch the key, random modes are switched in the following sequence: File random ( ), Random off ( )

#### 2 Track information

- Displays the information on the current file.
   Only a file name and a folder name are displayed if there is no tag information.
- Touch to display the Category List screen. See *Category search (P.28)*.
- Change the text size of the information smaller when the "Small Audio Text" is set to "ON" in the User Interface screen. (P.53)

### 3 Play mode indicator/Playing time

- ▶, ▶▶, etc.: Current play mode indicator Meanings of individual icons are as follows:
- ► (play), ►► (fast forward), ◄◄ (fast backward), **II** (pause).
- For confirmation of current playing position. You can drag the circle left or right to change the playing position. (Video file only)

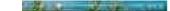

### 4 Operation keys

- Q: Searches track/file. For details on search operation, see **Search Operation (P.28)**.
- I → ► : Searches the previous/next track/ file.

Touch and hold to fast forward or fast backward

- ►II : Plays or pauses.
- In a control of the sound of the sound.

### 5 Content list

- Touch the right side of the screen to display the Content list. Touch again to close the list.
- Displays the playing list. When you touch a track/file name on the list, playback will start.

### 6 Artwork/VU meter

- · Displays/hides artwork area.
- The jacket of the currently playing file is displayed.
- When touched, switches the artwork to the VU meter.

### 7 Function panel

Touch the left side of the screen to display the function panel. Touch again to close the panel.

• Searches for the previous/next folder.

#### · USB DEVICE CHANGE

Switches to another USB device when two USB devices are connected.

### 8 Indicator Items

- · VIDEO: Identifies the video file.
- MUSIC: Identifies the music file.

#### Video screen



### 9 File search area (Video file only)

Touch to search for the next/previous file.

### 10 Key display area (Video file only)

Touch to display the control screen.

### **Search Operation**

You can search music or video files by the following operations.

- 1 Touch Q.
- 2 Touch ▼.



3 Select a list type.



#### NOTE

• For operations on the list screen, see *List screen* (P.16).

### Category search

You can search for a file by selecting a category.

- 1 Touch Category List.
- 2 Select whether you search audio files or video files .
- **3** Touch the desired category.



- ➤ The list corresponding to your selection appears.
- 4 Touch to select the desired item in the list. Repeat this step until you find the desired file.

### Link search

You can search for a file of the same artist/album/genre as that in the current track.

- 1 Touch Link Search.
- 2 Touch the desired tag type. You can select from artists, albums and genres.



- ➤ The list corresponding to your selection appears.
- **3** Touch the desired item in the content list.

### Folder search

You can search for a file according to hierarchy.

- 1 Touch Folder List.
- 2 Touch the desired folder.



When you touch a folder its contents are displayed.

3 Touch to select your desired item in the list. Repeat this step until you find the desired file.

## iPod/iPhone

### **Preparation**

### **■** Connectable iPod/iPhone

The following models can be connected to this unit.

Made for

- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SF
- iPhone 6s Plus
- · iPhone 6s
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- · iPod touch (6th generation)

#### NOTE

- Latest compatible list of iPod/iPhone. For details, see www.jvc.net/cs/car/ipod/.
- By connecting your iPod/iPhone to this unit with the iPod connection cable KS-U62 (optional accessory), you can supply power to your iPod/ iPhone as well as charge it while playing music. Note that the power of this unit must be held on.
- If you restart playback after connecting the iPod, the music that has been played by the iPod is played first.

### **■** Connect iPod/iPhone

#### Wired connection

### Preparation

- Connect an iPod/iPhone with the KS-U62 (optional accessory) while Apple CarPlay is not connected.
- With an Apple CarPlay-capable iPhone, turn off Apple CarPlay by operating the iPhone at functional setup before connecting iPhone.
   For details of the setup method, contact the manufacturer of the terminal.
- Plug the iPod/iPhone into the gray USB terminal with the KS-U62 (optional accessory).
- Only one iPod/iPhone can be connected.
- Connect the iPod/iPhone using the KS-U62. (P.77)
- 2 Press the FNC button.
  - > Popup menu appears.
- 4 Touch
- 5 Touch **iPod**. (P.13)
- To disconnect the iPod/iPhone connected with the cable:
- 1 Detach the iPod/iPhone

#### Bluetooth connection

Pair the iPhone through Bluetooth.

#### Preparation

via USB.

- To connect an iPhone via Bluetooth, register it as a Bluetooth device and do the profile setting for the connection beforehand. See **Register the Bluetooth device (P.41)** and **Connect the**
- Bluetooth device (P.43).

  Connect an iPhone via Bluetooth while Apple CarPlay and an iPod/iPhone are not connected.
- With an Apple CarPlay-capable iPhone, turn off Apple CarPlay by operating the iPhone at functional setup before connecting iPhone.
   For details of the setup method, contact the manufacturer of the terminal.

### iPod/iPhone Basic Operation

#### Control screen



#### Open the drawer



#### Close the drawer



#### 1 Track information

- · Displays the information on the current file.
- Touch to display the Category List screen. See *Category search (P.31)*.
- Change the text size of the information smaller when the "Small Audio Text" is set to "ON" in the User Interface screen. (P.53)

#### 2 Artwork/VU meter

- · Displays/hides artwork area.
- The jacket of the currently being played file is displayed.
- When touched, switches the artwork to the VU meter.

### 3 Play mode indicator/Playing time

 ▶, ▶▶, etc.: Current play mode indicator Meanings of individual icons are as follows:
 ▶ (play), ▶▶ (fast forward), ◄◄ (fast backward), Ⅱ (pause).

### 4 Operation keys

- Q : Searches for a track/file. For details on search operation, see **Search Operation** (P.31).
- I : Searches for the previous/next track/file

Touch and hold to fast forward or fast backward.

- ►II : Plays or pauses.
- III : Touch to attenuate/restore the sound.

### 5 Content list

- Touch the right side of the screen to display the Content list. Touch again to close the list.
- Displays the playing list. When you touch a track/file name on the list, playback will start.

### 6 / =

- Repeats the current track/album. Each time you touch the key, repeat modes are switched in the following sequence:

  Song repeat ( , All songs repeat ( , Repeat off ( ), Repeat off ( )
- Æ: Randomly plays all tracks in the current album. Each time you touch the key, random modes are switched in the following sequence: Song random ( ♣), Random off ( ♣)

#### 7 Indicator Items

· MUSIC: Identifies the music file.

### **Search Operation**

You can search music files by the following operations.

- 1 Touch Q.
- 2 Touch ▼.



3 Select a list type.




#### NOTE

• For operations on the list screen, see *List screen* (P.16).

### Category search

You can search for a file by selecting a category.

- 1 Touch Category List.
- 2 Touch the desired category.

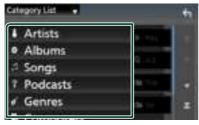

- ➤ The list corresponding to your selection appears.
- 3 Touch to select the desired item in the list. Repeat this step until you find the desired file.

### Link search

You can search for a file of the same artist/ album/genre/composer as that in the current track.

- 1 Touch Link Search.
- 2 Touch the desired tag type. You can select from artists, albums, genres and composers.



- ➤ The list corresponding to your selection appears.
- 3 Touch the desired item in the content list.

## **Tuner**

### **Tuner Basic Operation**

Most functions can be controlled from the source control screen.

To enter Tuner source, touch **Tuner** icon in the source selection screen. (P.13)



### 1 Information display

Displays the information of the current station: Frequency, PS name

P#: Preset number

### 2 Seek mode

Switches the seek mode in the following sequence; **AUTO1**, **AUTO2**, **MANUAL**.

- **AUTO1**: Tunes in a station with good reception automatically.
- **AUTO2**: Tunes in stations in memory one after another.
- **MANUAL**: Switches to the next frequency manually.

#### 3 Band button

Switches the band (FM1/FM2/FM3, AM).

### 4 Preset key

Recalls the memorized station.

When touched for 2 seconds, stores the current receiving station in memory.

### 5 Operation keys

- I◄
   ►►► : Tunes in a station. The method of frequency switching can be changed (see 2 in table).
- SSM (FM only): Presets stations automatically.
   For details, see Auto memory (P.33).
- Displays the Tuner SETUP screen. For details, see *Tuner Setup (P.34)*.
- In : Touch to attenuates/restores the sound.

### 6 PTY (FM only)

Searches a program by setting program type. For details, see **Search by program type (P.33)**.

### 7 MONO (FM only)

Select the Monaural reception.

### 8 TI (FM only)

Sets the traffic information mode on. For details, see *Traffic Information (P.34)*.

### 9 Indicator Items

- ST: A stereo broadcast is being received.
- MONO: The forced monaural function is on.
- AF: The AF search function is on.
- **EON**: The Radio Data System station is sending EON.
- LOS: The Local Seek function is on.
- **NEWS**: News bulletin interruption is in progress.
- RDS: Indicates the state of the Radio Data System station when the AF function is on. White: Radio Data System is being received.

Orange: Radio Data System is not being received.

• TI: Indicates the reception state of traffic information.

White: TP is being received.

Orange: TP is not being received.

### **Memory Operation**

### Auto memory (FM only)

You can store stations with good reception in memory automatically.

1 Touch FM.



2 Touch SSM.



3 Touch Yes.



➤ Auto memory starts.

### Manual memory

You can store the current receiving station in memory.

- 1 Touch desired band key.
- 2 Select a station you wish to store in memory.
- 3 Touch # (#:1-6) in which you want to store the station for 2 seconds until a beep sounds.

## **Selecting Operation**

### Preset select

You can list and select memorized station. This function can be used from the remote control. (P.71)

1 Select a station from the list.




# Search by program type (FM only)

You can tune to a station with a specific program type when listening to FM.

1 Touch PTY.



- > PTY Search screen appears.
- 2 Select a program type from the list.
- 3 Touch Search.

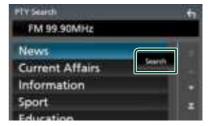

You can search a station of the selected program type.

### **Traffic Information (FM only)**

You can listen and watch the traffic information automatically when a traffic bulletin starts. However, this feature requires a Radio Data System that includes the TI information.

#### 1 Touch TI.



➤ Traffic information mode is set.

### **■** When the traffic bulletin starts

The Traffic Information screen appears automatically.



#### NOTE

- It is necessary to have Traffic Information function set to on in order to have the Traffic Information screen appear automatically.
- The volume setting during reception of traffic information is automatically stored. The next time the traffic information is received, this unit recalls the volume setting automatically.
- To cancel Traffic Information: Touch Cancel.

### **Tuner Setup**

You can set tuner related parameters.

### 1 Touch ∰.



➤ Tuner SETUP screen appears.

#### 2 Set each item as follows.

### ■ NEWS (FM only)

Sets a news bulletin interrupt time. Default is "OFF"

#### ■ AF (FM only)

When station reception is poor, automatically switches to the station that is broadcasting the same program over the same Radio Data System network. Default is "OFF".

#### ■ Regional (FM only)

Sets whether to switch to the station only in the specific region using the "AF" control. Default is "OFF".

#### ■ LO.S (FM only)

Turns the Local Seek function on or off.

#### ■ Auto TP Seek (FM only)

When traffic information station reception is poor, automatically searches for a station that can be received better. Default is "ON".

#### ■ Language Select (FM only)

Selects a display language for the PTY function

#### Aerial Control

Allows you to turn off the Radio Data System function to prevent the motor-driven antenna from extending. Default is "ON".

### ■ Area Setting (KW-M950BW)

The tuner channel interval changes depending on the area you use this unit.

#### For Oceania sales area

**Australia** (Default): Select this when using in Australia countries. FM/AM intervals are set to 50 kHz/9 kHz.

**US**: Select this when using in North/ Central/South America. FM/AM intervals are set to 200 kHz/10 kHz.

**Europe**: Select this when using in any other areas. FM/AM intervals are set to 50 kHz/9 kHz.

#### Outside Oceania area

**US**: Select this when using in North/ Central/South America. FM/AM intervals are set to 200 kHz/10 kHz.

**Others** (Default): FM/AM intervals are set to 50 kHz/9 kHz.

# **Other External Components**

### **View Camera**

#### NOTE

- To connect a camera, see P.76.
- To use a rear view camera, a REVERSE lead connection is required. (P.75)
- If Rear Camera Interruption is active the camera screen is displayed when you shift the gear to the reverse (R) position.

### Display the camera screen

You can display the camera screen manually if "Camera" is registered to a popup menu function key. (P.55)

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch Camera.



- ➤ View camera screen appears.
- 3 Adjust each item as follows.

To erase the caution message, touch the screen.



1 Switching the View Camera\*1

Touch to display the camera switching keys. It is necessary to set "Camera Assignment Settings" beforehand. See **To switch the view camera (P.36**).

2 Camera off

Touch to exit the camera screen.

\*1 When two or more cameras of rear, front, left, and right are connected with this unit.

#### To switch the view camera

- **1** Touch 1.
  - ➤ Camera switching keys appear left/right side.
- 2 Select a view camera you want to switch.





#### NOTE

 To switch to the picture other than selectable view camera from the camera switching keys, change the key function of except "Rear" in Camera Assignment Settings. (P.37)

### Camera Setup

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch .
  - ➤ SETUP screen appears.
- 4 Touch Camera.



- > Camera screen appears.
- 5 Set each item as follows.
  - Camera Assignment Settings

Set up the camera assignment. See **To set up** the camera assignment settings (P.37).

#### ■ Rear Camera Interruption

**ON**: Displays the picture from the rear view camera when you shift the gear to the reverse (R) position.

**OFF** (Default): Select this when no camera is connected

#### ■ Parking Guidelines

You can display parking guidelines to enable easier parking when you shift the gear to the reverse (R) position.

Default is "ON".

#### **■** Guidelines SETUP

If you select **ON** for **Parking Guidelines**, you can adjust the parking guidelines. See **To adjust the parking guidelines** (**P.38**).

### ■ Front Camera Interruption \*1

**10 sec / 15 sec** (Default) **/ 20 sec :** The front camera screen is displayed when return the gear from the reverse (R) position.

OFF: Cancel.

\*1 Only when FRONT VIEW CAMERA is set to "Front" on the Camera Assignment Settings screen.

# To set up the camera assignment settings

- 1 Touch Camera Assignment Settings on the Camera screen. (P.36)
- 2 Set each item as follows.

#### **■ FRONT VIEW CAMERA**

Set the camera assignment from view camera connected to Front view camera input terminal.

#### AV-IN

Set the camera assignment from view camera connected to AV-IN input terminal.

#### For Front view camera input terminal:

- 1 Touch FRONT VIEW CAMERA.
  - Displays the picture from view camera connected to Front view camera input terminal.

## 2 Select the view camera to set up.




#### Picture from view camera

Displays the picture from view camera connected to Front view camera input terminal. (P.78)

- 2 Front
- 3 Right
- 4 Left
- 5 None
- 3 Touch Enter.

### For AV-IN input terminal:

- 1 Touch AV-IN.
  - ➤ Displays the picture from view camera connected to AV-IN input terminal.
- 2 Select the view camera to set up.

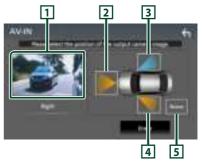

### 1 Picture from view camera

Displays the picture from view camera connected to AV-IN input terminal. (P.78)

- 2 Front
- 3 Right
- 4 Left

#### 5 None


- 3 Touch Enter.
- To adjust the parking guidelines

#### NOTE

- Install the rear view camera in the appropriate position according to the instruction manual supplied with the rear view camera.
- When adjusting the parking guidelines, make sure to apply the parking brake to prevent the car from moving.
- 1 Touch Parking Guidelines in the Camera screen and set to ON. (P.36)
- 2 Touch Guidelines SETUP on the Camera screen.
- 3 Adjust the parking guidelines by selecting the mark.



4 Adjusting the position of the selected mark.

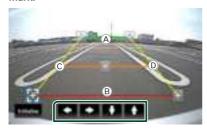

Make sure that lines (A) and (B) are horizontally parallel, and that lines (C) and (D) are of the same length.

#### NOTE

• Touch **Initialise** and then touch **Yes** to set all the marks to their initial default position.

# External audio/video players (AV-IN)

- 1 Connect an external component to the AV-IN input terminal. (P.76)
- 2 Select AV-IN as the source. (P.13)
- 3 Turn on the connected component and start playing the source.

#### NOTE

 To select the AV-IN source, it is necessary to set "AV-IN" to "None" in Camera Assignment Settings. (P.37)

# Using the external navigation unit (outside oceania area)

You can connect a navigation unit (commercially available) to the navigation input terminal so that you can view the navigation screen. (P.76)

The navigation guidance comes out of the front speakers even when you are listening to an audio source.

# Display the navigation screen

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch DISP.



➤ The navigation screen appears.

#### NOTE

• Touch on the popup manu screen to navigation screen.

This operation is available when **DISP Key** is set to **NAV** in the **User Interface** screen. **(P.53)** 

# Navigation Setup

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 3 Touch .
  - > SETUP screen appears.
- 4 Touch Navigation.



- ➤ Navigation screen appears.
- 5 Set each item as follows.



#### ■ NAV Voice Volume

Adjusts the volume for voice guidance of the navigation system. Default is "24".

# TV tuner

You can connect the TV tuner (commercially available) with this unit and watch TV.

#### Preparation

- When you use TV control function, connect the TV tuner (commercially available) and set 3rd Party TV Tuner Control in **AV Setup (P.58)** to ON.
- The TV tuner can be controlled with its supplied remote control through the remote sensor on the front panel of this unit.
- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 3 Touch
- 4 Select TV as the source. (P.13)
- 5 Touch Key display area.





- Hides the indicators and buttons.
  Touch Hide.
- Change the channel.

Touch CH▲, CH▼.

# **Bluetooth Control**

Using the Bluetooth function allows you to use various functions such as listening to the audio file and making/receiving a call.

# Information for using Bluetooth® devices



Bluetooth is a short-range wireless radio communication technology for mobile devices such as cell-phones, portable PCs, and other devices.

Bluetooth devices can be connected without cables and communication with each other.

#### NOTE

- While driving, do not perform complicated operations such as dialing numbers, using the phone book, etc. When you perform these operations, stop your car in a safe place.
- Some Bluetooth devices may not be connected to this unit depending on the Bluetooth version of the device.
- This unit may not work for some Bluetooth devices.
- Connecting conditions may vary depending on your environment.
- Some Bluetooth devices are disconnected when this unit is turned off.
- The Bluetooth devices cannot be used while using Apple CarPlay.
- The Bluetooth currently connected with other device is disconnected when an iPhone compatible with Apple CarPlay is connected.

# About the cell-phone and Bluetooth audio player

This unit conforms to the following Bluetooth specifications:

#### Version

Bluetooth Ver. 5.0

#### **Profiles**

#### Cell-phone:

HFP (V1.7) (Hands Free Profile) SPP (Serial Port Profile) PBAP (Phonebook Access Profile)

#### Audio player:

A2DP (Advanced Audio Distribution Profile) AVRCP (V1.6) (Audio/Video Remote Control Profile)

#### Sound codec

SBC. AAC

- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard according to the procedure prescribed by Bluetooth SIG.
- However, it may be impossible for such units to communicate with your cell-phone depending on its type.

# **Register the Bluetooth device**

It is necessary to register the Bluetooth audio player or cell-phone in this unit before using the Bluetooth function.


You can register up to 10 Bluetooth devices.

#### **NOTE**

- Up to 10 Bluetooth devices can be registered. If an attempt is made to register the 11th Bluetooth device, the Bluetooth device connected on the earliest date will be deleted to register the 11th one.
- This unit is compatible with the Apple Easy Pairing function. When an iPod touch or iPhone is connected to this unit, an authentication dialog appears. Performing operation for authentication on this unit or iOS smartphone registers the smartphone as a Bluetooth device.
- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.



- ➤ HOME screen appears.
- 3 Touch .

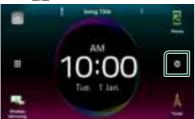

- > SETUP screen appears.
- 4 Touch Bluetooth.



➤ Bluetooth SETUP screen appears.

5 Touch Select Device on the Bluetooth Setup screen.



6 Touch on the Select Device screen.



➤ Bluetooth pairing waiting dialog appears.

#### NOTE

- You can also register an iPhone on the Apple CarPlay Device List screen. (P.20)
- When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, pressing and holding the FNC button displays Bluetooth pairing waiting dialog.
- **7** Search for the unit ("KW-M\*\*\*\*") from your smartphone/cell-phone.

Complete steps 7 to 10 within 30 seconds.

- **8** Operate your smartphone/cell-phone according to the displayed messages.
  - Confirm the request both on the smartphone/cell-phone.



### Input the PIN Code in your smartphone/cell-phone.

PIN Code is set to "0000" as the default.



9 Select the function you want to use.



#### ■ HFP Hands Free1/Hands Free2/No Connection.

Select the hands-free number to connect.

#### ■ A2DP/SPP Audio/App

Select if you want to use the audio player app in your smartphone over A2DP, and the other apps in your smartphone over SPP.

#### ■ PBAP Phonebook DL

Select if you want to transfer your phonebook data.

#### 10 Touch Yes.

When data transmission and connection have completed, the Bluetooth connection icon appears on the screen.

#### **NOTE**


- When registering the iPhone that is available for Apple CarPlay wirelessly, a confirmation message appears.
  - Yes: Displays the Apple CarPlay screen for wireless connection.
  - No: Apple CarPlay is not connected. When using Apple CarPlay, see Select an Apple CarPlay device (P.20).

# **Bluetooth Setup**


- The Bluetooth Setup is disabled while using Apple CarPlay.
- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch



- ➤ HOME screen appears.
- 3 Touch

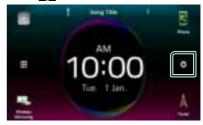

- > SETUP screen appears.
- 4 Touch Bluetooth.

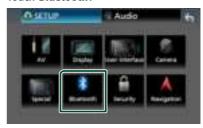

- Bluetooth SETUP screen appears.
   See the following section for each setting.
- Connect the Bluetooth device (P.43)
- Change the device name (P.44)
- Change the PIN Code (P.44)

#### Connect the Bluetooth device

- 1 Touch Select Device on the Bluetooth Setup screen.
- 2 Touch the name of the device you want to connect.



➤ Profile select screen appears.

#### NOTE

- · If the icon is lighted, it means that the unit will use that device.
- You cannot select an Android device connected as an Android Auto device.
- 3 Set each profile as follows.



#### ■ TEL (HFP) 1, TEL (HFP) 2

Select when the device is connected with the unit as hands-free phone 1 or 2.

#### ■ Audio (A2DP)/App (SPP)

Select to interwork with an application installed in a smartphone or to use as an audio player.

4 Touch Close.

#### To delete the registered Bluetooth device

1 Touch on the Select Device screen.



2 Touch the device name to check.



#### 

Selects all Bluetooth devices.

#### 

Clears all check marks.

#### NOTE

- You cannot select an Android device connected as an Android Auto device.
- 3 Touch Delete.
  - ➤ Confirmation message appears.
- 4 Touch Yes.
  - ➤ All the selected device(s) is deleted.

#### NOTE

• If the device compatible with wireless Apple CarPlay is deleted, the same device is deleted from the Apple CarPlay device list screen.

# Change the device name

- 1 Touch **Device Name** on the Bluetooth SETUP screen.
  - ➤ Change Device Name screen appears.
- 2 Touch and hold .
- 3 Input the device name.



4 Touch Enter.

# Change the PIN Code

- Touch PIN Code on the Bluetooth SETUP screen.
  - ➤ Change PIN Code screen appears.
- 2 Touch and hold .
- 3 Input the PIN Code.



4 Touch SET.

# Playing the Bluetooth Audio Device

Most functions can be controlled from the source control screen.

To select Bluetooth source, touch **BT Audio** icon on the source selection screen. (P.13)

#### NOTE

- The Bluetooth audio source is disabled while using Apple CarPlay.
- The Bluetooth audio source is disabled when the device set as "Audio/App" is using Android Auto.

# Bluetooth basic operation

#### Control screen



#### 1 Artwork/VU meter

- · Displays/hides artwork area.
- When touched, switches the artwork to the VU meter.

#### 2 Play mode indicator/Playing time

▶, **II**: Current play mode indicator

Meanings of individual icons are as follows:

- ► (play), ►► (fast forward), ◄◄ (fast backward),
- **II** (pause), **■** (stop).

### 3 Operation keys \*

- Q : Searches for a file. See *File search* (*P.46*).
- I◀◀ ▶►I: Searches for the previous/next content.

Touch and hold to fast forward or fast backward.

- · ►: Plays.
- III · Pauses
- P: Displays the Bluetooth SETUP screen.
- III : Touch to attenuate/restore the sound.

#### 4 JVC Streaming DJ

Bluetooth audio devices can be switched easily to play music. See *JVC Streaming DJ (P.45)*.

# 5 7 \*

- Repeats the current track/folder. Each time you touch the key, repeat modes are switched in the following sequence:

  File repeat ( , , Folder repeat ( , , All songs repeat ( , , Repeat off ( , )
- Is and omly plays all tracks in the current folder. Each time you touch the key, random modes are switched in the following sequence: Folder random ( ), All random ( ), Random off ( )

### 6 Information display \*

- Displays the name of track information.
- · Connected device name.
- Change the text size of the information smaller when the "Small Audio Text" is set to "ON" in the User Interface screen. (P.53)
- \* These items appear only when the audio player which supports AVRCP profile is connected.

#### NOTE

- The operation buttons, indications and information displayed on the screen differ depending on the connected device.
- If the operation keys do not appear, operate from the player.
- Depending on your cell-phone or audio player, sound may be heard and controlled but text information may not appear.
- If the volume is too low, raise it on your cellphone or audio player.

# JVC Streaming DJ

Up to 5 Bluetooth audio device can be connected and switched easily to play music.

- 1 Touch
  - ➤ A list of registered devices is displayed.
- 2 Touch of device name you want to connect.
  - Touching displays the Bluetooth device connection setup screen. (P.43)
  - Touching on the left of the connected device ( but it is device.



- 📻 : Device used normally.
- 🔳 : Device used for JVC Streaming DJ.
- 3 Touch (white) on the left of the name of the device to be played.
  - (white) changes to (Blue) and starts playback.



- (Gray): Not connected.
- (White): Connected.
- (Blue) : During playback.
- 4 Touch 🗖

- If a connected Bluetooth audio device is operated to play music, connections are switched.
- When a Bluetooth source is switched to another one, its settings are deleted and the connection is restored to the connection before source switching.
- You cannot select an Android device connected as an Android Auto device.

## File search

- 1 Touch Q.
- 2 Touch the desired file or folder.



When you touch a folder its contents are displayed.

Touch the desired item in the content list.Playback starts.

#### NOTE

• For operations in the list screen, see *List screen* (P.16).

# **Using the Hands-Free Unit**

You can use the telephone function by connecting the Bluetooth telephone to this unit.

#### NOTE

 While Apple CarPlay or Android Auto is connected, the Bluetooth Hands-Free function and two Bluetooth devices connections cannot be used. Only the Apple CarPlay or Android Auto Hands-Free function can be used.

### Make a call

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- **3** Touch **.**
- 4 Touch Phone (P.13)
  - ➤ Hands Free screen appears.

- If your cell-phone supports PBAP, you can display the phone book and call lists onto the touch panel screen when the cell-phone is connected.
- Phone book: up to 1000 entries
- Up to 50 entries including dialed calls, received calls, and missed calls
- **5** Select a dialing method.



- 🛂 : Call using call records
- 🔳 : Call using the phonebook
- tall using the preset number
- 🔳 : Call by entering a phone number

#### • Select the cell-phone to use

#### When you connect two cell-phones

1) Touch to select the phone you want to use.

#### Bluetooth SETUP

1) Touch Bluetooth SETUP screen appears.

#### Voice Recognition

1) Touch ... (P.48)

#### NOTE

- Status icons such as battery and antenna icons may differ from those displayed on the cell-
- · Setting the cell-phone in the private mode can disable the hands-free function.

# Call using call records

- 1 Touch
- 2 Select the phone number from the list.



### Call using the phonebook

- 1 Touch
- 2 Touch Q A-Z
- 3 Select the initial.



- · Characters with no corresponding name will not appear.
- · A first character with an accent character such as "ii" can be searched for with a non-accent character "u". A character with an accent character in a sentence cannot be searched for.
- 4 Select the person you want to call from the list.



**5** Select the phone number from the list.



#### NOTE

• You can sort the phone numbers in the list by last name or first name. For details, see Hands-Free Setup (P.51).

### Call using the preset number

- 1 Touch
- 2 Touch the name or phone number.



#### Call by entering a phone number

- 1 Touch
- 2 Enter a phone number with number keys.



3 Touch

# **■** Voice Recognition

You can access the voice recognition function of the cell-phone connected to this unit. You can search the cell-phone phonebook by voice. (The functionality depends on the cell-phone.)

1 Press the **FNC** button for 1 second.



- Voice Recognition screen appears.
- 2 Start speaking.



# ■ Receive a call

1 Touch to answer a phone call or to reject an incoming call.



#### NOTE

 While monitoring the picture from the view camera, this screen does not appear even if a call comes in.

#### To end call

1 While talking, touch \_\_\_\_.

# Operations during a call



- Adjust the volume of your voice
- 1) Touch Speech Quality.
- 2) Touch ◀ or ▶ for Microphone Level.



#### Adjust the receiver volume

Press the - or + button.



### Mute your voice

Touch **to mute or not to mute your voice.** 

#### Output the dial tone

Touch **DTMF** to display the tone input screen. You can send tones by touching desired keys on the screen.

#### Switching between speaking voice output destinations

#### Call-waiting

When you receive a new call while talking on the phone, you can answer the newly received call by touching . The current call is put on hold.

Each time you touch , the caller will change to the other one.

When you touch , the current call will end to be switched to the call waiting on hold.

# ● To close the Hands-Free popup screen

Touching  $\times$  to close the Hands-Free popup screen. To display it again, touch ressing the **FNC** button.

# Phone number preset

You can register frequently used phone numbers in this unit.

- 1 Touch
- 2 Touch Edit.



3 Select where to preset.



#### ■ Delete all

To delete all preset numbers, touch **Delete all** and then touch **OK** on the confirmation screen.

4 Select how to preset.



#### Add number from phonebook

Select the number to preset from the phonebook. See *Call using the phonebook* (*P.47*).

#### Add number direct

Enter the telephone number directly and touch **SET**. See *Call by entering a phone number (P.48)*.

#### Delete

To delete a preset number, touch **Delete** and then touch **OK** on the confirmation screen.

# ■ Phonebook transfer

You can transfer phonebook data from your Bluetooth smartphone using PBAP.

- 1 Touch
- 2 Touch !!!!



➤ Phonebook data transfer starts.

#### NOTE

- If the Phonebook contains more than 1000 entries, Phonebook data cannot be transferred.
- If no Phonebook has been downloaded, touching Download Phonebook Now will start downloading the Phonebook.

### Phonebook deletion

- 1 Touch ##
- 2 Touch the name to check.



#### 

Checks all boxes.

Clears all check marks.

- 3 Touch Delete.
  - ➤ Confirmation message appears.
- 4 Touch OK.

# **Hands-Free Setup**

You can make various settings for the Hands-Free function.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅 .



- ➤ HOME screen appears.
- 3 Touch .



- > SETUP screen appears.
- 4 Touch Bluetooth.



- ➤ Bluetooth SETUP screen appears.
- 5 Touch TEL SETUP.
  - ➤ TEL SETUP screen appears.
- 6 Set each function as follows.



#### ■ Bluetooth HF/Audio

Select the speakers to output the sound from the cell-phone (such as phone call voice and ringing tone) and Bluetooth audio player.

**Front**: Outputs sound from the front speakers.

**All** (Default): Outputs sound from all speakers.

#### ■ Auto Response\*

Set the automatic response time to pick-up an incoming call.

- **OFF** (Default): Turns off the Automatic response function.
- 1/5/10/15/20/25/30: Sets the ringing time (second).

#### Auto Pairing

When set to "ON", the Apple Auto Pairing function is turned on to automatically register the iPod touch or iPhone connected to this unit.

- **ON** (Default): Turns on the Apple Auto Pairing function.
- **OFF**: Turns off the Apple Auto Pairing function.

#### ■ Sort Order

Set how to sort the data in the cell-phone phonebook.

**First**: Sorts data by the first name.

Last (Default): Sorts data by the last name.

- \* Either the auto response time set on this unit or the time set on the cell-phone, whichever is shorter takes effect.
- 7 Touch OK.



# Setup

# **Monitor Screen Setup**

You can adjust the image quality of video, menu screen, etc.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch Screen Adjust.



- Screen Adjustment screen appears.
- 3 Adjust each setting as follows.



# ■ Backlight / Contrast / Black / Brightness / Colour / Tint

Adjust each setting.

#### Aspect

Select a screen mode.

**Full**: Changes the aspect ratio of video and displays video fully on the screen.

Normal: Displays video at the ratio of 4:3.

#### Auto:

Displays video fully (vertically or horizontally) with no ratio change.

#### NOTE


 Settings to adjust vary depending on the current source.

# **System Setup**

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅 .



- ➤ HOME screen appears.
- 3 Touch

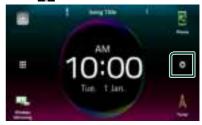



See the following section for each setting.

- Set up AV (P.58)
- Set up display (P.56)
- Set up the user interface (P.53)
- Set up camera (P.36)
- Set up special (P.56)
- Set up Bluetooth (P.42)
- · Set up security (P.8)
- Set up navigation (P.39)

# **User Interface Setup**

You can setup user interface parameters.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch .
  - > SETUP screen appears.
- 4 Touch User Interface.



- ➤ User Interface screen appears.
- 5 Set each parameter as follows.
  - Small Audio Text

Determine whether to change the text size for the source control screen smaller. "ON" (Default)/"OFF"

#### **■ Steering Remote Controller**

Sets the desired function in the steering remote controller. See *Learning function of steering remote (P.53)*.

#### ■ Beep

Turn the key touch tone on or off. Default is "ON".

#### **■ Widget SETUP**

Set up the widget displayed on the HOME screen. (P.18)

#### **■** Gesture Touch Control Effect

Determine whether to show the trace of finger under gesture touch control. **(P.10)** "ON" (Default)/"OFF"

#### **■ Customize Favorite Key**

Select the function which you wish to set for **Favorite** icon. **(P.54)** 

#### ■ Customize FNC Menu

Select the function which you wish to set for the function key1 to 3. **(P.55)** 

#### ■ Language select

Select a language.

#### **■** Touch Panel Adjust

Adjust the sensing position of the touch panel. **(P.55)** 

#### ■ Time Format

Select the time display format. "12-Hour" (Default)/"24-Hour"

#### ■ Clock

**GPS-SYNC** (Default): Synchronizes the clock time with the GPS.

Manual: Set the clock manually.

#### ■ Time Zone

Select the time zone.

#### ■ Clock Adjust

If you select **Manual** for Clock, adjust the date and time manually. **(P.55)** 

#### DISP Key

Select the source screen displayed when

in the popup menu screen is pressed.

**OFF**: Displays the control screen of the current source.

Mirroring (Default): Switches to the App screen from the connected iPhone/
Android device or to the Apple CarPlay screen from the connected iPhone when the button is pressed. (P.19)

NAV: Switches to the navigation screen from the connected navigation unit by pressing the button. (P.38) (outside oceania area)

# Learning function of steering remote

This function is available only when your vehicle is equipped with the electrical steering remote controller.

If your steering remote controller is not compliant, learning may not be completed and error message may appear.

- 1 Touch Steering Remote Controller in the User Interface screen.
  - ➤ Steering Remote Controller Setting screen appears.
- 2 Press and hold the steering remote controller button

#### NOTE

 You can have the unit learned all buttons at a time. In that case, press the all buttons one at a time and after pressing all of them, touch Learning completed in Steering Remote Controller Setting screen. However, new functions cannot be learned after this operation.

## **3** Touch the function you want to set.



### 4 Repeat steps 2 and 3 as necessary.



#### 5 Touch Learning completed.

#### **NOTE**

- When changing the function already learned, press and hold the button you want to change in step 2 and then touch to select the changed function from the function list.
- Confirm the contents of the settable function on the function list. You cannot edit the function list.
- To initialize the contents, touch Learning initialisation of Steering Remote Controller in User Interface screen. After you touch Initialise, a confirmation message appears. Follow the message and complete the operation.

# Customize Favorite key

You can jump to your favorite function easily from **Favorite** icon.



#### NOTE

• Favorite icon may be disabled on some screens depending on the registered function. When this icon is invalid, start the desired function by normal procedure.

#### To register a favorite function

- 1 Touch Customize Favorite Key on the User Interface screen.
  - ➤ Customize Favorite Key screen appears.
- 2 Select a favorite function.



#### 3 Touch Close.

- You can also change the assignment when you touch and hold **Favorite** icon on the HOME screen.
- If it is your first time to touch Favorite icon after installation, Customize Favorite Key screen will appear.


# Customize popup menu functions

You can register a function for each of the function key1 to 3.



#### To register a function

- Touch Customize FNC Menu on the User Interface screen.
  - ➤ Customize FNC Menu screen appears.
- 2 Select the function key you want to customize.

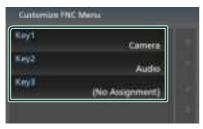

- ➤ The function list screen appears.
- 3 Select a function.



4 Touch Close.

#### **NOTE**

• You can change the assignment when you touch and hold the desired function key.

# Adjust the date and time manually

- 1 Touch Clock on the User Interface screen.
- 2 Select Manual.
- **3** Touch **Time Zone** on the User Interface screen.
- 4 Select the time zone.
- 5 Touch Clock Adjust on the User Interface screen.
- 6 Adjust the date, then adjust the time.



7 Touch Set.

# **■** Touch panel adjustment

- 1 Touch Touch Panel Adjust on the User Interface screen.
  - ➤ Touch Panel Adjust screen appears.
- 2 Follow the instruction on the screen and long touch the center of each .



- To cancel the touch panel adjustment, touch **Cancel** .
- · To reset it to the default, touch Reset.

# **Special Setup**

You can setup special parameters.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 4 Touch Special.



- > Special screen appears.
- 5 Set each parameter as follows.
  - DEMO

Select the demonstration mode. Default is "ON"

#### ■ Operation Guide Display

Determine whether to show the touch screen operation guide screen every time before HOME screen is displayed.

Default is "ON".

#### ■ Software Information

Confirm the software version of this unit. **(P.56)** 

#### Open Source Licenses

Display the open source licenses.

#### Initialise

Touch **Initialise** and then touch **Yes** to set all the settings to the initial default settings.

· Audio SETUP Memory is not initialized.

# Software Information

You can confirm the software version of this unit.

- Touch Software Information in the Special screen.
- 2 Confirm the software version.



#### NOTE

 For how to update the software, see the relevant update procedure manual which comes with the software.

# **Display Setup**

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- **3** Touch ...
  - > SETUP screen appears.
- 4 Touch Display.



- ➤ Display screen appears.
- 5 Set each parameter as follows.

#### Dimmer

Select the dimmer mode.

**OFF**: Does not dim the display and buttons.

**ON**: Dims the display and buttons.

**SYNC** (Default): Turns the dimmer function on or off when the vehicle light control switch is turned on or off.

#### OSD Clock

Select if you want to display the clock while the screen is off, or while watching video files (USB), etc.

"ON" (Default)/"OFF"

#### **■** Wallpaper Customize

You can change the wallpaper image or color. (P.57)

#### ■ Viewing Angle

If it is hard to see the image on the screen evenly, adjust the viewing angle. The smaller the (negative) value, the more whitish the image on the screen looks.

"0" (Default)/"-1"/"-2"/"-3"

#### ■ Screen transition effect

Select whether to use the screen transition effect when the source control screen is switched to the Home screen.

"ON" (Default)/ "OFF"

# Change the wallpaper image

- Touch Wallpaper Customize on the Display screen.
- 2 Select an image from live or static wallpapers.





- \*1 Select a wallpaper color in advance.
- \*2 Select an original image in advance.

## To select wallpaper color

- 1 Touch Wallpaper Colour on the Wallpaper Customize screen.
- 2 Select a wallpaper color.



3 Touch .

#### To register an original color

You can register your original color.

- Touch User on the Wallpaper Colour screen.
- 2 Touch Adjust.
- 3 Use and + to adjust each color value.




4 Touch 🗖 .

#### To register an original image

You can load an image from the connected USB device and set it as the wallpaper image. Before starting this procedure, it is necessary to connect the device which has the image to load.

- Touch User1 Select on the Wallpaper Customize screen.
- 2 Select the image to load.

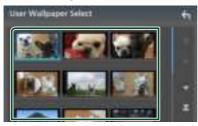

3 Touch Enter.



➤ The selected image is loaded and the display returns to the Wallpaper Customize screen.

#### NOTE

- Touching rotates the image counterclockwise.
- Touching rotates the image clockwise.
- Picture files: JPEG (.jpg, .jpeg), PNG (.png), BMP (.bmp)

# **AV Setup**

You can set AV parameters.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch .....
  - > SETUP screen appears.
- 4 Touch AV.



- > AV screen appears.
- 5 Set each parameter as follows.
  - Android Auto Device Select (KW-M950BW)

Select the device to be used in the Android Auto mode. **(P.59)** 

■ Apple CarPlay Device List

Select the device to be used in the Apple CarPlay mode. **(P.20)** 

■ Speech Quality Adjust

You can adjust the speech quality.

- Microphone Level: Adjust the volume of your voice.

  Default is "0".
- **Echo Cancel Level**: Adjust the level of echo cancellation.

  Default is "0"
- **Noise Reduction Level**: Reduce the noise generated in the surrounding environment without changing the microphone volume. Use this function when the voice of caller is not clear. Default is "0".

#### ■ TV Tuner Control \*

Sets when connecting the TV tuner to AV INPUT.

- ON: Set to ON when connecting the 3rd party TV tuner. AV-IN Name is set to TV. If you connect the TV tuner made by DOS and watch TV, you can perform some simple operations by touching the screen of this unit.
- **OFF** (Default): Set to OFF when not connecting the 3rd party TV tuner.

#### AV-OUT

You can select an AV source to be output from the AV OUTPUT port.

OFF, AV-IN, USB, or iPod

- You cannot select AV-IN if the AV-IN is set to NONE on the Camera Assignment Setting screen.
- You cannot select iPod if it is connected via Bluetooth.
- If you select USB, iPod, Tuner, Spotify or Bluetooth audio as the main source, you cannot select USB or iPod as the AV output source.
- If you select Wireless Mirroring, Apple CarPlay or Android Auto as the main source, you cannot select USB or iPod as the AV output source.

#### Driving Position

Select the driving position (left or right). "Left"/"Right" (Default)

#### **■ Wi-Fi SETUP**

You can change the device name and display the device address, password. See **Change the device name (P.23)**.

\*This can be selected when the AV-IN is set to **NONE** on the Camera Assignment Setting screen.

# Select an Android device (KW-M950BW)

- 1 Touch Android Auto Device Select on the AV screen.
- 2 Select an Android device.



# **Controlling Audio**

You can adjust various settings such as audio balance or subwoofer level.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- **3** Touch .
  - > SETUP screen appears.
- 4 Touch Audio.





# See the following section for each setting.

- Set up speaker / X'over (P.61)
- Controlling EQ / SW Level (P.63)
- Set listening Position / DTA (P.67)
- Controlling general audio (Fader / Balance) (P.63)
- · Set volume offset (P.64)
- Performing zone control (P.65)
- · Set sound effect (P.66)
- Memory/recall the audio settings (P.69)


# 3-way speaker system setup

Select the appropriate crossover network mode for the speaker system used (2-way or 3-way speaker system).

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch
  - ➤ HOME screen appears.
- 3 Touch
  - > Source selection screen appears.
- 4 Touch AV Off.
- 5 Press the **FNC** (1) button and the (2) button for 1 second at the same time.



- > Speaker system select screen appears.
- **6** Select the crossover network mode.

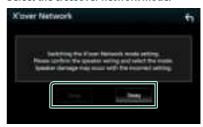

- A confirmation screen appears.
- 7 Touch Yes.

- When the 3-way speaker system is selected, the following functions are disabled.
  - Front focus of Listening Position / DTA
  - Fader for Controlling General Audio
  - Zone Control
  - Selection of the speakers to output sound from the cell-phone of Bluetooth HF/Audio
  - Beep for User Interface Setup
- Connecting 3-way speakers with the 2-way mode selected can break the speakers.

# Speaker / X'over setup

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch .
  - > SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Speaker / X'over.




**6** Select a car type.

You can select the car type and speaker network, etc.

When you select your car type, the Delay Time Alignment is activated automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.



7 Touch the speaker (1) you wish to adjust and set each parameter (2) as follows.

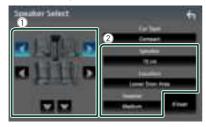

#### Speaker

You can select a speaker type and its size to get the best sound effects.

When the speaker type and size are selected, the speaker crossover network is set automatically.

#### ■ Location (Only for Front, Rear)

Select the speaker position you have installed.

#### ■ Tweeter (Only for Front)

You can set up the tweeter when you are selecting front speakers.

None, Small, Medium, Large

#### X'over

Display the speaker crossover setup screen. You can adjust the crossover frequency that was set automatically when you selected the speaker type.

For details, see **Crossover network setup** (P.62)

### When Speaker network is set to 3-way:



- For how to switch to the 3-way speaker system, see 3-way speaker system setup (P.60).
   Connecting 3-way speakers with the 2-way mode
- selected can break the speakers.

   Select "None" if you have no speakers.

# Crossover network setup

You can set the crossover frequency of speakers.

#### 1 Touch X'over.



### 2 Touch the speaker to set up.



#### 3 Set each parameter as follows.



#### **■** HPF FREQ

High Pass Filter adjustment. (When Front or Rear is selected on the Speaker Select screen)

#### **■ LPF FREQ**

Low Pass Filter adjustment. (When Subwoofer is selected on the Speaker Select screen)

#### ■ Slope \*1

Set a crossover slope.

#### **■** Gain

Adjust the gain of the front speaker, rear speaker, or subwoofer.

#### ■ TW Gain \*2

Adjust the tweeter level. (When Front is selected on the Speaker Select screen)


#### ■ Phase Inversion \*3

Set the phase of subwoofer output.

Check **Phase Inversion** to shift the phase 180 degrees. (When Subwoofer is selected on the Speaker Select screen)

\*3 Only when "Subwoofer" is set to a mode other than "None" in **Speaker Setup**.

#### When Speaker network is set to 3-way:

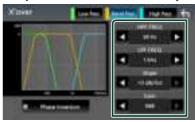

#### ■ FREQ (High Pass)

High Pass Filter adjustment.

#### ■ HPF FREQ, LPF FREQ (Band Pass)

Band Pass Filter adjustment. (When Mid Range Speaker is selected on the Speaker Select screen)

#### ■ FREQ (Low Pass)

Low Pass Filter adjustment. (When Woofer is selected on the Speaker Select screen)

#### ■ Slope \*1 \*2

Set a crossover slope.

#### **■** Gain

Set the gain of each speaker.

#### Phase Inversion

Set the phase of tweeter, mid range, and woofer output.

Check **Phase Inversion** to shift the phase 180 degrees.

- \*1 Only when "LPF FREQ"/"HPF FREQ" (Band Pass) is set to a mode other than "Through" in **X'over**.
- \*2 Only when "FREQ" (Low Pass) is set to a mode other than "Through" in **X'over**.

#### NOTE

 For how to switch to the 3-way speaker system, see 3-way speaker system setup (P.60).
 Connecting 3-way speakers with the 2-way mode selected can break the speakers.

<sup>\*1</sup> Only when "LPF FREQ"/"HPF FREQ" is set to a mode other than "Through" in **X'over**.


<sup>\*2</sup> Only when "Tweeter" is set to "Small", "Medium", "Large" in **Speaker Setup**.

# **Controlling General Audio**

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch .
  - > SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Fader / Balance.



6 Set each parameter as follows.

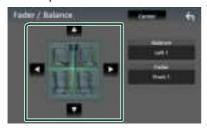

#### **■ Fader**, Balance

Adjust the volume balance around the touched area.

- and 
   adjust the right and left volume balance.
- ▲ and ▼ adjust the front and rear volume balance

#### Center

Clear the adjustment.

# **Equalizer Control**

You can adjust equalizer by selecting the optimized setting for each category.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 3 Touch
- ➤ SETUP screen appears.
- 4 Touch Audio.
  - > Audio screen appears.
- 5 Touch EQ / SW Level.



**6** Touch the screen and set the Graphic Equalizer as desired.



#### ■ Gain level (area in dotted frame)

Adjust the gain level by touching each frequency bar.

You can select a frequency bar and adjust its level by  $\blacktriangle$ ,  $\blacktriangledown$ .

#### ■ Preset Select

Display the screen for selecting the preset equalizer curve. **(P.64)** 

#### Memory

Saves the adjusted equalizer curve as "User1" to "User4". **(P.64)** 

#### Initialise

Initialize (flatten) the current EQ curve.

#### ALL SRC

Apply the adjusted equalizer curve to all sources. Touch **ALL SRC** and then touch **OK** on the confirmation screen.

#### **Controlling Audio**

#### ■ Bass EXT (Bass Extend Settings)

When turned on, the frequencies lower than  $62.5~\mathrm{Hz}$  is set to the same gain level ( $62.5~\mathrm{Hz}$ ).

#### SW Level

Adjust the subwoofer volume. This setting is not available when Subwoofer is set to "None". See **Speaker/X'over setup (P.61)**.

## Recall the EQ curve

- 1 Touch Preset Select.
- 2 Select an EO curve.



#### NOTE

• **iPod** is available for the iPod, Apple CarPlay, and Spotify sources and it is connected via USB.

## Save the EQ curve

- 1 Adjust the EQ curve.
- 2 Touch Memory.
- 3 Select where to save.



# **Volume Offset**

Finely adjust the volume of the current source to minimize the difference in volume between different sources.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- - > SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Volume Offset.



**6** Touch + or - to adjust the level.



#### ■ Initialise

Returns to the initial settings.

#### NOTE

 If you have increased the volume first, then reduce the volume using "Volume Offset".
 Switching the current source to another source suddenly may output extremely loud sound.

# **Zone Control**

You can select different sources for front and rear positions in the vehicle.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch ....
  - > SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Zone Control.



- > Zone Control screen appears.
- 6 Touch Zone Select.



7 Touch Dual Zone.



#### 8 Set each source as follows.



#### Zone Select

Touch Single Zone to turn off the dual zone function

#### ■ Front Source, Rear Source

Select an audio source for each.

Rear Source:

"AV-IN"/"iPod"/"USB"/"OFF"

#### Rear VOL.

Adjust the rear source volume.

- · When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source.
- · When the dual zone function is set to on, the following functions are not available.
  - Output from the subwoofer
  - Subwoofer Level/Bass Boost (P.66)
  - Equalizer Control/Sound Effect/Listening Position (P.63, 66, 67)
  - Speaker Setup (P.61)
  - High-resolution Sound Source File Playback
- · You cannot select AV-IN if the AV-IN is set to **NONE** on the Camera Assignment Setting
- · You cannot select iPod if it is connected via Bluetooth
- If you select USB, iPod, Tuner, Spotify or Bluetooth audio as the Front Source, you cannot select USB or iPod as the Rear Source.
- If you select Wireless Mirroring, Apple CarPlay or Android Auto as the Front Source, you cannot select USB or iPod as the Rear Source.

# **Sound Effect**

You can set sound effects.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch 🛅 .
  - ➤ HOME screen appears.
- 3 Touch .
  - ➤ SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Sound Effect.



6 Set each parameter as follows.



#### **■** Bass Boost

Set the amount of bass boost "OFF"/"1"/"2"/"3".

#### Loudness

Set the amount of boost of low and high tones.

"OFF", "Low", "High"

#### **■ Volume Link EQ**

Reduce the driving noise by boosting specific frequencies in the audio signal. "OFF" "ON"

## ■ Space Enhancement

Select the feeling of sound space enhancement.

"OFF"/"Small"/"Medium"/"Large".

This setting is not available for the Tuner source.

#### ■ K2

Turn ON/OFF the K2 function.

Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding.

#### ■ Sound Response

Virtually make the sound more realistic using the Digital Signal Processor (DSP) system. Select the level from "OFF"/"1"/"2"/"3".

#### ■ Sound Lift

You can adjust the height of speakers virtually to suit your listening position. "OFF"/"Low"/"Middle"/"High".

# **Listening Position / DTA**

Listening Position / DTA allows you to improve the sound field depending on the position of the seat you sit.

Listening Position / DTA allows you to set "Listening Position" and "Front Focus". You cannot set both at the same time.

- 1 Press the FNC button.
  - ➤ Popup menu appears.
- 2 Touch iii.
  - ➤ HOME screen appears.
- 3 Touch .....
  - > SETUP screen appears.
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Position / DTA.




- Set up Listening Position (P.67)
- Set up Front Focus (P.68)

# Listening Position

Adjust the sound delay time so that the sounds from different speakers arrive at the listener sitting on the selected seat at the same time.

- 1 Touch **Listening Position** on the Position / DTA screen.
- 2 Select a listening position from Front R (Right front), Front L (Left front), Front All (All front), and All.

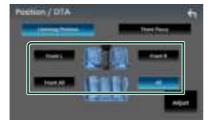

#### **Position DTA control**

You can fine-adjust your listening position.

- 1 Touch Adjust.
- 2 Touch Delay.
- **3** Touch **◄** or **▶** to adjust the delay time of the selected speaker.



- 4 Touch Level.
- 5 Touch ◀ or ▶ to adjust the sound level of the selected speaker.



#### NOTE

• To initialize the Delay and Level settings, touch **Initialise** and **YES** on the confirmation screen.

#### Front Focus

You can focus the imaginary sound image on the front of the selected seat.


- Touch Front Focus in the Position / DTA screen.
- **2** Select a front focus position.

For **Front All** and **All**, select Priority L or R depending on which side you want to put the imaginary sound image.



# Front Focus fine adjustment

- 1 Touch Adjust.
- 2 Touch Delay.
- 3 Set each parameter as follows.

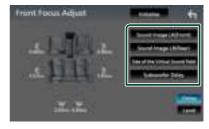

#### ■ Sound Image LR (Front)

Focus the sound image on the front of front seats.

#### ■ Sound Image LR (Rear)

Focus the sound image on the front of rear seats.

#### ■ Size of the Virtual Sound Field

Adjust the size of sound image to meet your taste. If the sound image is shifted from the front, move it back by **Sound Image LR** (Front) or **Sound Image LR** (Rear).

#### ■ Subwoofer Delay

Adjust the delay time of subwoofer sound.

- 4 Touch Level.
- 5 Touch ◀ or ▶ to adjust the sound level of the selected speaker.



#### **NOTE**

• To initialize the Delay and Level settings, touch **Initialise** and **YES** on the confirmation screen.

# **Audio Setup memory**

Audio Control settings can be memorized. The memorized settings can be recalled at any time.

- 1 Press the FNC button.
  - > Popup menu appears.
- 2 Touch 🛅.
  - ➤ HOME screen appears.
- 3 Touch ...
  ➤ SETUP screen appears.
- , 52.0. Se.ce.. appea
- 4 Touch Audio.
  - ➤ Audio screen appears.
- 5 Touch Audio Memory.



#### **■ SETUP Memory**

Lock or unlock the Audio SETUP Memory/ Recall/Clear.

#### ■ Audio SETUP Memory

Memorize the current audio settings.

 Fader / Balance, Speaker / X'over, Equalizer (User Preset, SW Level), Position / DTA, Sound Effect (P.60)

#### Audio SETUP Recall

Recall the memorized audio setting.

#### Audio SETUP Clear

Clear the Audio SETUP Memory and the currently memorized audio settings.

# Remote control

This unit can be operated using the remote control.

#### **A WARNING**

• Do not ingest the battery, Chemical Burn Hazard

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### **A** CAUTION

- Put the remote control in a place where it will not move during braking or other operations.
   A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Danger of explosion if Lithium battery is incorrectly replaced. Replace only with the same or equivalent type.

# Removing the battery sheet

Pull the battery sheet out from the remote controller to activate the battery.



# Changing the battery of the remote controller



- Use a commercially available button battery (CR2025).
- Insert the battery with the + and poles aligned properly.
- If the effectiveness of the remote controller decreases, replace the battery.

# Functions of the Remote control Buttons



Key Name	Function
SRC	Switches to the source to be played. In hands-free mode, hangs up the phone.
VOL+-	Adjusts the volume.
ATT	Lowers the volume when pressed once. Restores the previous volume when pressed twice.
DISP	Switches the screen between the current source and the App screen from the connected iPhone/Android.
FM/▲ AM/▼	Selects the folder to be played. For the tuner source, selects FM/AM band to be received.
<b>₩</b>	Selects the track or file to be played. For the tuner source, switches to broadcast stations received by the unit.
ANGLE	Not used.
6	When a call comes in, answers the call.
DIRECT	Switches to the direct search mode. For details on the direct search mode, see <i>Direct search mode (P.71)</i> .
ASPECT	Changes the aspect ratio.  • To confirm the current aspect ratio setting, operate on the touch panel. (P.52)
Numeric Keypad	Allows you to enter the number to search in the direct search mode. For details on the direct search mode, see <i>Direct search mode (P.71)</i> . For the tuner source, allows you to enter the preset number.  If the preset number is single digit, press the number.
CLR	Deletes a character while in direct search mode.
FNT	Not used.

# **■** Direct search mode

Using the remote control, you can jump directly to the desired station by entering the frequency value.

- 1 Press the **SRC** button several times until the desired content appears.
- 2 Press the **DIRECT** button.
- 3 Enter the frequency value of the station you want to listen using the numeric keypad.
- 4 Press the I◀◀ or ▶▶I button.
  - ➤ The station corresponding to the number you entered is received.

# **Connection/Installation**

### **Before Installation**

Before installation of this unit, please note the following precautions.

#### **▲** WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.


#### **A** CAUTION

 Install this unit in the console of your vehicle.
 Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.


- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("There is an error in the speaker wiring. Please check the connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the

- ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, make sure to install the unit so that the front panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the 


  wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊕ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- This unit has the cooling fan to decrease the internal temperature. Do not mount the unit in a place where the cooling fan of the unit is blocked. Blocking these openings will inhibit the cooling of the internal temperature and result in malfunction.

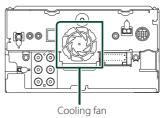


- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth antenna.

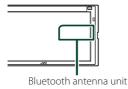

# Supplied accessories for installation

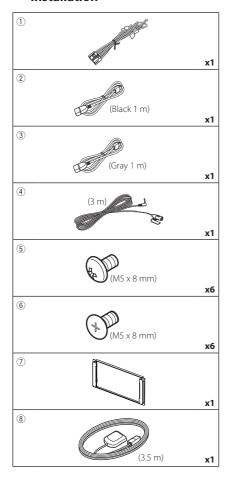


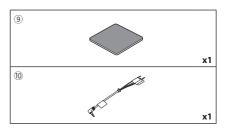

# Installation procedure

- To prevent a short circuit, remove the key from the ignition and disconnect the ⊖ terminal of the battery.
- 2) Make the proper input and output wire connections for each unit.
- 3) Connect the speaker wires of the wiring harness.
- 4) Connect the wiring harness wires in the following order; ground, battery, ignition.
- 5) Connect the wiring harness connector to the unit
- 6) Install the unit in your car.
- 7) Reconnect the  $\bigcirc$  terminal of the battery.
- 8) Perform the Initial Setup. See *Initial setup (P.7)*.

# Installing the unit

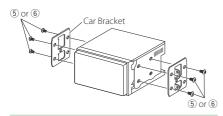


# NOTE

 Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).

# Trim plate


1) Attach accessory 7 to the unit.

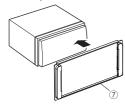

# GPS antenna

GPS antenna is installed inside of the car. It should be installed as horizontally as possible to allow easy reception of the GPS satellite signals. To mount the GPS antenna inside your vehicle:

- 1) Clean your dashboard or other surface.
- 2) Remove the separator of the metal plate (accessory (9)).
- 3) Press the metal plate (accessory ®) down firmly on your dashboard or other mounting surface. You can bend the metal plate (accessory ®) to conform to a curved surface, if necessary.
- 4) Remove the separator of the GPS antenna (accessory ®), and stick the antenna to the metal plate (accessory ®).

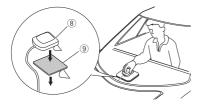


# NOTE

- Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.
- Depending on the type of car, reception of the GPS satellite signals might not be possible with an inside installation.
- Please install this GPS antenna in an area away from any antennas that are used with CB radios or satellite televisions.
- The GPS antenna should be installed at a position that is spaced at least 12 inch (30 cm) from cellular phone or other transmitting antennas. Signals from the GPS satellite may be interfered with by these types of communication.
- Painting the GPS antenna with (metallic) paint may cause a drop in performance.


# Microphone unit

- 1) Check the installation position of the microphone (accessory ④).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ④), and stick the microphone to the place shown below.
- Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory 4) to the driver.

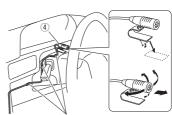

Fix a cable with a commercial item of tape.

# Connecting wires to terminals Fuse (15A)

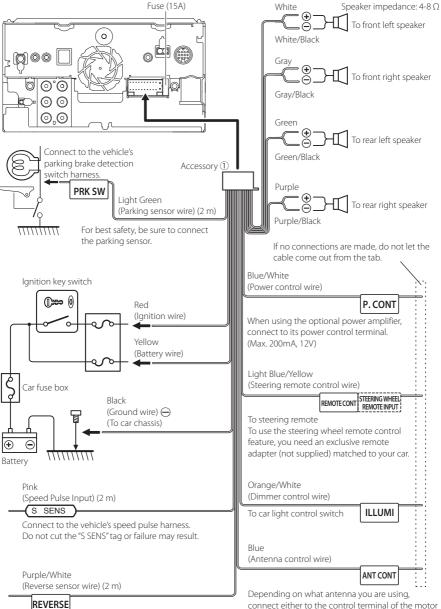

Connect to vehicle's reverse lamp harness when using the optional rear view camera.


English | 75

antenna, or to the power terminal for the booster

amplifier of the film-type antenna. (Max. 300mA,

12V)


# 3-way speaker system setup

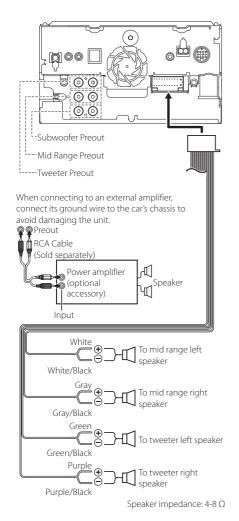

# NOTE

- For speaker system setup, see 3-way speaker system setup (P.60).
- For speaker setup and crossover setup, see Speaker / X'over setup (P.61).
- For how to connect speaker wires to terminals other than speaker terminals and Preout terminals, see Connecting the system and external components (P.76) and Connecting wires to terminals (P.75).

# Connecting the system and external components

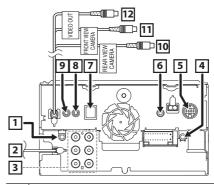

- AV Audio output (ø3.5 mini jack)
- FM/AM antenna input



When connecting to an external amplifier, connect its ground wire to the car's chassis to avoid damaging the unit.



- TV tuner remote output
- External navigation interface (Not-covered areas: Oceania)
- This jack accepts either AV-IN (1; Left audio, 2; Right audio, 3; Ground, 4; VIDEO) or Side (Left or Right) view camera input. \*1
  For more information, see **To set up the**camera assignment settings (P.37).


quil

Accessory ®: GPS Antenna
Use the supplied GPS antenna. Using the GPS
antenna other than the supplied one may
cause a drop in positioning accuracy.




8 Accessory 4: Bluetooth Microphone



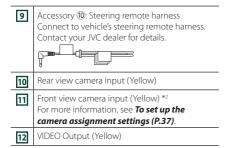

- \*1 Front view camera can also be connected to **6**1.
- \*2 Side (Left or Right) view camera can also be connected to 11.


# Connecting a USB device

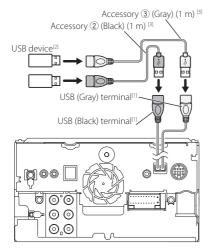

- <sup>[1]</sup> USB maximum power supply current : DC 5 V === 1.5 A
- [2] Sold separately
- [3] See **Securing the USB extension cable** (P.78).


# **■** Connecting an iPod/iPhone

# Lightning connector

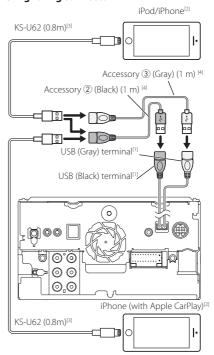

- <sup>[1]</sup> USB maximum power supply current : DC 5 V == 1.5 A
- [2] Sold separately
- [3] Optional accessory
- [4] See **Securing the USB extension cable** (P.78).


# Connecting an Android smartphone

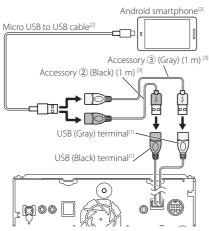


- <sup>[1]</sup> USB maximum power supply current: DC 5 V === 1.5 A
- [2] Sold separately
- [3] See **Securing the USB extension cable** (P.78).

# Securing the USB extension cable

Secure the USB extension cable with insulating tape or the like so that its connectors are not disconnected.

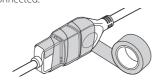

# Connecting the camera

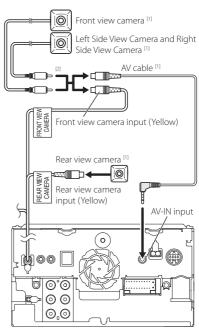

- [1] Sold separately
- <sup>[2]</sup> Up to 2 cameras of Front view camera, Left Side View Camera and Right Side View Camera can be connected. For more information, see *[Camera Assignment Settings] (P.36)*.

# **Troubleshooting**

# **Problems and Solutions**

If any trouble occurs, first check the following table for possible problems.

#### NOTE

- Some functions of this unit may be disabled by some settings made on this unit.
- What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring.

# About settings

- · Cannot set up the subwoofer.
- · Cannot set up subwoofer phase.
- · No output from the subwoofer.
- Cannot set up the low pass filter.
- · Cannot set up the high pass filter.

Subwoofer is not set to on.

Set the subwoofer to on. See Speaker / X'over setup (P.61).

The dual zone function is enabled.

- Set the dual zone function to off. See Zone Control (P.65).
- Cannot select the output destination of the subsource in the dual zone.
- Cannot adjust the volume of the rear speakers.

The dual zone function is disabled.

- > Set the dual zone function to on. See **Zone Control** (**P.65**).
- · Cannot set up the equalizer.
- · Cannot set up the crossover network.

The dual zone function is enabled.

 Set the dual zone function to off. See Zone Control (P.65).

# About audio operations

# Radio reception is poor.

The car antenna is not extended.

> Pull out the antenna all the way.

The antenna control wire is not connected.

➤ Connect the wire correctly. See **Connecting the** system and external components (P.76).

## Cannot select a folder.

The random play function is enabled.

➤ Turn off the random function.

# The sound skips when an audio file is being played.

The recording condition is bad.

> Record the file again.

# Others

#### The Touch Sensor Tone doesn't sound.

The preout jack is being used.

➤ The Touch Sensor Tone cannot be output from the preout jack.

# **Error Messages**

When you fail to operate the unit correctly, the cause of the failure appears as the message on the screen.

# There is an error in the speaker wiring. Please check the connections.

Protective circuit has been activated because a speaker cord has shorted or it has come in contact with the car chassis

➤ Wire or insulate the speaker cord as appropriate and turn the power off and on again.

# **Hot Error**

When the internal temperature of this unit rises to 60°C or more, the protection circuit is activated and you may not be able to operate the unit.

➤ Use the unit again after reducing the temperature of the unit.

#### Error 07-67

The unit is not operating correctly due to some reason or other.

➤ Turn the power off and on again. If the "Error 07–67" message does not disappear, contact your nearest JVC dealer.

# No Device (USB device)

The USB device is selected as a source although no USB device is connected.

 Change the source to any source other than USB/ iPod. Connect a USB device, and change the source to USB again.

# Disconnected (iPod, Bluetooth audio player)

The iPod/Bluetooth audio player is selected as a source although no iPod/Bluetooth audio player is connected.

➤ Change the source to any source other than iPod/ Bluetooth. Connect an iPod/Bluetooth audio player, and change the source to iPod/Bluetooth again.

# No Media file

The connected USB device contains no playable audio file. Media was played that doesn't have data recorded that the unit can play.

 See Playable Media and Files (P.81) and try another USB device.

# **Troubleshooting**

#### USB device over current status detected.

The connected USB device is rated a current capacity higher than the allowable limit.

- ➤ Check the USB device. Some trouble may have occurred to the connected USB device.
- Change the source to any source other than USB.
   Remove the USB device.

# Apple CarPlay

# The speed sensor must be connected to use Apple CarPlay wirelessly. Please verify the proper connections or plug in by USB to use Apple CarPlay.

The speed pulse is not detected when the Apple CarPlay is started by connecting wirelessly or when the iPhone compatible with wireless Apple CarPlay is registered in **Apple CarPlay Device List**.

➤ Check the connection of the speed pulse or plug in over USB to use Apple CarPlay.

# The GPS antenna must be connected to use Apple CarPlay wirelessly. Please verify the proper connections or plug in by USB to use Apple CarPlay.

The GPS antenna is not connected when the Apple CarPlay is started by connecting wirelessly or when the iPhone compatible with wireless Apple CarPlay is registered in **Apple CarPlay Device List**.

➤ Check the connection of the GPS antenna or plug in over USB to use Apple CarPlay.

# The speed sensor and the GPS antenna must be connected to use Apple CarPlay wirelessly. Please verify the proper connections or plug in by USB to use Apple CarPlay.

The speed pulse is not detected and the GPS antenna is not connected when the Apple CarPlay is started by connecting wirelessly or when the iPhone compatible with wireless Apple CarPlay is registered in **Apple** 

# **CarPlay Device List**

 Check the connection of the speed pulse and the GPS antenna or plug in over USB to use Apple CarPlay.

# **Appendix**

# **Playable Media and Files**

You can play various kinds of media and files on this unit.

# About files

The following audio and video files are supported.

# ■ Playable Audio files

	Format	Bit rate	Sampling frequency	Bit count
AAC-LC (.m4a)	MPEG-2/MPEG-4 AAC LC HE-AAC(V1,V2)	8 – 320kbps, VBR	16 – 48 kHz	16 bit
MP3 (.mp3)	MPEG-1/MPEG-2 Audio Layer 3	8 – 320kbps, VBR	16 – 48 kHz	16 bit
WMA (.wma)	Windows Media Audio Standard L3 profile (Version 7,8,9)	8 – 320kbps	16 – 48 kHz	16 bit
Linear PCM (WAVE) (.wav)	RIFF waveform Audio Format	_	16 – 192 kHz	16 bit/24 bit
FLAC (.flac)	flac	-	16 – 192 kHz	16 bit/24 bit
Vorbis (.ogg)	vorbis	VBR	16 – 48 kHz	16 bit

- · WMA and AAC files with DRM cannot be played.
- Although the audio files complies with the standards listed above, they may not be played depending on the types or conditions of media or device.
- This unit supports playback of High-Resolution Audio files. It is recommended that a car audio system should be configured with all High-Resolution Audio compatible products from player to speaker to enjoy its high quality sound.

# ■ Acceptable Video files

— : · · · · · · · · · · · · · · · · · ·							
	Profile	Max. Picture size	Max. bit rate	Audio format			
MPEG-1 (.mpg, .mpeg)	_	352 × 240, 352 × 288	1.5 Mbps	MPEG Audio Layer 2			
MPEG-2 (.mpg, .mpeg)	MP@ML	720 × 480, 720 × 576	8 Mbps	MPEG Audio Layer 2			
H.264/MPEG-4 AVC (.mp4, .m4v, .avi, .flv, .f4v)	Baseline Profile, Main Profile	1920 × 1080 (30 fps)	8 Mbps	MP3, AAC			
MPEG-4 (.mp4, .avi)	Advanced Simple Profile	1920 × 1080 (30 fps)	8 Mbps	MP3, AAC			
WMV (.wmv)	Main Profile	1920 × 1080 (30 fps)	8 Mbps	WMA			
MKV (.mkv)	Video format follows H.264/MPEG-4 AVC, MPEG-4, WMV			MP3, AAC, WMA, Vorbis, FLAC			

<sup>•</sup> This unit can only play back files which are smaller than 4 GB.

# ■ Limitation on structure of file and folder

	USB device
Maximum number of folder layers	8
Maximum number of files (per folder)	999
Maximum number of folders (per folder)	9999
Maximum number of folders (per device)	Unlimited

- You can enter a folder name and file name with 255 or fewer single-byte characters.
- Files in the folder whose folder name begins with a dot (.) cannot be played.

# **Specifications**

# ■ Monitor section

# Picture Size

: 6.75 inches (diagonal) wide

: 151.8 mm (W)  $\times$  79.68 mm (H)

# **Display System**

:TN LCD panel

# **Drive System**

:TFT active matrix system

#### Number of Pixels

: 1,152,000 (800H x 480V x RGB)

#### Effective Pixels

: 99.99%

### Pixel Arrangement

: RGB striped arrangement

# **Back Lighting**

: LFD

# ■ USB interface section

#### USB Standard

: USB 2.0 High Speed

#### File System

: FAT16, FAT32, exFAT, NTFS

# Maximum Power Supply Current

: DC 5 V .... 1.5 A × 2

#### D/A Converter

: 24 bit/32 bit

### Audio Decoder

: MP3 / WMA / AAC / WAV / FLAC / Vorbis

# Video Decoder

: MPEG-1 / MPEG-2 / MPEG-4 / WMV / H.264 / MKV

# Frequency Response

• 192 kHz : 20 - 88.000 Hz

• 96 kHz: 20 - 44,000 Hz

• 48 kHz : 20 – 22.000 Hz

44.1 kHz: 20 – 20.000 Hz

#### Total Harmonic Distortion

: 0.0001% (1 kHz)

# S/N Ratio (dB)

: 98.5 dB

#### Dynamic Range

: 89 dB

# ■ Wireless Mirroring section

## Mode

: Sink

# Copyright protection

: HDCP2.2

# **Touch Control**

: UIBC

# ■ Wi-Fi section

#### IEEE Standard

KW-M950BW: 802.11 a/b/g/n/ac KW-M950BWM: 802.11 b/g/n

# Frequency Range

KW-M950BW: Dual Band (2.4GHz/5GHz)

KW-M950BWM: 2.4GHz

# Channels

KW-M950BW: Auto(1-11ch)/Auto(149,153,157,161ch) KW-M950BWM: Auto(1-11ch)

#### Transfer rates (MAX)

KW-M950BW: 11a: 54 Mbps / 11b: 11 Mbps /

11g: 54 Mbps / 11n: 300 Mbps /

11ac: 867 Mbps

KW-M950BWM: 11b: 11 Mbps / 11g: 54 Mbps / 11n: 72.2 Mbps

# **Output Power**

#### 2.4 GHz/SISO

: 11b: 14 dBm  $\pm$  2 dB / 11g: 13 dBm  $\pm$  2 dB / 11n (20MHz): 12 dBm  $\pm$  2 dB

# 5 GHz/SISO (KW-M950BW)

: 11a: 9 dBm ± 2 dB /

11n (20 MHz)/11ac (20 MHz): 9 dBm ± 2 dB / 11n (40 MHz)/11ac (40 MHz): 8 dBm ± 2 dB /

11ac (80 MHz): 8 dBm ± 2 dB

# 5 GHz/MIMO (KW-M950BW)

: 11n (20 MHz)/11ac (20 MHz): 11 dBm  $\pm$  2 dB / 11n (40 MHz)/11ac (40 MHz): 11 dBm  $\pm$  2 dB /

11ac (80 MHz): 11 dBm ± 2 dB

# ■ Bluetooth section

# Technology

: Bluetooth Ver.5.0

# Frequency

: 2.402 - 2.480 GHz

# **Output Power**

: +4dBm (MAX), 0dBm (AVE), Power Class2

# Maximum Communication range

: Line of sight approx. 10m (32.8 ft)

## Audio Codec

: SBC/AAC

# Profile (Multi Profile support)

- · HFP (V1.7) (Hands Free Profile)
- · SPP (Serial Port Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (V1.6) (Audio/Video Remote Control Profile)
- · PBAP (Phonebook Access Profile)

### ■ FM tuner section

# Frequency Range (step)

: 87.5 MHz - 108.0 MHz (50 kHz)

# Usable Sensitivity (S/N:30 dB)

: 9.3 dBf (0.8  $\mu$ V/75  $\Omega$ )

# Quieting Sensitivity (S/N: 46 dB)

: 15.2 dBf (1.6 μV/75 Ω)

# Frequency Response

: 30 Hz - 15 kHz

#### S/N Ratio (dB)

: 65 dB (MONO)

## Selectivity (± 400 kHz)

: Over 80 dB

# Stereo Separation

: 45 dB (1 kHz)

# AM tuner section

# Frequency Range (step)

KW-M950BW (for asia sales area):

531 kHz - 1611 kHz (9 kHz)

KW-M950BW (for oceania sales area):

531 kHz - 1701 kHz (9 kHz)

KW-M950BWM: 531 kHz - 1602 kHz (9 kHz)

#### **Usable Sensitivity**

: 28 dBu (25 uV)

# ■ Video section

#### Color System of External Video Input

: NTSC/PAL

# External Video Input Level (RCA jacks)

: 1 Vp-p/75  $\Omega$ 

# External Video Input Level (mini jack)

: 1 Vp-p/75 Ω

# External Audio Max Input Level (mini jack)

: 2 V/25 kΩ

# Video Output Level (RCA jacks)

: 1 Vp-p/75 Ω

# Audio Output Level (mini jack)

: 0.9 V/10 kΩ

# Audio section

# Maximum Power (Front & Rear)

:50 W × 4

# Typical Power Output (Front & Rear)

Full Bandwidth Power (at less than 1% THD)

: 22 W × 4

#### Output frequency band

: 20 - 88,000 Hz

# Preout Level (V)

: 4 V/10 kΩ

# **Preout Impedance**

: ≤ 300 Ω

## Speaker Impedance

:4-8Ω

# Graphics equalizer

Band: 13 Band

Frequency (BAND1 - 13)

: 62.5/100/160/250/400/630/1k/1.6k/2.5k/4k/6.3k/

10k/16k Hz

# Gain

:-9/-8/-7/-6/-5/-4/-3/-2/-1/0/1/2/3/4/5/6/7/8/9 dB

# 2-way X'Over

# High pass filter

Frequency: Through, 30/40/50/60/70/80/90/100/

120/150/180/220/250 Hz

Slope: -6/-12/-18/-24 dB/Oct. Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

### Low pass filter

Frequency: 30/40/50/60/70/80/90/100/120/150/

180/220/250 Hz, Through

Slope: -6/-12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

# 3-way X'Over

## High pass filter

Frequency: 250/300/1k/1.6k/2.5k/4k/5k/6.3k/8k/

10k/12.5k Hz

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

## Band pass filter

Frequency: Through, 50/60/70/80/90/100/120/150/

180/220/250/300 Hz

250/300/1k/1.6k/2.5k/4k/5k/6.3k/8k Hz,

Through

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

## Low pass filter

Frequency: 30/40/50/60/70/80/90/100/120/150 Hz,

Through

Slope: -12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

# **Appendix**

# ■ General

# Operating Voltage

: 12 V DC car battery

# **Current Consumption**

:15 A

## Installation Dimensions (W $\times$ H $\times$ D)

: 178 × 100 × 155 mm

# Weight

: 1.7 kg

# NOTE

 Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

Specifications are subject to change without prior notice.

# **About this Unit**

# ■ Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- This software is based in part on the work of the independent JPEG Group.
- The "AAC" logo is a trademark of Dolby Laboratories.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone, iPod, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- SPOTIFY and the Spotify logo are among the registered trademarks of Spotify AB.
- Android, Android Auto, Google Play and other marks are trademarks of Google LLC.
- · Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
- This product includes FontAvenue® fonts licenced by NEC Corporation.FontAvenue is a registered trademark of NEC Corporation.

# Font Avenue

 This product includes "Ubiquitous QuickBoot TM" technology developed by Ubiquitous Corp. Ubiquitous QuickBoot TM is a trademark of Ubiquitous Corp. Copyright© 2017 Ubiquitous Corp. All rights reserved.

Ublaultous

- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (j)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (jj)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LL.C. SEE HTTP://WWW.MPEG.LA.COM
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (;) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (jj) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE, ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP:// WWW.MPEGLA.COM.
- THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LL.C. SEE HTTP://WWW.MPEGLA.COM
- libFLAC
  - Copyright (C) 2000-2009 Josh Coalson
    Copyright (C) 2011-2013 Xiph.Org Foundation
    Redistribution and use in source and binary forms,
    with or without modification, are permitted provided
    that the following conditions are met:
  - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
  - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution.
  - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
     THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES. INCLUDING.

BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIDECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### · libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES: LOSS OF USE, DATA, OR PROFITS: OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT. STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## libogg

Copyright (c) 2002, Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution.

# **Appendix**

- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# מידע בדבר השלכה לאשפה של ציוד חשמלי ואלקטרוני ישן וכן סוללות (רלוונטי למדינות שמשתמשות במערכת איסוף אשפה מופרדת).

לא ניתן להשליך מוצרים וסוללות עם הסימון (פח אשפה עם X עליו) כאשפה ביתית רגילה.

יש למחזר ציוד חשמלי ואלקטרוני ישן וכן סוללות במתקן המסוגל לטפל בפריטים כאלה ובתוצרי הלוואי שלהם. צרו קשר עם הרשות המקומית לקבלת פרטים אודות מתקן המיחזור הקרוב אליכם. מיחזור והשלכה לאשפה נאותים יעזרו לשמר משאבים ולמנוע השפעות שליליות על בריאותנו ועל

שימו לב: הסימון Pb שמתחת לסימון עבור סוללות מציין שהסוללה מכילה עופרת.



Eski Elektrik ve Elektronik Ekipmanların İmha Edilmesi Hakkında Bilgi (ayrı atık toplama sistemlerini kullanan ülkeleri için uygulanabilir)



Sembollü (üzerinde çarpı işareti olan çöp kutusu) ürünler ev atıkları olarak atılamaz.

Eski elektrik ve elektronik ekipmanlar, bu ürünleri ve ürün atıklarını geri dönüştürebilecek bir tesiste değerlendirilmelidir. Yaşadığınız bölgeye en yakın geri dönüşüm tesisinin yerini öğrenmek için yerel makamlara müracaat edin. Uygun geri dönüşüm ve atık imha yöntemi sağlığımız ve çevremiz üzerindeki zararlı etkileri önlerken kaynakların korunmasına da yardımcı olacaktır.

# For KW-M950BWM



Declaration of Conformity with regard to the RE Directive 2014/53/EU Declaration of Conformity with regard to the RoHS Directive 2011/65/EU

Manufacturer:

JVC KENWOOD Corporation 3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPAN

**EU Representative:** 

JVCKENWOOD Europe B.V. Amsterdamseweg 37, 1422 AC UITHOORN, THE NETHERLANDS

# **English**

Hereby, JVC KENWOOD declares that the radio equipment KW-M9508WM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

# Türkçe

Burada, JVC KENWOOD KW-M950BWM radyo ekipmanının 2014/53/ AB Direktifine uygun olduğunu bildirir. AB uyumluluk deklarasyonunun tam metni aşağıdaki internet adresinde mevcuttur.

URL: http://www.jvc.net/cs/car/eudoc/

# ■ For Turkey

Bu ürün 28300 sayılı Resmi Gazete'de yayımlanan Atik Elektrikli ve Elektronik Eşyaların Kontrolü Yönetmeliğe uygun olarak üretilmiştir.

# JVC