

Foreword

Thank you for purchasing!

Godox is proud to introduce a new wireless microphone system. With the characteristics of compact and portable, plug and play, 2.4GHz wireless transmission, as well as compatibility with various smartphones and cameras, it's quite suitable for live streaming, interview, short video recording, outdoor shooting, etc.

Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Main Features

- The maximum wireless transmission distance up to 300m (sight distance).
- Clear and stable sound quality with denoise function
- Compact and portable, plug and play.
- Built-in lithium battery in transmitter provides 10 hours of working time.
- Switchable mono, stereo and safety track modes in receiver.
- Receiver supports computer UAC function, use and charge at the same time.
- Compatible with various smartphones and cameras.
- Charging case supports Apple FindMy quick retrieval.




Warning

- ▲ This product is high-precision instrument, please avoid falling, collision or pounding.
- ▲ Do not disassemble. Should repairs become necessary, this product must be sent to our Company or an authorized maintenance center.
- ▲ The product contains strong magnetism, please keep it away from magnetic cards, implantable medical devices (such as pacemakers), hard disks, RAM chips and other devices that are susceptible to interference.
- ▲ Do not store the battery for a long period of time after it has been completely discharged to avoid over-discharging the battery and rendering it unusable.
- ▲ Always keep this product dry. Do not use in rain or damp conditions.
- ▲ Do not leave or store this product in the environment of direct sunlight, near heating devices, or in hot, humid or dusty. Do not leave or store the product if the ambient temperature reads over 50°C .
- ▲ Keep out of reach of children.
- ▲ Do not use in flammable and explosive environments. Pay attention to the relevant warning signs.
- ▲ Please read carefully and follow the warnings or instructions provided by the manufacturer.
- ▲ Consumers who use a power adapter for charging should purchase a CCC-certified power adapter that meets the requirements of the standard.


| Kit Name | Item List |
|------------------|--|
| Cube-C Kit2 | Transmitter Cube-S TX *2 Receiver Cube-C RX *1 Charging Case *1 Furry Windscreen *2 USB Type-C Charging Cable *1 TRS-TRS Connecting Cable *1 USB-C to USB-C Adapter Cable *1 Magnet *4 Magnetic Clip *2 Portable Rope *2 Cartoon Stickers *1 Storage Bag *1 Instruction Manual *1 |
| Cube-C Combo Kit | Transmitter Cube-S TX *2 Receiver Cube-C RX *1 Charging Case *1 Receiver Cube-SC RX *1 Receiver Cube-SL RX *1 Furry Windscreen *2 USB Type-C Charging Cable *1 TRS-TRS Connecting Cable *1 Magnet *4 Magnetic Clip *2 Portable Rope *2 Cartoon Stickers *1 Storage Bag *1 Instruction Manual *1 |


Using Instructions

Transmitter Cube-S TX

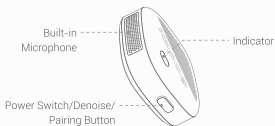

Power Switch

The transmitter will automatically turn on after taking out of the charging case, and turn off after putting into the charging case. Long press the power switch button <  > for 2s to turn on or off the receiver.

 **Flash green** ---- Unpaired after powered on

Note: The transmitter will be turned off if it stays unpaired in 5min after powered on.

Pairing

Short press twice the pairing button <  > to pair it with the receiver.

 **Flash green rapidly** ---- Pairing status

 **Constant on green** ---- Paired with denoise off

Denoise

Short press the denoise button <  > to turn on or off the denoise function.


 **Constant on orange** ---- Denoise function is on

Charging

The transmitter can be charged after putting into the charging case.

- Flash red** ---- Low battery level
- Breathe blue** ---- Charging
- Constant on blue** ---- Fully charged

Receiver Cube-C RX

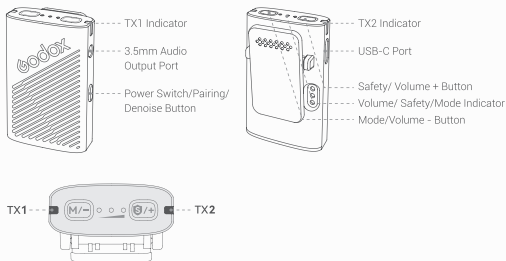

Power Switch



Long press the power switch button <  > for 2s to turn on or off the receiver.

- Flash green** ---- Unpaired after powered on

Note: The receiver will be turned off if it stays unpaired in 5min after powered on.

Pairing

Short press twice the pairing button <  > to pair it with the transmitter.

-  **Flash green rapidly** ---- Pairing status
-  **Constant on green** ---- Paired with denoise off





Denoise


Short press the denoise button <  > to turn on or off the denoise function.

-  **Constant on orange** ---- Denoise function is on

Charging

The receiver can be charged after connecting to power source through the USB-C charging cable or putting into the attached charging case.

-  **Constant on red** ---- Battery level of receiver is low
-  **Flash red** ---- Battery level of TX1 or TX2 transmitter is low
-  **Breathe blue** ---- Charging
-  **Constant on blue** ---- Fully Charged



Mode Switch

Long press the mode/volume – button < **M/–** > for 2s can switch to stereo / mono track mode.

Long press the safety/volume + button < **S/+** > for 2s can turn on or off the safety mode.

Note: The safety mode is mono track by default, and the right channel will record the audio with -6dB gain.

< ● ● ● > **Constant on green** ---- Mono mode

< ● ● ● > **Constant on blue** ---- Stereo mode

< ● ● ● > **Breathe green** ---- Safety mode

Note: The stereo and safety modes are only available when connecting the receiver with a camera by 3.5mm TRS cable.

Output Volume Adjustment

Short press the safety/volume + button < **S/+** > or mode/volume – button < **M/–** > to enter volume adjustment status, then short press the volume + button or volume – button in 3s can adjust the output volume in 3 levels.


< ● > **One indicator is on** ---- Lowest volume level

< ● ● > **Two indicators are on** ---- Medium volume level

< ● ● ● > **Three indicators are on** ---- Highest volume level



Receiver Cube-SL/ Cube-SC RX

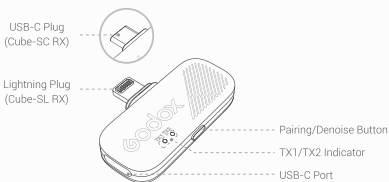Note: Cube-SC RX and Cube-SL RX are only included in Combo kit.



Pairing

Short press twice the pairing button <  > to pair it with the transmitter.

-  **Flash green rapidly** ---- Pairing status
-  **Flash green** ---- Unpaired
-  **Constant on green** ---- Paired with denoise off

Denoise


Short press the denoise button <  > to turn on or off the denoise function.

-  **Constant on orange** ---- Denoise function is on

Battery Level

-  **Flash red** ---- Battery level of TX1 or TX2 transmitter is low

Charging Case

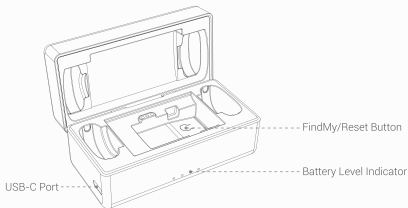

Charge the Transmitter and Receiver

Insert the transmitter and receiver into the charging case in the correct direction can charge them.

Indicators on the transmitter and receiver flash blue means that they are being charged, constant on blue means that they are fully charged.

Note: Remove the sticker on the bottom of the transmitter/receiver for first time use.

Charge the Case Itself

The charging case can be charged by connecting to the power adapter, the indicators on it will flash incrementally


< • • • • • > **Flash white** ---- Charging

< • • • • • > **Constant on white** ---- Fully charged, then turn off in 10min

Note: Recharge every 3 months or so to keep the battery alive. Sitting idle for a long time may affect its performance or even cause permanent damage to the battery.

Apple FindMy

If you need to return the product due to quality or objective reasons, make sure to remove it from your Apple devices first, and reset the Apple FindMy function with pin to clear the link information.(refer to the instructions below)

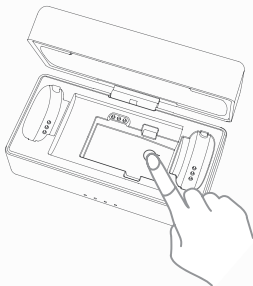

Power Switch/Status


Press and hold the FindMy button for 3s to turn on or off the function, the case will beep accordingly.

Double press the button to confirm status, it will beep in function on status, but no alert tone in function off status.


Factory Reset

Press the button twice in power on state, the case will beep, then press and hold for 4s until it beeps again, the factory reset is completed.



Link to the Device

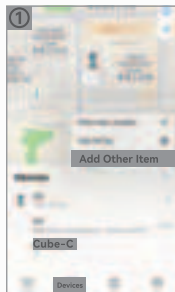


Open "FindMy" app in your smartphone, select "Device" and click "+", then "Add Other Item".

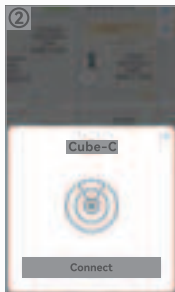

Search for "Cube-C" and select "Connect".

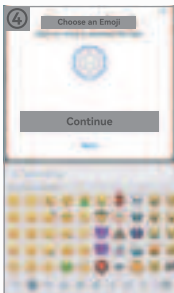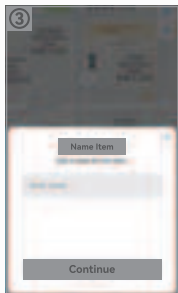

Then "Name Item" and "Choose an Emoji".

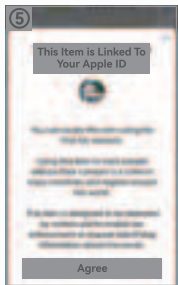


Click "Agree" to link this product to your Apple ID.


Remove the Device



Transmitter Installation

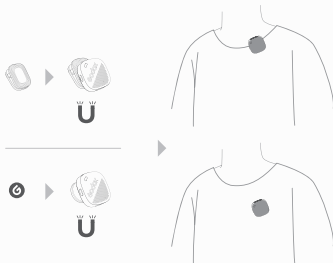



Mount the Receiver onto Cameras

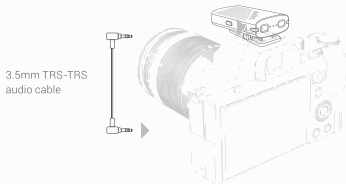


Mount the Receiver onto Smartphones


Smartphones with USB-C port

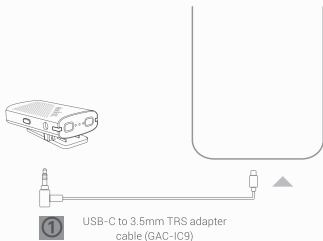

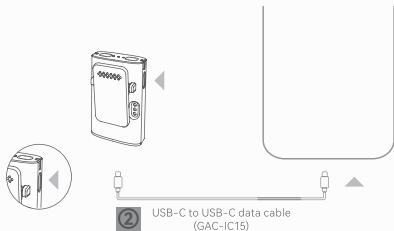


Smartphones with Lightning port

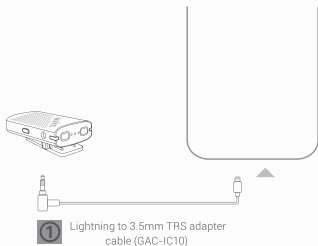

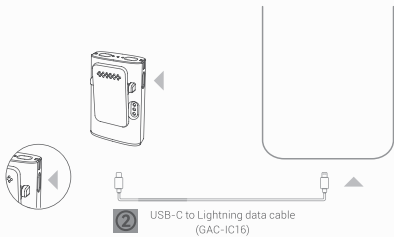

Mount the Receiver Cube-SL RX and Cube-SC RX onto Smartphones

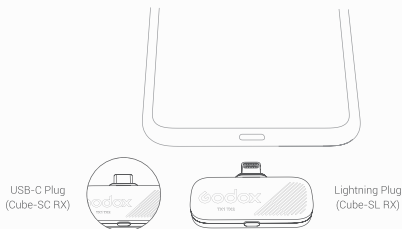

Connect the receivers Cube-SL RX and Cube-SC RX to power source with USB-A to USB-C cable and insert into smartphones, then they can charge the smartphone and be used at the same time.

APP Downloading

Scan the QR code to download the Godox Mic app, it can control the use of this product after connection.



Technical Data

| Name | Transmitter | Receiver | Charging Case |
|----------------------------|---------------------------------|--------------------------------|--|
| Model | Cube-S TX | Cube-C RX | Cube-C Charging Case |
| Transmission Type | 2.4GHz Frequency Hopping System | | / |
| Pickup Pattern | Omnidirectional | / | / |
| Frequency | 20Hz-20KHz | / | / |
| Max. SPL | 115dB | / | / |
| SNR | > 70dB | / | / |
| Max. Wireless Distance | 300m (sight distance) | | / |
| Input Parameters | 5V = 90mA | 5V = 200mA | 5V = 1.2A |
| Lithium Battery Parameters | 3.87V, 97mAh, 0.376Wh | 3.8V, 200mAh, 0.76Wh | 3.8V, 2300mAh, 8.74Wh |
| Working Time | Approx. 10h | Approx. 10h (with denoise off) | Charge three devices for about three times |
| Charging Time | Approx. 1.5h | Approx. 1h 20min | Approx. 3h |

| | | | |
|----------------------|-------------------|-------------------|-------------------|
| Working Environment | -10~50°C | | |
| Charging Temperature | 0°C ~45°C | | |
| Dimension | 0.96"x0.98"x0.49" | 1.81"x1.14"x0.71" | 3.23"x1.57"x1.54" |
| Net Weight | ≈ 7g | ≈ 16g | ≈ 103g |

| | | |
|---------------------------------|---------------------------------|----------------|
| Name | Receiver | Receiver |
| Model | Cube-SL RX | Cube-SC RX |
| Transmission Type | 2.4GHz Frequency Hopping System | |
| Max. Wireless Distance | 300m (sight distance) | |
| Input Parameters | 5V = 2A (Max.) | 9V = 2A (Max.) |
| Working Environment Temperature | -10~50°C | |
| Dimension ≈ | 1.57"x 1.04"x0.35" | |
| Net Weight ≈ | 5g | |

Specifications and data may subject to changes without notice.

Warning

Operating Frequency: 2402MHz - 2480MHz

Cube-S TX Maximum EIRP Power:-4.25dBm

Cube-SC RX Maximum EIRP Power:4.05 dBm

Cube-SL RX Maximum EIRP Power:4.43 dBm

Cube-C RX Maximum EIRP Power: 5dBm

Cube-C Charging Case Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity>

The device complies with RF specifications when the device used at 0mm from your body

Marking Information

Model: Cube-C RX



R-R-gdx-016



Made in China



Li-ion Battery:3.8V , 200mAh,0.76Wh

FCC ID: 2ABYN132

Input: 5 V = 200mA(Max.)


IC: 20034-132

CAN ICES-003(B)/NMB-003(B)



219-247155

Model: Cube-S TX

 R-R-gdx-018




Made in China

Li-ion Battery: 3.87V, 97mAh, 0.376Wh **FCC ID: 2ABYN120**

Input: 5V \Rightarrow 90mA **IC:20034-120**

CAN ICES-003(B)/NMB-003(B)  210-234905

Model: Cube-SC RX

 R-R-gdx-018




Made in China

Input: 9V \Rightarrow 2A (Max.) **FCC ID: 2ABYN123**

Output: 9V \Rightarrow 2A (Max.) **IC : 20034-123**

CAN ICES-003(B)/NMB-003(B)  210-234911

Model: Cube-SL RX

 R-R-gdx-018



Made in China

Input: 5V \Rightarrow 2A (Max.) **FCC ID: 2ABYN121**

Output: 5V \Rightarrow 2A(Max.) **IC: 20034-121**

CAN ICES-003(B)/NMB-003(B)  210-234908

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

| | | |
|----------------------|----------------|---------------------|
| Product Information | Model | Product Code Number |
| Customer Information | Name | Contact Number |
| | Address | |
| Seller Information | Name | |
| | Contact Number | |
| | Address | |
| | Date of Sale | |
| Note | | |

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage

or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

| Product Type | Name | Maintenance Period(month) | Warranty Service Type |
|--------------|--|---------------------------|---|
| Parts | Product Main Body | 12 | Customer sends the product to designated site |
| | Battery | 3 | Customer sends the product to designated site |
| | Electrical parts e.g.battery charger, etc. | 12 | Customer sends the product to designated site |
| Other Items | Power Cable, Sync Cable, Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc. | No | Without warranty |