

# MULTI STANDARD PROGRAMMABLE 27 MHz CB MOBILE TRANSCEIVER

**OWNER'S MANUAL** 





## Index - Introduction - Contents of the box

Index - Introduction - Contents of the box	. 1
Controls and operation	- 4
nstallation	. 5
Frequency band selection / table	
User Information	
Specifications	.8

### NOTICE!

Before using this transceiver, please check it has been programmed on the correct frequency band and operating mode allowed by the regulations valid in the country where the product is used. If not, please change the frequency band(see page 6).

NOTE: This transceiver is factory pre-programmed on the UK frequency band (UK 40CH FM 4W).

## Congratulations!

Congratulations for selecting and purchasing a quality THUNDERPOLE product.

This transceiver includes a number of advanced functions and systems, therefore it is important to carefully read this owner's manual before using the radio. With the correct use of this product in accordance with the operating method described in this manual, the product will offer trouble free use for many years.

THUNDERPOLE is constantly engaged in developing and providing quality products meeting the customers requirements, however any suggestions or comments on this product that might help us to improve quality are warmly welcome.

The THUNDERPOLE T-800 is a CB transceiver using advanced hardware and software design, it includes a special multi-standard programmable circuit, which allows you to program the frequency band and operating mode in compliance with the regulations valid in the various European countries. Therefore this product can be used in any country of the European Community.

The radio is delivered factory pre-programmed on the UK frequency band (UK 40CH FM 4W).

## Contents of the box


Please check that all the following items are contained in the box:

- Main unit (transceiver)
- DC power cord with fuse holder and fuse
- Condenser microphone
- Car mounting bracket

- Car mounting bracket accessories (hardware, knobs, etc.)
- Microphone bracket
- Owner's manual

# Controls and operation

#### **Front Panel**

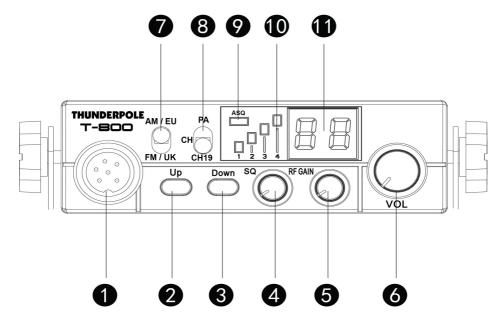

#### 1. Microphone Connector

Connect the microphone to this connector and turn the connector ring to lock it.

#### 2. Up Button

This button allows you to change the operating channel upwards.

#### 3. Down Button

This button allows you to change the operating channel downwards.

#### 4. SQUELCH Control

The SQUELCH control allows you to silence the receiver by cutting out the background noise when no signals are being received. Turn the knob clockwise until the background noise is cut. Turn the knob counter clockwise (SQUELCH opening) in order to listen to the weakest signals.

#### 5. RF GAIN knob

The receiver gain is adjustable with the RF GAIN knob. This control should be fully clockwise most of the time, however in the case of very strong signals from local stations the receiver sensitivity can be reduced by turning the knob anti-clockwise.

#### 6. ON/OFF/VOLUME Control

Use this knob to switch radio ON and OFF, as well as to adjust the receiver volume to the desired level. To adjust the receiver volume when no signals are being received on the operating channel, open the SQUELCH and then adjust the receiver volume using the background noise as a reference.

Please note: This control will also adjust the public address volume when in PA mode (8).

# Controls and operation

#### 7. AM / FM Selector (EU / UK Selector)

This switch allows you to select the operating mode AM or FM, in both TX and RX (if the selected frequency band allows it), unless the radio is set to the UK frequency band - then this switch changes the operating band from the UK 40 FM channels to the EU (CE) 40 FM channels.

#### 8. PA / CH / CH19 Selector

This 3-position switch allows you to select the PA Function or CH19 in the programmed frequency band. If the switch is set to its centre position the radio will operate on the normal selected channel. Please note: To use PA Function a suitable PA Speaker must to be attached to the PA socket in the back of the radio (14).

#### 9. TX and ASQ LED

This two-colour indicator is red or green. When radio is in TX mode it is red, when ASQ is activated it is green (see page 4 for more information on ASQ).


#### 10. RX /TX Signal Meter

4-bar LED display to indicate the strength of the received signal, or the power of the outgoing signal.

#### 11. DISPLAY

The bright digital LED display shows the channel number.

### **Rear Panel**

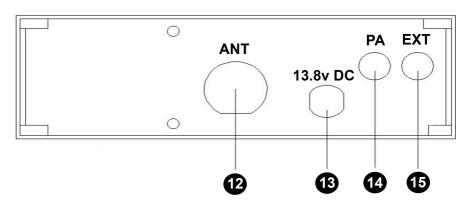

#### 12. ANTENNA Connector

Antenna connector. Refer to the section INSTALLATION OF THE ANTENNA (Page 5).

#### 13. 13.8VDC POWER CORD

13.8VDC power cord input for attaching to power supply.

#### 14. PA (Speaker) Socket


This 3.5mm Jack socket is for attaching a suitable 8 ohm PA speaker for talking outside the vehicle in PA mode (optional).

#### 15. EXT (External Speaker) Socket

This jack is for connecting an 8 ohm external speaker (optional).

# Controls and operation

## Microphone

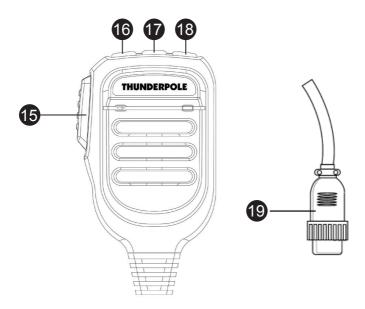

#### 15. PTT (Push-to-Talk) Button

Transmitter button. Press the PTT button to transmit and release it to return to the receive mode.

#### 16. Up Button

This button allows you to change the operating channel upwards.

#### 17. ASQ Button

The ASQ function allows you to automatically silence the receiver, avoiding SQUELCH manual adjustment. To enable the ASQ function, press this button once, to disable it press it a second time.

Note: When ASQ is enabled ASQ LED (9) will illuminate green.

#### 18. Down Button

This button allows you to change the operating channel downwards.

### 19. MICROPHONE Plug

6-pin microphone connector with locking ring. Connect it to the microphone connector (1) on the front panel of the radio.

## Installation

#### Installation

Before installing the main unit in the vehicle, check and select the most convenient location, in order that the radio will be easy to reach and comfortable to operate, without obstructing any of the vehicles controls. Use the supplied bracket and hardware to install the radio. The car mounting bracket can be installed over or below the radio and the radio may be inclined as desired(whether under dashboard or truck cabin roof installation).

### Installation of the Main Unit

Before connecting the radio to the vehicles electric system, make sure that radio is switched off, with the OFF/VOLUME (6) knob completely turned counter clockwise at OFF position. The DC power cable (13) of the radio is complete with a fuse holder with fuse located on the red positive (+) wire. Connect the DC power cable to the vehicles electric system, with special attention to correct polarity. Connect the red wire to the positive (+) pole and the black wire to the negative (-) pole of the vehicles electric system. Make sure that the wires and terminals are firmly and stably connected, in order to prevent cables from disconnecting or causing short circuits.

#### Installation of the Antenna

A specific 27MHz CB antenna must be used. Please make sure to carefully install the antenna mount on the vehicle with a good connection to ground. Before connecting the antenna to the radio, it is necessary to check the correct operation of the antenna with low standing wave ratio (S.W.R.), using an SWR meter. If not, the transmitter circuit of the radio could be damaged. The antenna should be installed on the highest part of the vehicle, free from obstacles and as far away as possible from any source of electric or electromagnetic noise. The RF antenna coaxial cable must not be damaged or pressed on its way between antenna and the radio. The correct operation of the antenna and the low standing wave ratio (S.W.R.) must be checked periodically. Connect the RF antenna coaxial cable to the antenna connector (12), located on the rear side of the radio.

## **Checking Operation of the Radio**

Once the radio has been connected to the vehicles electric system and to the antenna, the correct operation of the system may be checked. Please proceed as follows:

- 1) Check that the power cable is correctly connected.
- 2) Check that the RF antenna coaxial cable is correctly connected.
- 3) Connect the microphone to the connector (1), located on the front side of the radio.
- 4) Rotate the SQUELCH (4) knob counter clockwise.
- 5) Turn the radio on using the ON/OFF/VOL (6) knob and adjust the volume to the desired level.
- 6) Select the desired channel, using the channel selector buttons (2 and 3, or 16 and 18 on mic).
- 7) Rotate the SQUELCH (4) knob clockwise, to cut the background noise.
- 8) Press the PTT (15) key to transmit and release it to receive.

# Frequency band selection / table

### Frequency Band Selection / Programming

This Thunderpole T-800 CB radio must be programmed and exclusively used on a frequency band allowed in the country where the product is used (see below). When radio is switched ON, the current programmed frequency band code will be displayed for approx. 2 seconds. To program a different frequency band, proceed as follows:

- 1) Turn OFF the radio.
- 2) Whilst pressing the PTT (15) and Down button on the microphone (18) together, turn on the power using the ON/OFF/VOLUME Control (6).
- 3) Use the UP and Down buttons (2 & 3, or 16 &18) to select the band.
- 4) Turn the radio off and then on again, now the display will show the programmed band, and you will be working on the band you selected.

### UK/CE Channel Selection (Frequency Band "U")

If the UK Frequency band has been selected, all 80 channels available for UK use can be accessed by using the EU/UK (AM/FM) Switch (7). In EU/AM position the radio will operate on the European (CE) 40 Channel band in FM mode, and when in UK/FM position the radio will operate on the UK 40 Channel band in FM mode.

Note: To access AM channels on the CE band follow instructions 1 to 4 above and choose CE band, then swith the AM/FM switch to AM.

## **Frequency Band Table**

8 programmable frequency bands are available, as per the below table:

FREQUENCY BAND ID CODE	COUNTRY	SPECIFICATIONS (Channels, Operating Modes, TX Power)
E1	ITALY/SPAIN	40CH AM / FM 4W
I2	ITALY	36CH AM / FM 4W
-d	GERMANY	80CH AM / FM 4W
d2	GERMANY	40CH AM / FM 4W
EU	EUROPE/FRANCE	40CH AM / FM 4W
CE	CEPT	40CH AM / FM 4W
-U	UK	40CH FM 4W UK FREQUENCIES 40CH FM 4W EU FREQUENCIES
PL	POLAND	40CH AM / FM 4W POLISH FREQUENCIES

## User information

**Attention!** This radio has been pre-programmed on the UK frequency band (UK 40CH FM 4W) for use in the UK only. For use in other countries, please refer to the frequency band table on page 8.

#### Information on the WEEE Directive 2012/19/EU

### In the UK, European Union, Norway, Iceland and Liechtenstein:

The crossed bin symbol shown on the equipment and/or it's packaging indicates that this product shall not be treated as househould waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.



By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The crossed-out wheeled bin symbol means that you are legally obliged to dispose of batteries or accumulators separately from unsorted municipal waste, i.e. that they must be disposed of separately from household waste.



This product complies with the REACH regulation EG 1907/2006 and does not contain any substances of the current candidate list according to art. 59 par. 1 of the regulation in an exceeded concentration of 0.1% by weight.

This product complies with the RoHS Directive 2011/65/EU and therefore does not contain any substances listed below in an exceeded concentration:

Lead - less than 0.1%

Mercury - less than 0.1%

Chromium (VI) - less than 0.1%

Cadmium - less than 0.01%

Flame-retardants - less than 0.1%

(These include Polybrominated biphenyls - PBB's and Polybrominated diphenyl ethers - PBDE's)

For more information on Waste Electrical, Electronic Equipment (WEEE) And Battery Recycling please visit...https://www.thunderpole.co.uk/specialist-waste-and-recycling.html

### In Countries Outside the UK, European Union, Norway, Iceland and Liechtenstein:

If you wish to discard this product, including the batteries or accumulators, please contact your local authorities and ask for correct way of disposal.

# **Specifications**

#### General

40 AM / FM (refer to the frequency bands table at page 6) Channels

Frequency range 27 MHz Citizen Band

Frequency control P.L.L. Operatine temperature -10°/+55°C DC input voltage 13.8Vdc ±15%

115 (W) x 38 (H) x 150 (D) mm Size

Weight 800 gr.

#### Receiver

Double conversion, CPU controlled super-heterodine System

ΙF 1° 10.700 MHz / 2° 450 KHz Sensitivity -120dBm for 12dB SINAD (FM) -107dBm for 12dB SINAD (AM)

@10% THD 2.5W at 8 ohm

Audio distorsion <8% at 1 KHz

Image rejection 65dB Adjacent channel 85dB Signal/noise ratio 45dB

220mA (stand-by) Current drain

#### **Transmitter**

Audio output

CPU controlled P.L.L. systhesizer System

Maximum RF power 4W at 13.8Vdc 85% to 90% (AM) Modulation 2KHz ±0.2 KHz (FM) Impedance 50 ohm unbalanced

Current drain 2000mA (at no modulation)

# **Declaration of Conformity**

EC Certificate of Conformity (to EC Directive 2014/53/EU, 2011/65/EU)

#### **DECLARATION OF CONFORMITY**

With the present declaration, we certify that the following products:

#### **THUNDERPOLE T-800**

comply with all the technical regulations applicable to the above mentioned products in accordance with the Radio Equipment Directive 2014/53/EU (RED) and 2011/65/EU (ROHS)

Type of product: CB Transceiver

Details of applied standards : EN 62311:2008

EN 300 433 V2.1.1 EN 301 489-1 V2.2.0 EN 301 489-13 V1.2.1

EN 60950-1:2006+A11:2009+A1:2010

+A12:2011+A2:2013

Manufacturer / Importer: THUNDERPOLE

1 Hartburn Close, Crow Lane Ind Est Northampton, NN3 9UE, England

Tel. +44 1604 402403

E-mail: mail@thunderpole.co.uk

Contact Reference : Alan Crumpton

Tel. +44 1604 402403

E-mail: mail@thunderpole.co.uk

Northampton, 19/12/2018 Mr. Alan Crumpton

(General Manager)

#### NOTICE!

It is recommended to carefully read this owner's manual before using the product. This will also help the user to prevent using the radio in violation of the regulations valid in the country where the product is used, as well as to avoid any possible interference with other services.













