

## MS360 Mini Skid Loader Instruction Manual





## TABLE OF CONTENTS

1. Product Serial Number.....	1
2. Intended Use.....	2
3. Right Front View.....	2
4. Left Rear View.....	2
5. Safety Rules.....	4
6. Operation Guide.....	6
7. Controlling System.....	7
8. Prepare Before Working.....	11
9. Attachment Connection.....	14
10. Drive.....	17
11. Machine Storage.....	17
12. Services.....	17
13. Specification.....	30
14. Support.....	32

## 1. PRODUCT SERIAL NUMBER

Write your machine model number, product serial number on the line provided below. If needed, give these numbers to your dealer when you need parts or information for your machine.

Make a record of the numbers; keep the record in a safe place. If the machine is stolen, report the number to your local law enforcement agency.



## 2. INTENDED USE

The MS360 is a track style mini skid steer loader designed for compact construction work. The MS360 has a quick attach mount plate which makes it easy for an operator to connect different attachments. The loader is designed for operation in temperatures typically experienced in earth moving and construction work environments. Provisions may be required to operate in extreme temperatures. Contact your dealer. Use in any other way is considered contrary to the intended use.

The MS360 should be operated, serviced, and repaired only by persons familiar with its particular characteristics and acquainted with the relevant safety procedures.

## 3. RIGHT FRONT VIEW

- 1.Operator platform
- 2.Machine body
- 3.Tire
- 4.Operator station
- 5.Fuse box service cover
- 6.Side Cover
- 7.Lift Arm
- 8.Upper cover
- 9.Mount Plate




## 4. LEFT REAR VIEW

- 1.Security Lock
- 2.Fuel filler port
- 3.Exhaust pipe
- 4.Headlights
- 5.Dashboard
- 6.Operating handle
- 7.Engine
- 8.Engine oil filter



## OPERATION CONTROL

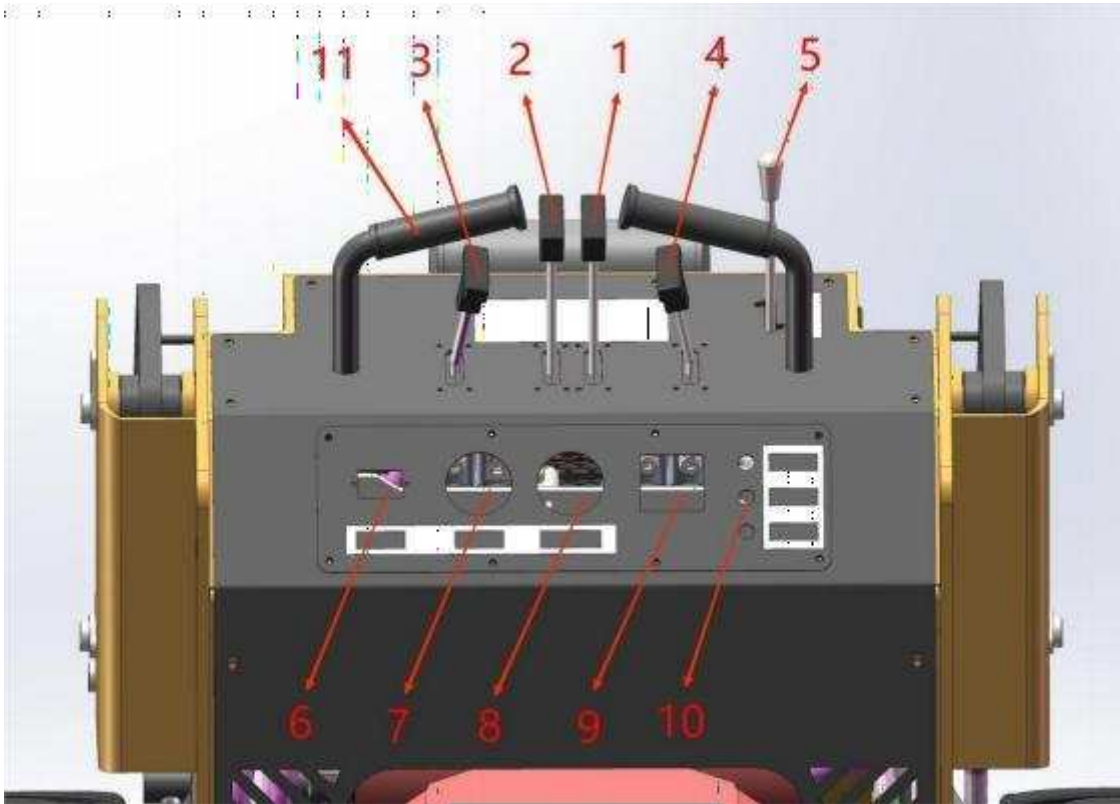

1. Right driving motor control (push the handle forward, the right wheel turns forward, the vehicle turns left, pull the handle backward and vice versa)

2. Left driving motor control (push the handle forward, the left wheel turns forward, the wheel turns right, pull the handle backward and vice versa)

3. Bucket tilt control (push the handle forward, the bucket turns forward, pull the handle backward, the bucket turns backward)

4. Loader arm lift control (push the handle forward to lower the arm, pull the handle backward to raise the arm)

5. Attachment control

6. Loader working hour meter

7. Fuel oil gauge

8. Hydraulic oil temperature instrument

9. Combination switch (headlight. Horn)

10. Indicator light

11. Hand grip handle combination switch (headlight. Horn)

## 5. SAFETY RULES



**WARNING:** This safety alert symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of death or serious injury.

### Safety operation is operator's duty.

Most accidents are caused by the operator un-according to the safety rules. If you realize the dangerous and are of full careful before accidents, you can avoid the accidents. Please reading the safety rules carefully when you maintenance, operate and fill the oil. Please see the basic preventive measures and operation in dangerous conditions as below.




**This means be careful, when operate the mini skid steer loader, please take care of your safety**



### Warning

Operator must understand the below operation guide

- \* Its your duty to understand the maintenance guide and comply with the relation rules

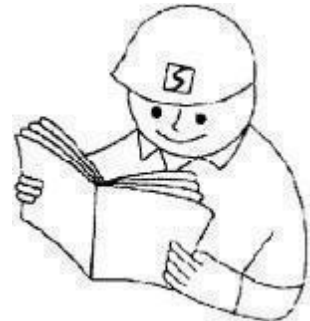

### Warning

All the warnings are for your safety

- \*When operating the mini skid steer loader, the wrong operation method for filling oils may cause some danger or serious deadly injure.

- \*Do never operate, maintenance or fill oils of the machine before you completely understand the operation manual.





This symbol indicates dangerous, when you see this symbol on the mini skid steer loader you must be careful, otherwise it will cause danger or deadly injure to operator and bystander. Both the operation panel and the operation manual are with this symbol. We wish you can realize all the danger and can avoid accident.

Before delivering to the user, each loader was tested and examined thoroughly. You should operate carefully in the first 100 hours to keep all parts in good condition. Roughly operation will shortened the useful life or reduce the efficiency. For new equipment, you should pay attention to the following:

- Running the machine 5 minutes in idle after started.
- Avoid operate the loader with full speed.

- Avoid rapid start, rapid accelerate, unnecessary urgent stop or turning.
- Clean the dust and scraping when you change the filter element.
- Please check all the potential dangerous if working in a poor environment.
- Please check the working time of the hour meter.

△ DANGER △ WARNING △ IMPORTANT, these symbols have closely relation with the operator's safety.

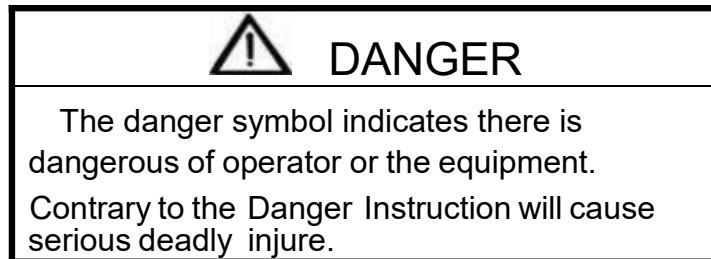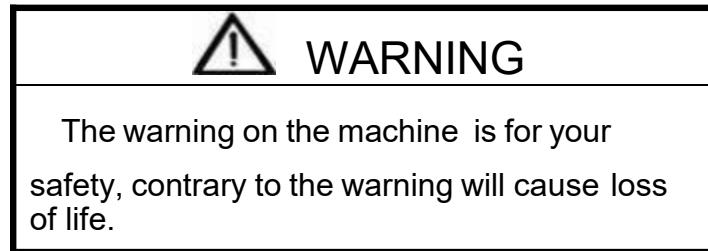

## Safety Warning Symbol

Safety Warning Symbol means "CAUTION", "WARNING", "SAFETY", it indicates many important safety information of the machine. When you seeing these symbols, you should attention to the possibility serious injure or death. Please do comply with the follow safety instructions.




## 6. OPERATION GUIDE

To new loaders

Loaders need running in for 100 hours, which will exert fully their capability. New loaders should be used performing these three steps, which are in the following list.

Hours	Load
Within 10hours	About 60%
Within 100 hours	About 80%
After 100hours	100%

 Warning
Using machine excessively will make the machine be worsening and reduce its life.

You should use it carefully before the first 100 hours.

### Before start loaders

Please read this manual before using machines.

Keep the step clean and exchange it in time when it is injured.

Before starting engine, all controlled accessories should be in their primary places.



**WARNING:** In order to avoid accidents and deadly injure, operator must read and study the manual carefully before operating. when operate the loader, keep your foot on the step.

### Daily Check

To keep the machine in good work condition, should do daily check as below,

Engine cooling system

Tyres

Loosing or damage parts

Safety symbols

Control panel

Liquid height of coolant, engine oil, hydraulic oil and fuel, checked if there is any leaking

Check and add the Lubricating oil regularly.

Check the Instruments and lights.

Check if the machine can work normally.

Add grease to lubricating oil points daily.

Tighten the screws.

### Safety Driving

Attention: Try your best to keep the machine in low loading to assure the stability.

When operating the arms with loading, the loader's weight core will be changed. So do not turn quickly or walk on the slope. When walking and turning quickly, always keep the arms down. Keep loading and turning at the level earth.



When walking, down the arms and make the bucket some distance from the ground, to avoid the obstruction.



### **DANGER**

When upper the arm, please do not start or turning quickly, otherwise it will make the machine turn over and cause serious deadly injure. Please operate carefully with slow speed.

## **7. CONTROLLING SYSTEM**



## 1. Electric System Protector

Turn the power master switch handle clockwise to turn on the power

Turn the main power switch handle counterclockwise to disconnect the power



1. Hand Throttle 2. Key Switch 3. Engine Hour Meter 4. Engine Airflow Regulator

## 2. Engine Start Switch

Prepare for engine start: Turn on the main power switch, wait for the panel indicator to light up, pull open the engine air volume regulator (4), push up a little hand throttle (1), turn the key clockwise to (START), after the engine starts, you need to turn off the engine air volume regulator.

If the Engine can not be started, turn the key anticlockwise to "OFF" position, wait a little moment (about 10-15 seconds), then re-start.

## 3. Engine Choke

To turn off the engine, push the hand throttle down to the minimum speed, turn the key counterclockwise to the (OFF) position, the engine stops working, and turn off the main power switch

## 4. Hand Throttle

Move the hand throttle up (rabbit) to speed up the engine, and move the hand throttle down (turtle) to lower the engine speed.

Warning: the radiator fan will automatically be activated when the hydraulic fluid temperature reaches 65°C.





Picture 1



Picture 2

When inspecting the engine compartment, you must remove the red safety lock in figure 1, lift the big arm, place the safety lock at the big arm cylinder in accordance with figure 2, and slowly drop the big arm to make the safety lock firm.

### 5. Cigar Lighter



It indicates amount of fuel in fuel tank, “1” denotes full. “0” denotes empty. you should add fuel before finger gets to “0” .

### 6. Hydraulic Oil Temperature Gauge



It shows the hydraulic oil temperature, when the temperature up to  $65^{\circ}\text{C}$  , activate the radiator fan to cool the hydraulic oil.

### 7. Hour Meter



It is used to record the operating time of the engine.

### 8. Combination Switch



Headlight and horn switch

## **8. PREPARE BEFORE WORKING**

### **Gather Information**

A successful job begins before you start working. The first step in planning is reviewing information already available about the job and jobsite.

### **All Jobs**

#### **Review Job Plan**

Review blueprints or other plans. Check for information about existing or planned structures, elevations, or proposed work that may be taking place at the same time.

#### **Arrange For Traffic Control**

If working near a road or other traffic area, contact local authorities about safety procedures and regulations.

#### **Plan For Emergency Services**

Have the telephone numbers for local emergency and medical facilities on hand. Check that you will have access to a telephone.

### **Ground-Penetrating Jobs**

#### **Notify One-call Services**

Call area one-call or similar services and have existing lines located and marked. Call any utilities in your area that do not subscribe to one-call.

### **Above-ground Jobs**

#### **Locate Overhead Lines**

Note location and height of all overhead lines in jobsite and ensure that fully lifted attachment and/or load will not touch lines.

### **Inspect Site**

Inspect jobsite before transporting equipment. Check for the following:

- Changes in elevation such as hills or other open trenches
- Obstacles such as buildings, railroad crossings, or streams
- Signs of utilities
- Traffic
- Access
- Soil type and condition

### **Identify Hazards**

Identify safety hazards and classify jobsite if attachment will penetrate ground.





Jobsite hazards could cause death or serious injury. Use correct equipment and work methods. Use and maintain proper safety.

## NOTICE:

Wear personal protective equipment including hard hat, safety eye wear, and hearing protection.

Do not wear jewelry or loose clothing.

Comply with all utility notification regulations before digging or drilling.

Verify location of previously marked underground hazards.

Mark jobsite clearly and keep spectators away.

Remember, jobsite is classified by hazards in place -- not by line being installed

## Classify Jobsite

### Inspect Jobsite

- Inspect jobsite and perimeter for evidence of underground hazards, such as:
  - “buried utility” notices
  - utility facilities without overhead lines
  - gas or water meters
  - junction boxes
  - drop boxes
  - light poles
  - manhole covers
  - sunken ground

• Follow U.S. Department of labor regulations on excavating and trenching (Part 1926, Subpart P) and other similar regulations.

• Contact one-call (888-258-0808) and any utility companies which do not subscribe to one-call.

• Have an experienced locating equipment operator sweep area within 20' (6 m) to each side of work path. Verify previously marked line and cable locations.

- Mark location of all buried utilities and obstructions.
- Classify jobsite.

## Select Category

Jobsites are classified according to underground hazards present.

If working . . .	then classify jobsite as . . .
within 10' (3 m) of a buried electric line	electric
within 10' (3 m) of a natural gas line	natural gas
In sand, granite, or concrete which is capable of producing crystalline silica (quartz) dust	crystalline silica (quartz) dust
within 10' (3 m) of any other hazard	other

**NOTICE:** If you have any doubt about jobsite classification, or if jobsite might contain unmarked hazards, take steps outlined previously to identify hazards and classify jobsite before working.

## Apply Precautions

Once classified, precautions appropriate for jobsite must be taken.

### Electric Jobsite Precautions

Use one or both of these methods.

Expose line by careful hand digging or soft excavation.

Have service shut down while work is in progress. Have electric company test lines before returning them to service.

### Natural Gas Jobsite Precautions

In addition to positioning equipment upwind from gas lines, use one or both of these methods.

Expose lines by careful hand digging or soft excavation.

Have gas shut off while work is in progress. Have gas company test lines before returning them to service.

### Crystalline Silica (Quartz) Dust Precautions

Follow OSHA or other guidelines for exposure to crystalline silica when trenching, sawing or drilling through material that might produce dust containing crystalline silica (quartz).

### Other Jobsite Precautions

You may need to use different methods to safely avoid other underground hazards. Talk with those knowledgeable about hazards present at each site to determine which precautions should be taken or if job should be attempted.

## Check Supplies and Prepare Equipment

### Supplies

Fuel

Key

Lubricants

Personal protective equipment, such as hard hat and safety glasses



## Fluid Levels

Fuel  
 Hydraulic fluid  
 Battery charge  
 Engine oil  
 Condition and function  
 Air filter, oil filter, hydraulic oil filter  
 Tyre  
 Pump and motor  
 Hoses and valve  
 Signs, warning and shields

## Accessories

If required, mount a fire extinguisher near the power unit but away from possible points of ignition. The fire extinguisher should always be classified for both oil and electric fires. It should meet legal and regulatory requirements.

## 9. CONNECT ATTACHMENTS

**IMPORTANT:** Use only KYMRON approved attachments. Attachments can change the stability and operating characteristics of the unit.

### Attachment

**IMPORTANT:** Before connecting attachment to unit, ensure that mount and receiver plates are free of dirt and debris.

1. Ensure that lock pin handles (shown) on mount plate are turned away from center of attachment.

2. Start engine.

3. Tilt mount forward.

4. Position mount plate in the upper lip of the receiver plate on attachment.

5. Raise lift arms while tilting back mount plate.


**IMPORTANT:** Attachment should be raised enough to clear the ground. Mount plate should be tilted back fully.

6. Ensure that all controls are in neutral position.

7. Turn ignition switch off and remove key.

8. Rotate lock pin handles toward center of mount plate to secure attachment to lift plate


**NOTICE:** To ensure proper connection, verify that bottoms of lock pins are visible under

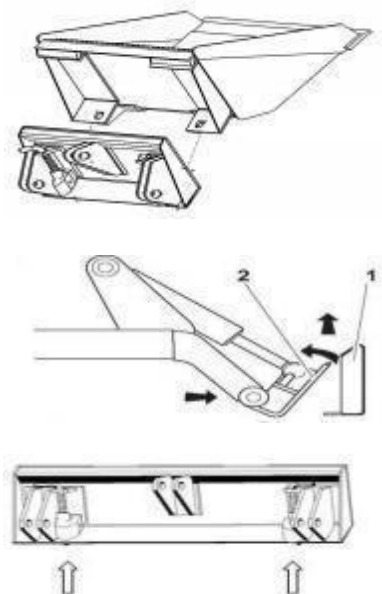

attachment receiver plate.

## HYDRAULIC HOSES

If attachment requires hydraulic power for working, please connect hydraulic hose.

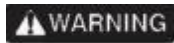

**WARNING** pressure could pierce skin and cause serious injury or death. Stay away.

### NOTICE:

1. Escaping pressurized fluid can cause injury or pierce skin and poison.
2. Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure. Lower, block, or support any raised component with a hoist. Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container.
3. Before using system, check that all connections are tight and all lines are undamaged.
4. Fluid leaks is hard to detect. Use a piece of cardboard or wood, rather than hands, to search for leaks.
5. Wear protective clothing, including gloves and eye protection.
6. If you are injured, seek immediate medical attention from a doctor familiar with this type of injury.



Hot parts may cause burns, Do not touch until cool.  
Notice: Hydraulic couplers, hoses and fluid may be hot. Wear gloves when connecting and disconnecting hydraulic hoses and wait until unit has cooled before touching hydraulic components.



1. Cycle attachment drive control to relieve residual pressure at hydraulic couplers.
2. Ensure that all controls are in neutral position.
3. Remove dirt and debris from hydraulic couplers.
4. Connect male coupler on attachment to female coupler on unit.
5. Connect coupler on attachment to male coupler on unit.
6. Connect female coupler on case drain hose to case drain coupler on unit, attachment requires it.
7. Ensure that connections are secure by pulling on hoses.

## 10. Drive

### Start Engine

1. Ensure all controls are in neutral.
2. If necessary, choke cold engine.
3. Move throttle to half open.
4. Turn ignition switch to start position and release when engine starts.
5. Push in choke after engine is warm.

**EMERGENCY SHUTDOWN:** Turn ignition switch to STOP.

### Drive General Operation.

1. Pull lift arm control to raise mount plate (and attachment) off ground.
2. Move both wheel drive controls to forward or reverse.
3. Adjust throttle as needed.

### Slope Operation Guidelines

**NOTICE:** Keep attachment/load low when operating on a slope. Drive slowly and cautiously at all times.

Operate up and down slopes with heavy end of unit uphill. Weight distribution changes based on attachments and load. For example, an empty bucket makes the rear of the unit the heavy end while a full bucket makes the front of the unit the heavy end. Most WeCan-approved attachments make the front of the unit the heavy end.

Avoid starting, stopping, or turning on slopes. If you must turn, keep the heavy end of the unit uphill.

Do not park unit on slope without lowering attachment to the ground, returning all controls to neutral position, turning ignition switch to STOP, and applying parking brake.

### Shut Down

1. Lower lift arms to ground.
2. Move all controls to neutral position.
3. Run engine at low idle for three minutes to cool.
4. Turn ignition switch to STOP.
5. Remove key.

**NOTICE:** Unit should not be parking on a slope unless parking brake is engaged.

Move all controls to neutral position when stopped.



### WARNING

When on slope, the angle of the fuel tank can not exceed 12°, otherwise the oil will spill out.

## 11.MACHINE STORAGE

### Rinse Equipment



Spray water onto equipment to remove dirt and mud, especially at undercarriage.

**NOTICE:** Do not spray water onto operator's console. Electrical components could be damaged. Wipe down instead.

Open hood and remove debris from inside of unit.

Remove mud from track or tyres.

### Disconnect Attachment

1. Lower attachment to the ground.
2. Ensure that all controls are in neutral.
3. Turn off engine.
4. Disengage lock pins by turning handles away from center of attachment.
5. Cycle attachment drive control and disconnect hydraulic hoses, if used.
6. Move the brake to nature position.
7. Start engine.
8. Tilt mount plate forward and back unit away from attachment.

### Stow Tools

Make sure all tools and accessories are loaded on trailer.

## 12.Service

### Service Precautions

**Warning:** Incorrect procedures could result in death, injury, or property damage. Learn to use equipment correctly.

**Notices:** Unless otherwise instructed, all service should be performed with engine off. Stop engine and apply parking brake before opening hood for inspection or service. Allow engine should be cool before performing any service.

Refer to engine manufacturer's manual for engine maintenance instructions.

Before servicing equipment, lower the attachments to ground.

### Working under raised lifting arms



**NOTICE:** Support both lift arms before working under raised lift arms.

OR keep away from the raised lift arms.



**Warning:** Explosion possible. Serious injury or equipment damage could occur. Follow directions carefully.

**NOTICE:**

1. Sparks can cause battery to explode.
2. Electronic components can be easily damaged.

**Lubricants**



Proper lubrication and maintenance protects equipment from damage and failure. Service intervals listed are for minimum requirements. In extreme conditions, service machine more frequently. Use only recommended lubricants.

**NOTICE:**

Use only genuine KYMRON parts, filters, and approved lubricants to maintain warranty. Use the "Service Record" to record all required service to your machine.



## Position for Lubrication

Before working, please lubrication the position as the above pictures.


To avoid dirty, before lubrication, please clean the dirty on the connections. If the parts damaged or lost, please change it on time.

To avoid uncontrolled lubrication, please try to reduce the dirty.


## Chain Lubrication

Add lubrication oil to the chain from the inside and outside of the chain regularly, if the work condition is too poor to use the lubrication oil, can use grease lubrication instead.

## Briggs&Stratton Engine Oil Temperature Chart

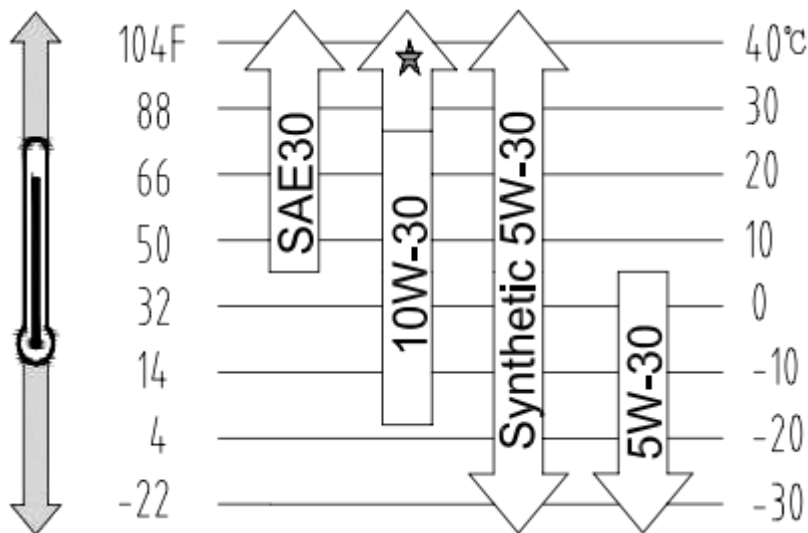

## Kohler Engine Oil Temperature Chart

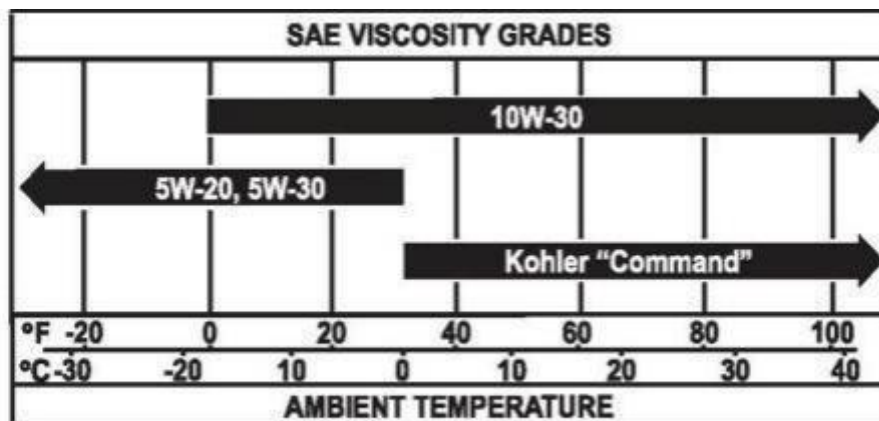

t17cm010h.eps

Temperature range anticipated before next oil change


More info on engine lubrication and maintenance, see engine manufacturer manual.

## 10 Hour

### Check Engine Oil Level

Check engine oil level at dipstick opening every 10 hours. Oil level should be at top of marking, if low, add 10W30. Check with unit on level surface and at least 15 minutes after stopping engine

**IMPORTANT:** Use oil specified in “Engine Oil Temperature Chart”

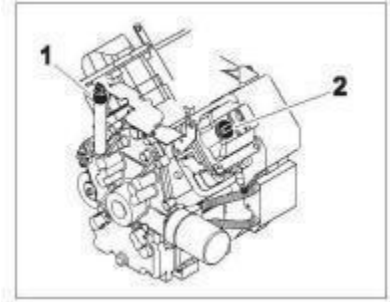

### Check Hydraulic Fluid Level





1.Liquid level meter 2.Oil temperature sensor 3.Respirator 4.Oil return cartridge



Check the hydraulic fluid level every 10 hours. After the engine is turned off and the fluid has cooled, maintain the level between marks 9 and 11 (shown above).



### Check Hydraulic Hoses

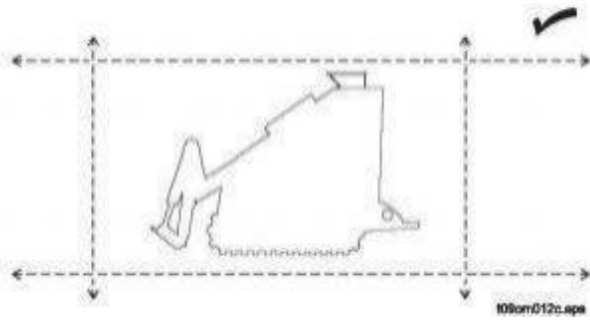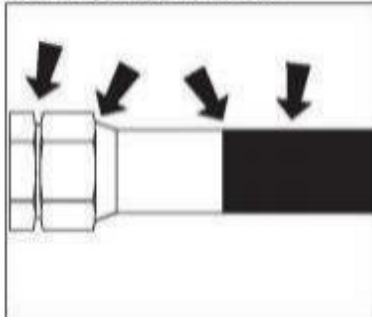

Check hydraulic hoses for leaks every 10 hours



**Warning:** Fluid or air pressure could pierce skin and cause injury or death. Stay away.



### Notice:

1. Escaping pressurized fluid can cause injury or pierce skin and poison.
2. Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure. Lower, block, or support any raised component with a hoist. Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container
3. Before using system, check that all connections are tight and all lines are undamaged.
4. Fluid leaks can be hard to detect. Use a piece of cardboard or wood, rather than hands, to search for leaks.
5. Wear protective clothing, including gloves and eye protection.
6. If you are injured, seek immediate medical attention from a doctor familiar with this type of injury

### 50 Hour

Location	Task	Notes
<b>Traction Unit</b>	Check battery	
	Check drive belt	
	Check oil filter	
	Clean oil cooler	
	Change hydraulic oil filter	

### Check Battery

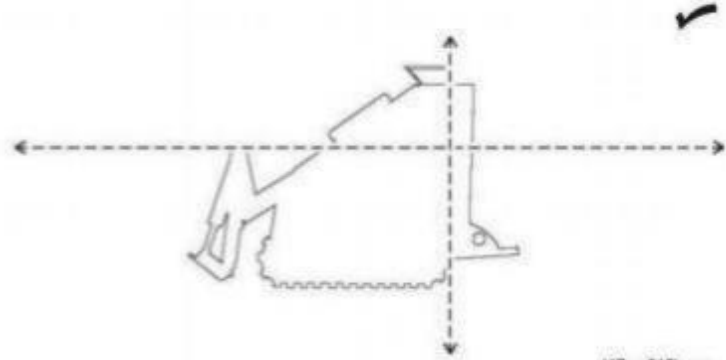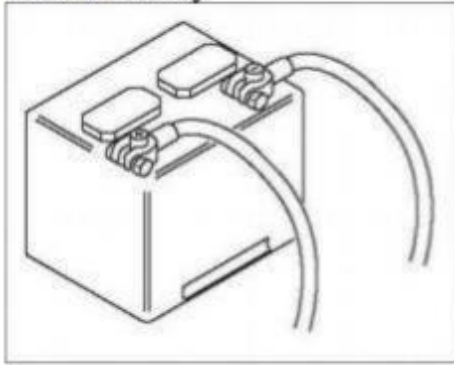

t17cm016h.apn

Normal Battery: can be used for 10days-15days in Winter, and 5days-6days in Summer, then you should check the electrolyte, the method as below: disconnect the line

on the battery, loose the ventilation plug, check the electrolyte in each unit, if the liquid level is below the lowest limited, please add the distilled water.

Maintenance-free Battery: check the battery every 50 hours, keep battery and terminals clean and free of corrosion. Check the hydrometer of hole shaped liquid regularly, its color will be changed with the specific weight of the electrolyte, it can indicated the battery power status and the electrolyte level. When the hydrometer display green color, indicated the battery is normal with full power; when it display little green color or the color is black, indicated the battery need to recharge; when it display light yellow color, indicated there is something wrong with the battery and need to be repaired or replacement.

Battery Storage: Storage the battery in the cool&well ventilated place, do not put the battery directly on the sun exposure, avoid moisture. Do not struck it with metal tool when installing, and do not put the metal tools on the battery.

Battery Install and Remove: Stop the Engine, pull out the key.

Firstly remove the negative cable and then remove the positive cable. Loosen the mounting bolts, remove the battery.

Confirm the electrodes on battery.

When installing the battery, the method is opposite as remove.

**Note: Make sure do not reverse the positive and negative.**

Operation Notice: When operation, according to your working condition, ware the safety equipment, such as glasses and rubber gloves.

Be careful operation because there is battery acid.

If the acid touch your skin or cloths, please clean it immediately, otherwise it will cause serious injure or death.

Make the battery away from fire and heat.

The battery can only be used for starting the engine, otherwise it may cause damage to battery or fire.

Notice when use the battery in Winter: In winter, because of the lower temperature, the electrolyte will loose, it will low down the battery power supply, so it will much more difficult to start than in Summer.

Notice the leakage of the battery. Once you start the Engine, but failed, do not re-start it immediately, wait about one minute and let the battery storage voltage again and then re-start.

**Notice: Please pay special attention to check the battery and circuit in Winter.**



**WARNING**


Explosion possible. Serious injury or equipment damage could occur. Follow directions carefully.

**NOTICE:**

- Battery gas can explode. Keep sparks and flames away from battery.
- Always remove negative (-) battery cable first and replace it last.
- Battery electrolyte is sulfuric acid and poisonous. Will burn skin and cause blindness if splashed into eyes. Wash hands after working around battery.
- Never disconnect battery terminals with engine running. Voltage spike may occur and ruin electronic control modules or other components.

## Check Drive Belt


Check drive belt every 50 hours. See the picture right side, use mark 1 to adjust belt tension if necessary. Replace if cracked, stretched, or badly worn.

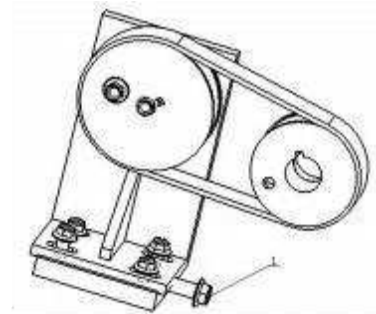

## Clean Oil Cooler

Clean oil cooler every 50 hours. Clean more frequently if operating in dusty conditions. Clean with compressed air or low pressure water.

**Notice:** Be careful not to damage cooler fins.

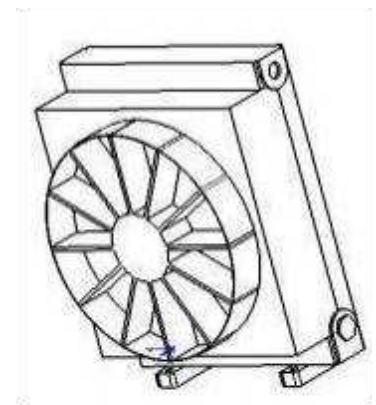


## Change Hydraulic Oil

Change hydraulic oil at 50 hours for the beginning using, then change every 250 hours.

## 100 Hour

### Change Engine Oil

Change engine oil every 100 hours. Drain oil at drain plug (1) and add GEO 10W30 at filler (2) until oil level is seen at marking.

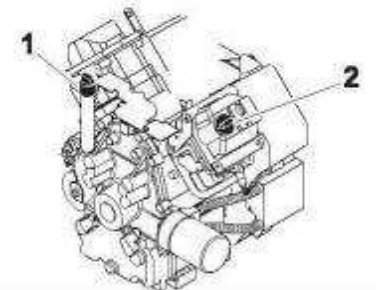

**IMPORTANT:** Use oil specified in "Engine Oil Temperature Chart"

## 200 Hours

### Check spark plugs and gap

**Notes:** See engine operator's manual for instructions.

### Change Oil Filter

Change oil filter every 200 hours.




## 250 Hours

Location	Task	Notes
Traction Unit	Change hydraulic fluid filter	
	Change air filter, check inner element	

### Change Hydraulic Oil Filter


Change Hydraulic oil filter (see right picture 1) every 250 hours.

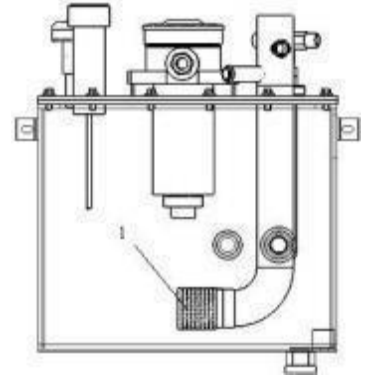

## 500 Hours

### Change Hydraulic Oil


Change hydraulic fluid every 500 hours. Drain fluid at drain port 2 and add hydraulic oil from port 1 until fluid level is between the mark 1 and 2 on the oil gauge

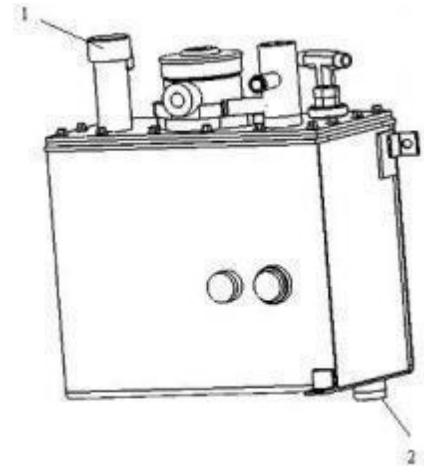

### Change Drive Belt As Needed

Location	Task	Notes
Traction	Change drive belts	
	Jump Start	

Change drive belt as needed when worn or damaged.

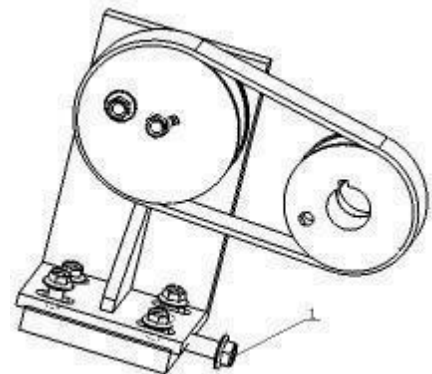




**Caution:** Hot parts may cause burns. Do not touch until cool.

**Notice:** Waiting engine to cool before touching parts or performing any service.

1. Stop engine and waiting to cool before attempting service.
2. Remove key from ignition switch.
3. Adjust belt tension.

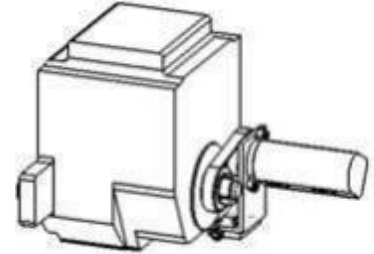

**Warning:** Moving parts could cut off hand or foot. Stay

**Notice:** Do not open hood for inspection or service with engine running.



**Warning:** Runaway possible. Machine could run over you or others.

Learn how to use all controls. Start and operate only from operator's position.

**Notice:** Do not leave operator station with engine running.

1. Start engine and check operation.
2. Stop engine, open hood, and re-check belt alignment.
3. Close hood.

## Jump Start Unit



**Warning:** Incorrect procedures could result in death, injury, or property damage. Use equipment correctly.

### Notices:

1. Park on level area.
2. Put all drive controls in neutral
3. Lower all emptied attachments.
4. Turn off all electrical loads.
5. Turn off engine and remove key from ignition.
6. Block wheels or tracks.



**Warning:** Explosion possible. Serious injury or equipment damage could occur.

Be careful operation.

### Notices:

1. Lead-acid batteries vent explosive hydrogen gas when charging.
2. Do not smoke, create sparks, or use flames around batteries.
3. Never lean over battery when making connections.
4. Do not allow vehicles to touch when jump starting.
5. Wear eye protection and remove metal jewelry and watches.
6. Do not attempt to jump start a battery that is leaking, bulging, heavily corroded, frozen, or otherwise damaged.
7. Never short-circuit battery terminals for any reason.
8. Never hammer on battery posts or cable terminals.

### Before You Start

Electronic components can be easily damaged by electrical surges. Jump starting can damage electronics and electrical systems, and is not recommended except in extreme circumstances. Use quality large diameter jumper cables capable of carrying high currents (400 amps or more). Cheap cables may not allow enough current flow to start a dead/ discharged battery.

Read all steps thoroughly and review illustration before performing procedure.

### DECALS



**⚠ DANGER**

Moving digging teeth will kill you or cut off arm or leg. Stay away.



**⚠ DANGER**

Turning shaft will kill you or crush arm or leg. Stay away.



**⚠ DANGER**

Electric shock. Contacting electric lines will cause death or serious injury. Know location of lines and stay away.





**⚠ DANGER**

Deadly gases. Lack of oxygen or presence of gas will cause sickness or death, provide ventilation.



**⚠ WARNING**

Jobsite hazards could cause death or serious injury. Use correct equipment and work methods. Use and maintain proper safety equipment



**⚠ WARNING** Crushing weight could cause death or serious injury. Use proper procedures and equipment or stay away. Moving parts could



**⚠ WARNING**

cut off hand or foot. Stay away.



**⚠ WARNING** Explosion possible. Serious injury or equipment damage could occur. Follow directions carefully.



**⚠ WARNING**

Incorrect procedures could result in death, injury, or property damage. Learn to use equipment correctly.



**⚠ WARNING**

Improper control function could cause death or serious injury. If control does not work as described in instructions, stop machine and have it serviced.



**⚠ WARNING**

Looking into fiber optic cable could result in permanent vision damage. Do not look into ends of fiber optic or unidentified cable.



**⚠ WARNING**

Fluid or air pressure could pierce skin and cause injury or death. Stay away.



**⚠ WARNING**

Runaway possible. Machine could run over you or others. Learn how to use all controls. Start and operate only from operator's position.





**WARNING**

Fire or explosion possible. Fumes could ignite and cause burns. No smoking, no flame, no spark.



**WARNING**

Moving traffic - hazardous situation. Death or serious injury could result. Avoid moving vehicles, wear high visibility clothing, post appropriate warning signs.



**CAUTION**

Flying objects may cause injury. Wear hard hat and safety glasses.



**CAUTION**

Hot parts may cause burns. Do not touch until cool.



**CAUTION**

Exposure to high noise levels may cause hearing loss. Wear hearing protection.

**CAUTION**

Fall possible. Slips or trips may result in injury. Keep area clean.

**CAUTION**

Battery acid may cause burns. Avoid contact.



**CAUTION**

Improper handling or use of chemicals may result in illness, injury, or equipment damage. Follow instructions on labels and in material safety data sheets (MSDS).

## Emergency Procedures

Before operating any equipment, review emergency procedures and check that all safety precautions have been taken.

**EMERGENCY SHUTDOWN** - Press the urgent switch to STOP.

## Electric Strike Description

When working near electric cables, remember the following:

Electricity follows all paths to ground, not just path of least resistance.

Pipes, hoses, and cables will conduct electricity back to all equipment.

Low voltage current can injure or kill. Almost one-third of work-related electrocutions result from contact with less than 440 volts.

Most electric strikes are not noticeable, but indications of a strike include:

power outage

smoke

explosion

popping noises

arcing electricity

### **If an Electric Line is damaged**

If you suspect an electric line has been damaged and you are on tractor, DO NOT MOVE. Remain on tractor and take the following actions. The order and degree of action will depend upon the situation.

Warn people nearby that an electric strike has occurred. Instruct them to leave the area and contact utility.

Raise attachments and drive from immediate area.

Contact utility company to shut off power.

- Do not return to jobsite or allow anyone into area until given permission by utility company.

If you suspect an electric line has been damaged and you are off tractor, DO NOT TOUCH TRACTOR. Take the following actions. The order and degree of action will depend upon the situation.

LEAVE AREA. The ground surface may be electrified, so take small steps with feet close together to reduce the hazard of being shocked from one foot to the other. For more information, contact your Ditch Witch dealer.

Contact utility company to shut off power.

Do not return to jobsite or allow anyone into area until given permission by utility company.

### **If a Gas Line is damaged**

If you suspect a gas line has been damaged, take the following actions. The order and degree of action will depend on the situation.

Immediately shut off engine(s), if this can be done safely and quickly.

Remove any ignition source(s), if this can be done safely and quickly.

Warn others that a gas line has been cut and that they should leave the area.

Leave jobsite as quickly as possible.

Immediately call your local emergency phone number and utility company.

If jobsite is along street, stop traffic from driving near jobsite.

Do not return to jobsite until given permission by emergency personnel and utility company.

### If a Fiber Optic Cable is damaged

Do not look into cut ends of fiber optic or unidentified cable. Vision damage can occur.

### If Machine Catches on Fire


Perform emergency shutdown procedure and then take the following actions. The order and degree of action will depend on the situation.

Immediately move battery disconnect switch (if equipped) to disconnect position.

If fire is small and fire extinguisher is available, attempt to extinguish fire.

If fire cannot be extinguished, leave area as quickly as possible and contact emergency personnel.

## 13. SPECIFICATION

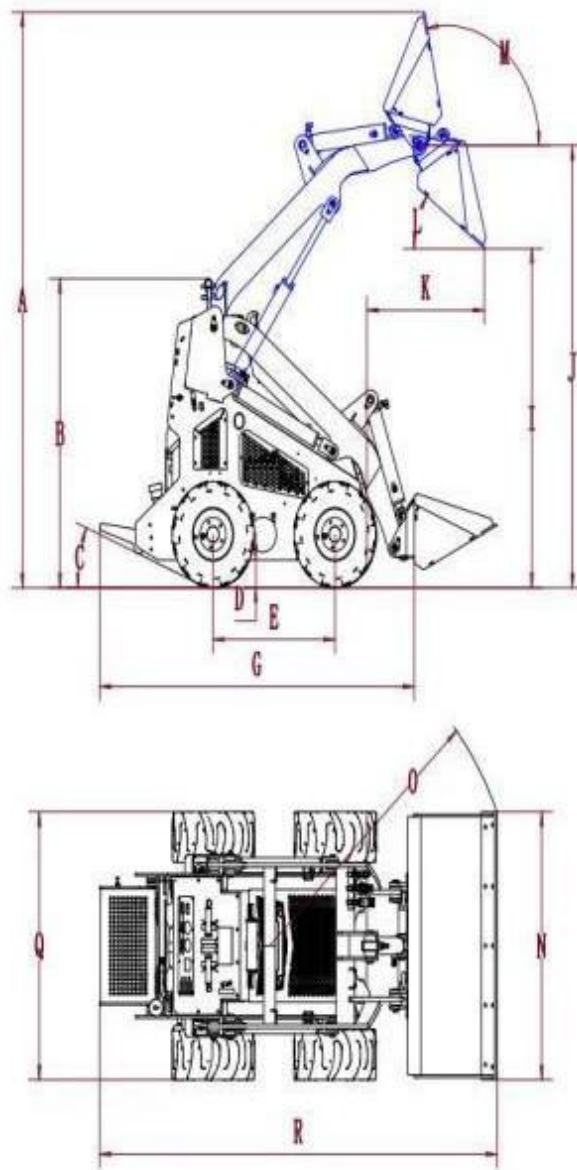

## MAIN SIZE

Item	MS360 Design Data			
	Wheel Type		Crawler type	
	Metric System	English System	Metric System	English System
Maximum operating height(A)	2,472mm	97.3 inch	2,472mm	97.3 inch
Maximum traction height(B)	1,329mm	52.3 inch	1,329mm	52.3 inch
Departure angle(C)	22°	22°	22°	22°
Ground clearance(D)	122mm	4.8 inch	122mm	4.8 inch
Wheelbase (E)	678mm	26.69 inch	760mm	29.92 inch
Length(without bucket) (G)	1,755mm	69 inch	1,755mm	69 inch
Length (with standard bucket) (R)	2,205mm	86.8 inch	2,205mm	86.8 inch
Total Width (Q)	1,150mm	45.28 inch	1,090mm	42.9 inch
Standard bucket width (N)	1,150mm	45.28 inch	1,150mm	45.28 inch
Turning radius (with standard bucket) (O)	1,327mm	52.24 inch	1,327mm	52.24 inch
Unloading height (with standard bucket)(I)	1,458mm	57.4 inch	1,458mm	57.4 inch
Maximum height of bucket pin (J)	1,900mm	74.8 inch	1,900mm	74.8 inch
Loading distance at maximum unloading height (K)	650mm	25.59 inch	650mm	25.59 inch
Unloadable angle at maximum height (L)	35°	35°	35°	35°
Bucket flip angle at maximum height (M)	100°	100°	100°	100°

## Main Data

Item			MS360			
Engine		Rated Power (KW)		13.5 HP		
		Rated speed (rpm)		3,600		
Noise (Db)			≤95			
Hydraulic System		Hydraulic pressure (Mpa)		17		
		Cycle time (s)		Raise	Dump	Lower
4.27	1.34			3.31		
Parameter	Item		Metric System		English System	
	Operating Load		200 Kg		441 Lb	
	Bucket Capacity		0.15 m3		.335 ft3	
	Max lifting force		380 Kg		838 Lb	
	Speed		0-5.5 Km/h		0-3.4 mlie/h	
	Operating Weigh	With Solid Tyres	940 Kg		2,072 Lb	
		With Narrow Tyres	886 Kg		1,953 Lb	
		With Turf Tyres	850 Kg		1,874 Lb	
Tyre Model		With Solid Tyres		16×6-8		
		With Narrow Tyres		5.00-8		
		With Turf Tyres		KT-302 18*9.5-8 6P/TL		
		With Chevron Engine Tyres		18*6.5-8		
Wheel Rim		With Solid Tyres		3.34R-8		
		With Narrow Tyres		3D.50		
		With Turf Tyres		18*9.5-8		

## 14. SUPPORT

1. Notify your dealer immediately of any malfunction or failure of KYMRON equipment
2. Always give model, serial number, and approximate date of your equipment purchase. This information should be recorded and placed on file by the owner at the time of purchase.
3. Return damaged parts to dealer for inspection and warranty consideration if in warranty time frame.
4. Order genuine repair parts from KYMRON dealer. Use of another manufacturer's parts may void warranty consideration.
5. Contact KYMRON for publications and videos covering safety, operation, service, and repair of your equipment.
6. For information about on-site, individualized training, please contact KYMRON.
7. There won't be any notice if the equipment is changed.

