

# User Manual

LR-4200-072 iDSP Receiver (072 MHz)

LR-4200-216 IDSP Receiver (216 MHz)



© 2017 Listen Technologies Corporation® All Rights Reserved

For further details regarding use, adjustment, or programming of your Listen Technologies products visit our website at [www.listentech.com/support-manuals](http://www.listentech.com/support-manuals) or contact us at +1.801.233.8992 or 1.800.330.0891.



*Dear Valued Customer,*

Thank you for choosing Listen! We are dedicated to providing you with the highest quality products available, and take pride in delivering outstanding performance to ensure you are completely satisfied.

We independently certify each of our products to the highest quality standards and back them with a limited lifetime guarantee. We are available to answer any questions you might have during installation or in the operation of our products. At Listen, it's all about you, should you have any comments or suggestions we're here to listen.

Here's how to reach us:

+1.801.233.8992

+1.800.330.0891 North America

+1.801.233.8995 fax support@listentech.com www.listentech.com

Thank you and enjoy your listening experience!

Best regards,

Russell Gentner and the Listen Team


- In the few instances where repairs were needed, 99% of all clients indicated that they were happy with repair turn-around-times and 85% of the time, clients were without their product for less than 10 days!
- Overall client satisfaction of working with Listen was rated 4.8 out of 5.
- "Please continue with your excellent attitude toward customer satisfaction. You guys are great!"
- "I've never had such good service from any company. Keep up the good work!"
- "You stand behind your product wonderfully."

## TABLE OF CONTENTS

iDSP™ Receivers .....	3
LR-4200 Quick Reference .....	4
LR-4200 Specifications .....	5
Safety Cautions! .....	6
Hearing Safety:.....	6
Medical Device Safety: .....	6
Recycling : .....	6
Product Recycling Instructions: .....	6
Battery Recycling Instructions:.....	6
Quick Setup and Operation Instructions: .....	7
1. Unpack Unit .....	7
2. Activate Battery .....	7
3. Charge Battery .....	7
4. Connect Ear Phone .....	8
Using The Neck Loop Lanyard .....	8
Using The 3.5mm Headset Extension Cable .....	8
5. Turn the Unit On.....	9
6. Channel Select Mode.....	9
7. Adjust Volume .....	10
Battery & Belt Clip .....	11
Low Battery Indication .....	11
Belt Clip Installation/Removal .....	11
Accessing Battery Compartment .....	12
Reset to Factory Default Settings .....	12
Advanced Program Features an Listen's UI Configuration Software .....	13
Super Quiet Mode .....	13
Squelch .....	14
Basic Channels and Expanded Channels Modes .....	14
Channel Labels.....	14
Auto Power Mode.....	14
Unit ID.....	15
Brightness Control .....	15
Unit Information .....	15
Reset to Factory Defaults .....	15
Firmware Update .....	15
RF Reception Maximization Strategies: .....	16
72 MHz Compatibility Chart: .....	17
216 MHz Compatibility Chart .....	18
Troubleshooting LR-4200 Receivers:.....	19
Compliance Notice and FCC Statement.....	20
Warranty .....	21
Contacting Listen .....	22

## iDSP™ Receivers

The LR-4200 is a powerful Assistive Listening Receiver designed to be compact and simple to use. The unique design of the iDSP™ receiver family allows them to be worn as a necklace, using the belt clip or concealed in a pocket, making this the most inconspicuous ALS receiver on the market.

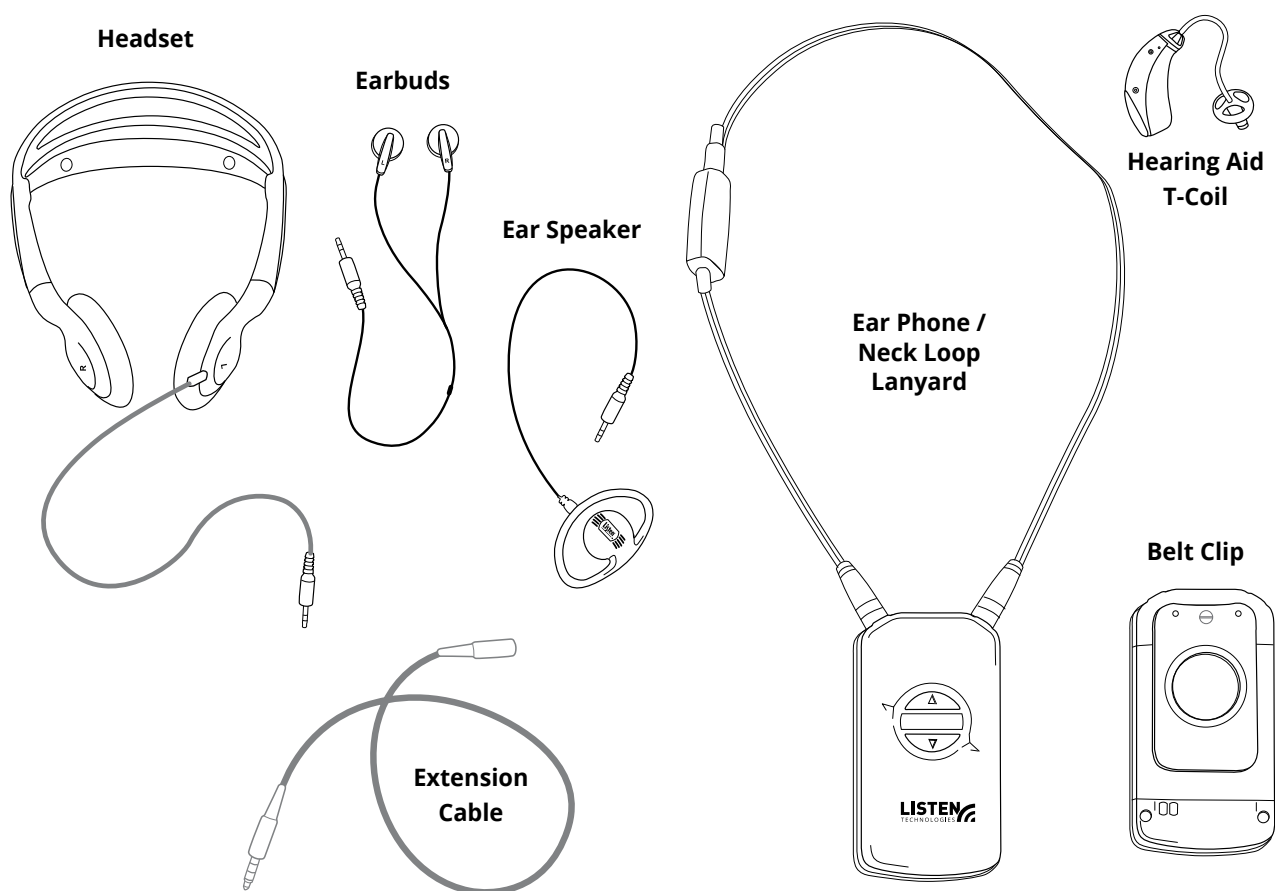

Each receiver can be purchased with a Ear Phone/Neck Loop Lanyard that is designed to hold the receiver like a necklace similar to the Blue Tooth™ transceivers used with many of the today's hearing aids. The Ear Phone/Neck Loop Lanyard can be used as the induction loop for those users who have T-coil enabled hearing aids or cochlear implants, inducing the received audio directly into these T-coil enabled devices. The Ear Phone/Neck Loop Lanyard also provides the connection to Listen's Universal Ear Speaker, Earphones and Headphones, incorporating a short connection cable that plugs directly into the Ear Phone/Neck Loop Lanyards 3.5mm headset jack located 2/3 of the way up the lanyard. A second 3.5mm extension cable provided with Listen's universal earphones provides the length of cable required to place the receiver in a pocket or using the belt clip.

## LR-4200 Quick Reference



- 1. OLED Display Area:** Displays battery status, unit ID, channel status, volume status and charge activation
- 2. Micro USB:** USB charging, programming, firmware updates and inventory dispensing
- 3. Up/Down Volume Control:** Press momentarily to adjust the volume up/down or press and hold to ramp the volume.

*Note:* Press and hold both up and down buttons for 5 seconds to activate channel select, use up and down to change the channel. Momentarily press the power button to save and exit



- 4. 3.5 mm Output Jacks:** Connect Listen Ear Phone/Neck Loop Lanyard for use with T coil hearing aids or with Universal Ear Speaker or Headphone.
- 5. Belt Clip:** To remove, remove screw and pull belt clip from unit. To install place belt clip in place and insert screw.
- 6. Charging Contact:** For use with Listen charging tray options.
- 7. Power On/Off:** Press and hold for 1 second to turn on. Press and hold for 3 seconds to turn off.
- 8. LED:** Indicates low battery condition and charging status
- 9. Battery Protective Pull Tab:** Remove clear plastic pull tab to activate internal battery connections.
- 10. Battery Door:** Can be removed to access battery and product labeling information.

# LR-4200 Specifications

Product Specification: LR-4200-072 / LR-4200-216		
Audio	System Frequency Response System Signal to Noise Ratio  System Distortion Output/s	50 Hz - 15 kHz ( $\pm 3$ dB) / 50 Hz - 10 kHz ( $\pm 3$ dB) SQ enabled 80 dB, SQ disabled 60 dB / SQ enabled 80 dB, SQ disabled 50 dB <2% total harmonic distortion (THD) at 80% deviation Two (2) 3.5 mm (0.14 in.) connectors, unbalanced, 0 dBu nominal output level, 16 mW maximum, impedance 32 ohm
Controls	User Controls Set-up Controls  Programming	Power, up/down volume Press and hold up/down volume buttons for 5 seconds to enter channel adjust, use up/down to select channel Via software and USB port
Indicators	LED  Display	Flashes when batteries are low or to indicate charging, solid when fully charged Channel designation, battery level, unit number, charging status
RF	Frequency Range Number of Channels Sensitivity Frequency Accuracy Antenna Type  Squelch	72.025 - 75.975 MHz / 216.0125 - 216.9875 MHz (57)17 wide band, 40 narrow band / (57)19 wide band, 38 narrow band .6uV typical, 1 uV maximum for 12 dB sinad $\pm .005\%$ stability 32 to 122 °F (0 to 50 °C) Uses ear phone/neck loop lanyard and short ear phone cable or standard earphone cable Programmable in 20 steps, automatic on loss of RF signal
Power	Battery Type Battery Life Battery Charging Time Power Supply	Lithium Ion 8 Hours of typical use Fully charged in 2.5 Hours Micro USB connector, 5 V, 500 mA
Physical	Dimensions (H x W x D) Dimensions with Belt Clip Unit Weight Unit Weight with Batteries Shipping Weight Color	3.75 x 2.0 x 0.64 in. (9.6 x 5.0 x 1.7 cm) 3.75 x 2.0 x 0.80 in. (9.6 x 5.0 x 2.1 cm) 1.6 oz (45.4 g) 2.4 oz (68.1 g) 3.2 oz (90.8 g) with 16 oz (454 g) minimum Flat Black
Environmenta	Temperature - Operation Temperature - Storage Relative Humidity	14 to 104 °F (-10 to 40 °C) (-)4 to 122 °F (-20 to 50 °C) 0 to 95% relative humidity, non-condensing
Compliance	Standards	FCC Part 15, Industry Canada, RoHS

## Safety Cautions!

### Hearing Safety:

This product is designed to amplify audio to a high volume level which could potentially cause hearing damage if used improperly. To protect your hearing make sure the volume is turned down before putting on the ear speaker or headphones. Then adjust the volume up to the minimum setting require to hear clearly. Do not allow children or other unauthorized individuals to have access to this product without supervision.

### Medical Device Safety:

Before using this Listen product with an implantable or other medical device, consult your physician or manufacturer of your implantable or other medical device. Always make sure you are using this product in accordance with the safety guidelines established by your physician or the implantable device manufacturer.

### Recycling :

Help Listen Technologies protect the environment! Please take the time to dispose of your equipment properly.



#### Product Recycling Instructions:

Please do NOT dispose of your Listen Technologies equipment in the household trash. Please take the equipment to an electronics recycling center; OR, return the product to the factory for proper disposal.



#### Battery Recycling Instructions:

Please do NOT dispose of batteries in the household trash. Please take the batteries to a retail or community collection point for recycling.

# Quick Setup and Operation Instructions:

## 1. Unpack Unit

Inspect the unit for physical damage. If damage is apparent, please contact Listen Technologies technical support for assistance.

## 2. Activate Battery

Remove the clear plastic pull tab located at the bottom of the battery door, this will activate the internal battery connections. Note: upon first activation the battery will have a limited charge, we recommend the unit be charged immediately.



**Pull the tab to activate the internal battery**

## 3. Charge Battery

Fully charge the rechargeable Lithium Ion battery by connecting the unit to one of Listen Technologies charging options.


- a. LA-380 Intelligent 12-Unit Charging/Carrying Case
- b. LA-381 Intelligent 12-Unit Charging Tray
- c. LA-421 1-Port USB Charger (comes with cable)
- d. LA-423 4-Port USB Charger (comes with 4 cables)
- e. LA-422 USB to Micro USB cable (Connects iDSP™ receiver to any standard USB port)

When connected to a charging option the OLED status display will show the battery charge icon momentarily and the status LED next to the power button will begin to flash indicating that the unit is charging.

### OLED Display:

Charging icon when first connected to a charging source

Indicated Unit #, Charge % and Channel Assignment when removed for charging

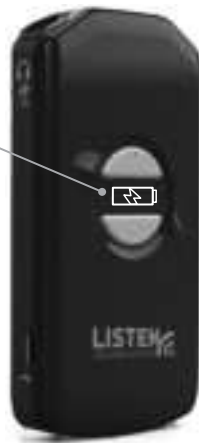

### Status LED:

Flashes during charging

Solid when charge is complete



When the unit reaches 100% charged the status LED next to the power button will stop flashing and will be solid.




## 4. Connect Earphone

### Using The Earphone/Neck Loop Lanyard

Connect the Listen Intelligent ear phone/neck loop lanyard to the two 3.5 mm output jacks on the unit. Then connect the short cable ear speaker or headphones to the 3.5mm output jack on the lanyard. The lanyard neck loop is placed over the head and worn as a necklace.


This is the preferred method of wearing the receiver for best performance!

For T-coil compatible hearing aid use simply disconnect the ear speaker or headset from the ear phone/neck loop lanyard.

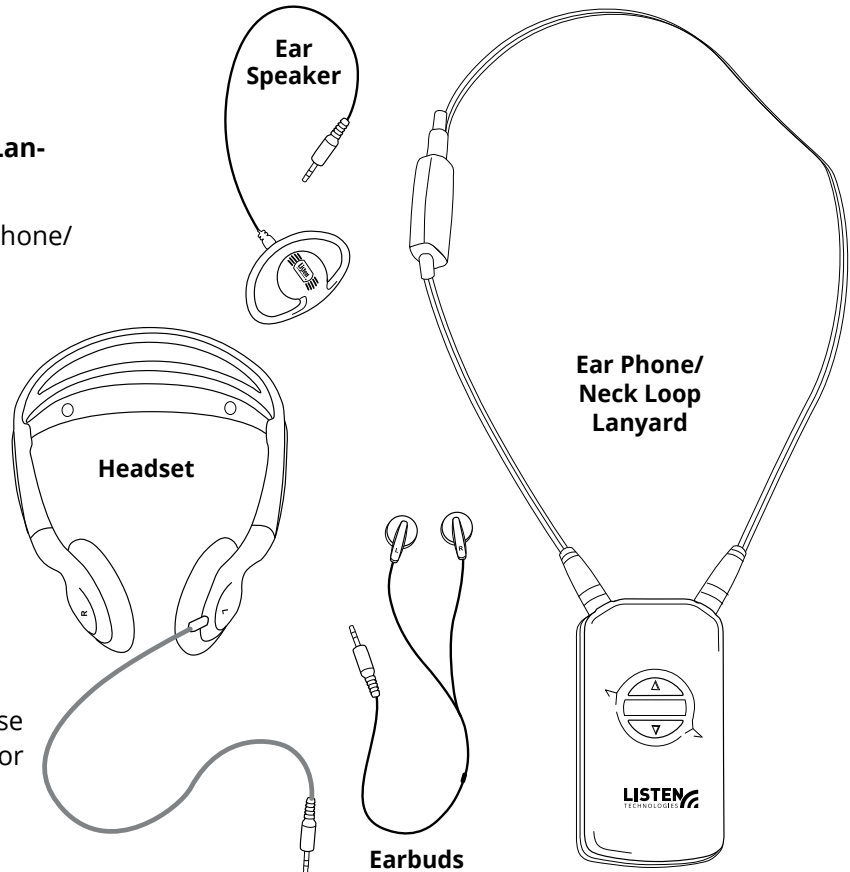

### Using The 3.5mm Earphone Extension Cable

If the receiver is to be clipped to a belt, waistband or inside a pocket a long extension cable is used. Connect the extension cable to the ear speaker, headset or earphones, then connect the extension cable into one of the 3.5 mm output jacks on top of the receiver.

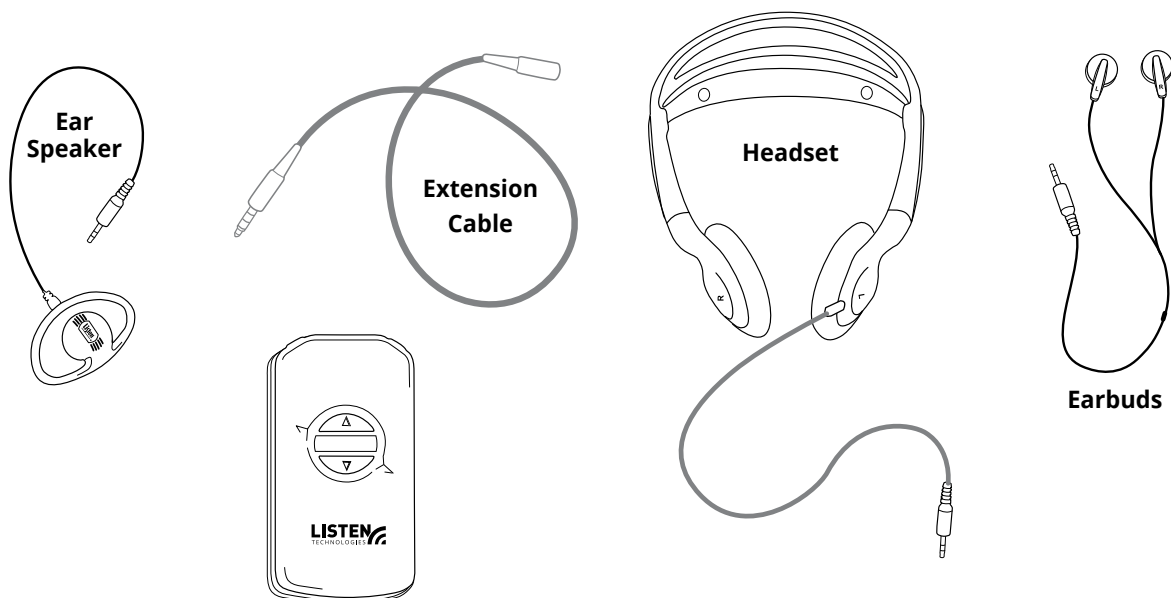

## 5. Turn the Unit On

Press and hold the Power Button for 1 second to turn the receiver on, the unit display will show the unit ID, battery status and the current channel. Each item will be displayed and then the display will turn off.

### OLED Display:

Indicates Unit #,  
Charge %  
and Channel  
Assignment  
when power  
button is pressed



### Power Button:

Press and hold for  
1 second to turn  
on, press and hold  
for 3 seconds to  
turn off



To view the unit ID, battery status or channel while the unit is powered, momentarily press the power button. To turn the receiver off, press and hold the power button for 3 seconds.

## 6. Channel Select Mode

72 MHz receivers operate on 17 wide band channels and 40 narrow band channels. Channels represented by letters on the display (i.e. A) are wideband channels; channels represented by numbers are narrowband channels. Listen recommends the use of wide band channels for a much higher quality listening experience.


216 MHz receivers operate on 19 wide band channels and 38 narrow band channels. Channel numbers starting with a "2" are wide band; channels beginning with a "1" or "3" are narrow band channels.

The Listen receiver is pre-programmed to operate on channel E (72 MHz) or channel 2C (216 MHz) from the factory. To receive audio, both the transmitter and receiver(s) need to be set to the same channel. If not, the receiver channel needs to be reprogrammed to the channel being broadcast. To adjust the receiver to a different listening channel, press and hold the volume up and down buttons simultaneously for 5 seconds. The current channel will begin to flash on the display.

Use the volume up or down button to scroll through the available channels. Once the desired channel is located momentarily press the power button to save and exit the channel select mode or if no button is pressed for 5 seconds then the selected channel will be saved and the unit will exit the channel select mode. See page 17-18 for complete channel selection information.

### 1. Channel Select Mode:

Press and hold the up and down button simultaneously for 5 seconds

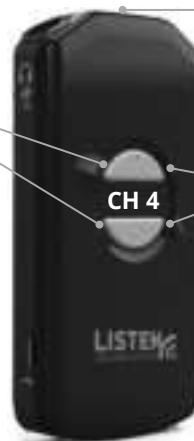

### 3. Save/Exit:

Press power button to save and exit.

### 2. Scroll Up/Down:

Use the up or down button to scroll through available channels

## 7. Adjust Volume

Adjust the listening volume to a comfortable listening level via the volume up/down buttons.




If the volume is adjusted while there is no audio present the unit will output a momentary tone each time the button is pressed allowing the user to gauge and adjust the audio level to a comfortable listening level. The volume level will be displayed for 3 seconds and then the display will turn off.

*Note: To protect the users hearing, at power up the receiver will automatically reset to a 25% volume level. Put on a headset and then adjust the volume to a comfortable listening level.*

## Battery & Belt Clip


### Low Battery Indication

When the unit detects a low battery condition it will cause the status LED to flash slowly indicating that the unit needs to be charged. When the light begins to flash the unit has approximately 30 minutes of receiver use before the unit will turn off. Press and release the power button and the battery charge % will be displayed on the OLED screen temporarily.

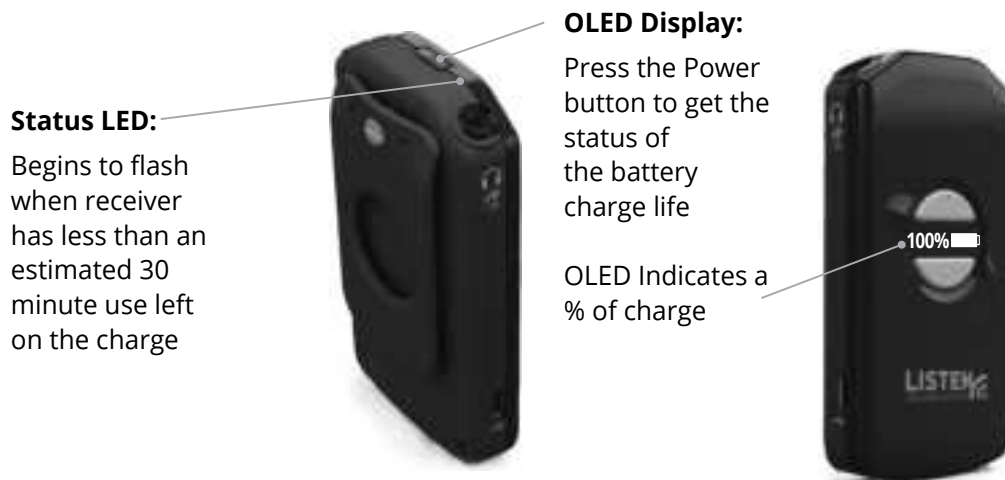


### Belt Clip Installation/Removal

To remove belt clip, remove screw and pull belt clip from unit. To install place belt clip in place and insert screw.

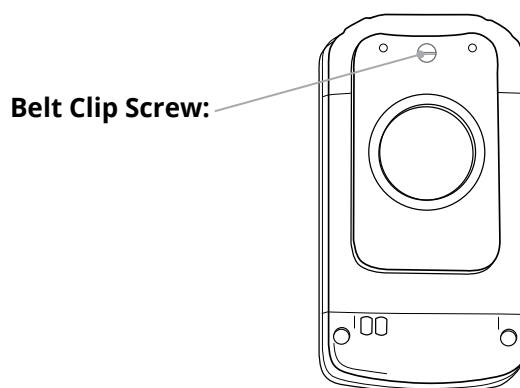

## Accessing Battery Compartment

To access the battery compartment simply remove the belt clip and battery door by pulling down and out on the battery door locking tab. *Note: The product labeling information can be found behind the battery and includes the product model number, description, serial number, contact information and compliance statement.*

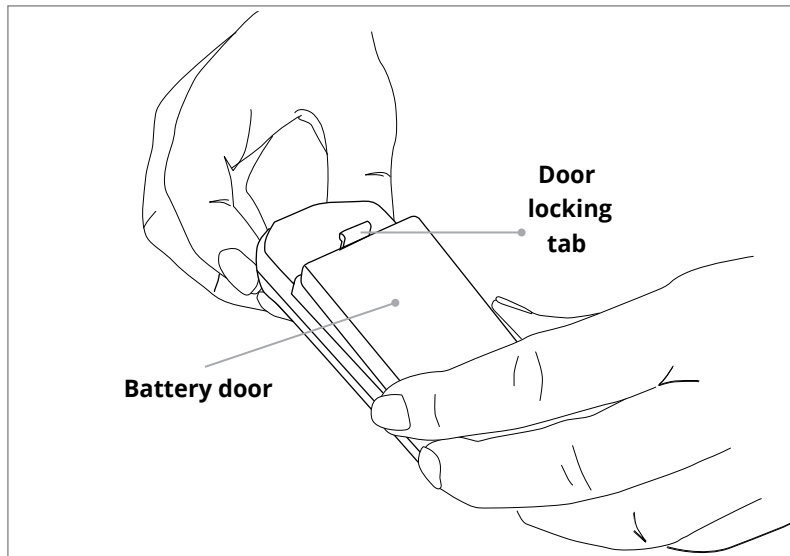

## Reset to Factory Default Settings

The unit can be returned to its factory default settings at any time by following steps:

1. Turn the unit off
2. Press and hold down the volume down button while pressing and holding the power button for 1 second to turn the unit on
3. Continue to hold down the volume down button while the unit powers on. The OLED display will show the Unit #, Charge Level %, Channel Selection and end with "Reset?"
4. Release the volume down button when Reset is displayed on the OLED display.
5. Press the power button to confirm default is desired. Once pressed the unit will display "Defaulted" on the OLED display. The unit has now returned to the factory default state
6. If 5 seconds lapses before the power button is the pressed, the unit will time out and the unit will not reset to the factory default settings

## Advanced Program Features and Listen's iDSP Software Suite

To manage the advanced program features on any of the iDSP™ receivers a windows based User Interface (UI) software is required.

This software is available free of charge from Listen Technologies. To download the software log onto <http://www.listentech.com/support/software/idsp-software-suite/> and follow the instructions.

With the UI software, direct communication is provided via the Micro USB connection on the receiver. Once connected the UI software provides setup and adjustment of the following functions of the LR-4200 receiver.

*Note: A help file for the UI software is included with the download and will provide detailed instructions for set up and management of all the advanced program features of the LR-4200 receiver.*



## Super Quiet Mode

To reduce background noise and increase the audio quality, Listen offers a noise reduction technology called Listen SQ™. Only Listen \*transmitters and receivers have SQ™ available, both the transmitter and receiver must have SQ™ activated to achieve the improved sound quality performance. This LR-4200 receiver has been shipped to you with the SQ™ feature enabled.

### *SQ™ Summary:*

- Improves noise performance by at least 20 dB
- SQ must be enabled for both the transmitter and receivers
- SQ™ is NOT Squelch
- SQ™ is NOT compatible with other manufactures' products
- SQ™ can be disabled to permit operation with early Listen products or other manufactures, products

Note: SQ™ is not available on some of the early Listen transmitters. Please contact Listen's Technical Support team to find out if your existing transmitter has this feature available.

*Note: If you are planning to use this product with older Listen systems that do not employ SQ™ or another manufactures transmitter The SQ™ mode should disabled on this receiver. Refer to the manual supplied with the downloaded Listen UI software for details on how to manage the SQ™ Mode on this receiver.*

## Squelch

The purpose of squelch is to mute the audio output of the receiver when the signal from the transmitter is turned off or the level is too weak to be received. Without squelch radio noise will be heard in the earphone. The squelch on the receiver can be adjusted to mute the audio at different RF signal strengths. There are 20 squelch settings. The lowest squelch setting (no squelch) is "0" and the tightest squelch setting is "20". Your Listen receiver has been shipped to you with the squelch setting of 3.

*Useful as follows:*

- To ensure that users don't hear transmissions from other transmitters, set the squelch setting to the highest level that doesn't squelch the receiver in the defined listening area
- If the receiver is too close to the transmitter (i.e. in a classroom), set the squelch high enough so that when the transmitter is turned off it immediately squelches the audio on the receiver and transmitters in other rooms will not be heard
- In an area that has a lot of broadcast interference, adjust the squelch setting to a higher setting to ensure the interference is not picked by the receiver
- For the maximum amount of range, consider setting the squelch setting to a low level (0, 1 or 2). This expands the range but could allow interference from other transmitters when operating far distances from the primary transmitter

## Basic Channels and Expanded Channels Modes

Your Listen receiver has been shipped with the Basic Channel Mode enabled.

In the default Basic Channel Mode, only the wide band channels are available for selection. If the channel desired is not available in Basic Channel Mode, the receiver will need to be set to the Expanded Channel Mode. In Expanded Channel Mode all wide band and narrow band are available for selection.

## Channel Labels

The channel labels are displayed on the OLED status screen. The default is the channel number the receiver has been programmed to receive, i.e. "CH-E". Customization of this display can be created to better identify the type of audio, for example CH-E could be changed to display "Spanish" if the receiver is used for language translation.

## Auto Power Mode

The auto power mode will automatically power the receiver on when the unit is removed from the charging device, displaying the unit ID, battery status and the active channel. When the unit is returned to the charging device the unit will automatically turn off and resume charging operation. Your Listen receiver has been shipped to you with the Auto Power Mode enabled.

## Unit ID

The unit ID number provides a unique identification for each receiver that is displayed on the OLED status screen. This can be any 3 digit number between 000 and 999. The unit ID allows venues to track individual units and for easy dispensing and inventory control. Your Listen receiver has been shipped to you with a Unit ID of 000.

## Brightness Control

The Brightness Control adjusts the level of brightness of the OLED display. There are four settings Auto, Bright, Dim and Disabled. In the Auto mode the unit uses an internal light sensor and automatically dims the display when the light level is below approximately 10 Lux. In the Bright, Dim or Disabled mode the unit disables the light sensor and leaves the OLED in the selected Bright or Dim state. In the disabled mode the unit disables the display from lighting during normal operation except for the power on sequence or when the power button is momentarily pressed to check status. The receiver is shipped with the Auto Brightness Control Mode enabled.

## Jack Sense

The jack sense mode when enabled will automatically turn the receiver on when a headset is inserted into the 3.5 mm output jack on the receiver. The receiver will automatically turn off after 60 seconds when the headset is removed from the 3.5 mm output jack. Your listen receiver has been shipped to you with the Jack Sense Mode disabled.

*Note:* If Jack Sense is on and Auto Power is on, the receiver will ignore jack sense while on the charger.

## Unit Information

When a unit is connected to the configuration software the software extracts specific information from the unit and displays it for the user. This information includes the model number, frequency, Serial Number and Firmware Version.

## Reset to Factory Defaults

The unit can be returned to the factory default settings.

## Firmware Update

The firmware update function will check via the internet to see if a firmware update is available for the receiver.



## RF Reception Maximization Strategies:

For proper and reliable operation, Listen receivers should receive a strong and consistent signal from the originating transmitter. Follow these strategies should be used to maximize this signal:

- a. When designing and installing a system, keep in mind that the location of both the transmitter and receivers is critical to maximizing signal strength
- b. Eliminate or minimize obstructions between the transmitter and receivers
- c. Minimize the distance between the transmitter and receivers
- d. Move transmitter and receivers away from metal objects
- e. Place the transmitting antenna as high as possible (on stationary transmitters)
- f. Orient both transmitting and receiving antennas vertically
- g. On portable transmitters and receivers, the cable from the microphone or headset is the antenna; ensure that the cable is not coiled or laying horizontal
- h. For 216 MHz stationary LT-800 transmitter only, consider using a gain antenna such as a Yagi type antenna or the LA-107 ground plane antenna."

**NOTE:** If the RF signal to the 216 MHz models is too high, the audio will be distorted. This may happen if you are within 40 feet (12m) of the LT-800-216 transmitter or within 5 feet (1.5 m) of the LT-700-216 transmitter.

**CAUTION:** When installing remote antennas, ensure the antenna is clear of power lines. Coaxial cable, connectors, and optional antenna mounting kits are available from Listen. Visit [www.listentech.com](http://www.listentech.com) or ask your dealer for details.

## 72 MHz Compatibility Chart:

Frequency MHz	Listen	Phonic Ear	Comtek	Phonak	Williams*	Gentner	Telex	Drake
72.0250	1	1	1	A1	(11, 1)			
72.0500					(2)	1		
72.0750	2	2	2	A2	(12, 3)			
72.1000	A	A	A	A	A, (13, 4)	2	A	72.1
72.1250	3	3	3	A3	(14, 5)			
72.1500				(6)	3			
72.1750	4	4	4	A4	(15, 7)			
72.2000	K	K	K	K	K, (8)	4	B	72.2
72.2250	5	5	5	K5	(16, 9)			
72.2500					(10)	5		
72.2750	6	6	6	K6	(17, 11)			
72.3000	B	B	B	B	B, (18, 12)	6	C	72.3
72.3250	7	7	7	B7	(19, 13)			
72.3500					(14)	7		
72.3750	8	8	8	B8	(20, 15)			
72.4000	N	N	N	N	N, (16)	8	D	72.4
72.4250	9	9	9	N9	(21, 17)			
72.4500					(18)	9		
72.4750	10	10	10	N0	(22, 19)			
72.5000	C	C	C	C	C, (23, 20)	10	E	72.5
72.5250	11	11	11	C1	(24, 21)			
72.5500					(22)	11		
72.5750	12	12	12	C2	(25, 33)			
72.6000	O	O	O	O	O, (24)	12	F	72.6
72.6250	13	13	13	O2	(26, 25)			
72.6500					(26)	13		
72.6750	14	14	14	4	(27)			
72.7000	D	D	D	D	D, (28)	14	G	72.7
72.7250	15	15	15	D5	(29)			
72.7500					(30)	15		
72.7750	16	16	16	D6	(30, 31)			
72.8000	P	P	P	P	P, (32)	16	H	72.8
72.8250	17	17	17	P7	(31, 33)			
72.8500					(34)	17		
72.8750	18	18	18	P8	(32, 35)			
72.9000	E	E	E	E	E, (33, 36)	18	I	72.9
72.9250	19	19	19	E9	(34, 37)			
72.9500					(38)	19		
72.9750	20	20	20	E0	(35, 39)			

Frequency MHz	Listen	Phonic Ear	Comtek	Phonak	Williams*	Gentner	Telex	Drake
74.6250	33	33	33	E3	(36, 40)			
74.6500					(41)	20		
74.6750	34	34	34	E4	(37, 42)			
74.7000	I	I	I	I	I, (38, 43)	21	O	
74.7250	35	35	35	I5	(39, 44)			
74.7500					(45)	22		
74.7750	36	36	36	I6	(40, 46)			
75.2250	37	37	37	I7	(41, 47)			
75.2500					(48)	23		
75.2750	38	38	38	I8	(42, 49)			
75.3000	J	J	J	J	J, (43, 50)	24	P	
75.3250	39	39	39	J9	(55, 51)			
75.3500					(52)	25		
75.3750	40	40	40	J0	(45, 53)			
75.4000	R	R	R	R	R, (54)	26	Q	
75.4250	21	21	21	R1	(46, 55)			
75.4500					(56)	27		
75.4750	22	22	22	R2	(47, 57)			
75.5000	F	F	F	F	F, (48, 58)	28	J	75.5
75.5250	23	23	23	F3	(49, 59)			
75.5500					(60, 29)			
75.5750	24	24	24	F4	(50, 61)			
75.6000	S	S	S	S	S, (62)	30	K	75.6
75.6250	25	25	25	S5	(51, 63)			
75.6500					(64)	31		
75.6750	26	26	26	S6	(52, 65)			
75.7000	G	G	G	G	G, (53, 66)	32	L	75.7
75.7250	27	27	27	G7	(54, 67)			
75.7500					(68)	33		
75.7750	28	28	28	G8	(55, 69)			
75.8000	T	T	T	T	T, (70)	34	M	75.8
75.8250	29	29	29	T9	(56, 71)			
75.8500					(72)	35		
75.8750	30	30	30	T0	(57, 73)			
75.9000	H	H	H	H	H, (58, 74)	36	N	75.9
75.9250	31	31	31	H1	(59, 75)			
75.9500					(76)	37		
75.9750	32	32	32	H2	(60, 77)			

\*Parenthesis indicate T35 and T20 narrowband.

Wideband frequencies are indicated in highlighted rows. The highlighted channels also indicated those channels available in the "basic" mode (default). All channels can be accessed when in the "expanded" channel mode (see page 14 for more information).

## 216 MHz Compatibility Chart:

Frequency MHz	Listen	Phonic Ear	Phonak	Comtek	Williams	Gentner	CSI	Light AVR	Speed
216.0125	1A		1	1				C01	N01
216.0250	2A	41	41	41		1	1		
216.0375	3A		2	2					
216.0625	1B		21	3					
216.0750	2B	42	42	42		2	10		
216.0875	3B		4	4					
216.1125	1C		5	5				C05	
216.1250	2C	43	43	43	A	3	6		
216.1375	3C		22	6					
216.1625	1D		23	7					
216.1750	2D	44	44	44	B	4	14		
216.1875	3D		8	8					
216.2125	1E		9	9				C09	N09
216.2250	2E	45	45	45	C	5	2		
216.2375	3E		24	10					
216.2625	1F		25	11					
216.2750	2F	46	46	46	D	6	11		
216.2875	3F		12	12				C12	N12
216.3125	1G		13	13					
216.3250	2G	47	47	47	E	7	7		
216.3375	3G		26	14					
216.3625	1H		27	15					
216.3750	2H	48	48	48	F	8	15		
216.3875	3H		16	16				C18	N18
216.4125	1J		17	17				C21	
216.4250	2J	49	49	49	G	9	18		
216.4375	3J		18	18					
216.5125	1K		61	21					
216.5250	2K	51	29	51	H	10	3		
216.5375	3K		62	22					
216.5625	1L		28	23					
216.5750	2L	52	52	52	I	11	12		
216.5875	3L		64	24				C24	N64
216.6125	1M		65	25				C25	
216.6250	2M	53	53	53	J	12	8		
216.6375	3M		81	26					
216.6625	1N		82	27					
216.6750	2N	54	54	54	K	13	16		
216.6875	3N		68	28					
216.7125	1P		69	29				C29	
216.7250	2P	55	55	55	L	14	19		
216.7375	3P		83	30					
216.7625	1R		84	31					
216.7750	2R	56	56	56		15	4		
216.7875	3R		72	32				C32	N72
216.8125	1S		73	33				C33	
216.8250	2S	57	57	57			13		
216.8375	3S		76	34					
216.8625	1T		85	35					
216.8750	2T	58	58	58			9		
216.8875	3T		86	36					
216.9125	1U		77	37				C37	N77
216.9250	2U	59	59	59			17		
216.9375	3U		88	38					
216.9625	1V		79	39				C39	
216.9750	2V	60	60	60			5		
216.9875	3V		80	40				C40	N80

Wideband frequencies are indicated in highlighted rows.

## Troubleshooting LR-4200 Receivers:

### **The receiver has no power**

Make sure the unit has either a fully charged battery or a Listen approved wall charging transformer is connected. Make sure the Power button on the top of the unit has been pressed to turn the unit ON. If this does not work, make sure the battery is installed properly and / or install a replacement battery.

### **There is no audio**

Make sure the volume control is turned up to at least 25%. Check the Intelligent Earphone/Neck Loop Lanyard to insure it's plugged all of the way. Make sure the Ear Phone is plugged into the Earphone/Neck Loop Lanyard. Check to insure the transmitter is broadcasting an audio source. Verify the receiver is tuned to the same channel as the transmitter. If the RF signal is too weak, the receiver will squelch and mute the audio source; move closer to the antenna or make sure the transmitter's output RF power switch is set on "FULL" (LT-800).

### **The audio is distorted**

Check the receiver is on the correct channel and make sure your using the clearest channel possible. Verify the audio on the transmitter is not turned up too loud; this will cause distortion. Insure the Intelligent Ear Phone/Neck Loop Lanyard connectors are pushed all the way into the jacks on top of the unit. Check the Ear Phone to verify it is plugged all the way into the Ear Phone/Neck Loop Lanyard. Review the SQ™ settings on your transmitter and receivers to verify both are turned ON (or OFF, if some of your equipment is not SQ™ capable). Make sure the receiver is not too close to the transmitting antenna. If the receiver can't get farther away from the antenna, turn down the RF output power on the stationary (LT-800) transmitter.

### **I cannot pick up the signal on the receiver**

Check to make sure the receiver and the transmitter are on the same exact channel frequency. Verify the receiver is in broadcast range of the transmitter. Move the receiver closer to the transmitter.

### **I can pick up the signal on the receiver, but it sounds like it's not tuned in**

Check the transmitter and receiver and verify they are both on exactly the same channel number/letter. Make sure you are using a clear channel that is free from noise and interference.

### **I'm using another brand of transmitter - how do I tell which channel to use?**

Refer to Listen's Frequency Compatibility Table (page 16). Adjust either the transmitter or the receiver to a common channel.

### **There is not sufficient range**

Inspect the transmitting antenna verify it is located as close as possible to the receiving area. Place the antenna as high as possible and check to see it is free from obstacles. Check the squelch setting on the unit; perhaps it is too sensitive.

### **When I change channels, only certain channels are accessible**

The unit has been programmed to basic mode which only shows the wide band channels. The unit can be programmed for expanded mode which will show all 57 channels. This is programmed via the configuration software.

### **My battery is not charging**

Verify the clear plastic pull tab has been removed from the receiver battery door engaging the battery connections. Make sure the battery is installed properly and that the unit is plugged into the charging device correctly. Check the charging device to verify it is plugged in the proper power outlet and power is available at the outlet. If this does not work, install a replacement battery.

### **I want to run the unit from a wall transformer**

Simply plug a Listen approved charging transformer (LA-421) into the Micro USB connector on the side of the unit. A battery must be installed at all times even when operating the unit with a wall charging transformer.

## **Compliance Notice and FCC Statement and Industry Canada Statements**

### **Compliance Notice**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) These devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesirable operation.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been certified to comply with the limits for a class B computing device, pursuant to FCC and IC Rules. In order to maintain compliance with FCC and IC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

### **Industry Canada Statement**

This equipment complies with ICES-003 class B.

CAN ICES-3 (B)/NMB-3(B)

## Warranty

Listen Technologies Corporation (Listen) warrants its transmitters and receivers (LT-82, LT-700, LT-800, LR-100, LR-42, LR-44, LR-300, LR-400, LR-500, LR-600, LR-4200, LR-5200) to be free from defects in workmanship and material under normal use and conditions for the useful lifetime of the product from date of purchase.

Listen warrants its Stationary IR Radiators (LA-140) to be free from defects in workmanship and material under normal use and conditions for three years from the date of purchase.

Listen warrants its Noise Canceling Microphone (LA-270) to be free from defects in workmanship and material under normal use and conditions for one year from date of purchase.

Listen warrants its Charging/Carrying Cases (LA-306, LA-311, LA-313, LA-317, LA-318, LA-319, LA-320, LA-321, LA-322, LA-323, LA-324, LA-325, LA-380, LA-381) to be free from defects in workmanship and material under normal use and conditions for one year from date of purchase.

All other products and accessories are warranted for 90 days from date of purchase.

This warranty is only available to the original end purchaser of the product and cannot be transferred. Warranty is only valid if warranty card has been returned within 90 days of purchase. This warranty is void if damage occurred because of misuse or if the product has been repaired or modified by anyone other than a factory authorized service technician. Warranty does not cover normal wear and tear on the product or any other physical damage unless the damage was the result of a manufacturing defect. Listen is not liable for consequential damages due to any failure of equipment to perform as intended. Listen shall bear no responsibility or obligation with respect to the manner of use of any equipment sold by it. Listen specifically disclaims and negates any warranty of merchantability or fitness of use of such equipment including, without limitation, any warranty that the use of such equipment for any purpose will comply with applicable laws and regulations. The terms of the warranty are governed by the laws of the state of Utah.

In the first ninety days after purchase, any defective product will be replaced with a new unit. After 90 days, Listen will, at its own discretion either repair or replace transmitters and receivers with a new unit or a unit of similar type and condition. Product that is not covered under warranty shall be repaired or replaced with a unit of similar type and condition based on a flat fee. Contact Listen for details.

This limited warranty, prices and the specifications of products are subject to change without notice.

<http://www.listentech.com/support-warranty-registration>

## Contacting Listen

If technical service is needed, please contact Listen. Pre-authorization is required before returning Listen products. If products were damaged in shipment, please contact the carrier, then contact Listen for replacement or repair requirements payable by the carrier.

Listen's corporate headquarters are located in Bluffdale, Utah U.S.A. and are open Monday through Friday, 8am to 5pm Mountain Time.

14912 Heritagecrest Way  
Bluffdale, Utah 84065-4818  
+1.801.233.8992  
+1.800.330.0891 North America  
+1.801.233.8995 fax

**[support@listentech.com](mailto:support@listentech.com)**  
**[www.listentech.com](http://www.listentech.com)**

20170209

# User Manual

## Installation and Operation

**LT-84 ListenIR Transmitter/Radiator Combo**

**LA-141 ListenIR Expansion Radiator**





# Table of Contents

<b>Safety Cautions!</b>	2
<b>Recycling Instructions</b>	2
<b>Compliance Information</b>	3
<b>Compliance Notice, FCC and Industry Canada Statements</b>	3
<b>System Overview</b>	4
<b>LT-84 ListenIR Transmitter/Radiator Combo</b>	5
Package Contents	5
<b>LT-84 Rear View Quick Reference</b>	5
<b>LA-141 ListenIR Expansion Radiator</b>	6
Package Contents	6
<b>LA-141 Rear View Quick Reference</b>	6
<b>LT-84 and LA-141 Coverage</b>	7
<b>Designing a System</b>	9
<b>Flexible Mounting Hardware Instructions</b>	10
Mounting Hardware Kit	10
Mounting Provision Thread ¼" x 20 (6mm x 1.0 thread)	10
Wall Surface Mounting Example	11
Ceiling Surface Mounting Example	11
Mounting Two Units with Linking Mount Example	11
<b>Interconnection and Control</b>	12
Connection of the External Power Adaptor	12
Connection of External Audio Sources	13
IR Frequency Selection/Control	14
ListenIR Expansion Link RJ-45 Connections	15
Indicator Lights	16
Troubleshooting	17
LT-84 Specifications	18
LA-141 Specifications	19
<b>Warranty Information</b>	20
<b>Technical Support Contact</b>	21

## Safety Cautions!

### CAT-5e Cable Safety:

Do NOT Plug the LT-84 (ListenIR Transmitter/Radiator Combo) CAT-5e cable into anything other than an LA-141 (ListenIR Expansion Radiator). The LT-84 CAT-5e Expansion Output RJ-45 connection is proprietary and is not compatible with Ethernet or any other system. Failure to comply with this caution can damage the LT-84, LA-141 or other equipment and will void the warranty.

### Hearing Safety:

The LT-84 is designed to be used with Listen Technologies receivers. These receivers are designed to amplify audio to a high volume level which could potentially cause hearing damage if used improperly. To protect your hearing, make sure the volume is turned down before putting on the ear speaker or headphones, then adjust the volume up to the minimum setting require to hear clearly. Do not allow children or other unauthorized individuals to have access to this product without supervision.


### Medical Device Safety:

Before using Listen Technologies receivers with an implantable or other medical device, consult your implantable or other medical device physician or manufacturer. Always make sure you are using this product in accordance with the safety guidelines established by your physician or the implantable device manufacturer.

## Recycling Instructions

### Recycling:

Help Listen Technologies protect the environment by taking the time to dispose of your equipment properly.

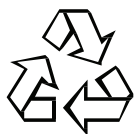

### Product Recycling Instructions:

Please do NOT dispose of your Listen Technologies equipment in the household trash. Please take the equipment to an electronics recycling center; OR, return the product to the factory for proper disposal.



### Battery Recycling Instructions:

Please do NOT dispose of batteries in the household trash. Please take the batteries to a retail or community collection point for recycling.

# Compliance Information

No FCC license or radio approval is required to operate this equipment.

## Compliance Notice, FCC and Industry Canada Statements

### Compliance Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) These devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesirable operation.

### FCC Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

### Industry Canada Statement


This equipment complies with ICES-003 class B.  
CAN ICES-3 (B)/NMB-3(B)

## System Overview

The LT-84 is an all-in-one two channel infrared (IR) transmitter and radiator (Transmitter/Radiator Combo) packed into a single mountable enclosure. The LT-84 IR radiator is located behind the IR transparent front panel and provides line-of-sight coverage of 30,000 ft<sup>2</sup> (2787 m<sup>2</sup>) with LR-4200-IR/LR-5200-IR receivers or 7,500 ft<sup>2</sup> (697 m<sup>2</sup>) with LR-42/LR-44 receivers.

The LT-84 is perfect for high-quality audio applications like assistive listening, audio description or language interpretation in corporate boardrooms, courtrooms, training rooms, classrooms, and theaters. Its flexible audio inputs accept microphone, consumer and line level inputs which are all mixed to the modulated IR transmission. IR receivers then detect the modulated IR transmission and convert the IR signals back into an audio signal and presents it to headphones.


For better line of sight coverage or for coverage in larger areas the LT-84 can be combined with up to four (4) LA-141 Listen IR Expansion Radiators. The LA-141s are connected in a daisy chain fashion to the LT-84 via a **24 AWG** unshielded CAT-5e cable. A maximum of two (2) LA-141s can be connected to each expansion link output on the LT-84 with a maximum cable length of 100 ft. (30 m).

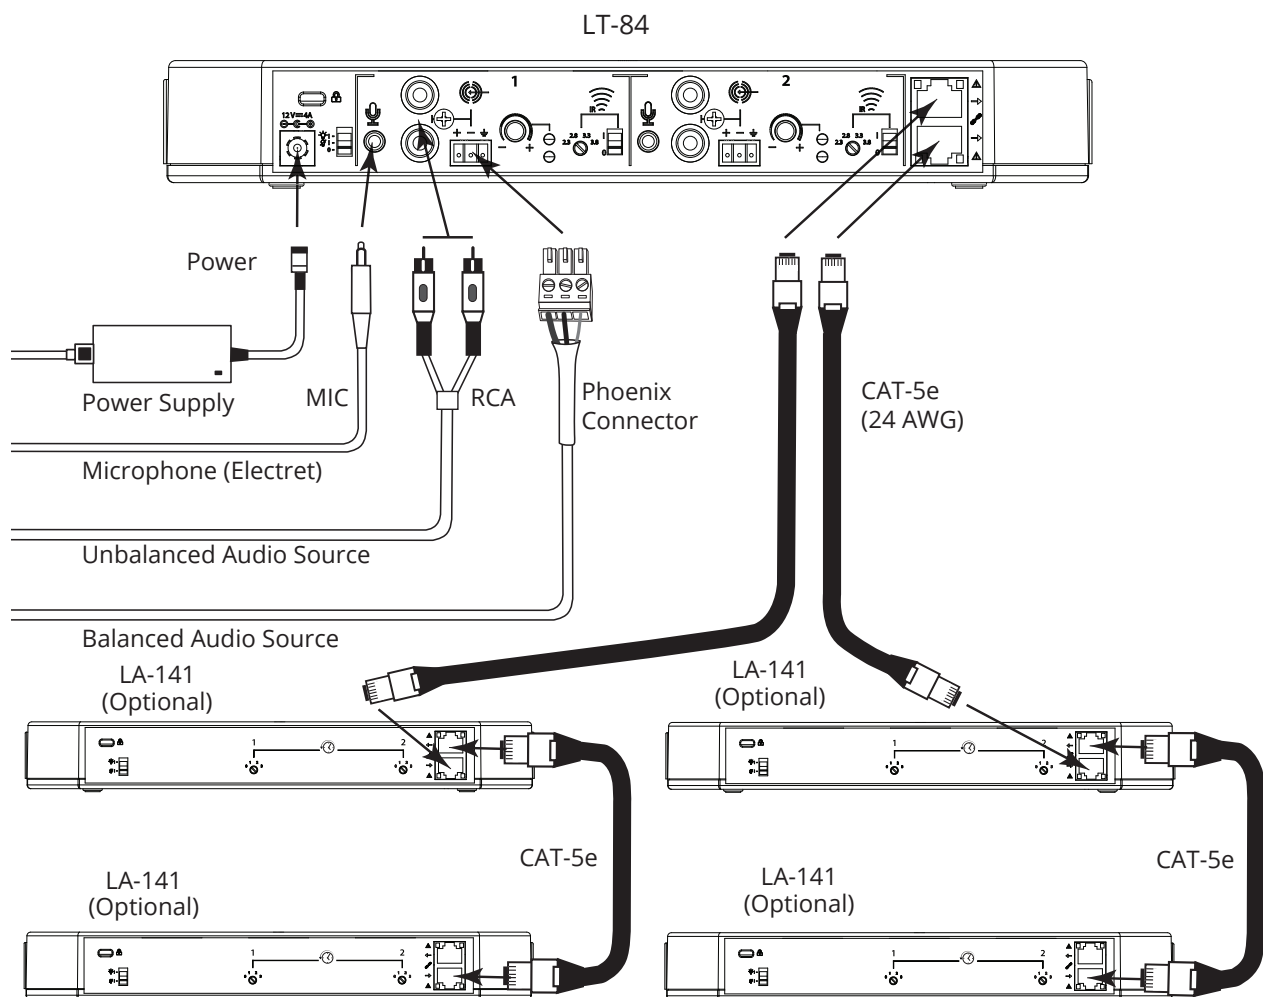


# LT-84 ListenIR Transmitter/Radiator Combo

## Package Contents


LT-84 ListenIR Transmitter/Radiator Combo  
LA-210 12 VDC Universal Power Supply  
Power Cord  
LA-344 Mounting Hardware  
(2) Phoenix Type Connectors  
Quick Start Guide  
LA-303 Small Room Signage Kit

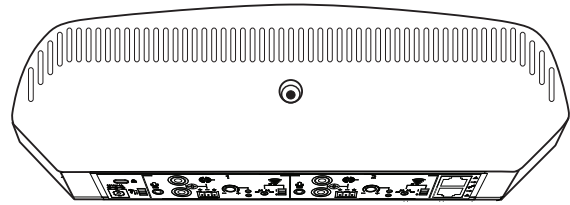

LA-84 Stationary IR Transmitter/Radiator Combo

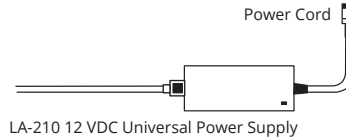


LA-210 12 VDC Universal Power Supply




(2) Phoenix Type Connectors



LA-303 Small Room Signage Kit

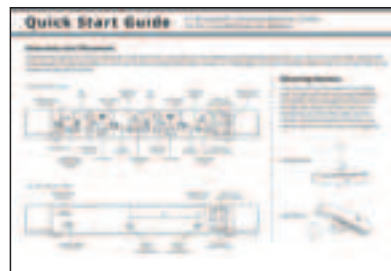


Quick Start Guide

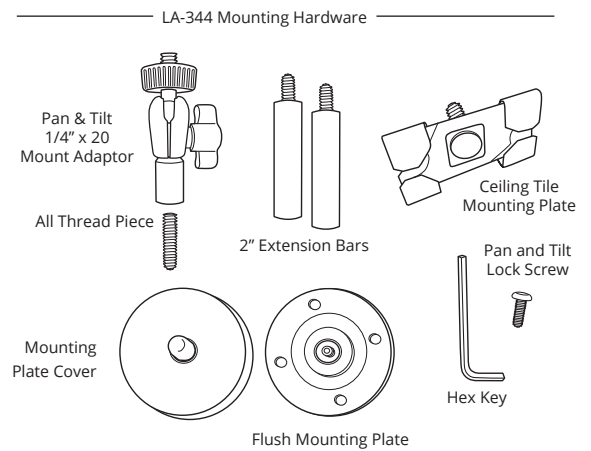

## LT-84 Rear View Quick Reference


### LT-84 Rear View

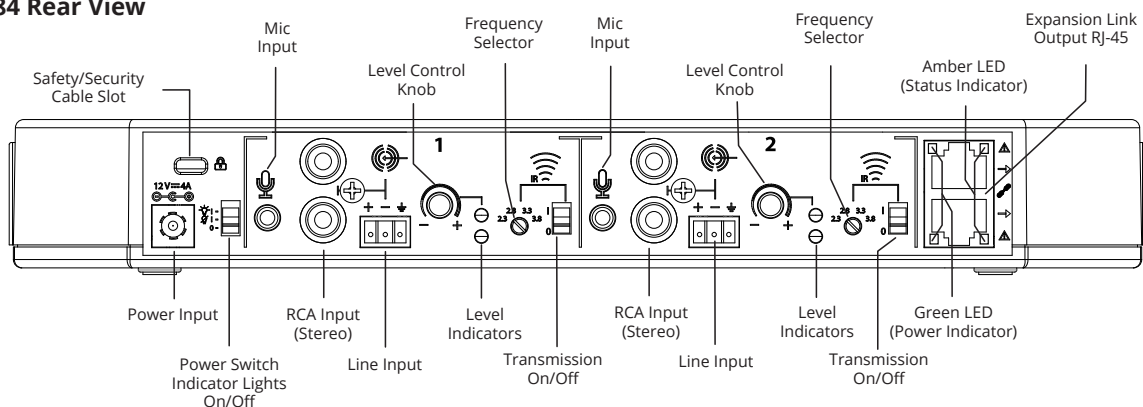

# LA-141 ListenIR Expansion Radiator



## Package Contents

LA-141 ListenIR Expansion Radiator  
(1) 25 ft. (7.6 m) CAT-5e Cable  
LA-344 Mounting Hardware  
Quick Start Guide

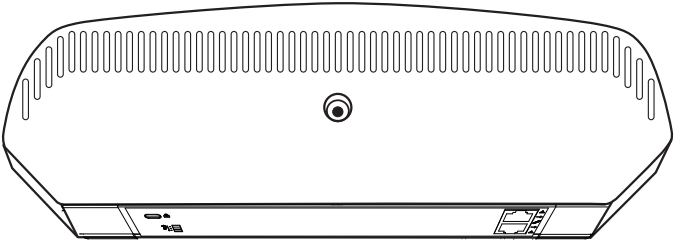


LA-141 Listen IR Transmitter/Radiator Combo

### LA-344 Mounting Hardware

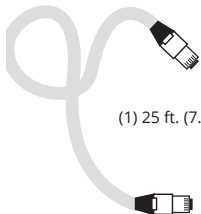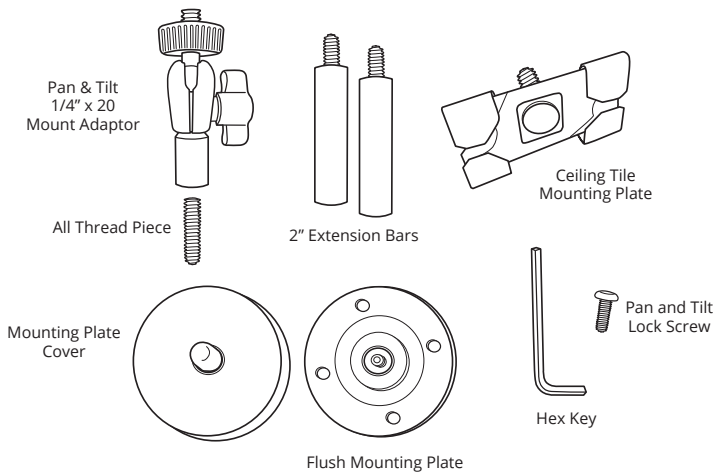


(1) 25 ft. (7.6 m) CAT-5e Cable

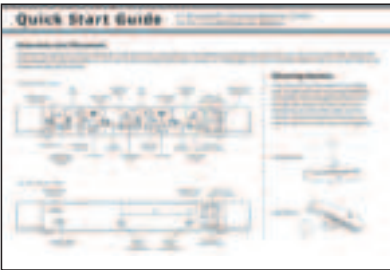

Quick Start Guide

## LA-141 Rear View Quick Reference

### LA-141 Rear View

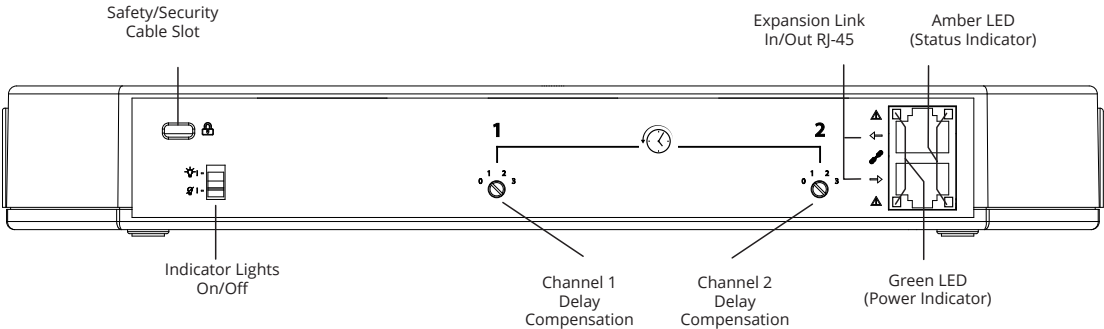

# LT-84 and LA-141 Coverage

The units emit a beam of infrared light from the front panel. Infrared light is not visible to the human eye. Below is a scaled diagram of the typical line-of-sight IR pattern or “footprint” emitted from the units. When using a unit in single channel transmit mode the coverage area is 30,000 ft<sup>2</sup> (2787 m<sup>2</sup>) and in 2 channel transmit mode the coverage area is 15,000 ft<sup>2</sup> (1394 m<sup>2</sup>). Use the diagrams below when evaluating a given space to determine the number of units required and placement of those units for best line-of-sight coverage with an LR-4200-IR or LR-5200-IR receiver.

Figure 1: LT-84 or LA-141 Single Unit Coverage Pattern “footprint” 1 & 2 Channel Transmission



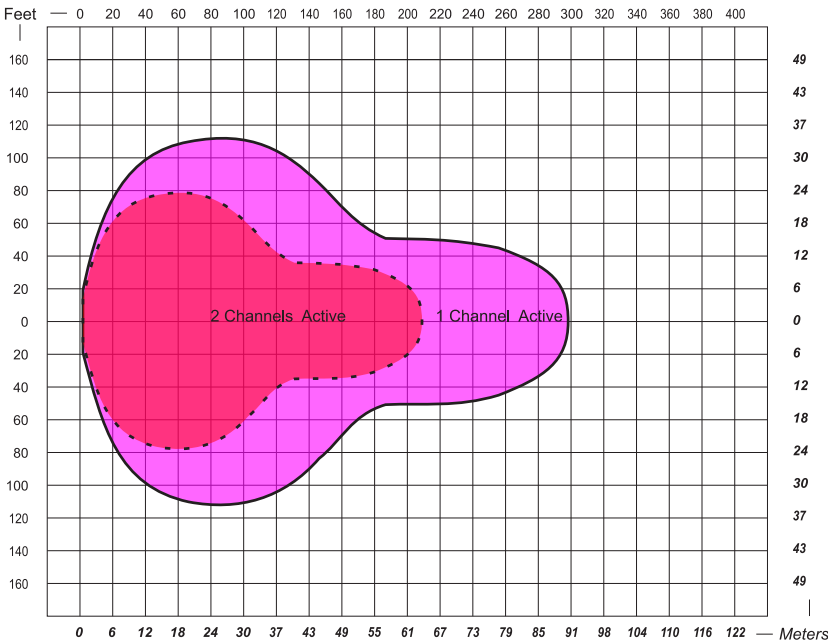



Figure 2: LT-84 and LA-141 Single Channel Coverage Pattern “footprint” from same emission point (40% increase)

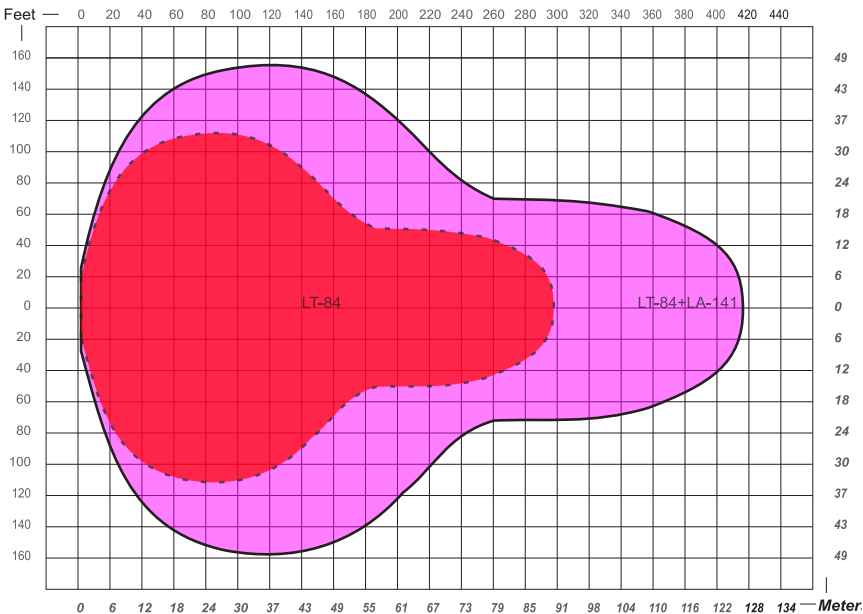


**Figure 3:** LT-84 and LA-141 Single Channel Coverage Pattern “footprint” Overlapping 50 ft. (15.24 m) apart

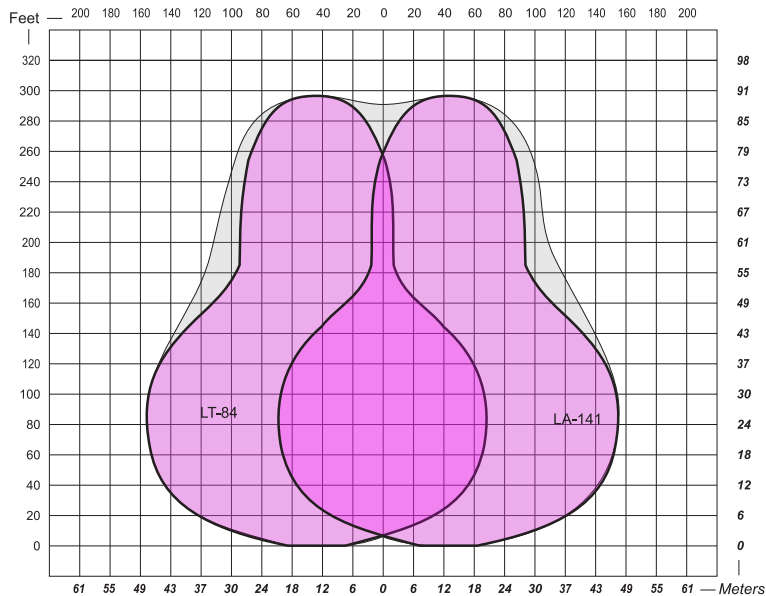

**Figure 4:** Single Channel Coverage Pattern “footprint” same emission point at an angle of 15 degrees off axis

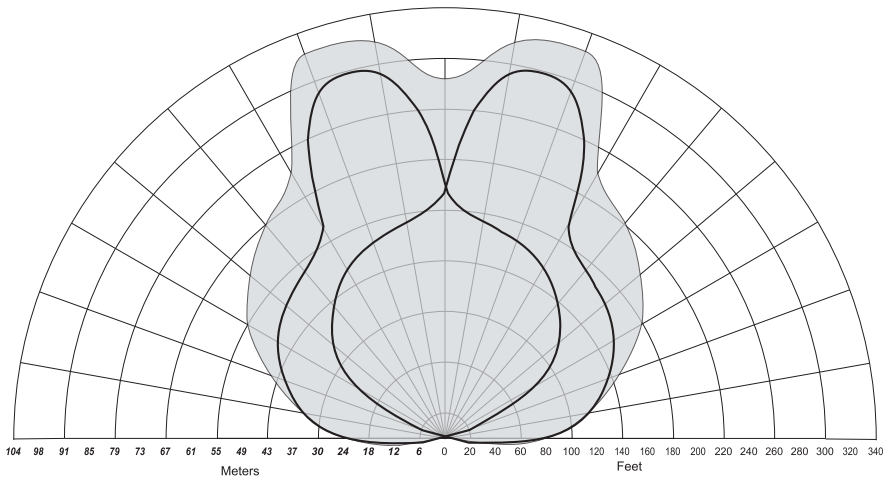

**Figure 5:** Single Channel Coverage Pattern “footprint” same emission point at an angle of 30 degrees off axis

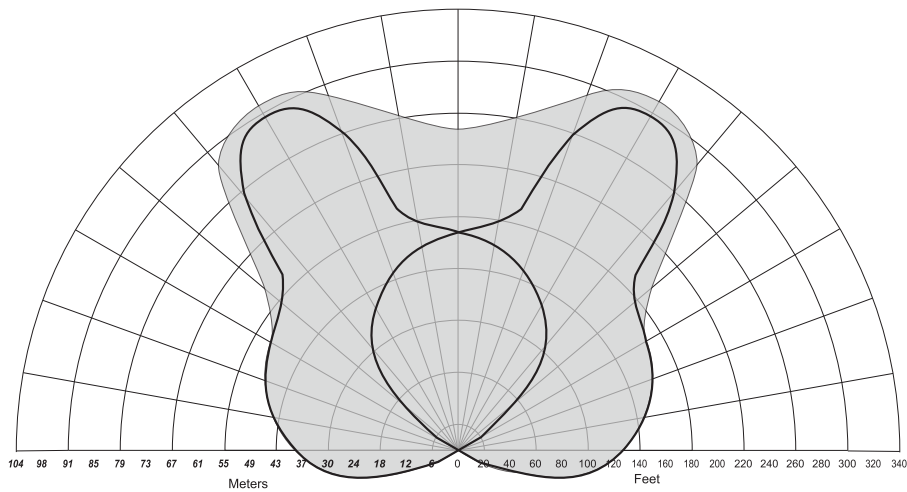



# Designing a System

Use the following steps when designing an IR system:


1. Determine the number of audio channels that will be used (1 or 2).
2. Determine the room size and shape.
3. Use the room size and shape information along with the appropriate 1 or 2 channel coverage pattern footprint to overlay the footprint on the room dimensions and determine the number of units required and the placement of those units to cover the desired listening audience.

Best performance is achieved:


- When radiators face and have direct line-of-sight to audience.
- When a system provides over-lapping coverage (like a sprinkling system).
- When special coverage is provided for shaded areas like under a balcony.
- When mounted above and angled down into the listening audience  
9 – 16 ft. (2.8 - 4.9 m) high and at an angle between 10 and 30 degrees.

*Examples below are provided for design concept only and do not represent the actual LT-84 coverage pattern "footprint".*


**Direct Line-Of-Sight Coverage**

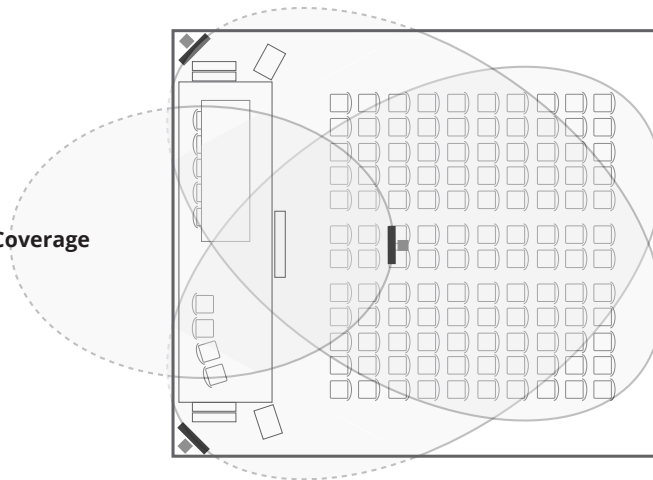

**Over-Lapping Coverage**

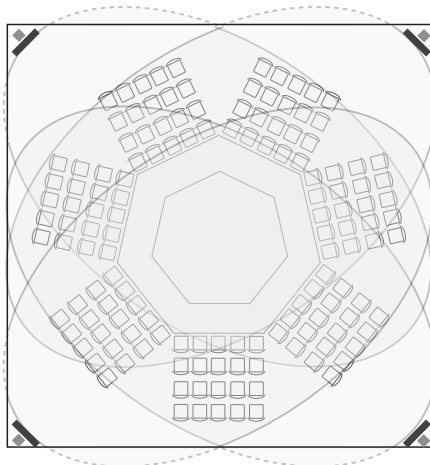

**Shaded Balcony Area**

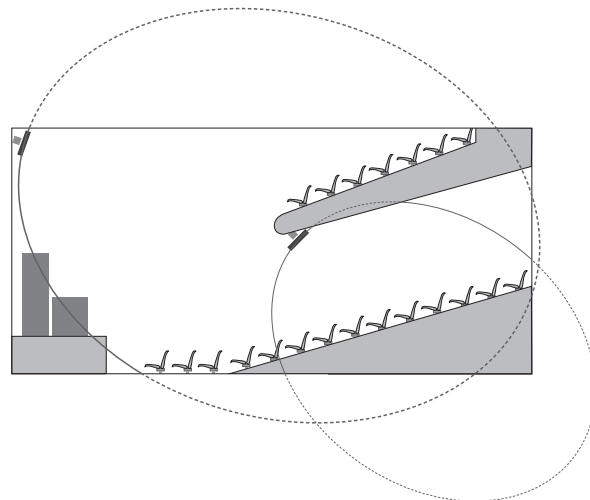


# Flexible Mounting Hardware Instructions

## LT-84 & LA-141 Universal Mounting Hardware Kit


A universal mounting kit is supplied to simplify the mounting process for the LT-84 and LA-141. This kit contains the components for mounting to a flat surface wall or ceiling, attaching to a drop ceiling grid T bar or connecting units together. Please refer to the diagram below.

### Mounting Hardware Pieces

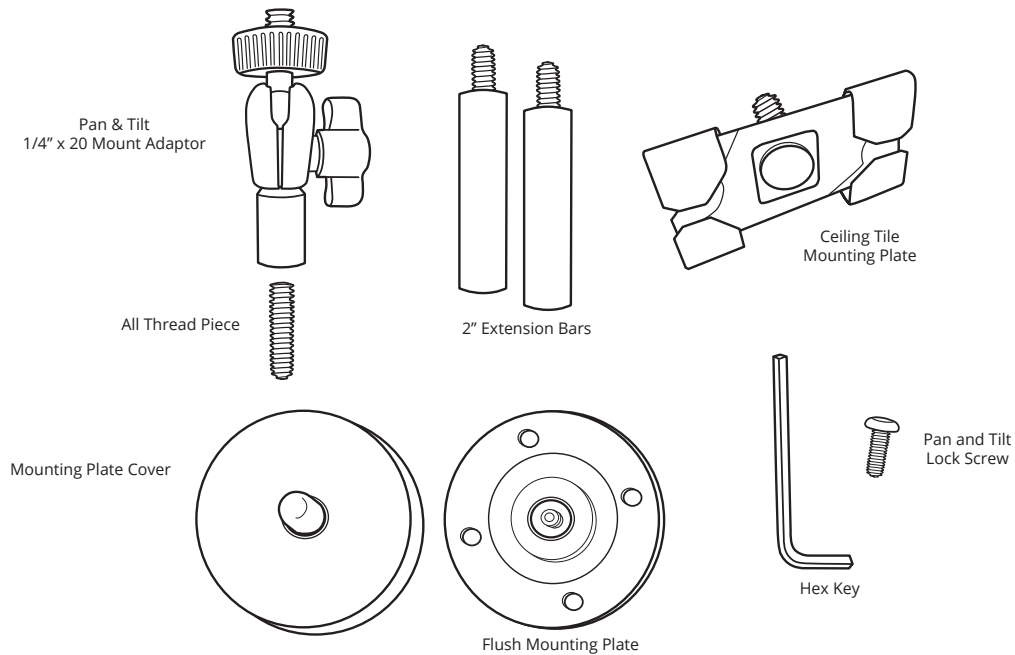


## Threaded Mounting Socket 1/4" x 20 (6mm x 1.0 thread)

The LT-84/LA-141 have a 1/4" x 20 thread (6mm x 1.0 thread) hole located in the bottom and top of the enclosure. This threaded hole is used to attach the units to the provided universal mounting kit or to any user provided mounting device using a 1/4" x 20 thread (6mm x 1.0 thread). Refer to the diagrams below of ceiling and wall mounting using the universal kit provided.

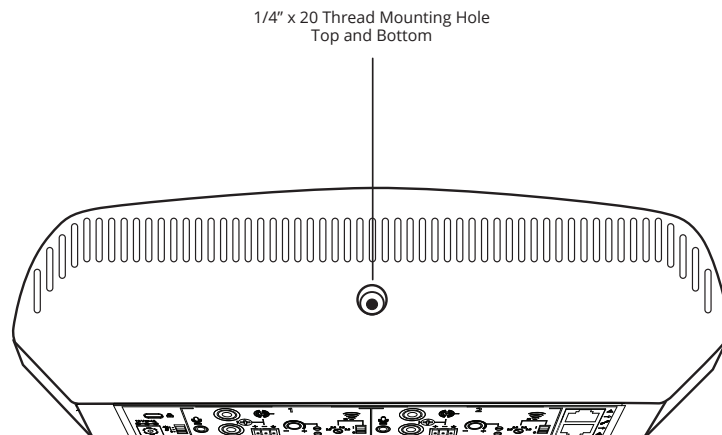


# Wall Surface Mounting Example

Wall Mount

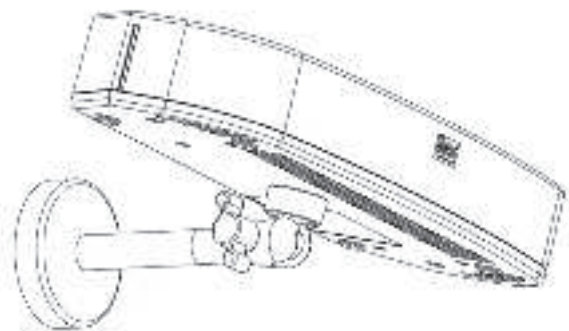


# Ceiling Surface Mounting Example

Ceiling Mount

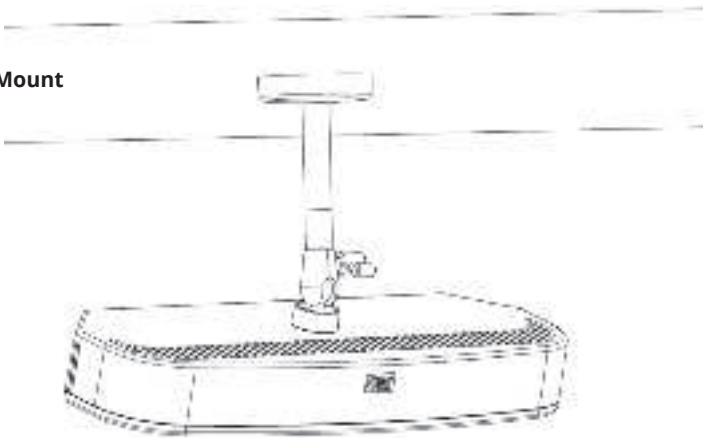


Solid ceiling surface or T bar mounting


# Mounting Two Units with Linking Mount Example

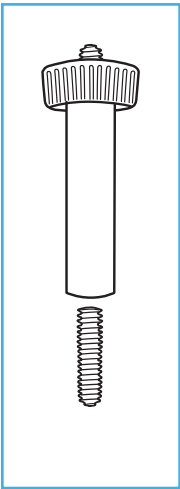

or

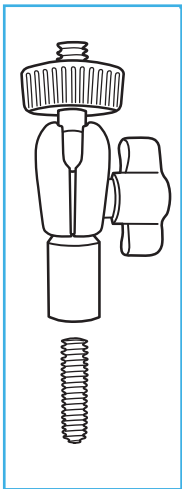


Linking Mount

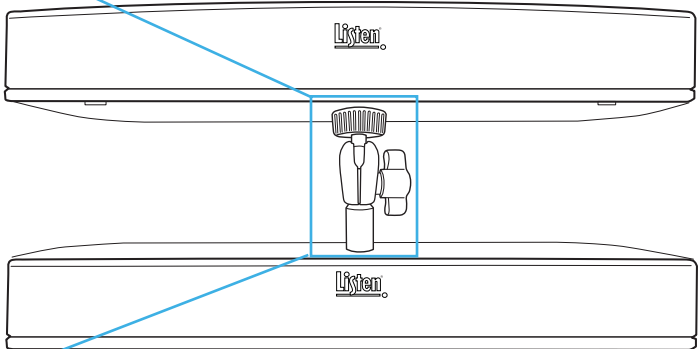


## Interconnection and Control

The LT-84 is a two (2) channel IR Transmitter/Radiator. Separate input and control sections are located on the rear panel of the LT-84 to accommodate the two (2) channel transmission. Refer to the diagram below for location of these two separate channel control areas, power input, and expansion link output RJ-45s.

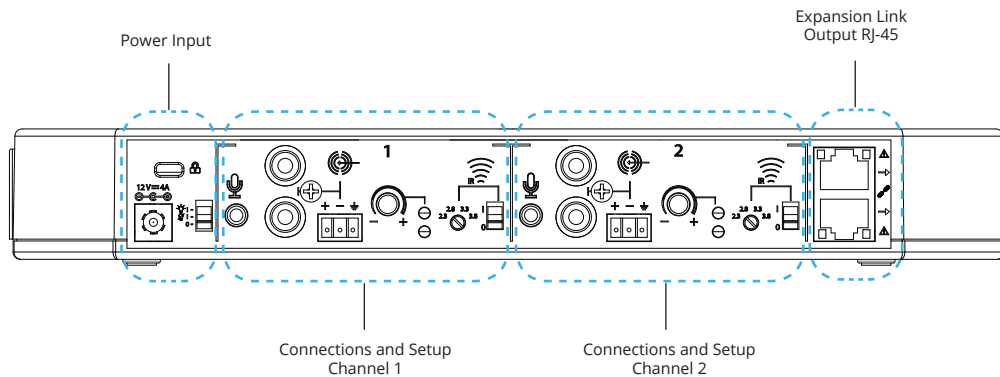

### Connection of the external power adaptor


Power for the LT-84 is provided by a 12 VDC 4A universal switching power supply. The diagram below highlights the connection point for power and the associated power switch.

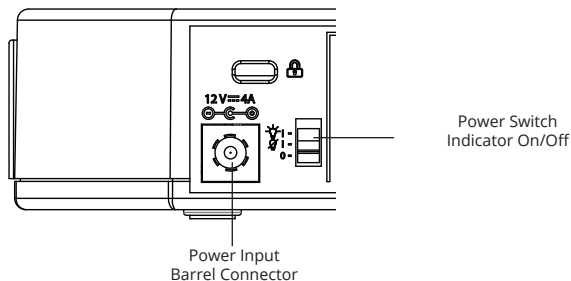

1. The supplied power adaptor is an in line universal switching power supply that can be used with an AC power source from 100 – 240 VAC, 50/60Hz. The overall length of the line cord and DC power cable is 10 ft. (3 m). Note that if the LT-84 is located further than 10 ft. (3 m) from the nearest AC outlet, provisions will need to be made for extending the power.
2. The Power Switch ON/OFF control is a three (3) position switch located to the right of the power input connector.
  - a. In the “top” position the unit is turned ON and the indicator lights are active.
  - b. In the “middle” position the unit is turned ON and the indicator lights are **NOT** active.
  - c. In the “bottom” position the LT-84 and LA-141 are OFF.

## Connection of External Audio Sources

Each channel has the option for three (3) audio connections. The interconnection and control of each channel is identical. We will refer to the interconnection and control of channel 1 only. Refer to the diagram below for connection of audio sources.

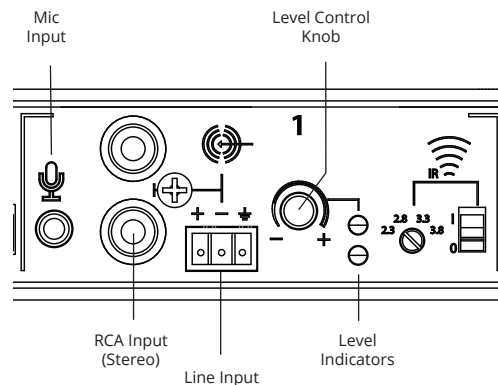


View of Channel 1 audio interconnections and control

1. The left side of the channel interconnection is a 3.5mm tip sleeve condenser microphone level input. This is a -30 dBu nominal microphone level input with a 5 VDC bias supply. Any of Listen's microphones may be connected to this input. Note that a 3.5mm extension cable will most likely be required when using the microphone input.
2. RCA unbalanced stereo audio input is provided through two phono connectors. These are a -10 dBu nominal level unbalanced input and the two inputs are summed together.
3. A balanced audio input is provided through the three (3) pin Phoenix type connector. This is a +4 dBu nominal level balanced input.
4. To the right of the balanced input is the audio input level adjustment control. This control rotates clockwise to increase the audio level, counter clockwise to decrease the audio level. From the factory this adjustment is set fully counter-clockwise.
5. A red and green LED located to the right of the level adjustment is used to determine the proper level adjustment. With a typical audio source connected adjust the audio level adjustment up or down until the green LED is solid green and the red LED flickers red occasionally with peaks in the audio.

**Note:** LT-84 will enter Power Save Mode after 15 minutes of no audio. This state is indicated by the Green LED (Power indicator) on the expansion link output RJ-45 flashing slowly.

## IR Frequency Selection/Control

The LT-84 provides the ability for the user to select the IR carrier frequency to be used for transmission of the audio connected to the channel input. The carrier frequencies are at 2.3MHz, 2.8MHz, 3.3MHz, and 3.8MHz. Refer to the diagram below for selection and control of the IR carrier.

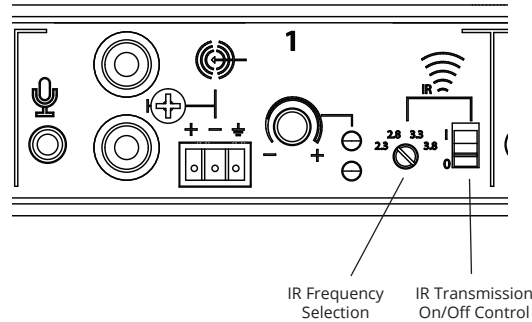


1. Located on the right side of the channel interconnection and control is the IR frequency selection. This is a four (4) position rotary selection switch. With the switch rotated to the counter clockwise stop, the IR frequency is set to 2.3MHz. Position 2 is 2.8MHz, position 3 is 3.3 MHz, and position 4 is 3.8MHz.
2. The IR Transmission On/Off switch is used to activate the IR signal transmission for this channel. In the “up” position the IR signal is active. In the “down” position the IR signal for this channel is **NOT** active.

**Note:** If both channels are active and set to the same frequency the LT-84 will indicate an error state and enter Power Save Mode. Power save mode is indicated by the Green Power Indicator LEDs flashing slowly. The error mode is indicated by 4 quick flashes on the Red Level Indicator LEDs and then turning off for 2 seconds, repeated until the error is resolved.

# Listen IR Expansion Link RJ-45 Connections

The coverage area of the LT-84 can be extended by adding up to four (4) LA-141 Expansion Radiators. A maximum of two (2) LA-141s can be connected to each Expansion Link output RJ-45 on the LT-84 with a maximum daisy chained CAT-5e cable length of 100 ft. (30.5 m). **CAT-5e cable must be at least 24 AWG!** Refer to the diagram below.

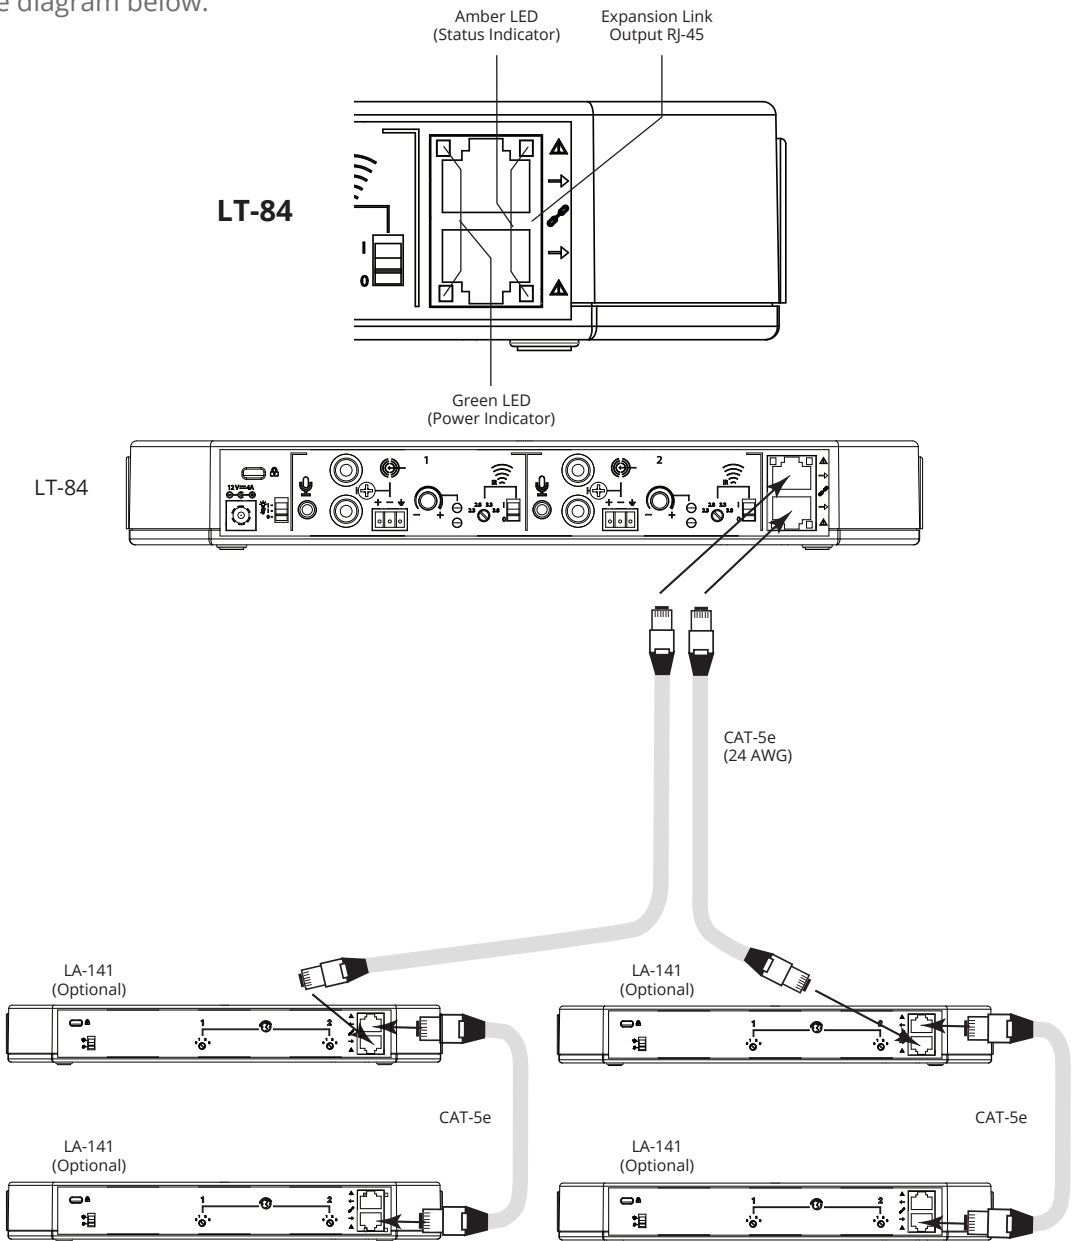

Set Delay Compensation. For a single channel application, set both Channel 1 and 2 Delay Compensation switches to the same setting. For a two channel application, set Delay Compensation switches channel 1 and 2 independently. Pick appropriate frequency row then move over to the overall cable distance from the LT-84 to the LA-141 being set, this is the switch setting.

Delay Compensation Switch Setting					
Cable Length	1 to 9 ft. 0.3 to 2.8 m	10 to 19 ft. 3 to 5.8 m	20 to 29 ft. 6 to 8.8 m	30 to 39 ft. 9.1 to 11.9 m	40 to 49 ft. 12.2 to 14.9 m
2.3 MHz	0	3	3	3	3
2.8 MHz	3	3	3	3	3
3.3 MHz	3	3	2	2	2
3.8 MHz	2	2	2	2	2
Cable Length	50 to 59 ft. 15.2 to 18 m	60 to 69 ft. 18.3 to 21 m	70 to 79 ft. 21.3 to 24 m	80 to 89 ft. 24.4 to 27.1 m	90 to 100 ft. 27.4 to 30.5 m
2.3 MHz	3	3	3	3	3
2.8 MHz	2	2	2	2	2
3.3 MHz	2	2	1	1	1
3.8 MHz	1	1	1	1	0


## Indicator Lights

### Input Level indicators Channel 1 and Channel 2:

Green LED Off and Red LED Off – Low or no audio present, power switch is off or in the indicator lights off position

Green LED solid and Red LED flashing – Audio is present and adjusted properly on the input

Green LED Off and Red LED Ch1 and Ch2 flashing quickly 4 times with a 2 second off state, repeated – Frequency selectors are set to the same frequency and transmission switch is active on both channels (error state)

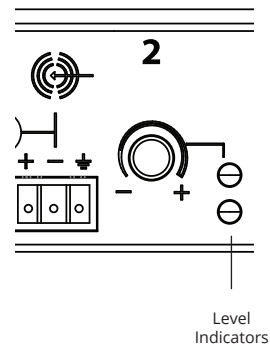

### LT-84 RJ-45 Green and Amber LED Indicators:


Green LED OFF – Power switch is Off or in the indicator lights Off position, bad power supply or not connect to AC power outlet

Green LED solid – Power is applied to the unit

Green LED flashing – Unit has entered Power Save Mode

Amber LED Off – No Carrier present or problem with IR LEDs

Amber LED solid – Carrier is present and unit is actively transmitting IR

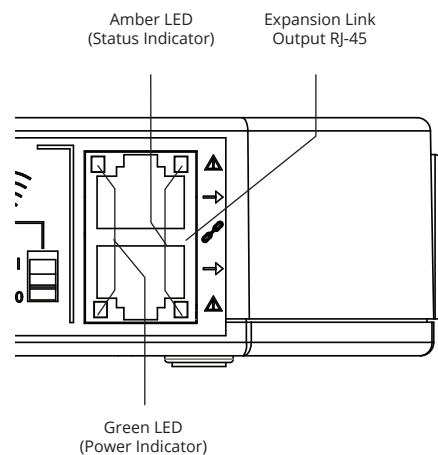


### LA-141 RJ-45 Green and Amber LED Indicators:

Green LED OFF – LT-84 power switch is Off, LT-84 has entered Power Save Mode, LA-141 indicator lights switch in Off position, bad CAT-5e cable or cable is too long

Green LED solid – Power is applied to the unit

Amber LED Off – No Carrier present, bad CAT-5e cable or cable is too long, problem with IR LEDs

Amber LED solid – Carrier is present and unit is actively transmitting IR

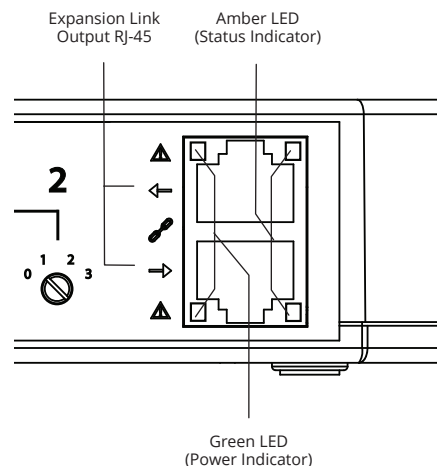



# Troubleshooting

## The LT-84 Green LED “Power Indicators” are not lit:

- Make sure the power supply is plugged into the LT-84 and plugged into an AC outlet.
- Make sure the electrical outlet is on or if using a power strip make sure it is turned on.
- Make sure the Power Switch is set to the Indicators Lights “On” position.
- Make sure the 12 VDC in-line switching power supply is lit green and that it is working.

## The LT-84’s Ch1 or Ch2 Audio “level Indicators” do not light:

- Make sure the LT-84 is plugged in.
- Make sure the Power Switch is set to the Indicator Lights “On” position.
- Make sure the audio source is active and that audio is presented to the audio input.
- Make sure the audio input is connected properly and that the level control knob is turned clockwise.

## Receivers do not pick up audio:

- Make sure the LT-84 has not entered Power Save Mode due to no active audio for 15 minutes.
- Make sure the audio source is playing and plugged into the LT-84 properly.
- Make sure the green level indicator is solid green and the red level indicator occasionally flashes red with audio peaks.
- Make sure the receivers are operating on the same channel / frequency as the LT-84.
- Make sure the LT-84 is transmitting IR light and that the IR light is not being blocked by objects.
- If some of the receivers work but others do not, check the battery and/or earphones.

## Receiver’s audio is weak and noisy:

- Make sure the green level indicator is solid green and the red level indicator occasionally flashes red with audio peaks.
- Make sure LA-141s are connected properly and that the power and status indicator LEDs are lit solid.
- Make sure the LT-84 and LA-141’s IR light is focused towards the listening audience.
- Make sure the receiver is directed towards the LT-84 and LA-141s.
- Make sure that all units are transmitting IR light and that the IR light is not being blocked by objects.
- Add more LA-141s to increase the overall coverage.

# LT-84 Specifications

LT-84 Stationary IR Transmitter/Radiator Combo		
<b>Power</b>	Power Supply Type	In-line switching supply, Listen part number LA-210
	Power Supply Input	100-240 VAC, 50-60 Hz
	Power Supply Output	12 VDC, 4A, 48W, center positive, 2.5 mm ID barrel connector
	Power Line Cord	North America Type B (LT-84-01), Asia and UK Type G (LT-84-02), Euro Type J (LT-84-03)
<b>RF</b>	Carrier Frequencies	2.3 MHz, 2.8 MHz, 3.3 MHz, 3.8 MHz, selectable
	Number of Channels	Two (2) Channels
	Modulation	FM Wideband, $\pm 50\text{kHz}$ deviation max, 50 $\mu\text{s}$ pre-emphasis
	IR Power	1.49 W
	Coverage Area	30,000 ft <sup>2</sup> (2787 m <sup>2</sup> ) single channel with LR-4200-IR/LR-5200-IR receivers or 7,500 ft <sup>2</sup> (697 m <sup>2</sup> ) with LR-42/LR-44 receivers.
	Expansion Link Output	Two (2) RJ-45 connectors, CAT-5e cable 24 AWG, 100 ft. maximum cable length, two (2) LA-141s per output connector
	Power Save Mode	Shuts off carrier when no audio is present for 15 minutes
<b>Controls</b>	Power Switch - Indicator Lights On/Off	Three (3) position switch - Power OFF, Power ON-Indicator Lights OFF, Power ON-Indicator Lights ON
	Level Control Knob	Audio taper rotary potentiometer, counter-clockwise decreases input mix level, clockwise increases input mix level
	Frequency Selector	Four (4) position rotary switch (2.3 MHz, 2.8 MHz, 3.3 MHz, 3.8 MHz)
	Transmission ON/OFF	Two (2) position switch (transmission OFF, transmission ON)
<b>Indicators</b>	Power Supply LED	Green LED on in-line power supply indicates AC power is applied
	Audio Level Indicators	Green LED indicates Audio presence and Red LED indicates peaks in the audio
	Green LEDs - Power Indicator RJ-45	Solid Green indicates power is applied to unit, flashing indicates unit has entered power save mode
	Amber LEDs - Status Indicator RJ-45	Solid Amber indicates carrier is present and IR is being transmitted
<b>Audio</b>	Microphone Input	3.5 mm (0.14in.) Tip/Sleeve connector, -30 dBu nominal input, +14 dB headroom, impedance 4.4k Ohms, 5 VDC bias supply
	Line Input	Stereo/Mono Input. Two (2) RCA Phono connectors, unbalanced, -10 dBu nominal input, +14 dB headroom, impedance 10k
	Line Input	Mono Input. Phoenix Type connector, balanced, +4 dBu nominal input, +14 dB headroom, impedance 100k
	Frequency Response	20 Hz - 20 kHz (+/- 1 dB) Line Input 63 Hz - 15 kHz (+/- 3 dB) System Specification (wireless end-to-end with LR-44)
	Total Harmonic Distortion	<0.1% (THD) Line Input <2% (THD) System Specification (wireless end-to-end with LR-44)
	Signal-to-Noise Ratio	>70 dB (SNR) Line Input >60 dB (SNR) System Specification (wireless end-to-end with LR-44)
<b>Physical</b>	Color	Black
	Dimensions (H x W x D)	1.5 x 10.7 x 4.1 in. (3.81 x 27.2 x 10.5 cm)
	Weight	0.8 lbs. (0.4 kg)
	Unit Weight with Power Supply	1.4 lbs. (0.7 kg)
	Shipping Weight	3.4 lbs. (1.54 kg)
<b>Environmental</b>	Temperature - Operation	14 °F (-10 °C) to +104 °F (40 °C)
	Temperature - Storage	-4 °F (-20 °C) to +122 °F (50 °C)
	Relative Humidity	0 to 95% relative humidity, non-condensing
<b>Compliance</b>	Standards	FCC Part 15, Industry Canada, CE, RoHS, WEEE, CUL

# LA-141 Specifications

LA-141 Listen IR Expansion Radiator		
<b>Power</b>	Power Supply	12 VDC, provided via LT-84 Expansion Link Output RJ-45s
	Current Draw	600 mA per LA-141, maximum of two (2) LA-141s daisy chained with CAT-5e cable 24 AWG to each LT-84 Expansion Link Output
<b>RF</b>	Carrier Frequencies	2.3 MHz, 2.8 MHz, 3.3 MHz, 3.8 MHz
	Number of Channels	Two (2) Channels
	Modulation	FM Wideband, $\pm 50\text{kHz}$ deviation max, 50 $\mu\text{S}$ pre-emphasis
	IR Power	1.49 W
	Coverage Area	30,000 ft <sup>2</sup> (2787 m <sup>2</sup> ) single channel with LR-4200-IR/LR-5200-IR receivers or 7,500 ft <sup>2</sup> (697 m <sup>2</sup> ) with LR-42/LR-44 receivers.
	Expansion Link In/Out	Two (2) RJ-45 connectors, CAT-5e cable 24 AWG, daisy chain of 100 ft. maximum cable length
	Power Save Mode	Shuts off carrier when no audio is present for 15 minutes
<b>Controls</b>	Indicator Lights On/Off Switch	Two (2) position switch - Indicator Lights OFF, Indicator Lights ON
<b>Indicators</b>	Green LEDs - Power Indicator RJ-45	Solid Green indicates power is applied to unit
	Amber LEDs - Status Indicator RJ-45	Solid Amber indicates carrier is present and IR is being transmitted
<b>Physical</b>	Color	Black
	Dimensions (H x W x D)	1.5 x 10.7 x 3.9 in. (3.81 x 27.2 x 10.5 cm)
	Weight	0.6 lbs. (0.28 kg)
	Shipping Weight	3.0 lbs. (1.4 kg)
<b>Environmental</b>	Temperature - Operation	14 °F (-10 °C) to +104 °F (40 °C)
	Temperature - Storage	-4 °F (-20 °C) to +122 °F (50 °C)
	Relative Humidity	0 to 95% relative humidity, non-condensing
<b>Compliance</b>	Standards	FCC Part 15, Industry Canada, CE, RoHS, WEEE, CUL

## Warranty Information

Listen Technologies Corporation (Listen) warrants its transmitters and receivers (LT-82, LT-700, LT-800, LT-803, LR-100, LR-42, LR-44, LR-200, LR-300, LR-400, LR-500, LR-4200, LR-5200) to be free from defects in workmanship and material under normal use and conditions for the useful lifetime of the product from date of purchase.

Listen warrants its Listen IR Radiators (LA-140, LT-84, LA-141) to be free from defects in workmanship and material under normal use and conditions for three years from the date of purchase.

Listen warrants its Digital IR products (T8, T16, RAD25, R8, R32) to be free from defects in workmanship and material under normal use and conditions for two years from the date of purchase.

Listen warrants its Noise Canceling Microphone (LA-270) to be free from defects in workmanship and material under normal use and conditions for one year from date of purchase.

Listen warrants its Charging/Carrying Cases (LA-306, LA-311, LA-313, LA-317, LA-318, LA-319, LA-320, LA-321, LA-322, LA-323, LA-324, LA-325, LA-380, LA-381) to be free from defects in workmanship and material under normal use and conditions for one year from date of purchase.

All other products and accessories are warranted for 90 days from date of purchase.

This warranty is only available to the original end purchaser of the product and cannot be transferred.

Warranty is only valid if warranty card has been returned within 90 days of purchase. This warranty is void if damage occurred because of misuse or if the product has been repaired or modified by anyone other than a factory authorized service technician. Warranty does not cover normal wear and tear on the product or any other physical damage unless the damage was the result of a manufacturing defect. Listen is not liable for consequential damages due to any failure of equipment to perform as intended.

Listen shall bear no responsibility or obligation with respect to the manner of use of any equipment sold by it. Listen specifically disclaims and negates any warranty of merchantability or fitness of use of such equipment including, without limitation, any warranty that the use of such equipment for any purpose will comply with applicable laws and regulations. The terms of the warranty are governed by the laws of the state of Utah.

In the first ninety days after purchase, any defective product will be replaced with a new unit. After ninety days, Listen will at its own discretion either repair or replace transmitters and receivers with a new unit or a unit of similar type and condition. Product that is not covered under warranty shall be repaired or replaced with a unit of similar type and condition based on a flat fee. Contact Listen for details.

This limited warranty, prices, and the specifications of products are subject to change without notice.

## Technical Support Contact

If technical service is needed, please contact Listen. Pre-authorization is required before returning Listen products. If products were damaged in shipment, please contact the carrier, then contact Listen for replacement or repair requirements payable by the carrier.

Listen's corporate headquarters are located in Bluffdale, Utah U.S.A. and are open Monday through Friday, 8am to 5pm Mountain Time.

LISTEN TECHNOLOGIES  
14912 Heritage Crest Way  
Bluffdale, Utah 84065-4818  
+1.801.233.8992  
+1.800.330.0891 North America  
+1.801.233.8995 Fax  
support@listentech.com  
www.listentech.com

# Notes



14912 Heritage Crest Way  
Bluffdale, Utah 84065-4818  
+1.801.233.8992  
+1.800.330.0891 North America  
+1.801.233.8995 Fax  
support@listentech.com  
www.listentech.com

© 2017 Listen Technologies Corporation® All Rights Reserved

Patented technology (pat. 9,712,246)

For further details regarding use, adjustment, or programming of your Listen products visit our website at  
[www.listentech.com/support-manuals](http://www.listentech.com/support-manuals) or contact Listen at +1.801.233.8992 or 1.800.330.0891.

20171106