


## XBA-KWD4 Option Switch Settings

Supported bill KWD 0.25, 0.5, 1, 5 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject KWD 0.25	ON							
★	Accept KWD 0.25	OFF							
★	Reject KWD 0.5		ON						
★	Accept KWD 0.5		OFF						
★	Reject KWD 1			ON					
★	Accept KWD 1			OFF					
★	Reject KWD 5				ON				
★	Accept KWD 5				OFF				
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

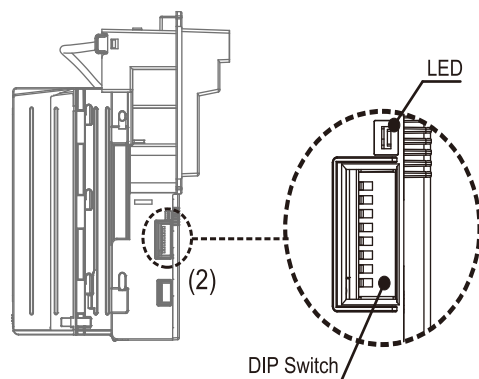


## Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
Bill value				
BV1	KWD 0.25	KWD 0.25	KWD 0.25	KWD 0.25
BV2	KWD 0.5	KWD 0.5	KWD 0.5	KWD 0.5
BV3	KWD 1	KWD 1	KWD 1	KWD 1
BV4	KWD 5	KWD 5	KWD 5	KWD 5

## XBA-KWD4 (Pulse/MDB/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved		ON							
	Reserved		OFF							
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer					ON
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1000 Decimal Point Position (DPP) = 3			Connect with ICT JPSTD converter board		OFF			
	Pulse Mode						ON			
★	Other Mode						OFF			
	Pulse Mode	Other Mode								
	1 pulse / KWD 0.25	MDB Mode						OFF	OFF	
	2 pulses / KWD 0.25	Reserved						OFF	ON	
★	4 pulses / KWD 0.25	ICT104U Mode						ON	OFF	
	20 pulses / KWD 0.25	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

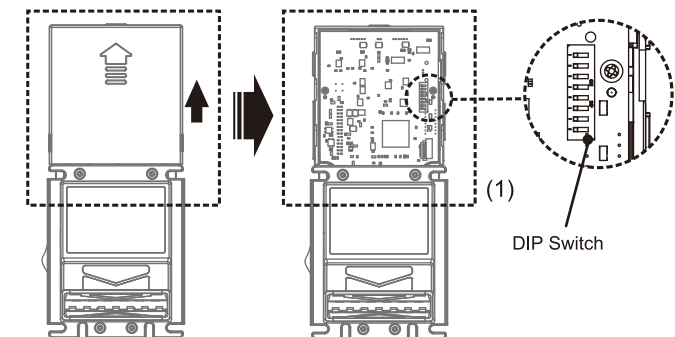

### ★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Please reset the bill acceptor after set the dip switch.

2. Dip switches 1 to 5 are only used for pulse protocol.

3. Calibration card is needed.