

SONY

MDR-RF912RKC

Wireless Stereo
Headphone System

It's important to read this instruction book prior to using your new product for the first time.

804109156

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not expose the battery pack or batteries installed in the device to direct sunlight for a long time.

To avoid electric shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a backpack or built-in cabinet.

The AC Adaptor is not to be connected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

As the main plug of AC power adaptor is used to disconnect the AC power adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

Excessive sound pressure from earphones and headphones can cause hearing loss.

The nameplate of transmitter is located on the bottom exterior.

Information

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or a qualified electrician for help.

For the customers in the USA and Canada

RECYCLING NICKEL METAL HYDRIDE BATTERIES

Nickel Metal Hydride batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, or visit <http://www.call2recycle.org>

Caution:

Do not handle damaged or leaking Nickel Metal Hydride batteries.



Checking the included items



Using the headphones with separately-sold dry batteries

Commonly available 1.5V (size AAA) dry batteries can also be used to power the headphones. Install two batteries in the same manner as described in step 1 of "How to use."

When dry batteries are installed, the battery charge function is not activated.

Battery life

Battery	Approx. usage time ¹
Sony alkaline battery LR60 (size AAA)	26 hours ²

¹ At 1 kHz, 1 mW = 1 mW output

² Time may vary, depending on the temperature or conditions of use.

How to use

1 Insert the supplied rechargeable battery into the left housing of the headphones.

Remove the front battery with the following battery.




Remove the front battery with the following battery.

Insert the battery into the battery compartment.




2 Connect the AC adaptor.

Insert the plug firmly.

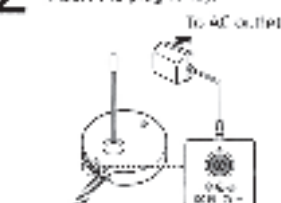


3 Charge the headphones.

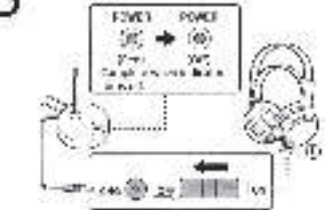

4 Connect the A/V component, following hookup A or B below.

A Using the headphone jack of the A/V component
See diagram A of the A/V component for the connection. Make sure the connection is correct and secure.

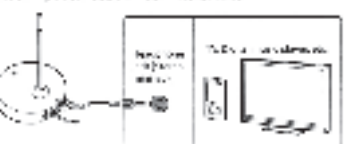

B Using the audio out (L/R) jacks of the A/V component

Use a plug adaptor for each ear because the connector and the A/V component.




1. Connect the audio out (L/R) jacks of the A/V component to the audio in (L/R) jacks of the headphones.

2. Connect the audio out (L/R) jacks of the A/V component to the audio in (L/R) jacks of the headphones.

5 Wear the headphones. Before listening

Turn on the power of the transmitter.

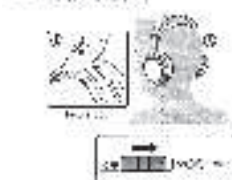

6 Turn on the A/V component.




7 Adjust the volume.



If you cannot receive a clear audio signal

1. Turn on the transmitter and the A/V component. 2. Turn on the receiver. 3. Turn on the headphones. 4. Turn on the transmitter. 5. Turn on the headphones.

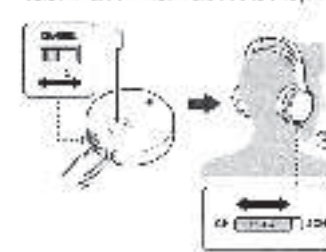

After use

Take off the headphones, then turn off the power.

About sending RF signals

The transmitter starts sending RF signals automatically when it detects an audio signal from the connected component.

Notes

- If hiss is heard, move closer to the transmitter.
- You may hear some noise when you disconnect the AC adaptor from the transmitter before turn off the headphones.

If no signal or low signal is input for about 4 minutes

If the transmitter does not detect an audio signal for about 4 minutes, it will stop sending RF signals automatically, and the POWER indicator will blink for 1 minute then turn off. The transmitter restarts after receiving an audio signal again.

The transmitter may also turn off if low signal is input for about 4 minutes. In this case, raise the volume of the connected A/V component within the range where the sound is not distorted, then lower the volume of the headphones.

* If signal noise is output from the connected A/V component, the transmitter may not turn off, even when no audio signal is input.

Set the ATT (attenuator) switch to 0dB. Then, raise the volume of the connected A/V component within the range where the sound is not distorted, and lower the volume of the headphones.

Tips for volume setting

When watching videos, be careful not to raise the volume too high in quiet scenes. You may hurt your ears when a loud scene is played.

To set the input level

If the volume is high using the analogue input, set the ATT (attenuator) switch to -6 dB.



Setting	Connected components
0dB	A/V component and other components with a low output level (initial settings)
-6 dB	Other components

Notes

- Be sure to lower the volume before setting the ATT switch.
- If audio input is distorted (sometimes, noise can be heard at the same time), set the ATT switch to -6 dB.

Tips for better reception

Receiving performance

This system utilizes very high frequency signals in the SHF (Milli) band so the receiving performance may deteriorate due to the surroundings. The following examples illustrate conditions that may reduce the reception range or cause interference.

- An area colliding with walls containing steel beams.
- An area with many steel file cabinets, etc.
- An area with many electrical appliances capable of generating electromagnetic fields.

The transmitter is placed on a metal instrument.

- An area facing a roadway.
- Noise or interfering signals exist in the surroundings due to radio transceivers in trucks, etc.
- Noise or interfering signals exist in the surroundings owing to wireless communication systems installed along roadways.

Effective area of the transmitter

The optimum distance is up to approximately 45 m (150 ft) without the system picking up some interference. However, the distance may vary depending on the surroundings and environment.

- If the system picks up some noise within the above mentioned distance, reduce the distance between the transmitter and the headphones, or select another channel.

When you use the headphones inside the effective area of the transmitter, the transmitter can be placed in any direction from the listener.

- Even within the signal reception area, there are some spots (dead spots) where the RF signal cannot be received. This characteristic is inherent to RF signals, and does not indicate malfunction. By slightly moving the transmitter, location of the dead spot can be changed.

Replacing the earpads

The earpads are replaceable. If the earpads become dirty or worn out, clean or replace them as illustrated below. The earpads are not commercially available. You can order replacements from the store where you purchased this system, or at a service center.


- Remove the old earpad by pulling it out of the groove on the housing.



- Place the new earpad on the driver unit.

Hang the edge of the earpad on one side of the driver unit's groove edge, then turn the edge of earpad around the driver unit as illustrated below.

When the earpad is securely inserted into the groove, adjust the earpad to the vertical position.

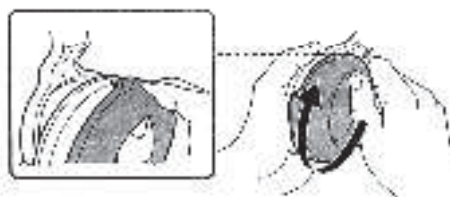

Troubleshooting

If you run into any problems using this system, use the following checklist. Should any problem persist, contact a service center.

No sound/Low sound

- Turn on the headphones.
- Check the connection of the transmitter and A/V component, AC adaptor, and AC outlet.
- Check that the A/V component is turned on. If you connect the transmitter to the headphone jack of an A/V component, raise the volume level on the connected A/V component within the range where the sound is not distorted. Change the radio frequency with the CHANNEL selector on the transmitter, then change the radio frequency to that of the transmitter with the channel switch on the headphones.
- Charge the supplied rechargeable battery, or replace dry batteries with new ones. If the POWER indicator is still off after charging, take the headphones to a service center.

The sound cuts off

- The transmitter turns off if no signal or low signal is input for 4 minutes. If you connect the transmitter to an A/V component using the headphone jack, raise the volume level on the connected A/V component within the range where the sound is not distorted.

Distorted or intermittent sound (sometimes with noise)

- Use the headphones near the transmitter, or change the position of the transmitter.
- If you connect the transmitter to an A/V component using the headphone jack, lower the volume level on the connected A/V component within the range where the sound is not distorted.
- Change the radio frequency with the CHANNEL selector on the transmitter, then change the radio frequency to that of the transmitter with the channel switch on the headphones.
- Charge the supplied rechargeable battery, or replace dry batteries with new ones. If the POWER indicator is still off after charging, take the headphones to a service center.

Loud background noise

- If you connect the transmitter to the headphone jack of an A/V component, raise the volume level on the connected A/V component within the range where the sound is not distorted.
- Charge the supplied rechargeable battery, or replace dry batteries with new ones. If the POWER indicator is still off after charging, take the headphones to a service center. Use the headphones near the transmitter.

Precautions

Notes on the AC adaptor

- Insert the AC adaptor plug firmly.
- Be sure to use the supplied AC adaptor. Using AC adaptors with different plug polarity or other characteristics can cause product failure.



- Be sure to always use the supplied AC adaptor. Even AC adaptors having the same voltage and plug polarity can damage this product due to the current capacity or other factors.

On power sources and placement

When this system is not to be used for a long period of time, disconnect the AC adaptor from the AC outlet, holding the plug, and remove the battery from the headphones to avoid damage caused by battery leakage and subsequent corrosion.

- Do not leave this system in a location subject to direct sunlight, heat or moisture.
- Avoid exposure to temperature extremes, direct sunlight, moisture, salt, dust or mechanical shock.
- Because this product does not have a waterproof specification, do not use it in the rain.

Specifications

General

Channel	FM 87.5-108.0 MHz
Channel	16 channels
Modulation	FM stereo
Transmitting distance	Up to 45 m (150 ft) (free power)

Operating performance

Frequency response	20 Hz - 20,000 Hz
--------------------	-------------------

RF stereo transmitter (TMR-RF912R)

Power source	RF 2x 1.5V (supplied) AC adaptor
Audio input	Stereo mini plug
Antenna type	Antenna (18 cm x 1.8 cm) (detachable) [1.7 m x 1.7 m x 1.7 m] (detachable)
Wave	Antenna (1.7 m x 1.7 m)
Transmitting power	0.1 W

Wireless stereo headphones (MDR-RF912R)

Power source	Supplied rechargeable battery (initial) Inside battery on MDR-RF912R commercially available (size AA), dry cell battery
Wave	Antenna (1.7 m x 1.7 m) (detachable) supplied rechargeable battery (initial) hybrid battery
Rated power consumption	200 mW

Included items

- RF transmitter (TMR-RF912R)
- Wireless stereo headphones (MDR-RF912R)
- AC adaptor (TMR)
- Rechargeable dry cell hybrid battery (RF 1.5V) (1.7 m x 1.7 m x 1.7 m) (detachable)

