



Quick Start Guide
ion4e_T
Access Point

ANYWHERE
EVERYWHERE



2

Introduction

Thank you for purchasing our ion4e_T Access Point. ion4e_T is a cloud-managed 2x2:2 MU-MIMO Wi-Fi 5 certified Access Point that raises the bar for wireless performance and efficiency.

Packaging Content



ion4e_T
Access Point
(Qty:1)



Quick Start Guide
(Qty:1)



Mounting Kit
(Pole Clamp (1), L Plate(1), U Bolt (1),
Hex nut (4), Screws (4))


3

ion4e_T Specifications

Peak Throughput(aggregate)	Upto 1.27 Gbps (867 Mbps for 5 GHz and 400 Mbps for 2.4 GHz)
Wi-Fi Standard Support	802.11a/b/g/n/ac Wave 2
Interface	1 X 10/100/1000 BASE-T Ethernet
Radio Mode	2x2 MU-MIMO with 2 spatial streams
Mesh Support	Self-creating, Self-healing Mesh
Maximum number of SSID (per radio)	16
Maximum User Support	128 on 5 GHz and 64 on 2.4 GHz
Power Supply	IEEE 802.3af PoE
Power Consumption (Max)	12 W (approx.)
Max Transmit Power	23 dBm for 2.4 GHz , 27 dBm for 5 GHz (will depend on country-specific guidelines)
Antenna Type	Option for external antenna
Management	Standalone (via GUI) or through on-premise based solution or cloud-based
Enclosure Dimensions	189 x 170 x 71 mm or 7.44 x 6.69 x 2.79 inches
Weight	0.75 kg
Operating Temperature	-15°C to 60°C
Certifications	FCC Class A, CE, Passpoint 2.0, IP67, RoHS 3.0

4

Product Overview

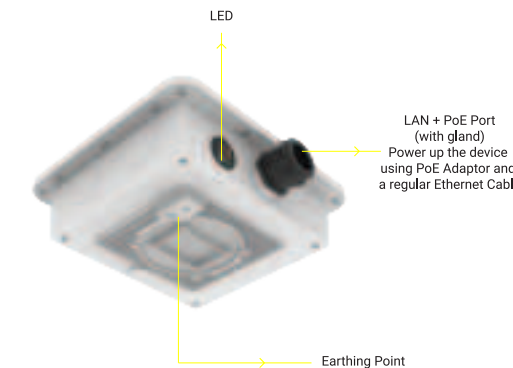

LED

LAN + PoE Port
(with gland)
Power up the device
using PoE Adaptor and
a regular Ethernet Cable


Earthing Point

5


Mounting of ion4e_T Access Point

The ion4e_T can be mounted on a pole or to a wall. Perform the following steps for appropriate installation.

1. Align L Plate with the holes at the back of Access Point
2. Use the provided screws to fix the plate onto the Access Point.
The mounting bracket is fixed onto the mounting holes on the Access Point

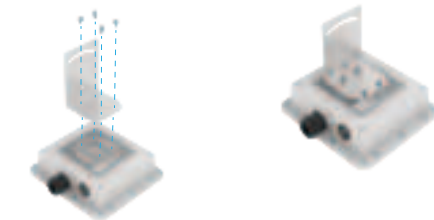

3. Attach omnidirectional antenna on the N Connectors of the Access Point

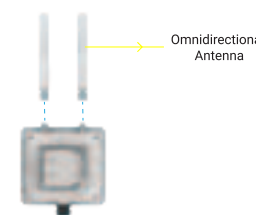


Omnidirectional
Antenna

6

Pole Mount

1. Align the bracket mounted Access Point with pole holder & U-Bolt
2. Pass the U-Bolt through the cuts of pole holder & mounting bracket.
Secure it in place with the screws.

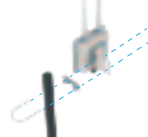

3. Access Point has the freedom of movement along with the vertical & horizontal axis



4. The final alignment of Access Point on a pole mounting as shown below




Note: The pole mounting is designed for poles of diameter 40 mm to 60 mm. For mountings on larger size poles upto 140 mm, contact at iosales@hfcl.com

7

Wall Mount

To mount the ion4e_T on a wall, use the wall mounting bracket, drywall screws, and screw anchors (* The entire wall mounting assembly is sold separately).

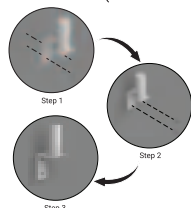


1. Take the reference from the wall mounting bracket and mark the position of the holes on the wall.
2. Use the drill machine to drill 2 holes on respective marked positions.
3. Push the screw anchors into the holes with a hammer.
4. Align the drilled holes with the holes of wall mounting bracket.
5. Insert the drywall screws through the holes of mounting bracket into the wall.
6. Wall mounting bracket is fixed to the wall.
7. Mount the device on to the wall mounting bracket as discussed in pole mounting process.



Getting the ion4e_T Online

Step 1: Power up

The Access Point can be powered up using PoE adaptor (48V) as shown below:

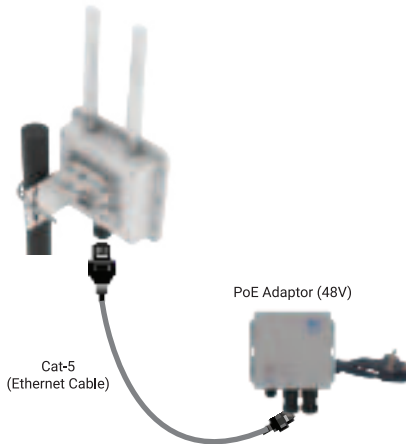

Note: Plug and Adaptor will vary by country/ region

Power up using PoE Adaptor


9

Step 2: Connect to the network

Section 1: Standalone AP


Follow the steps mentioned below and connect the Access Point to a network :

1. Connect an ethernet cable to the computer.
2. Connect the other end of ethernet cable to the data port on PoE adaptor
3. Connect ion4e_T PoE supported ethernet port to PoE adapter power port. Device will be powered on

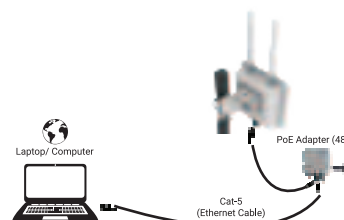

4. Configure the computer with a same domain static IP 192.168.1.X and a subnet mask of 255.255.255.0 (X is from 2 to 255)
5. Open the web browser and enter the Access Point static IP address in the address bar: 192.168.1.1
6. A login screen will appear.
7. Enter the default login credential details:
User- root, Password- hfcl@ion

10

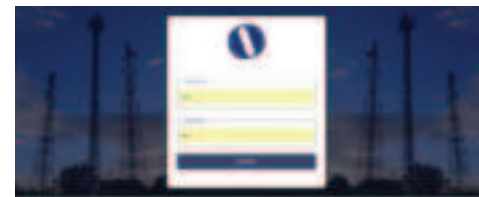

Section 2: Controller Managed AP

Follow the steps mentioned to connect Access Point to a network :

1. Connect an Ethernet cable to the computer.
2. Power-up the AP through PoE adaptor
3. Connect the AP to DHCP network and Internet
4. Login to HFCL IO cloud controller (cNMS) iocloud.hfcl.com with credentials provided.


4a. To get cNMS login credential, please send request email to iosupport@hfcl.com with below details

Customer Name	Customer email address	Customer address	Customer contact number	Distributor/ Retailer Name	No. of AP Purchased	Country
---------------	------------------------	------------------	-------------------------	----------------------------	---------------------	---------

5. Add AP group under configuration
6. Add APs in the AP group
7. Create SSID in the AP group
8. Refer our website io.hfcl.com for detailed information to configure AP through cNMS

11

Step 3: Check the LED status

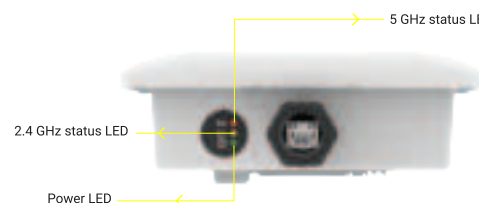

5 GHz status LED

2.4 GHz status LED

Power LED

LED Color	Status
Power LED Green	Green color notifies the user that the device is powered ON
2.4 GHz Status LED	Solid yellow color notifies the user that the 2.4 GHz radio is active and blinks while data is being transmitted on 2.4 GHz radio
5 GHz Status LED	Solid red color notifies the user that the 5 GHz radio is active and blinks while data is being transmitted on 5 GHz radio

12

Safety Precautions

Observe the following safety precautions to avoid damage to the ion4e_T Access Point:

! Do not power the device during installation

! Keep away from high voltage cables

! Do not power off the unit in the middle of an upgrade process

! The gland should be ground facing all the time

! Do not open the enclosure

! Fasten the device tightly

! Make sure the earthing wire is connected properly to the earthing points

13

Part Number: QSG-01-0020
Revision: A



Contact Us:
Email: iosupport@hfcl.com
Website: www.hfcl.com
www.io.hfcl.com
8, Commercial Complex, Masjid Moth,
Greater Kailash-II, New Delhi- 110048

8