



PT0E-0867

Portable Oxygen Monitor
OX-07
(TYPE A)
Operating Manual

RIKEN KEIKI Co., Ltd.

2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan

Phone : +81-3-3966-1113

Fax : +81-3-3558-9110

E-mail : intdept@rikenkeiki.co.jp

Web site : <http://www.rikenkeiki.co.jp/>

Safety information

The Portable Oxygen Monitor Model OX-07 is a monitor designed to provide continuous exposure monitoring of Oxygen(O₂) in hazardous environments.

Specification for safety

• Ex ia II C T4 Ga

•  II 1 G Ex ia II C T4 Ga

• Ambient temperature range for use : -20°C to +50°C

Electrical data

• Powered by two AA size Alkaline batteries,
model LR-6 by Toshiba.

Certificate numbers

• IECEx Certificate number : IECExKEM08.0022
• ATEX Certificate number : KEMA08ATEX0126

List of standards

• IEC 60079-0:2011	• EN60079-0:2012
• IEC 60079-11:2011	• EN60079-11:2012
• IEC 60079-26:2006	• EN60079-26:2007

WARNING

- Do not replace batteries in hazardous location.
- Do not replace O₂ sensor in hazardous location.
- Do not replace Extension Cable in hazardous location.
- Do not attempt to disassemble or alter the instrument.

INST. No.

○	○	○	○	○	○	○	○	○	○
A	B	C				D			E

A: Manufacturing year (0-9)
B: Manufacturing month (1-9, XYZ for Oct.-Dec.)
C: Manufacturing lot
D: Serial number
E: Code of factory



RIKEN KEIKI Co., Ltd.
2-7-6 Azumawa, Itabashi-Ku, Tokyo, 174-8744, Japan
Phone : +81-3-3966-1113
Fax : +81-3-3568-8110/8111
E-mail : intdapt@rikenskeiki.co.jp
Web site : <http://www.rikenskeiki.co.jp>

INTRODUCTION

Using an advanced microprocessor controlled detection system, the OX-07 Oxygen Monitor detects the Oxygen (O₂) content to prevent the accident caused by oxygen deficiency.

This manual is a guide to operation of the OX-07. Reading of this manual is requested not only for first user but also for experienced staff.

This manual contains the following headings to ensure safe and effective operation.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or serious damage to the product.

This signal word is to be limited to the most extreme situation.



Indicates a potentially hazardous situation which, if not avoided, could result serious injury to the human body or object.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or some damage to the human body or objects. It may also be used to alert against unsafe practices.



This means “ADVICE” regarding operation.

Cautions for the safety



WARNING

- Perform gas calibration at proper interval.
- Do not use unspecified batteries.
- Check battery capacity before operation.
- Ensure that sensor is exposed to ambient air. If not, correct detection cannot be performed.
- Do not modify or change the circuit or structure, etc.
- Do not disassemble the sensor since there is an electrolyte inside. If your finger touches the electrolyte, wash your finger with water immediately.
- If the button is pushed randomly, each setting may be changed and alarm may not be activated correctly. Do not operate the button other than as per instructions.
- Do not drop this monitor into fire.
- Do not remodel or alter circuit, structures etc.
- Do not use or store the unit in high temperature, high humidity or high pressurized condition exceeding the operating conditions specified in the specifications. Correct measurement may not be performed.



CAUTION

- Do not push sensor and buzzer window with pointed article.
This may cause defect or damage and correct detection cannot be performed.
- Do not pour water on this monitor or immerse in water.
- Do not give high impact or shock, since this is precision instrument.
- Operating temperature range of this monitor is -20 to +50degreeC. The reading may be affected by the sudden change of temperature if the monitor is used under such conditions.
- Remove the battery if the monitor is not used for a long period.

Cautions relating to explosion proof



WARNING

- Do not remodel or alter circuit/structures.
- Replace batteries in non-hazardous area.
- When using this gas monitor in a hazardous area, take the following countermeasures for preventing dangers resulting from electrostatic charges.
 - ① Wear anti-static clothes and conductive shoes (anti-static work shoes).
 - ② For indoor use, use the gas monitor while standing on a conductive work floor (with a leakage resistance of 10 MΩ or less).
- Do not use this monitor except for the measurement of air and for oxygen content measurement of gas mixtures.

Table of contents

1. DESIGNATION	4
2. PREPARATION	
2-1. Mounting/Replacing the batteries.....	6
2-2. Mounting/Replacing the sensor	7
2-3. Power ON/OFF	8
3. OPERATION	
3-1. Start up procedure	9
3-2. Performing a fresh air adjustment	9
3-3. Changing the display in measuring mode	10
3-4. Wearing the unit	12
4. ALARMS	
4-1. Types and patterns of gas alarm.....	13
4-2. Resetting gas alarms.....	14
4-3. Responding to gas alarms.....	14
4-4. Other alarms.....	15
4-5. Responding to dead battery alarm	15
5. MAINTENANCE AND CHECK	
5-1. Daily check	16
5-2. Air calibration(Fresh air adjustment).....	16
5-3. Replacing batteries	16
5-4. Gas calibration	16
6. SCRAP THE PRODUCT.....	16
7. TROUBLE SHOOTING	17
8. SPECIFICATIONS	
8-1. Specifications	18
8-2. Standard accessories	19
8-3. Optional accessories	20
9. DEFINITION OF TERMS	21
10. DETECTION PRINCIPLE	22

1.DESIGNATION

[Front view]




- | | |
|------------------------|---|
| 1. LCD display : | Indicates gas detection results and various information. |
| 2. Air button : | Adjusts readings when a fresh air adjustment is performed.
Changes a parameter setting when a parameter is available for adjustment in display mode or setup mode. |
| 3. Target gas window : | Window to see the target gas described by the sensor. |
| 4. Alarm light : | Flashes when the unit reaches warning conditions. |
| 5. POWER button : | Turns the unit on and off.
Determines a parameter in setup mode. |
| 6. DISP button : | Enters setup mode.
Changes a parameter setting in setup mode. |
| 7. Buzzer : | Sounds for gas alarms, unit malfunctions and dead battery alarm. |

[Rear view]




[Bottom view]

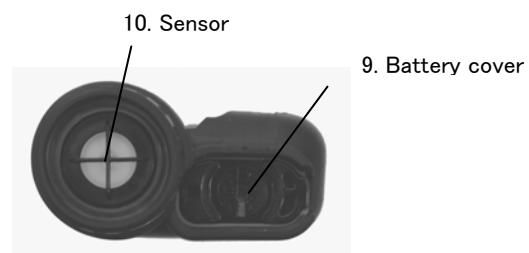

- | | |
|---------------------|--|
| 8. Threaded holes : | These are used to mount the alligator clip or the optional belt clip (Option). |
| 9. Battery cover : | The cover for battery compartment. |
| 10. Sensor : | Oxygen sensor is mounted here. |

[LCD display]

— Measuring mode —

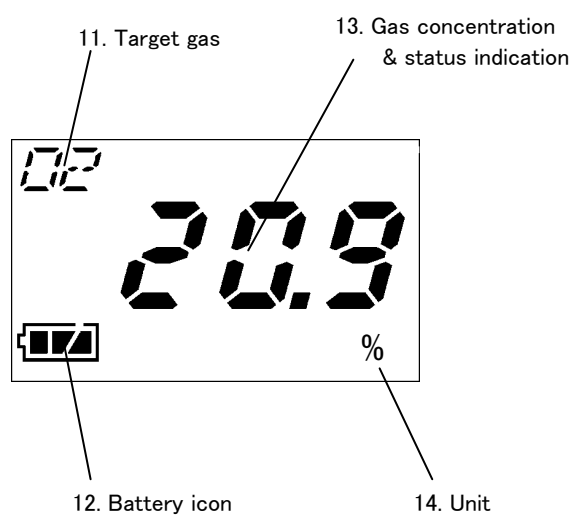


- | | |
|-------------------------|--|
| 11. Target gas : | Displays the name of target gas. |
| 12. Battery icon : | Shows remaining battery life. |
| 13. Gas concentration : | The target gas concentration and the status of this unit is displayed. |
| 14. Unit : | Indicates the unit of gas concentration. |

2. PREPARATION

2-1. Mounting/Replacing the batteries

- 1) Verify that the unit is off.
- 2) Rotate the fastener in the battery cover a quarter turn counterclockwise and lift up the end of the battery cover to remove it. A coin may be used to rotate the fastener.
- 3) Carefully install the new AA alkaline batteries. Follow the battery diaphragm inside the battery compartment.
- 4) Reinstall the battery cover.

[Opening the battery cover]

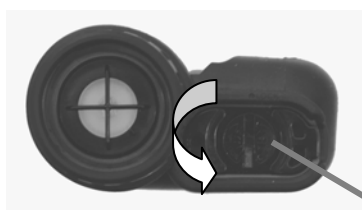


Battery cover

[Direction of battery mounting]



[Closing the battery cover]

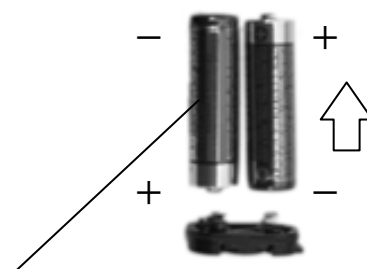

AA size alkaline batteries



WARNING

Do not remove the battery with power on.
Battery replacement shall be done at power off condition.



CAUTION

Take care not to mistake direction of battery polarity.


2-2. Mounting/Replacing the sensor

When replacing the sensor, take care for the following points.




CAUTION

- After replacement of the sensor, be sure to perform the sensor calibration. If not, the reading may be deviated.
- If the unit is not used for a long period, be sure to perform the sensor calibration before use.
- Replace the sensor if you can no longer perform AIR calibration or when the reading is unstable.
- Sensor replacement shall be done at power off condition.

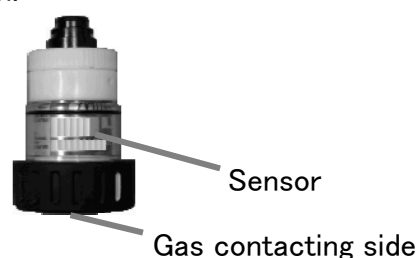

[Replacing the sensor]

- 1) Verify that the unit is off.
- 2) Turn the rubber guard on the sensor retainer counterclockwise until yellow line on the rubber guard will indicate the proper amount of rotation by lining up with a yellow line on the instrument body that indicates “UNLOCK”.
- 3) Pull the sensor retainer away from the instrument body.
- 4) Pull the old sensor out from the sensor retainer.
- 5) Replace the sensor with new one. In this case, match up the concave part of sensor connector with the convex part of sensor mounting.
- 6) Align the yellow line on the sensor retainer's rubber guard with the “UNLOCK” line on the case, insert it deeply and turn the rubber guard to the “LOCK” line.

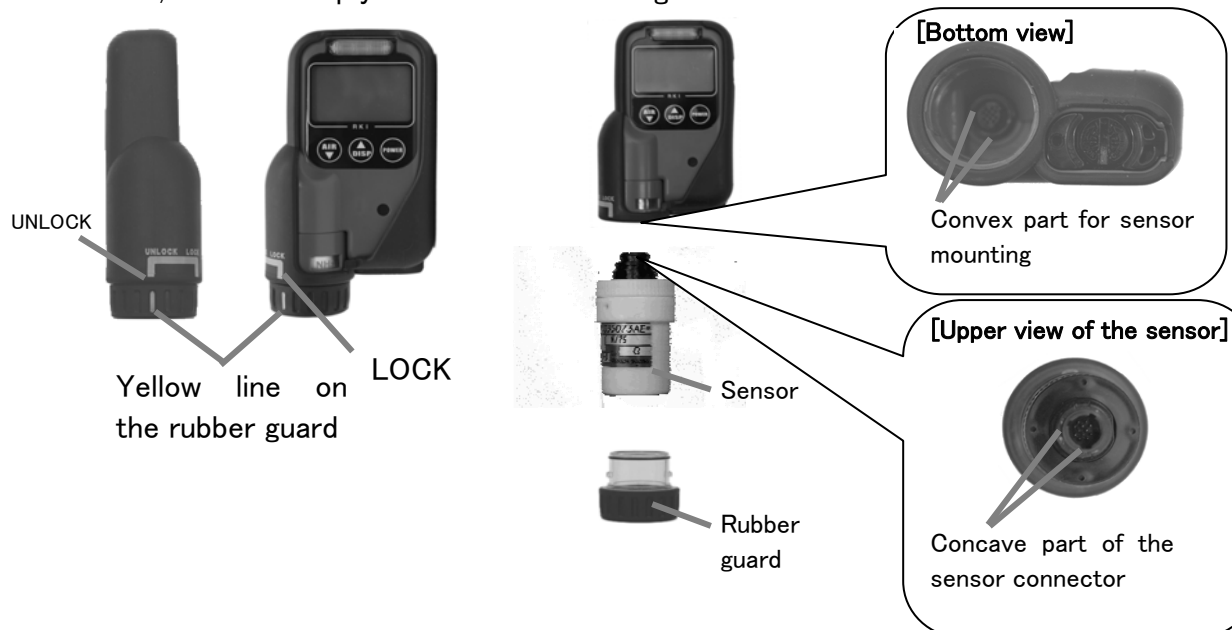

2-3. Power ON/OFF

Press and briefly hold the POWER button for about one second to turn on the OX-07.

* NOTE

Press and hold the POWER button until you hear a beep.



DANGER

Be sure to perform a fresh AIR adjustment before using the OX-07. (See section 3-2)




POWER button

In any mode, the power is turned off by pressing and holding the POWER button for about 3 seconds.

* NOTE

Press and hold the POWER button until the LCD turns off.

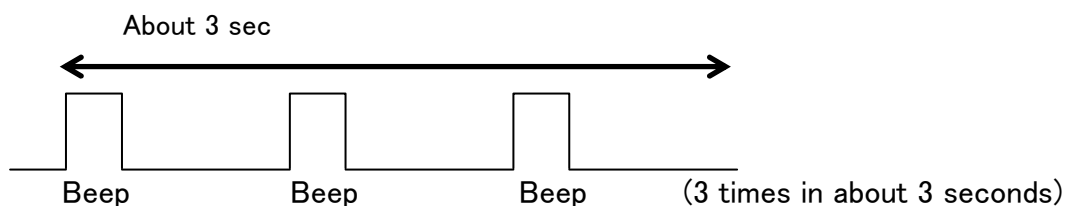


3. OPERATION

3-1. Start-up procedure

When the OX-07 is turned on, it enters measuring mode automatically. The concentration of the target gas is displayed on the LCD.

<<Start-up Procedure>>(About 15 seconds)

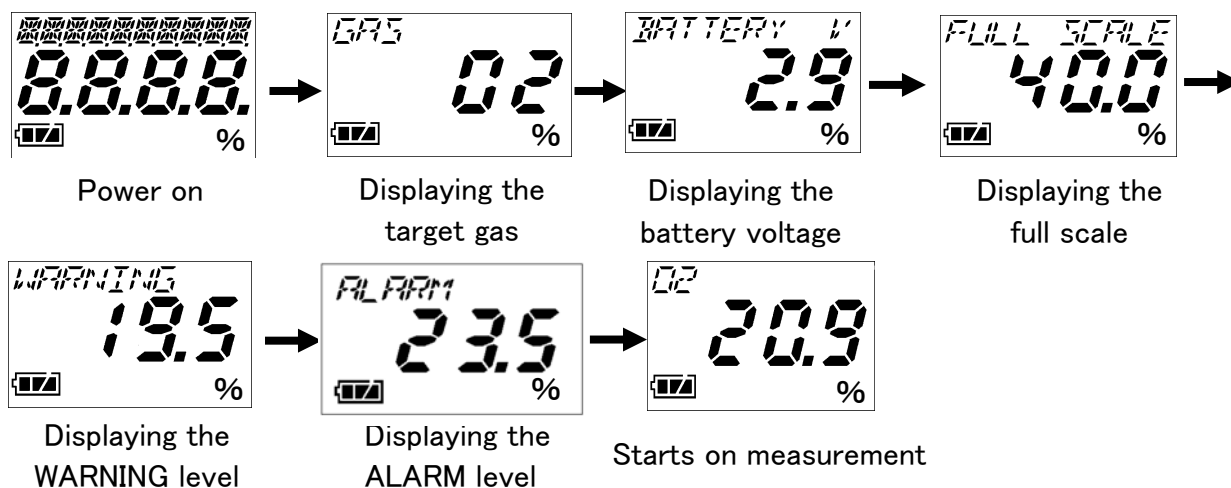

* NOTE

The operating temperature range of this unit is -20 to +50degreeC. However, oxygen concentration reading may fluctuate if the ambient temperature changes suddenly.

3-2. Performing a fresh air adjustment


Before using the OX-07, set the fresh air reading. Performing this adjustment ensures accurate gas readings in the monitoring environment.

- 1) Find a fresh air environment, an environment of normal oxygen content is 20.9%.
- 2) With the unit on and in measuring mode, press and hold the AIR button. The LCD displays "hold" prompting you to hold the AIR button.
- 3) After a moment, the LCD indicates "Adj". Continue to hold the AIR button.
- 4) Release the AIR button when the LCD displays "RELEASE" in the upper left corner.
- 5) About 2 seconds later, the LCD indicates "FINISH" in the upper left corner and returns to measuring mode, showing that the fresh air adjustment has been completed automatically.



* NOTE

- Fresh air adjustment can be performed even in gas alarm condition.
- When AIR adjustment error is issued, the LCD displays “AIR CAL FAIL”. Release the air cal failure alarm according to the following steps.
 - 1) Press and hold “AIR” button for about 3 seconds.
 - 2) Release the “AIR” button when the LCD displays “RELEASE” in the upper left corner.
 - 3) About 4 seconds later, AIR CAL(Air adjustment) is cancelled, the LCD displays “FINISH” and indicates the concentration before the adjustment.

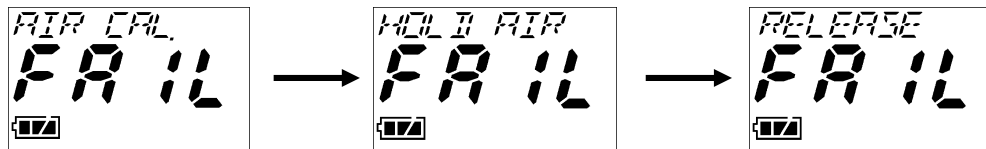

Continue to hold the AIR button

Release the AIR button




DANGER

Perform air adjustment in the fresh air atmosphere under the similar pressure, temperature and humidity conditions to the operating environment.

If the air adjustment is done at detection place (where oxygen deficiency may occur), the correct gas detection cannot be performed and oxygen deficiency accident may take place.

3-3. Changing the display in measuring mode

You can change the display mode by pressing the “DISP” button in measuring mode as follows:

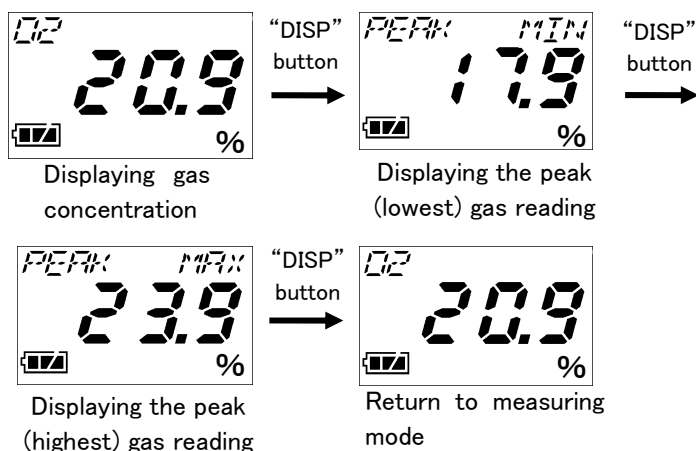

*** NOTE**

- Gas concentration display
Indicates current gas concentration.
- Displaying the peak (highest) reading
Indicates the highest gas reading since the unit was turned on.
- Displaying the peak (lowest) reading
Indicates the lowest gas reading since the unit was turned on.

You can also change the display mode by pressing the “AIR” button in displaying the peak gas reading as following.




*** NOTE**

- If you do not press a button for about 20 seconds while in display mode, the unit will return to measuring mode automatically and the backlight will turn off 20 seconds after the last button was pressed.
- When any of three control buttons are pressed, the LCD backlight comes on.
- The unit can be turned off by pressing and holding the “POWER” button for about 3 seconds in any display mode.

*** NOTE**

About minus sign

- If the gas reading in measuring mode falls more than 2% of full scale below zero, the LCD displays “-” (minus sign) in front of the single figures of LCD.

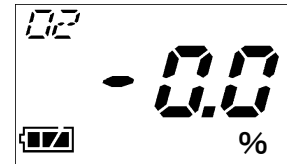

Displays minus sign

3-4. Wearing the unit

The unit can be used by attaching the standard alligator clip or optional belt clip.




WARNING

Ensure that sensor is exposed to ambient air. If not, correct detection cannot be performed and it may be linked to an accident.

[Mounting be alligator clip]

- 1) Screw down the adaptor for alligator clip on the back of the case (2 points)
- 2) Fix the alligator to the adaptor with 2 screws.
- 3) Adjust the direction of alligator clip with the teeth in the alligator clip's jaws opened.

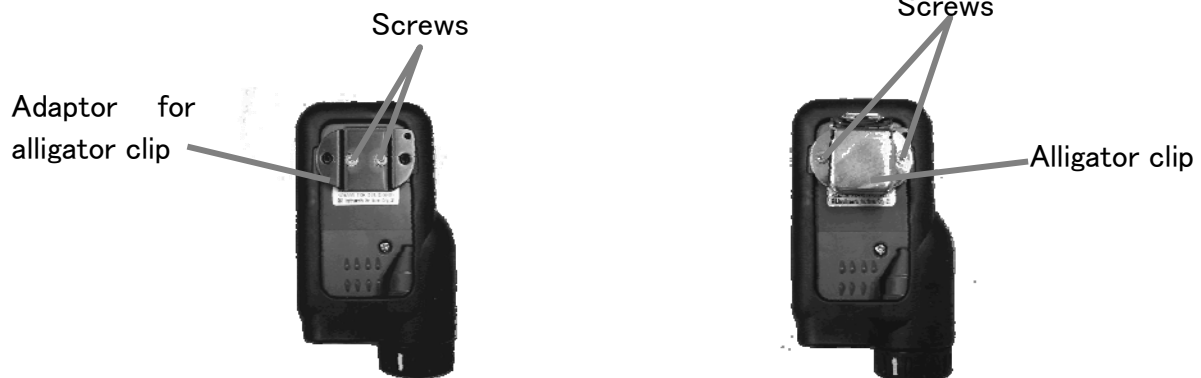

[Mounting the belt clip]

Screw down the belt clip on the back of the case (2 points).



4. ALARMS

4-1. Types and patterns of gas alarm

The OX-07 will sound an alarm, flash its alarm lights and vibrate when the oxygen concentration reaches to warning/alarm level.

【for Japanese specification】

Gas alarm types : Low alarm (WARNING), Low-Low alarm (ALARM), Over range alarm (OVER)

Alarm patterns : Pattern “A”, pattern “B”

Alarm actions : Buzzer, light, vibration, LCD (flashing, back light on)

Alarm types	Target gas	Alarm pattern
	O ₂	
Low alarm(WARNING)	18.0vol%	Pattern A
Low-Low alarm(ALARM)	18.0vol%	Pattern B
Over range alarm(OVER)	40.0vol%	Pattern B *1

【for Overseas specification】

Gas alarm types : Low alarm (WARNING), High alarm (ALARM), Over range alarm (OVER)

Alarm patterns : Pattern “A”, pattern “B”







Alarm actions : Buzzer, light, vibration, LCD (flashing, back light on)

Alarm types	Target gas	Alarm pattern
	O ₂	
Low alarm (WARNING)	19.5vol%	Pattern A
High alarm (ALARM)	23.5vol%	Pattern B
Over range alarm (OVER)	40.0vol%	Pattern B *1


*1. Actions of buzzer, light and vibration are same as for ALARM.

Only the display screen is different (see next page).


Actions of alarm lights, buzzer sound and vibration

Alarm pattern	Pattern A (Intermittent : Once per second)	Pattern B (Intermittent : Twice per second)
Buzzer sound (Pulsing tone)		
Alarm lights		
Vibration		

[Examples of LCD indication]

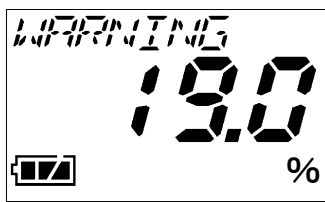

WARNING
(Gas reading flashes)

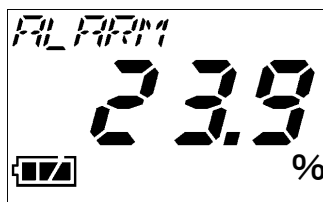

ALARM
(Gas reading flashes)



OVER
(Gas reading replaced by
blinking brackets)

*** NOTE**

If alarm is issued, the LCD changes to alarm indication automatically.

4-2. Resetting gas alarms

To reset a gas alarm or trouble alarm, press and release the “POWER” button.

Alarms to be able to reset

- Gas alarm
- Calibration failure

Alarms unable to reset

Following alarms cannot be reset unless you turn off the unit

- System failure
- Dead battery alarm
- Sensor failure

*** NOTE**

The alarm pattern of this unit is a latched mode. Even though the gas concentration may have returned to normal or may have increased above the low alarm point or may have fallen below the high alarm point, the alarm indications will continue until you have reset the alarm using the “POWER” button.

4-3. Responding to gas alarms

Gas alarm is set at safety level. However, sudden release of gas will exceed the safety level and reach to dangerous level within a short time. If the alarm is activated, leave from that area immediately and ventilate there. Also, stop the leaking source immediately, if the gas leak is identified.




DANGER

If oxygen gas alarm is activated, ventilate with fresh air or escape to the fresh atmosphere immediately. It may lead to dangers because oxygen-deficient air or other gases may blow out.


4-4. Other alarms

System failure

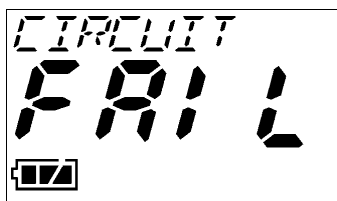

Buzzer sounds
Alarm light flashes
Gas reading replaced by CIRCUIT FAIL
Back light turns on

Sensor failure

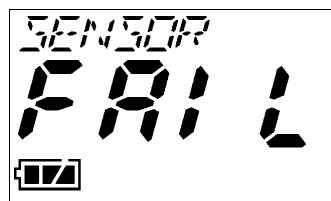


Buzzer sounds
Alarm light flashes
Gas reading replaced by SENSOR FAIL
Back light turns on

* NOTE

- Sensor failure may be activated at the time of AIR cal. To reset an alarm, press "POWER" button. In this case, AIR cal is not performed.
- If the sensor failure would be activated except for system failure, low battery alarm or at the time of AIR cal. Only power off operation can be performed. When sensor failure or system failure has been occurred, turn off the power and contact our authorized agent.

4-5. Responding to dead battery alarm

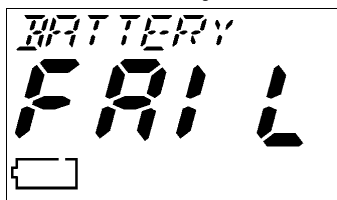


Dead battery alarm



Buzzer sounds
Alarm light flashes
Battery icon flashes
Gas reading replaced by BATTERY FAIL
Back light turns on

* NOTE

The standard of the bar in battery icon is as follows

-  : Enough remaining
-  : Battery capacity has been decreased.
-  : Change the battery as soon as possible



WARNING

The unit is not operational as a gas monitor. Change the battery as soon as possible when a low battery warning occurs.

5. MAINTENANCE AND CHECK

Perform following checks to maintain the reliability and correct functions.



WARNING

If you find abnormality to this unit, contact our authorized agent.

5-1. Daily check

Check that unit housing, display, switches and lights are not dirty or damaged. Also check battery voltage, actions of buzzer, lights and vibration when turning power on.

5-2. AIR calibration (Fresh air adjustment)

Perform AIR calibration after power on. Also perform AIR calibration in fresh atmosphere if O₂ reading is not 20.9%. (See section 3-2)

5-3. Replacing batteries

Replace the battery if battery voltage decreases during operation. (See section 2-1)

5-4. Gas calibration

It is required to perform gas calibration at minimum every 6 months. To calibrate the unit, you will need the calibration kit. Ask our authorized agent for gas calibration kit.

6. SCRAP THE PRODUCT

As a harmful substances or materials for environment are not used in this unit itself, treat it as industrial waste (Non-flammable material) according to the local rule. Regarding the oxygen sensor, contact our nearest agent or RIKEN KEIKI CO., LTD.

7. TROUBLESHOOTING

Symptoms	Probable causes	Recommended action
The unit will not turn on	Batteries may need to be replaced.	Refer to section. <2-1 Mounting /replacing the batteries>
	Battery polarity may be wrong.	
	Holding time for POWER button may be too short.	Press and hold POWER button for about 1 sec until it shows display.
	Battery cover may be loose.	Verify that the battery cover is attached.
“CIRCUIT FAIL” is displayed on the LCD	A circuit failure has occurred.	Contact our nearest agent to repair.
“SENSOR FAIL” is displayed on the LCD	The O2 sensor may need replacement.	Replace the sensor with new one.
“AIR CAL. FAIL” displays during fresh air adjustment	Fresh air is not supplied to the unit.	Supply fresh air.
	The O2 sensor may need replacement.	Replace the sensor with new one.
“BATTERY FAIL” is displayed on the LCD	Decrease of battery voltage.	Turn off the unit and replace batteries with new ones at non-hazardous area.

8. SPECIFICATIONS

8-1. Specifications

【Japanese specifications】

Model	OX-07
Type	TYPE A
Detectable gas	Oxygen
Detection principle	Galvanic cell
Measuring range	0~40vol% (Resolution : 0.1vol%)
Low alarm	18.0vol%
Low-Low alarm	18.0vol%
Over alarm	40.0vol%
Various indications	Battery icon
Indicate accuracy (under an identical condition)	Within $\pm 0.7\text{vol}\%$
Response time (under an identical condition)	Within 20 seconds(T90)
Gas alarm indication	Flashing light/Intermittent buzzer/Gas reading flashes/ Vibration
Gas alarm action	Latching-mode
Trouble alarm・Self diagnosis	System failure/Sensor failure/Low battery/ Calibration error
Trouble alarm indication	Flashing light/Intermittent buzzer/Content display
Trouble alarm action	Latching mode
Detection method	Diffusion method
Gas concentration display	LCD digital display
Power supply	Alkaline batteries (Size AA) × 2 pcs.
Continuous operation time	About 5000 hours (no alarm・no light at 25°C)
Explosion-proof structure	Intrinsically safe
Explosion-proof grade	Exia II CT3X (TIIS<Japan>)
Operating temperature and humidity	-20~50°C, below 95%RH (non-condensing)
Operating pressure	Atmospheric pressure (80kPa~110kPa)
Various functions	LCD backlight/Peak hold display
Outer dimension and Weight	Approx. 66(W) × 114(H) × 33(D)mm (Projection excluding) Approx. 230g (Excluding clip)

【Overseas specifications】

Model	OX-07
Type	TYPE A
Detectable gas	Oxygen
Detection principle	Galvanic cell
Measuring range	0~40vol% (Resolution : 0.1vol%)
Low alarm	19.5vol%
High alarm	23.5vol%
Over alarm	40.0vol%
Various indications	Battery icon
Indicate accuracy (under an identical condition)	Within $\pm 0.7\text{vol}\%$
Response time (under an identical condition)	Within 20 seconds(T90)
Gas alarm indication	Flashing light/Intermittent buzzer/Gas reading flashes/ Vibration
Gas alarm action	Latching-mode
Trouble alarm・Self diagnosis	System failure/Sensor failure/Low battery/ Calibration error
Trouble alarm indication	Flashing light/Intermittent buzzer/Content display
Trouble alarm action	Latching mode
Detection method	Diffusion method
Gas concentration display	LCD digital display
Power supply	Alkaline batteries (Size AA) × 2 pcs.
Continuous operation time	About 5000 hours (no alarm・no light at 25°C)
Explosion-proof structure	Intrinsically safe
Explosion-proof grade	II 1GExia II CT4Ga (ATEX/IECEX<KEMA>)
Operating temperature and humidity	-20~50°C, below 95%RH (non-condensing)
Operating pressure	Atmospheric pressure (80kPa~110kPa)
Various functions	LCD backlight/Peak hold display
Outer dimension and Weight	Approx. 66(W) × 114(H) × 33(D)mm (Projection excluding) Approx. 230g (Excluding clip)

8-2. Standard accessories

Items	Japanese specifications		Overseas specifications
	with 5m cable	Personal	
AA size alkaline batteries 2pcs	○	○	○
Alligator clip (with adaptor 1pce/screws 4pcs)	○	○	○
Hand strap	○	○	○
Carrying case	○	—	—
Extension cable (5m)	○	—	—
Operating manual	○	○	○

8-3. Optional accessories

- Belt clip (with 2 screws)
- Extension cable (5m, 10m, 20m, 30m)
- Carrying case




Belt clip



Extension cable

[Using the OX-07 with extension cable]

- 1) Verify that the OX-07 is off.
- 2) Take out the sensor from the instrument body.
- 3) Mount the removed sensor to the sensor retainer with the same procedures as sensor mounting. (See section 2-2.)
- 4) Mount the cable retainer to the instrument body as shown below figure, and align the yellow line with “LOCK” line.

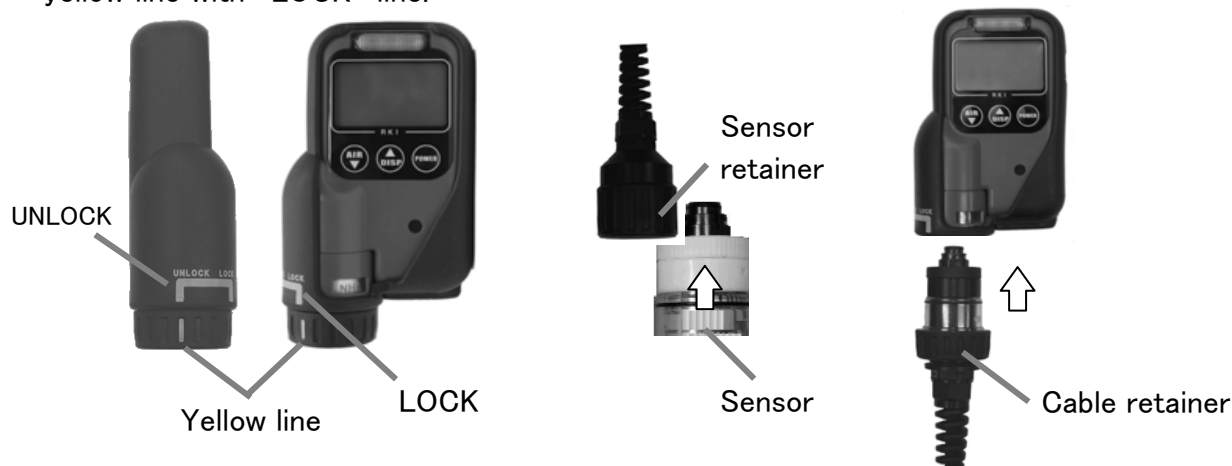

CAUTION

- When using the OX-07 with extension cable, do not throw sensor part into detection point, but lower down slowly. Avoid impact to the sensor. Sensor may be damaged.
- When intending to measure the oxygen content in manhole, inside device, etc by OX-07 with extension cable, adjust the temperature of the sensor to be the same temperature as measuring point by leaving it there about 10 minutes. Then, pull it up to the ground once, turn on the unit again and perform the fresh air adjustment. After that, lower the sensor down to the detection point and measure oxygen content.

9. DEFINITION OF TERMS

vol%

Gas concentration represented by the unit as a percentage of the total volume.

Calibration

By using calibration gas, adjust the displayed gas concentration to match the calibration gas concentration.

PEAK

This is a peak (highest or lowest) gas reading since the last time the unit was turned on.

Warning/Alarm level set point


Preset level to actuate an alarm when gas concentration reaches that point.

Maintenance and check

Work and inspection to maintain the performance of this unit.


10. DETECTION PRINCIPLE

By connecting a noble metal and lead immersed in an electrolyte with a lead wire, an electrochemical cell (galvanic cell) is made. A membrane covers the cell and allows oxygen to diffuse into the electrolyte where reduction on the metal electrode and oxidation on the lead electrode occur respectively as shown in the following chemical equation ;



The oxygen reacts in the cell as above equation and produce a current proportional to the oxygen concentration. The current develops a voltage across a thermistor/resistor network. If oxygen concentration decreases, reduction on noble metal electrode decreases and voltage on both sides of thermistor also decreases.

[Structure]

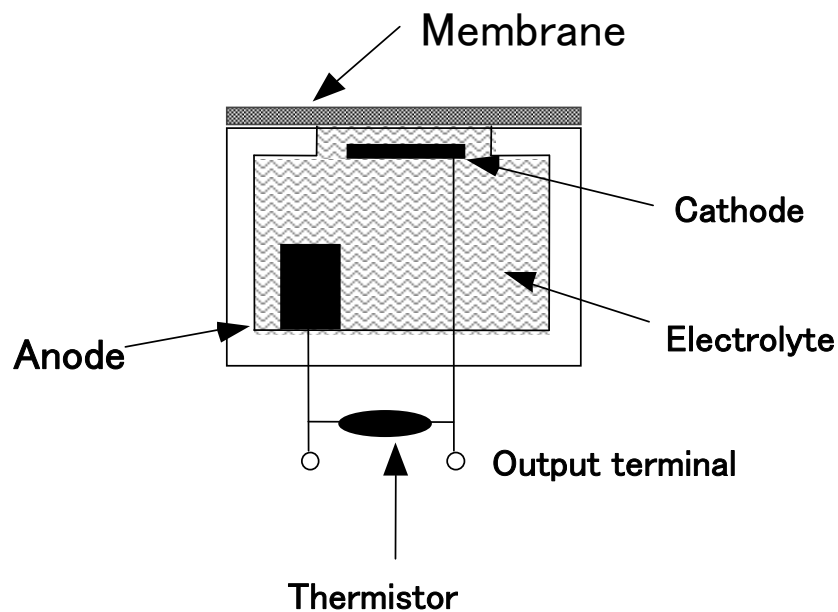

Declaration of Conformity

We, **RIKEN KEIKI CO., LTD.**

**2-7-6, Azusawa, Itabashi-ku,
Tokyo 174-8744 Japan**

declare in our sole responsibility that the following
product conforms to all the relevant provisions.

Product Name:	Portable Gas Monitor
Model Name:	OX-07
Council Directives:	EMC: 2004/108/EC(Until 19 April 2016) 2014/30/EU(From 20 April 2016) ATEX : 94/9/EC(Until 19 April 2016) 2014/34/EU(From 20 April 2016) RoHS : 2011/65/EU
Applicable Standards:	EMC : EN 50270(2006) ATEX : EN 60079-0(2012):A11(2013) EN 60079-11(2012) EN 60079-26(2007) RoHS : EN 50581(2012)

Name and address of the ATEX Notified Body : DEKRA Certification B.V.
Utrechtseweg 310, 6812 AR Arnhem
The Netherlands.

Number of the EC type examination certificate : KEMA08ATEX0126
Jan 24,2014


Name and address of the ATEX Auditing Organization : Baseefa Ltd.
Rockhead Business
Park, staden Lane,
Buxton, Derbyshire, SK17 9RZ

The Marking of the equipment or protective system shall include the
following : II 1G Ex ia II C T4 Ga

Year to begin affixing CE Marking: 2016

Place: Tokyo, Japan

Date: Mar 31, 2016

Signature: 
Full Name: Tetsuya Kawabe
Title: Director, Quality control center