

One Talk T77LTE Smart Desk Phone

User Guide



Scan the QR Code to see additional support documentation and set up video.
Or go to verizon.com/support/one-talk-t77lte-smart-desk-phone/.

verizon
business

Table of Contents	1
Before You Begin	8
Get Started	8
Hardware Overview	8
T77LTE Hardware	8
Power LED Indicator	10
Screen and Icons	10
Control Center and Notification Center	10
Idle Screen	12
The Home Screen	12
The Right Idle Screen	13
The Left Idle Screen	13
Status Icons	14
Navigate Menus and Fields	14
Enter Information	15
Use the On-screen Keyboard	15
Input Method Introduction	16
Use the Phone Keypad and Dial Pad	17
eSIM Activation and Device Registration	17
LTE or LAN Mode Switching	18
Switch between LTE and LAN Modes	18
Switch from LAN to LTE	19
Auto-Detection	19
Available 4G Signal, LTE Account Login Failure	20
No 4G Signal	20
Poor 4G Signal	21
Airplane Mode Enabled, Unavailable 4G Signal	22
Available 4G Signal under LAN Mode	24
Navigation Bar	25
Call Features	26
Place Calls	26
Place a Call from the Dialer	26
Place Multiple Calls	27
Redial a Number	27
Place an International Call	27
Place a Call from the Call History	27
Place a Call from the Directory	27
Answer Calls	28
Answer a Call	28
Answer a Call When in a Call	28
Switch Among the Handset, Speakerphone and Headset Modes	28

Switch Between Calls Screen and Idle Screen	28
Go Back to the Idle Screen during a Call.....	28
Return to the Talking Screen.....	29
Capture a Screenshot.....	29
Capture a Screenshot When the Phone is Idle.....	29
Capture a Screenshot during a Call.....	30
Silence or Reject Incoming Calls	30
Silence a Call	30
Reject a Call Manually.....	30
Reject Calls with Do Not Disturb (DND)	31
Reject Calls with DND	31
Deactivate DND.....	31
End Calls.....	31
Mute/Unmute Audio	32
Keep Mute.....	32
Hold and Resume Calls	32
Hold a Call	32
Resume a Held Call	32
Transfer Calls	33
Perform a Transfer.....	33
Perform a Direct Transfer	33
Perform a Consultative transfer	34
Local Conference	35
Set Up a Local Conference Call.....	35
Merge Two Calls into a Conference.....	35
Create a Hybrid Conference	35
Hold or Resume a Conference Call.....	36
Mute or Unmute a Conference Call	36
Manage Conference Participants	36
End a Conference Call.....	36
Call Recording	37
Record a Call	37
Record a Conference.....	37
Set a Mark When Recording a Call	37
Stop a Recording	37
Check Storage Space	38
Advanced Call Features	38
Call Pickup	38
Pick up a Call Directly.....	38
Pick up a Group Call Directly	38
Call Park and Call Retrieve.....	39
Park or Retrieve a Call	39

Park a Call	39
Retrieve a Parked Call	39
Voice Mail	40
Listen to Voice Mails	40
Short Message Service (SMS)	40
Send Messages	40
Receive Messages	41
View the Sent Box	41
View the Draft Box	42
Quick Reply	42
Multimedia Messaging Service (MMS)	43
Send Multimedia Messages	43
Receive Multimedia Messages	43
Directory	44
Local Directory	44
Manage the Local Directory Groups	44
Add Contact Groups	44
Edit Contact Groups	45
Delete Contact Groups	45
Manage the Local Directory Contacts	46
Add Contacts	46
View Contacts	46
Edit Contacts	46
Delete a Contact	46
Delete All Contacts	47
Move a Local Directory Contact to Blocklist	47
Search for Contacts	47
Blocklist	47
Add a Blocklist Contact	47
View Blocklist Contacts	48
Edit a Blocklist Contact	48
Delete Blocklist Contacts	48
Delete a Blocklist Contact	48
Delete All Blocklist Contacts	48
Move a Blocklist Contact to the Local Directory	49
Mobile Contacts	49
Save a Mobile Contact to the Local Directory	49
Search for Mobile Contacts	49
Update the Mobile Contacts	50

Remote Phone Book	50
Search for Remote Phone Book Contacts.....	50
View Remote Phone Book Contacts.....	50
Save a Remote Phone Book Contact to the Local Directory	50
Save a Remote Phone Book Contact to the Blocklist	51
Call History	51
Call History Icons	51
Viewing History Records	51
Save a History Record to Local Directory	51
Save a History Record to Blocklist	52
Delete History Records	52
Delete a Call Record	52
Delete All Call Records.....	52
System Applications	52
Manage Applications and Widgets	52
Add a Widget to the Idle Screen	53
Resize a Widget	53
Move an Application or Widget	53
Remove a Widget from the Idle Screen	53
File Manager	54
View Files	54
Search Files	54
Copy Files	54
Cut Files (Move Files).....	55
Upload Files	56
Delete Files	57
Share Pictures/Videos/Audio via Bluetooth.....	57
Gallery.....	58
View Pictures/Videos	58
Edit Pictures	59
Rotate Pictures.....	59
Add a Filter for Pictures.....	59
Add a Frame for Pictures	59
Crop Pictures.....	60
Color Pictures	60
Set a Picture as Wallpaper	60
Print Pictures	61
Delete Pictures/Videos	61
Share Pictures/Videos via Bluetooth.....	61
Recorder.....	62
Record Audio	62
Play a Recorded Call	63
Pause/Resume a Playback	63

Fast Forward/Rewind a Playback	63
Stop a Playback	63
Rename the Recording	63
Upload a Recording to Server	64
Delete a Recording	64
Delete All Recordings	64
Check Storage Space	65
Clock	65
Alarm	65
Set an Alarm Clock	65
Edit an Alarm Clock	66
Delete an Alarm Clock	66
Set the Alarm Parameters	67
Clock	67
Add the Clock of Other Cities	67
Configure the Clock Display Mode	67
Set a Timer	68
Set a Stopwatch	68
Customize Your Phone	68
Wallpaper	68
Change Wallpaper on Idle Screen	69
Add a Wallpaper from a USB Flash Drive	69
Screen Saver	69
Change the Waiting Time for Screen Saver	69
Set the Screen Saver Type	69
Change the Screen Backlight and Time	70
Change the Language	70
Date & Time	71
Set the Time and Date Manually	71
Change the Time and Date Format	71
Phone Lock	71
Set the Phone Lock	71
Lock Your Phone Manually	72
Unlock Your Phone	72
Change Your Phone Unlock PIN	72
Line Keys	72
Assign Functionality to a Line Key	72
Change the Locations of the Line Keys	73
Delete a Line Key	73

Audio Settings	74
Adjust the Volume	74
Set the Ring Tone	74
Set a Ring Tone for the Phone	74
Set a Ring Tone for an Account	74
Set a Ring Tone for a Group	74
Set a Ring Tone for a Contact	75
Disable the Key Tone	75
Enable Touch Tone	76
Configure Notification Sound	76
Enable Silent Mode	76
Bluetooth	76
Activate the Bluetooth Mode	76
Pair and Connect the Bluetooth Headset	77
Pair and Connect the Bluetooth-enabled Mobile Phone	77
Pair and Connect two Bluetooth Devices	78
Sync the Mobile Contacts to the Phone	78
Enable the Mobile Contacts Sync Feature	78
View Your Mobile Contacts	79
Handle a Mobile Phone Call on the Phone	79
Configure the Phone Audio Feature	79
Configure the Media Audio Feature	79
Change Your Phone's Bluetooth Name	80
Enable/Disable Bluetooth Device Discovery	80
Rename the Paired Bluetooth Device	80
Unpair the Bluetooth Device	80
Send Files via Bluetooth	81
Receive Files via Bluetooth	81
Disconnect the Bluetooth Device	81
Deactivate the Bluetooth Mode	81
Battery	81
Battery Settings	82
Wireless Network	83
Activate the Wi-Fi Mode	83
Connect to the Wireless Network	83
Connect to an Available Wireless Network Manually	83
Add a Wireless Network Manually	84
View the Wireless Network Information	84
Disconnect from a Wireless Network	84
Deactivate the Wi-Fi Mode	84

Hotspot85

 Enable Hotspot85

Maintain Your Phone86

 Investigate Warnings86

 Clear Warning Icon86

 Reboot Your Phone87

 Reset to Factory Settings87

Notices88

Before You Begin

This guide provides information you need to quickly use your new phone.

Firstly, verify the location where you plan on using the phone has good 4G LTE signal. Also, be sure to read the Quick Start Guide which can be found in your phone package before you set up and use the phone. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your phone screen since the phone's firmware is updated constantly.

Get Started


Before you use your phone, take some time to get familiar with its features and user interface.


The terms “the phone” and “your phone” refer to the T77LTE Smart Desk Phone.

Hardware Overview

Understanding the phone hardware helps you easily use the phone's features.

T77LTE Hardware

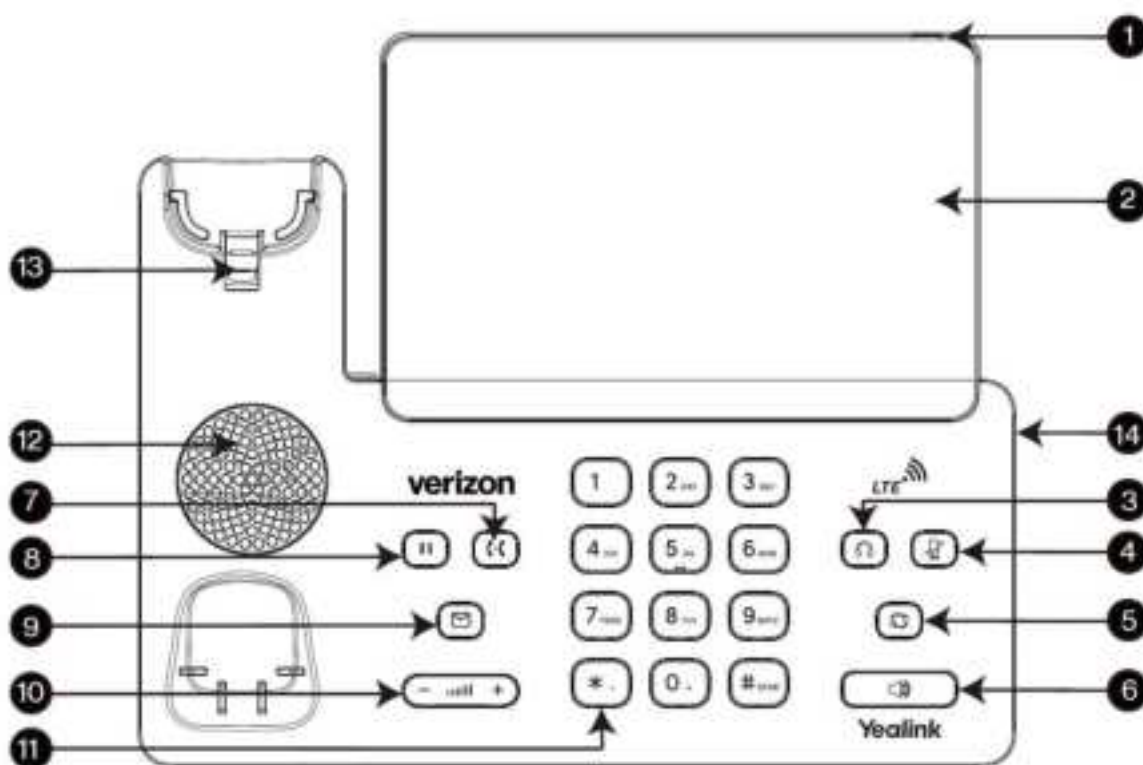

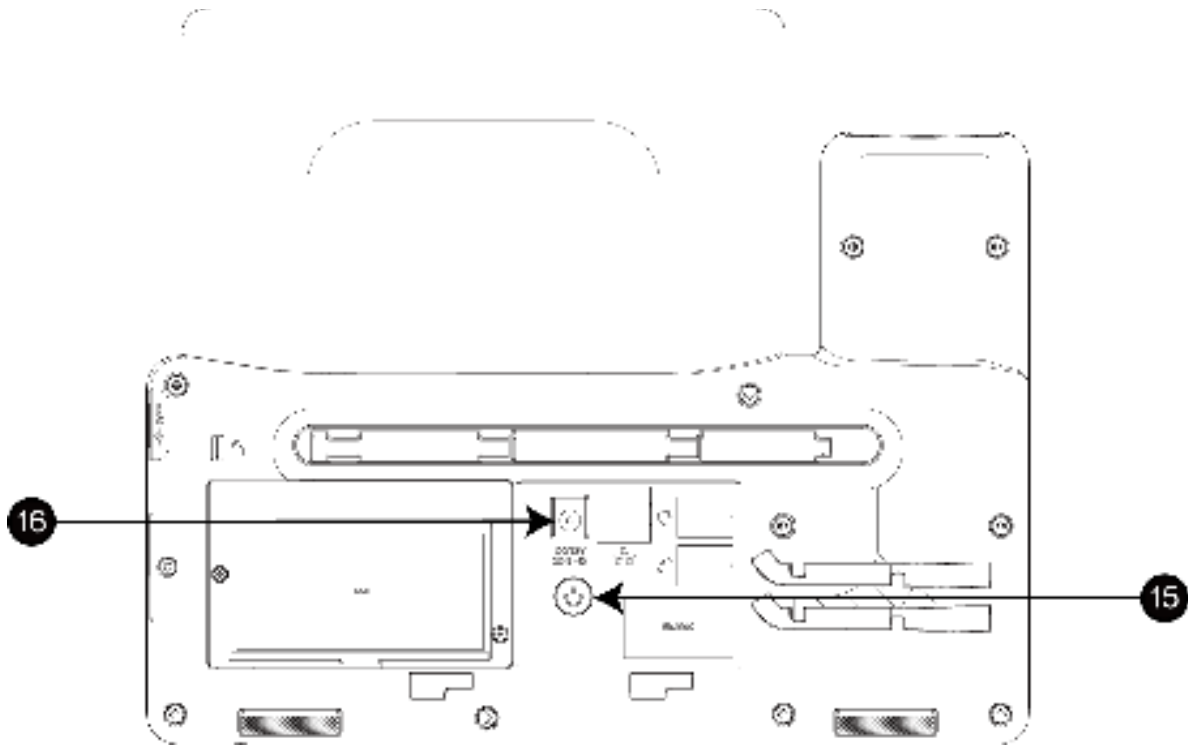

No.	Item	Description
1	Power LED Indicator	Indicates call status, message status and phone's system status.
2	Touch Screen	Allows you to select items and navigate menus on the touch- sensitive screen. Tap to select and highlight screen items. Shows information about calls, messages, time, date and other relevant data.
3	Headset Key	Toggles and indicates the headset mode. The key LED glows green when headset mode is activated.
4	Mute Key	Toggles and indicates mute feature. The key LED glows red when the call is muted.
5	Redial Key	Redials a previously dialed number.
6	Speakerphone Key	Toggles and indicates the hands-free (speakerphone) mode. The key LED glows green when the hands-free (speakerphone) mode is activated.
7	Transfer Key	Transfers a call to another party.
8	Hold Key	Places a call on hold or resumes a held call.
9	Message Key	Access Voicemail
10	Volume Key	Adjusts the volume of the handset, headset, and speaker.
11	Keypad	Provides the digits and special characters in context-sensitive applications.
12	Speaker	Provides hands-free (speakerphone) audio output.

No.	Item	Description
13	Reversible Tab	Secures the handset in the handset cradle when the phone is mounted vertically.
14	USB Port (on the side)	Allows you to connect an optional USB device (for example, USB flash drive) to your phone.
15	Power on/off Button	Powers on/off the phone. You can also go to Settings > General > Power Off to power off the phone.
16	Power Port	Provides electric power to the phone. If the phone is OFF and power adapter is connected, the phone will turn ON automatically.

Power LED Indicator

The power LED indicator indicates the call and message status.

LED Status	Description
Solid red	The phone is initializing.
Fast-flashing red (0.3s)	The phone is ringing.
Slowly-flashing red (1s)	The phone receives a voice mail.
Solid red for 0.5s and off for 3s alternately	The phone is in power-saving mode.

Power LED Indicator


The screen and icon indicators can help you navigate and understand information about the phone's status.

Control Center and Notification Center

Control center or notification center allows you to access some features or view important notifications quickly.

Procedure

1. Swipe down from the top of the screen.

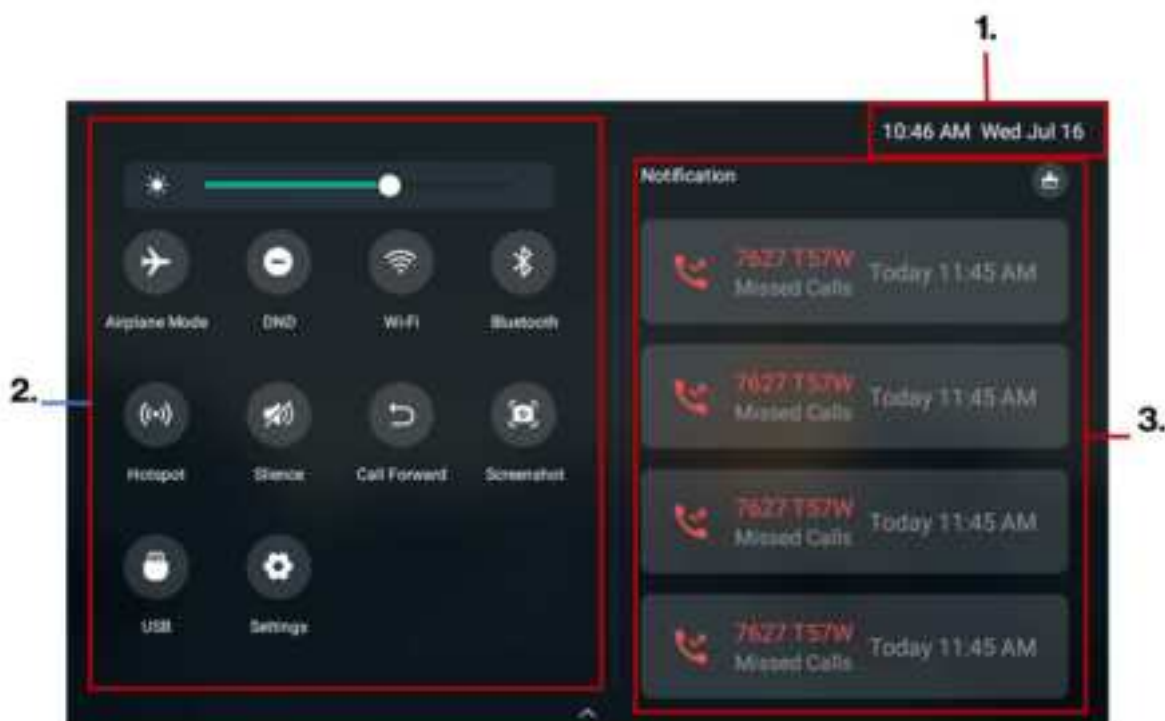

No.	Name	Description	
1	Time and date	Display the phone's time and date.	
2	Control Center	Backlight	Drag the slider to adjust the screen brightness quickly.
		Airplane Mode	Tap to turn on/off airplane mode.
		DND	Tap to turn on/off DND mode.
		Wi-Fi	- Tap to turn on/off Wi-Fi quickly. - Long tap to enter the Wi-Fi setting screen.
		Bluetooth	- Tap to turn on/off Bluetooth quickly. - Long tap to enter the Bluetooth setting screen.
		Hotspot	Tap to turn on/off the hotspot.
		Silence	Tap to turn on/off Silence quickly.
		Call Forward	Tap to enter Call Forward setting screen.
		Screenshot	Tap to capture a screenshot.
		USB	Tap to access the File Manager to manage the files in the USB flash drive.
		Settings	Tap to enter the Settings screen.

3	Notification Center	• Tap the desired notification message to view the details. • Swipe left to delete a specific notification. • Tap  to delete all notifications.
---	---------------------	--

You can swipe up from the bottom of the screen to hide this screen.

Idle Screen

The phone has 3 idle screens by default. You can swipe left or right to switch between different idle screens.

You can add a new idle screen by moving an application or widget to the right side of the third idle screen. This idle screen will be deleted automatically if there is no application or widget on it.

The Home Screen

On the home screen, you can view the phone's current state, add line keys, and access the dialing, Directory, and History screens.



No.	Name	Description
1	Status Bar	Displays the phone's default account, icons and time.
2	Default account	The label of the default account is displayed on the left of the status bar. If the Smart Desk Phone hasn't been properly activated and registered with the LTE Network, this field will display No Service .
3	Digital Clock Widget	Displays the phone's time and date.
4	Line Key List	Displays the line key labels.

No.	Name	Description
5	Wallpaper	Shows the specified wallpaper, which can be customized.
6	Call	-Call: Tap to enter the dialing screen. -Contact/Directory: Tap to enter the directory screen and view contacts. -History: Tap to enter the history screen and view call history. -Menu: Tap to enter the menu screen and configure settings. -DND: Tap to enable or disable the DND feature.
7	Screen Indicator	Indicates which idle screen is displayed.

The Right Idle Screen

The right idle screen displays phone's system applications by default.




No.	Name	Description
1	Setting	To access phone settings and features.
2	File Manager	To manage files in the internal SD card as well as USB flash drive.
3	Voice Mail	To access the voice mails or text message.
4	Gallery	To view photos and videos.
5	Recorder	To record audio.

The Left Idle Screen

The left idle screen displays phone's line key labels.

- Select the desired line and press it for 1 second for the options to edit or delete to appear.

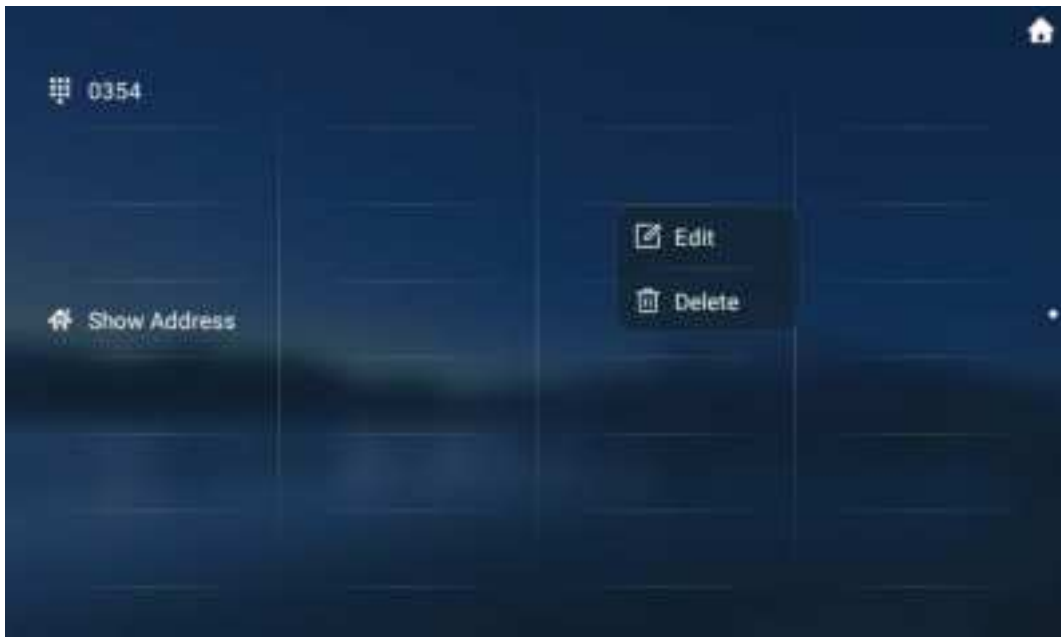

Status Icons

No.	Icons	Description
1		Mute mode: Mute mode is enabled.
2		4G LTE active: The device is connected to a 4G LTE wireless network.
3		Signal Strength: Cellular network signal strength.
4		Network not available: No wireless network is available.
5		Wi-Fi active: Wi-Fi is active.
6		Wi-Fi available: A Wi-Fi network is available.

Navigate Menus and Fields

You can use different gestures on the touch screen to perform various operations.

Procedure

1. To operate your phone using gestures, follow these tips:

Gesture		Action
Tap		Touch an item on the screen with your finger, and then lift your finger.
Long Tap		Touch an item for about 2 seconds without lifting your finger from the screen till an action occurs.
Swipe		Touch and move. When you want to scroll quickly, swipe your finger across the screen, either up, down, left or right.

Gesture		Action
Drag		Touch an item on the screen with your finger, and then lift your finger.
Pinch Open		Touch an item for about 2 seconds without lifting your finger from the screen till an action occurs.
Pinch Close		Touch and move. When you want to scroll quickly, swipe your finger across the screen, either up, down, left or right.

Enter Information

The phone provides on-screen keyboard, phone keypad and dial pad to enter data. Phone keypad and dial pad provide a standard key layout, which enables you to use existing or familiar key positions.

Use the On-screen Keyboard

The phone supports the on-screen keyboard. You can enter information into text fields using the touch screen. When you use the on-screen keyboard, the following things you need to know:


If you want to	Action
Position the cursor.	Tap to the position.
Select all characters.	1. Long tap the entered character(s). 2. Do one of the following: • Tap Select all on the top of the phone screen. • Drag  /  to select all characters.
Cut/Copy characters.	1. Long tap the entered character(s). 2. Drag  /  to select the characters you want to cut/copy. 3. Tap Cut/Copy on the top of the phone screen. 4. Long tap the desired field. 5. Tap Paste.
Delete more characters at a time.	• Long tap the entered character(s). Drag  /  to select the characters you want to delete. Tap  . • Long tap  .
Replace characters.	1. Drag your finger to highlight the characters you want to replace. 2. Tap the desired character.


Input Method Introduction

The device supports the following input methods:

1. English (US)
2. Chinese
3. Dutch
4. French
5. German
6. Italian
7. Polish
8. Portuguese (Portugal)
9. Russian
10. Spanish
11. Turkish

The examples below use English (US)as the input method to illustrate how to use the on-screen keyboard to enter information.

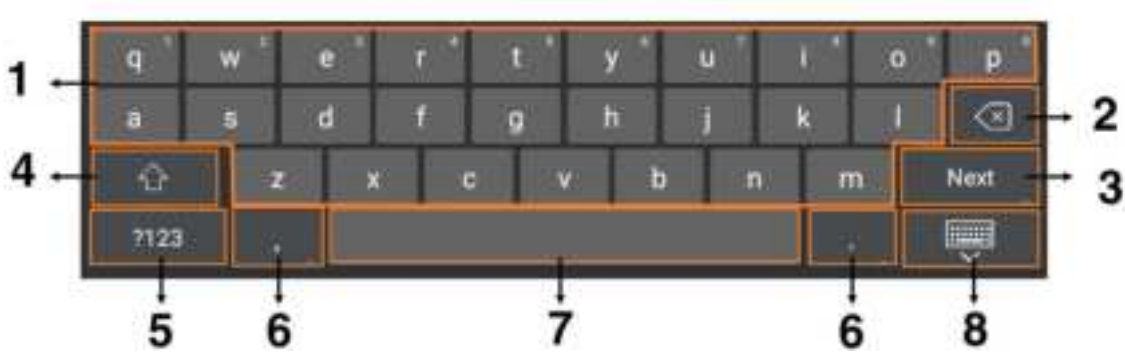


No.	Item	Description	
1	26 English Letters	• Tap to enter letters. • Long tap a key then slide to choose one of the options to enter an alternate character.	
2	Delete Key	• Tap to delete the entered characters one by one. • Long tap to delete two or more characters.	
3	Label automatically to identify the context-sensitive features.	Next Key	Tap to go to the next field.
		Done Key	Tap to confirm the settings.
		Send Key	Tap to dial out the number.
4		Tap to switch to the uppercase input mode.	
5		Tap to switch to the numeric&symbolic input mode.	

No.	Item	Description
6	Special Characters	Tap to enter the special character.
7	Space Key	• Tap to enter spaces. • Long tap to change the input method.
8	Keyboard Hide Key	Tap to hide the keyboard.

Use the Phone Keypad and Dial Pad

You can use the keypad on your phone or dial pad to enter data. The dial pad only provides digit keys, # key, and * key.

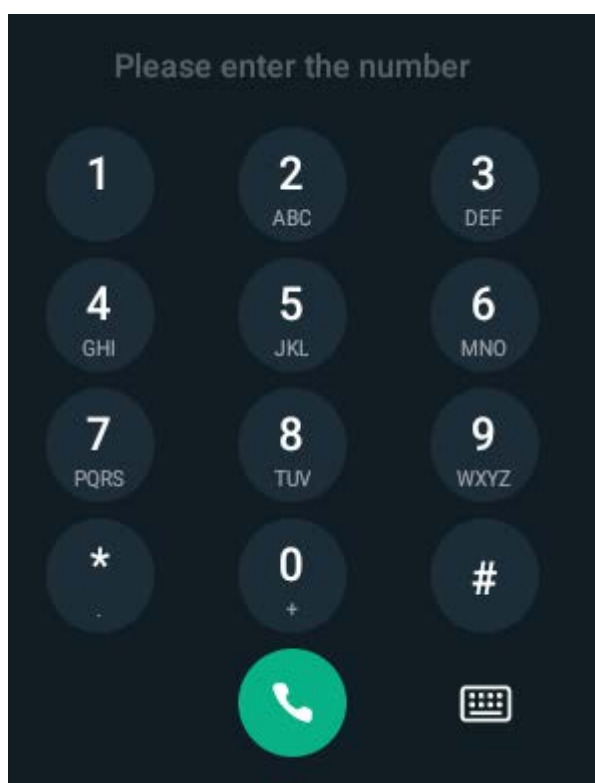

You can tap  to switch to the on-screen keyboard.

eSIM Activation and Device Registration

1. When the phone is powered on for the first time, it will automatically go through the 4G LTE network activation process as shown in the image below.

IMPORTANT:

The T77LTE Smart Desk Phone can only be properly activated for the first time over LTE. The phone needs to register the eSIM and be authenticated in the 4G LTE Network for it to work and provide all the features and capabilities of the One Talk Service.

If there is not strong enough 4G LTE Signal, the device will not be able to activate



2. After your eSIM card is activated, the 4G signal will be displayed in the right-corner of the phone screen.
3. After the eSIM activation, the phone will trigger the bootup process to download the configuration files when it connects to the LTE network.
4. If a firmware update is available for the devices, the firmware update will take place at this point (which can take between 15-20 minutes) and the phone will REBOOT a couple of times. This is normal.
5. After the configuration file is deployed, the phone will reboot to trigger E911 and register the LTE account automatically.
6. You can view the phone number by navigating to Settings > About > Ite.

LTE or LAN Mode Switching


Once the eSIM has been properly activated, the phone will perform all its functions over the 4G LTE Wireless Network. The device has the ability to register to the Verizon Network using LAN mode (once the eSIM has been properly activated), this mode allows the phone to register via a standard Broadband connection.

The Smart Desk Phone has a built in, auto-detect feature. This feature alerts and prompts the user to switch if the current mode of operation encounters issues. For instance, if the LTE network is unavailable, the LTE account fails to log in, or Airplane mode is enabled, the phone will prompt a switch from LTE to LAN mode if LAN is available.

Switch between LTE and LAN Modes

You can manually switch modes of operation by following these steps:


1. Swipe left to go to the right idle screen, and then select Settings.
2. Go to Switching Account > Switching Account Mode, select LAN mode
3. The phone will present the 911 screen .

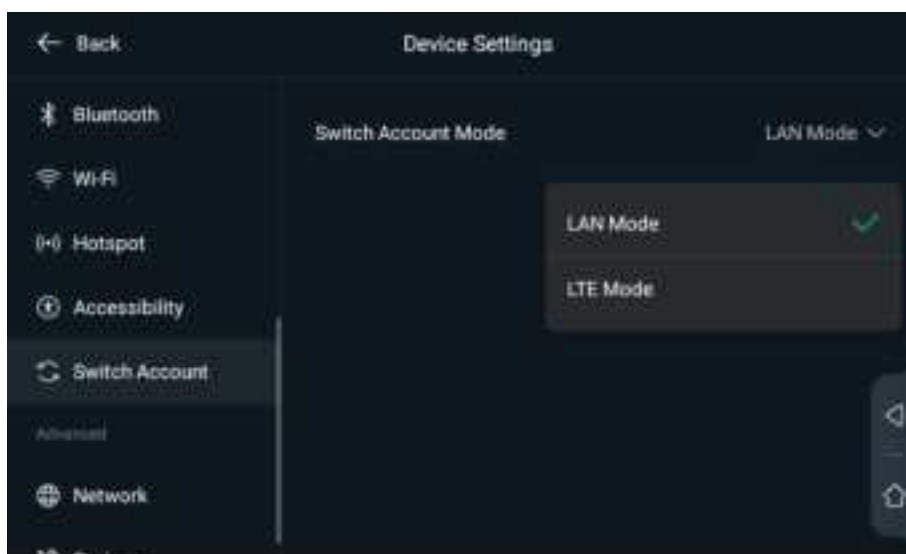

Switch from LAN to LTE

After you switch to LTE mode, you can use one LTE account only.

1. Swipe left to go to the right idle screen, and then select Settings.
2. Go to Switching Account > Switching Account Mode, select LTE mode.
3. The phone will present the 911 screen

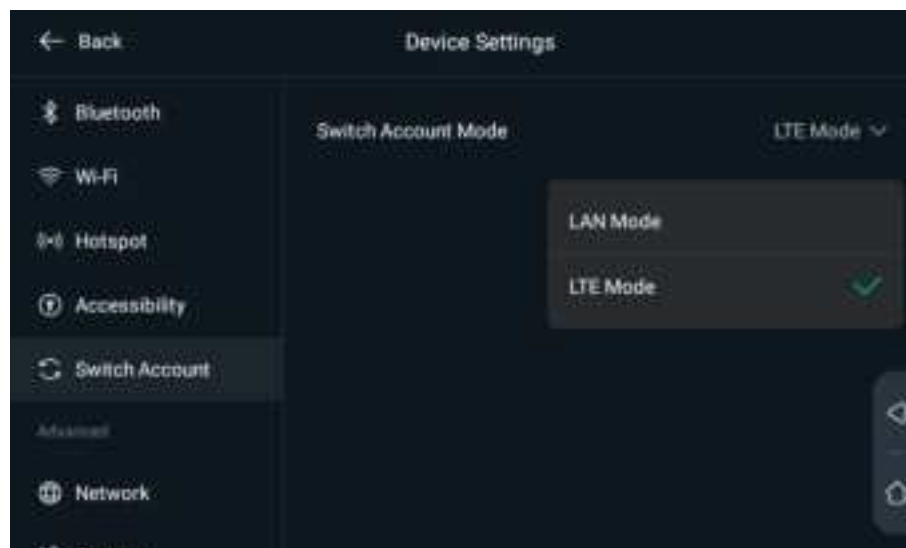

Auto-Detection


Account mode will be auto switched in few minutes once current mode is not available and another mode is available.

The phone will automatically detect available signals under the following situations:

- Available 4G signal, LTE account login failure
- No 4G signal
- Poor 4G signal
- Airplane mode enabled, unavailable 4G Signal
- Available 4G signal under LAN mode

Available 4G Signal, LTE Account Login Failure


Situation	Dialog	Operation
LTE account login failure (caused by no signal in the service area)	To register via LAN/Wi-Fi mode,the phone needs to reboot,press OK to continue.	Tap OK and the dialog disappears automatically but the phone will not switch to the LAN mode automatically.

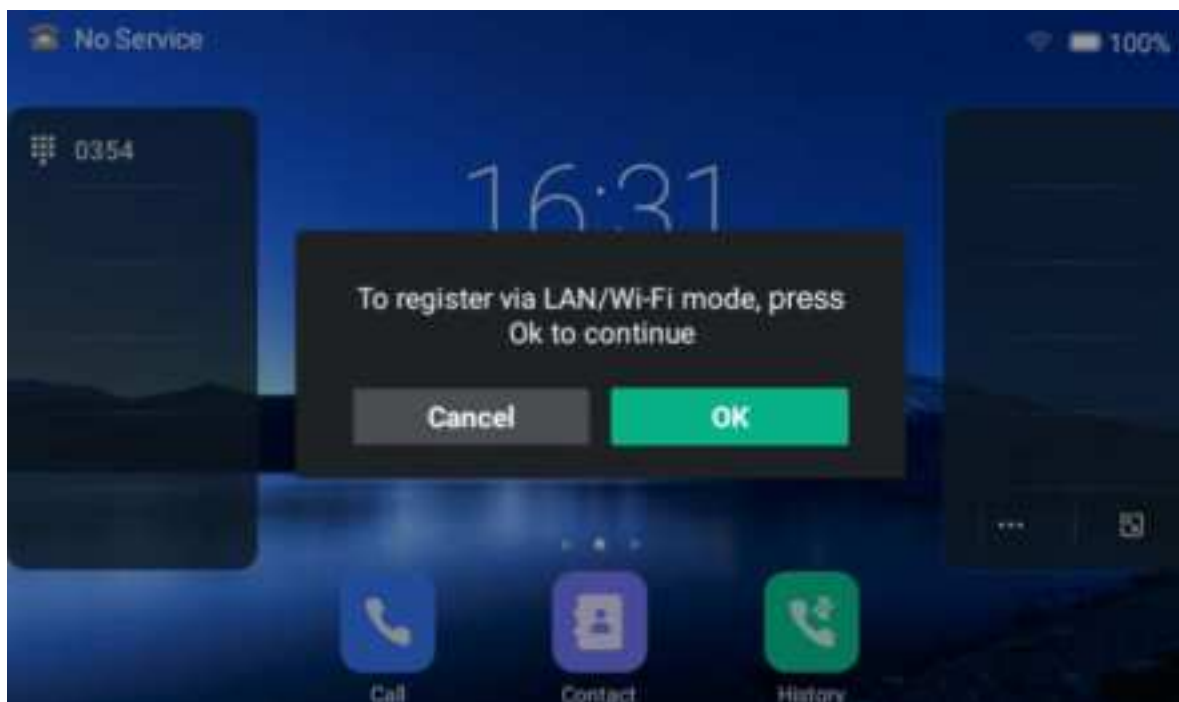

No 4G Signal

Under LTE mode, the phone has no 4G signal and the signal bars are greyed out.

Situation	Dialog	Operation
The phone is disconnected from any wired or wireless network. The phone connects to a wired or wireless network	To register via LAN/Wi-Fi mode,the phone needs to reboot,press OK to continue.	Tap OK and the dialog disappears automatically but the phone will not switch to the LAN mode automatically.

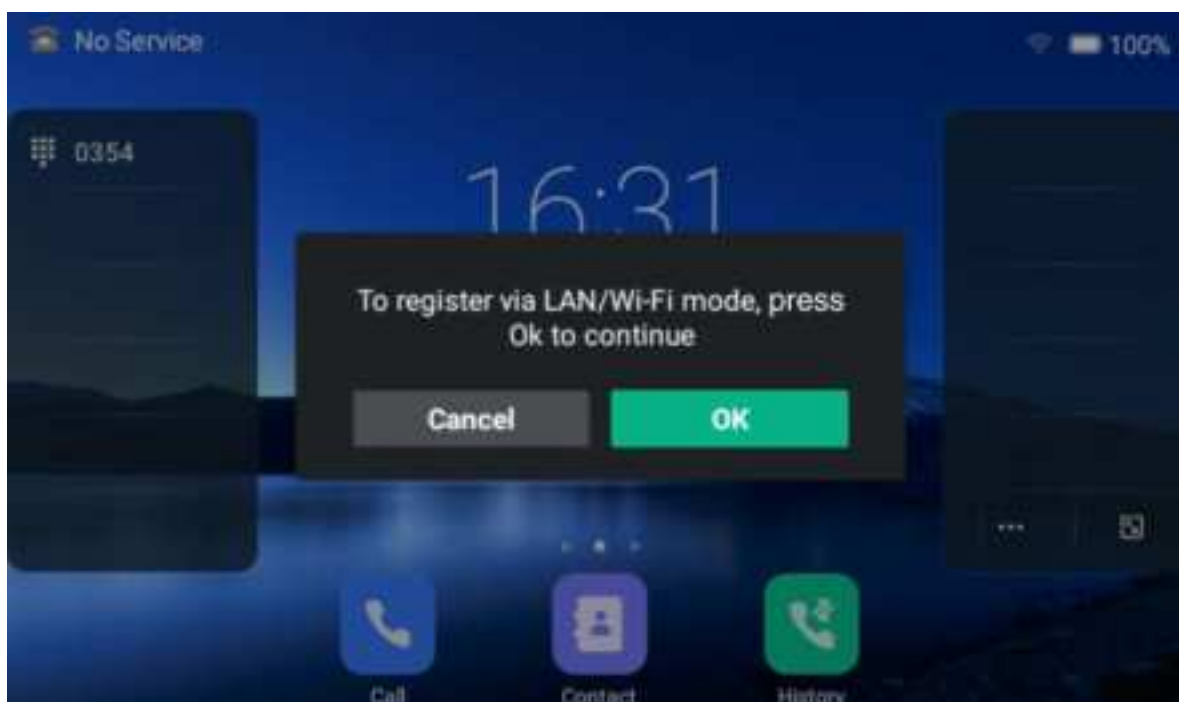

Poor 4G Signal

Situation	Dialog	Operation
The 4G signal is poor and not stable under the LTE mode	LTE Signal strength is too low for the device to properly operate. Move the phone to a better location or switch to LAN mode in the Basic Settings menu of the phone.	• Tap OK and the dialog disappears automatically. • If you do not click OK, the dialog will not disappear. • The dialog will pop up again if the phone detects the signal error after 5 minutes (the default detecting interval). • When the 4G signal is available, the dialog will disappear automatically.


Note: the criteria for poor signal is $RSRP \leq -100$ dBm & $RSRQ \leq -20$ dB & $SINR \leq 0$ dB.



Airplane Mode Enabled, Unavailable 4G Signal

- When you connect the phone to the LTE network but not the wired network, and you enable the Airplane Mode, the LTE network, the wired network, and connected Wi-Fi are all disabled.

Situation	Dialog	Operation
Connect to a wired network so the phone detects available signal	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue	- Tap OK, then the phone will reboot to switch to the LAN mode. - Tap Cancel, the dialog disappears and you are still in LTE mode with - Airplane mode enabled. If you ignore the dialog, it will not disappear.
When you unplug then plug the network cable so the device detects available signal again	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue	- Tap OK, then the phone will switch to the LAN mode. - Tap Cancel, the dialog disappears and you are still in LTE mode with - Airplane mode enabled. If you ignore the dialog, it will not disappear.
Connect to Wi-Fi	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue	- Tap OK, then the phone will switch to the LAN mode. - Tap Cancel, the dialog disappears and you are still in LTE mode with - Airplane mode enabled. If you ignore the dialog, it will not disappear.

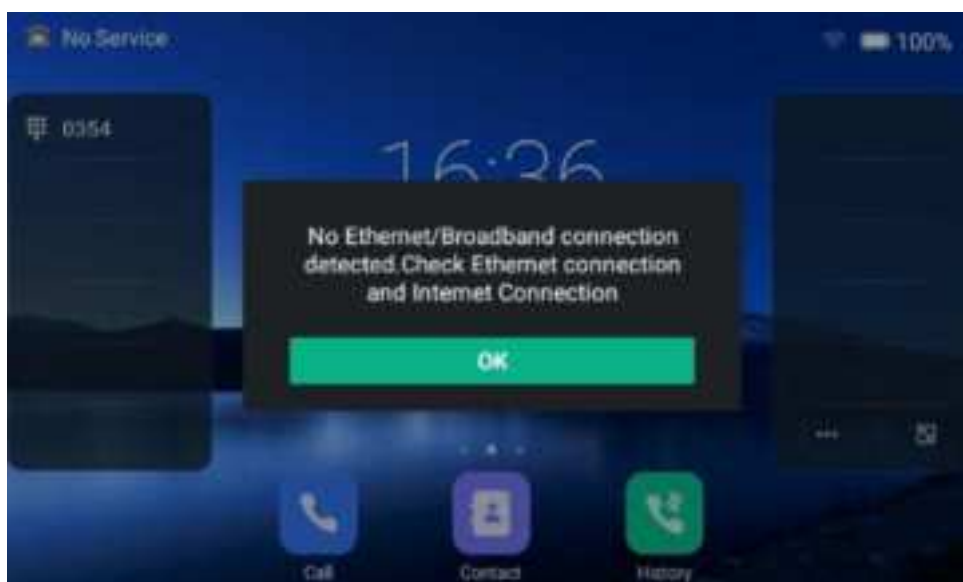


- When you connect the phone to both the LTE network and the wired network, and you enable the Airplane Mode, both the LTE network and the wired network are disabled.

Situation	Dialog	Operation
When the phone detects available LAN signal	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue.	• Tap OK, then the phone will switch to the LAN mode. • Tap Cancel, the dialog disappears and you are still in LTE mode with Airplane mode enabled. • If you ignore the dialog, it will not disappear.
When you unplug then plug the network cable so the device detects available signal again	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue.	• Tap OK, then the phone will switch to the LAN mode. • Tap Cancel, the dialog disappears and you are still in LTE mode with Airplane mode enabled. • If you ignore the dialog, it will not disappear.
Connect to Wi-Fi	To register via LAN/ Wi-Fi mode, the phone needs to reboot, press OK to continue.	• Tap OK, then the phone will switch to the LAN mode. • Tap Cancel, the dialog disappears and you are still in LTE mode with Airplane mode enabled. • If you ignore the dialog, it will not disappear.

- The Airplane mode is still enabled after the phone reboots.

Situation	Dialog	Operation
When the phone detects available LAN signal	To register via LAN/Wi-Fi mode, the phone needs to reboot, press OK to continue.	- Tap OK, then the phone will switch to the LAN mode. - Tap Cancel, the dialog disappears and you are still in LTE mode with Airplane mode enabled. - If you ignore the dialog, it will not disappear.

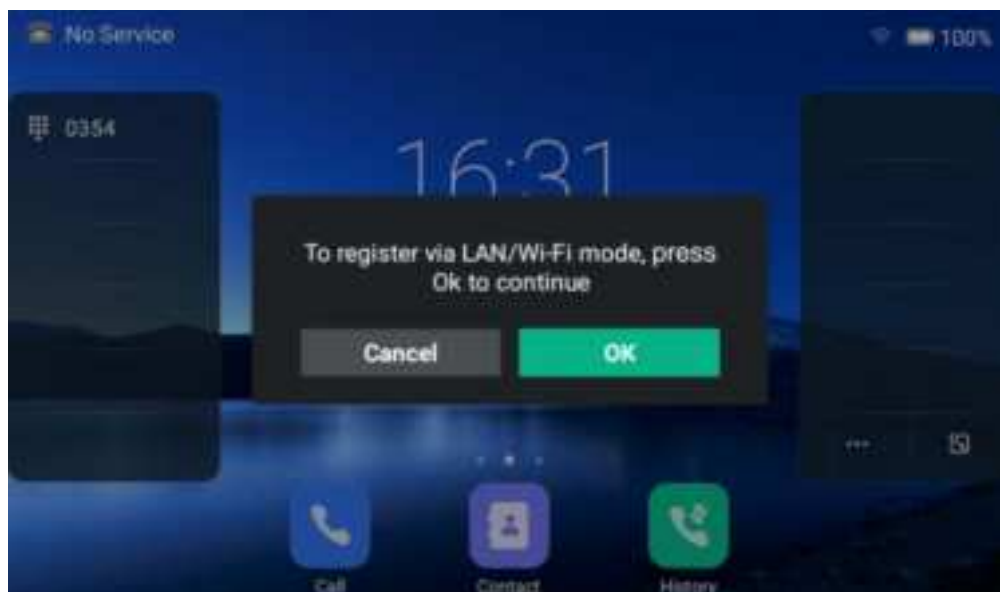


Available 4G Signal under LAN Mode

Prerequisites

1. Airplane mode is disabled.
2. The phone is under LAN mode.
3. Your administrator has enabled the mode detecting feature, which allows the phone to automatically detect the 4G signal under LAN mode.

Situation	Dialog	Operation
The phone detects that at least 3 bars of 4G signal are available	4G signal detected, do you want to continue using Ethernet/Wi-Fi or The phone detects that at least 3 switch over to LTE?	- Tap Yes, then the phone will switch to the LTE mode. - Tap No, the dialog disappears and you are still in LAN mode. - If you ignore the dialog, it will not disappear.

Situation	Dialog	Operation
The phone detects that at least 3 bars of 4G signal are available after rebooting	4G signal detected, do you want to continue using Ethernet/Wi-Fi or The phone detects that at least 3 switch over to LTE?	• Tap Yes, then the phone will switch to the LTE mode. • Tap No, the dialog disappears and you are still in LAN mode. • If you ignore the dialog, it will not disappear.

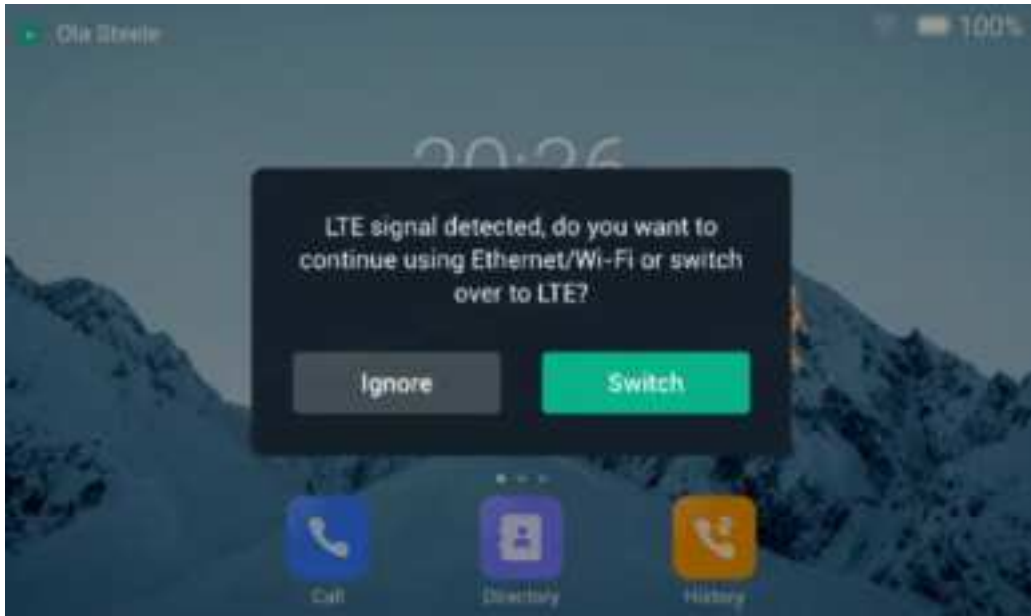

Prerequisites


1. The dialog will pop up only when the phone is idle. It will not pop up when you are having a call, upgrading the phone, or under other situations.
2. If you ignore the dialog, the dialog will disappear automatically when the phone detects no available 4G signal. Otherwise, it will not disappear.
3. The phone will detect the signal at the interval your administrator sets. If the 4G signal is available again, the dialog will pop up again.

Navigation Bar

You can improve the interface experience by customizing the navigation bar, making it easier to access and customize the layout according to your personal preferences.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Display > Navigation Bar > Navigation Bar Position.
3. Select the position according to your needs.

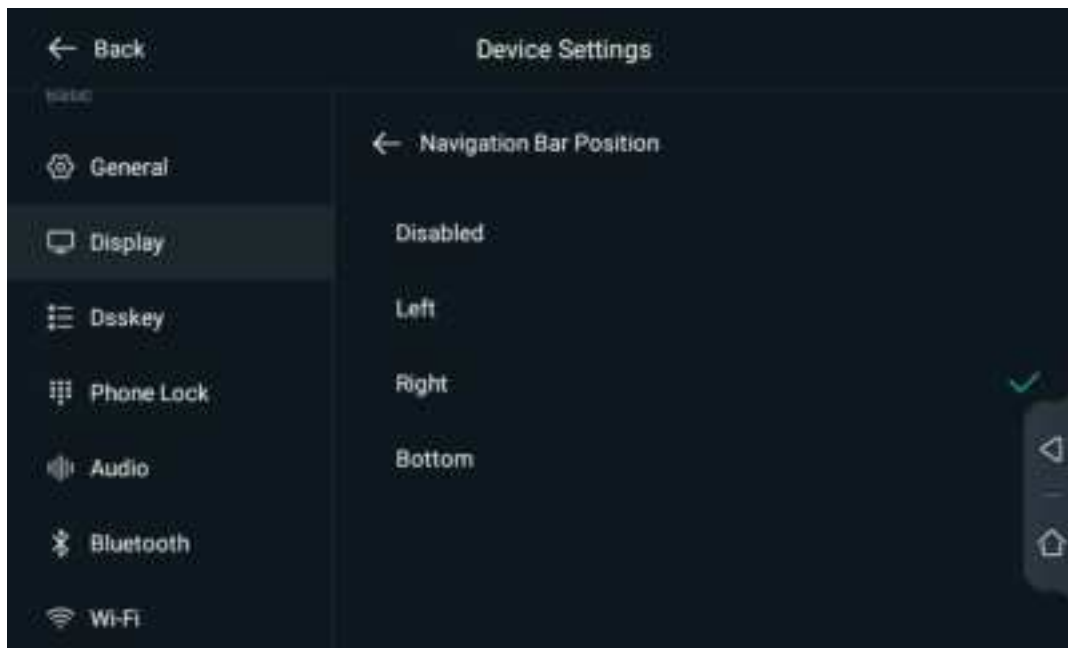

Call Features

You can use the phone to place and answer calls, ignore incoming calls, transfer a call to someone else, conduct a conference call and perform other basic call features.

Place Calls

You can use your phone like a regular phone to place calls in many ways easily.

Place a Call from the Dialer

The Dialer enables you to enter a number to place a call, and it displays a list of previously placed calls or contacts in your directory.

You can also select the desired contact from the search list, the placed call list or Directory.

Procedure

1. Do one of the following:
 - Start typing a phone number.
 - Tap the desired line key.
 - Pick up the handset, press the Speakerphone key or the Headset key.
2. Enter a number.
3. Tap .

Place Multiple Calls

When you are in a call, you can hold your current call and place a new call.

Procedure

1. Do one of the following:
 - Select a line key. The active call is placed on hold.
 - Press the Hold key or tap Hold to place the original call on hold. Tap New Call.
2. Enter the desired number or select a contact.
3. Tap .

Redial a Number

The phone keeps a record of all the placed calls. You can recall the contact you recently called.

Procedure

1. Press the Redial key.

The phone screen displays the placed calls list.
2. Tap the desired record.

Tip: Press the Redial key twice to recall the contact you called.

Place an International Call

You can place calls to international phone numbers on your phone.

Procedure

1. Long press digit key 0 on the phone keypad until the plus sign (+) appears.
2. Enter the phone number with the country code.
3. Tap .

Place a Call from the Call History

You can place calls to contacts from the History list, which contains the calls that were recently placed, answered, missed, or forwarded.

Procedure

1. Tap History.

The phone screen displays all call records.
2. Select the desired call list.
3. Tap the desired entry.

Place a Call from the Directory

You can place a call to a contact directly from your directory.

Procedure

1. Tap Contact.
2. Select the desired directory.
3. If the contact was added to a specified contact group, you can select the desired contact group.
4. Tap the desired contact.

If the selected contact has multiple numbers, tap the desired number to dial out.

Answer Calls

When you receive a call, you can choose to answer it manually or automatically.

Answer a Call

When you receive an incoming call, the phone rings and the screen displays the information of the incoming call. You can choose to answer the incoming call.

Procedure

1. Do one of the following:

- Pick up the handset.
- Press the Speakerphone key.
- Press the Headset key.
- Tap .

The call is answered in the speakerphone (hands-free) mode by default.

Answer a Call When in a Call

You can answer a call when there is already an active call on your phone.

When you are in an active call and an incoming call arrives on the phone, a call waiting tone beeps, and the incoming call information is displayed.

Procedure

1. Tap .

The active call is placed on hold, and the incoming call becomes active.

Switch Among the Handset, Speakerphone and Headset Modes

You can select the desired mode before Place a call or can alternate among Speakerphone, headset, and handset modes during a call.

When using the speakerphone or the headset, the LED indicator glows green.

Procedure

1. During the call, pick up the handset, press the Speakerphone key, or press the Headset key.

For example, if you're using the handset, press the Headset key to switch to the headset, or press the Speakerphone key to switch to the speakerphone.

Switch Between Calls Screen and Idle Screen

During the call, you can access other applications to confirm some issues. After the operation, you can return to the call conveniently.

Go Back to the Idle Screen during a Call

During the call, you can go back to the idle screen to access other applications.

Procedure

Do one of the following:

- Swipe up from the bottom of the talking screen to go back to the idle screen.
- Tap .

Return to the Talking Screen

After going back to the idle screen, you can return to the talking screen as long as the call is not ended.

Procedure

Tap the call duration mini window on the idle screen.



Capture a Screenshot

You can capture a screenshot when the phone is idle or during a call.

The screenshots are saved in “*.png” format in the internal SD card with the name consisting of a prefix “Screenshot” and date & time stamp. You can view the screenshots by **FileManager** or **Gallery**.

Tip: You can view the screenshots on either the phone itself or on a computer using an application capable of viewing “*.png” files.

Capture a Screenshot When the Phone is Idle

You can capture the screenshot when the phone is idle for saving the favorite picture or picture needed.

Procedure

1. Swipe down from the top of the screen.
2. Tap Screenshot.
3. You can select a specific area or capture the full screen. Once you’ve chosen the area, you can either Copy or Save the image.



If the screenshot is successfully saved, a notification “Save to local” displays on the screen.

If there is no enough space in internal SD card, you cannot save the screenshot, and the notification center will display a notification “Couldn’t capture screenshot.”.

Capture a Screenshot during a Call

You can capture the screenshot during a call for saving the favorite picture or picture needed.

Procedure

1. Swipe down from the top of the screen.
2. Tap Screenshot.

If the screenshot is successfully saved, a notification “Save to local” displays on the screen.

If there is no enough space in internal SD card, you cannot save the screenshot, and the notification center will display a notification “Couldn’t capture screenshot.”.

Silence or Reject Incoming Calls

When you receive an incoming call, you can choose to silence or reject the call instead of Answer.

Silence a Call

You can silence a call to stop your phone from ringing. Even if you silence the call, the incoming call notification continues to be displayed on your phone.

Procedure

1. Tap Silence.

Reject a Call Manually

You can reject a call manually, and the call may be sent to voice mail. The rejected calls are displayed in the Received Calls list in your History list.

Procedure

1. Tap Ignore.

Reject Calls with Do Not Disturb (DND)

You can enable DND to reject all incoming calls automatically when you do not want to be interrupted.

Procedure

1. Swipe down from the top of the screen.
2. Tap the DND.



Deactivate DND

You can deactivate DND when you are ready to resume receiving calls again.

Procedure

1. Do one of the following:
 - Swipe down from the top of the screen and tap the DND.
 - Tap Exit DND mode on the idle screen.

The DND icon disappears from the status bar.

End Calls

You can end the current call at any time.

Procedure

1. Do one of the following:
 - If you are using the handset, tap End Call or hang up the handset.
 - If you are using the headset or the speakerphone, tap End Call.

Mute/Unmute Audio

When you are in a call, you can mute the audio, so that you can hear the other person, but they cannot hear you.

Procedure

1. Press the Mute key or tap Mute during a call.
The mute key LED glows red.
2. Press the Mute key again or tap UnMute to unmute the call.
The mute key LED goes out.

Keep Mute

In a meeting room, if incoming calls are answered automatically on your phone, callers may hear your discussion with your colleagues. You can keep the phone in mute to prevent this unintended situation.

The mute state of your phone persists across calls. The phone stays in the mute state until you unmute the microphone manually or until the phone restarts.

Before You Begin

Check with your system administrator if keep mute is configured on your phone.

Procedure

1. Press the Mute key when the phone is idle.
The mute key LED glows red, and the mute icon appears on the idle screen.
2. Press the Mute key again to deactivate the mute state.

Hold and Resume Calls

You can place an active call on hold and resume the call when you are ready. When you place a call on hold, the held party may hear the music played by its sever.

Hold a Call

You can place an active call on hold on your phone.

Procedure

1. Press the Hold key or tap Hold during a call.
- Note: When you have multiple calls on the phone and the current call is held, you can tap the call directly to swap to the active call.

Resume a Held Call

You can view and resume a held call on the phone.

Procedure

1. Press the Hold key or tap Resume.
- If multiple calls are placed on hold, select the desired call first.

Note: When you have multiple calls on the phone and the current call is active, you can tap the call directly to swap to the held call.

Transfer Calls

During a call, you can transfer the call to another contact.

You can use one of three ways:

- **Direct Transfer:** Transfer a call directly to the third party without consulting.
- **Consultative Transfer:** Transfer a call with prior consulting.

Perform a Direct Transfer

You can transfer a call to another contact immediately without consulting with her/him first.


Perform a Direct Transfer Normally

You can enter the number, or select a contact from directory or history to perform a blind transfer.

Procedure

1. Press the Transfer key or tap More > Transfer during a call.
2. Do one of the following:
 - Enter the number you want to transfer the call to, and press the Transfer key or tap Direct to complete the transfer.
 - Select Contact, and select the desired contact, then press the Transfer key or tap Direct to complete the transfer.
 - Select History, and select the desired list, then press the Transfer key or tap Direct to complete the transfer.


The phone will prompt a dialog box as the following shows:

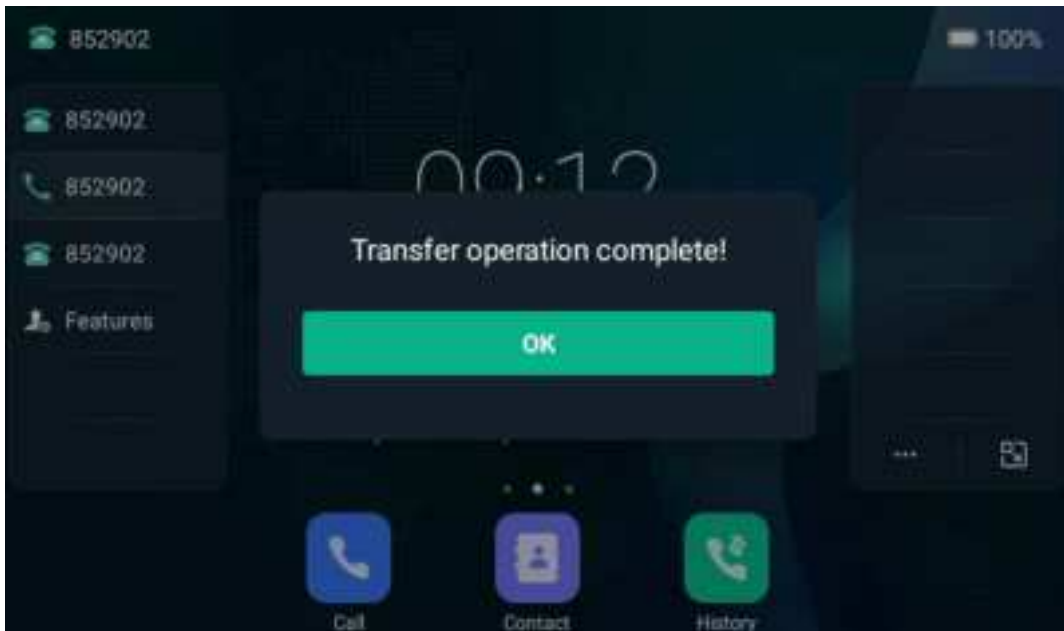

Perform a Direct Transfer Conveniently

Procedure

You can perform a blind transfer conveniently by tapping the speed dial key on the line list.

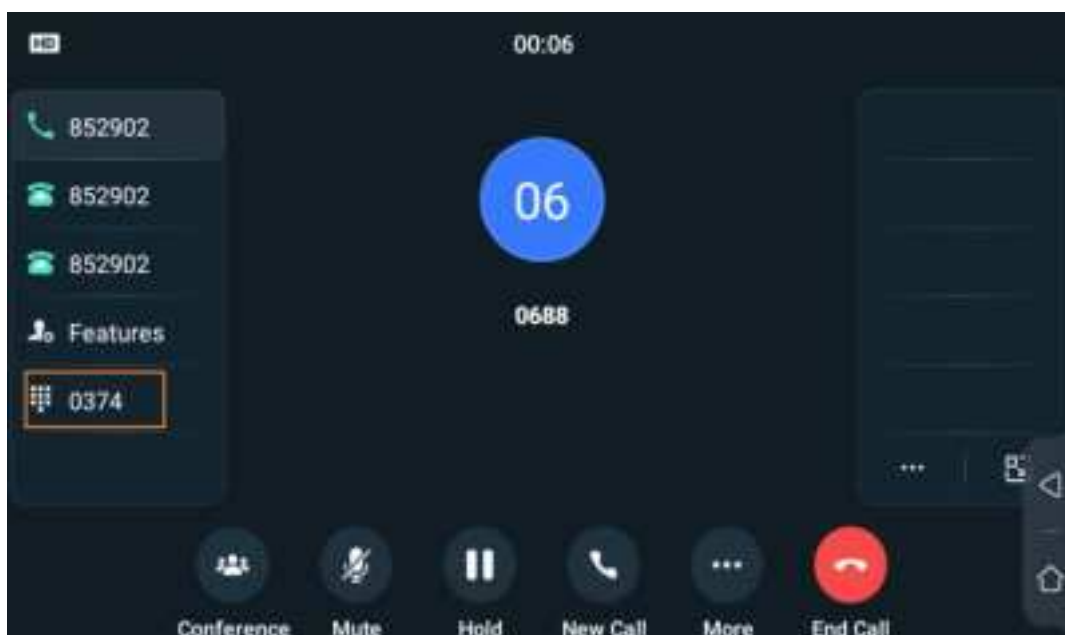

Perform a Consultative Transfer

You can transfer calls to other contacts immediately when receiving ringback or after consulting with them first.

Procedure

1. Press the Transfer key or tap More > Transfer during a call.
2. Do one of the following:
 - Enter the number you want to transfer the call to, and then tap Consult to dial out.
 - Select Contact, and select the desired contact, and then tap Consult to dial out.
 - Select History, and select the desired list, and then tap Consult to dial out.
3. Do one of the following:
 - When you hear the ringback tone, press the Transfer key or tap Transfer to finish the semi-attended transfer.
 - After the contact answers the call, press the Transfer key or tap Transfer to finish the attended transfer (consultative transfer).

Tip: If you are using a handset, the transfer can be completed by hanging up the handset.

Conference Calls

The phone supports creating local conference and network conference.

During the conference, follow these tips:

- Use the handset or a headset if you're in an open environment.
- Mute your microphone when you are not speaking, especially in noisy environments.
- Avoid tapping or rustling papers near the microphone.
- Speak in your normal voice without shouting.

Local Conference

You can create up to six-way local conference.

Set Up a Local Conference Call

Procedure


1. Place a call to the first party.
2. Tap Conference to place a new call.
The active call is placed on hold.
3. Dial the second party's number.
4. When the second party answers the call, tap Conference; then the first and second party will be add to the conference.
5. Repeat the above steps to add more parties to the conference.

Merge Two Calls into a Conference

You can invite a held call into a conference call with the active call.

Procedure

1. Place two calls on the phone.
2. Tap Calls icon at the bottom left, and then tap Merge in the pop-up window.

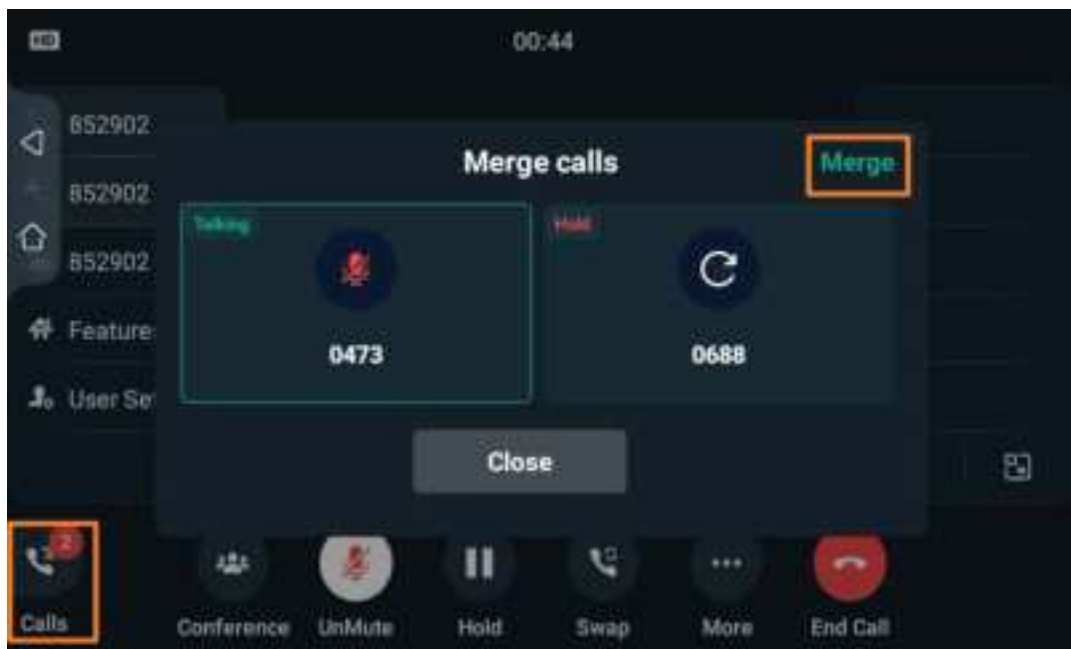

Hold or Resume a Conference Call

When you place a conference call on hold, other participants cannot hear each other until you resume the held conference call.

Procedure

1. Press the Hold key or tap Hold to place the conference on hold.
2. Press the Hold key again or tap Resume to resume the held conference call.

Mute or Unmute a Conference Call

When you mute the local microphone during a conference call, other participants can hear each other except you.

Procedure

1. Press the Mute key or tap Mute to mute the conference.
2. Press the Mute key or tap Mute again to unmute the conference.

Manage Conference Participants

You can manage the conference participants to make the conference more flexible. This is only available with Bluetooth paired mobile phone as participant.

Procedure

1. Tap More > Manage, you can do the following:
 - Tap  to mute the party. The muted party can hear everyone, but no one can hear the muted party.
 - Tap  to hold the party. The held party cannot hear anyone, and no one can hear the held party.
 - Tap  to remove the party from the conference call.

End a Conference Call

When you  end the conference call, the other parties drop the call.

However, the system administrator can set up your phone so that the other two parties remain connected when you end the conference call.

Procedure

1. Tap End Call.

Call Recording

You can record up to 12 hours in one file. By default, the recorded files are saved in the internal SD card.

But if there is a USB flash drive connected to the rear USB port of your phone, the recorded files will be saved in the storage device according to the priority: USB flash drive>internal SD card.

Record a Call

You can record the important parts during an active call.

It is also very important to inform all the call parties that you are recording and ask for their consent before recording the conversation.

Procedure

1. During a call, tap More > Record.

The phone screen displays a recording icon and recording duration.

Record a Conference

You can record conference calls in the same way as other calls. All conference participants are recorded while recording.

The following lists exceptions:

- If one of the participants holds the conference call, only that participant is recorded. When a conference call is placed on hold, recording of the conference is paused. You can place or answer other calls, which will be recorded in the same file. When the conference call is resumed, recording of the conference resumes.
- If one of the participants mutes the conference call, only that participant is not recorded.

Set a Mark When Recording a Call

You can set a mark when recording a call to mark the special moment. And there will be a red flag on this moment when playing the recorded file so that you can drag to the moment quickly.

Procedure

1. Select  Mark.

The icon changes to  Mark+1, the number will increase if you set more marks.

Stop a Recording

You can stop recording a call before the call ends. The recording also stops when the active call ends. The recording will be saved as a “*.aac” file in the internal SD card or the USB flash drive automatically.

Procedure


1. Do one of the following:

- Tap More > Stop during a call.
The recording icon and recording duration disappears. The screen prompts a message that the call is recorded successfully.
- Tap End Call.
The recording icon and recording duration disappears, and the phone returns to the idle screen. The screen prompts a message that the call is recorded successfully.

Check Storage Space

You can check the total space or available space of the phone or connected USB flash drive. Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > About > Data Storage Information.

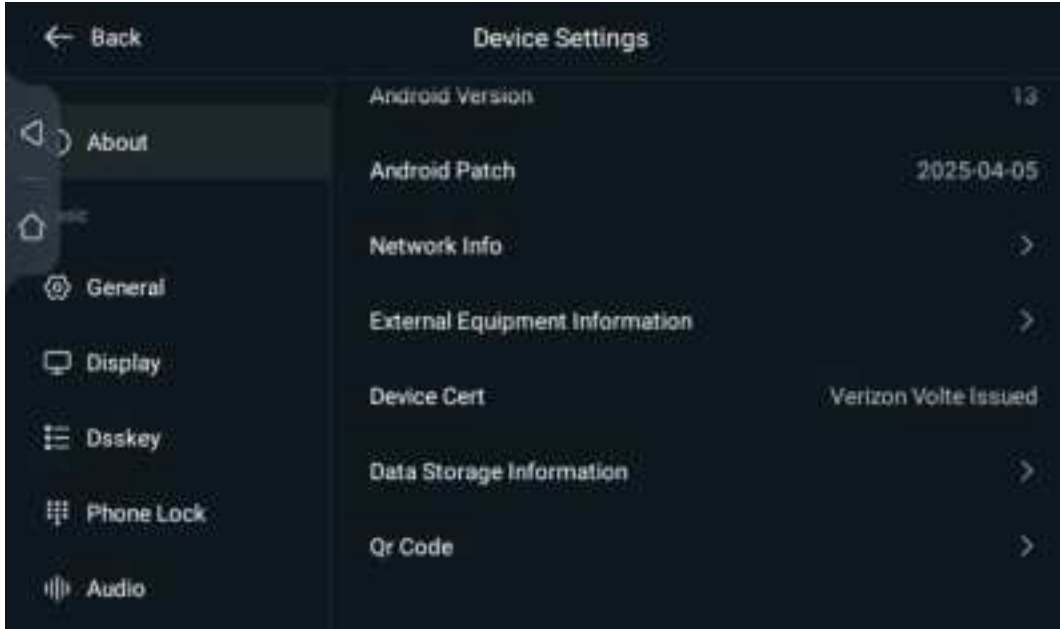

Advanced Call Features

Call Pickup

You can use call pickup to answer someone else's incoming call on your phone.

The phone supports the following two call pickup features:

- Directed Call Pickup: allows you to pick up incoming calls to another phone.
- Group Call Pickup: allows you to pick up incoming calls to any phone within a predefined group.

Pick up a Call Directly

You can answer a call that rings on another phone.

Before You Begin

The target phone receives an incoming call. Your system administrator has enabled the directed call pickup and set the directed call pickup code.

Procedure

1. Dial a FAC followed by an extension (for example, *974605) to pick up a call directed to another user.

Pick up a Group Call Directly

When any phone within a predefined group receives an incoming call, you can pick up that call on your phone. If there are multiple incoming calls on the group at the same time, you can only pick up the first incoming call.

Before You Begin

Your system administrator has enabled the group call pickup and set the group call pickup code.

Procedure

1. Dial a FAC followed by an extension (for example, *984605) to pick up a call when any phone in the group receives an incoming call.

Call Park and Call Retrieve

You can park a call, and then retrieve the call either from your phone or another phone. After parked, the call is placed on hold, you can continue the conversation after retrieving it.

Note: Call park is not available on all servers. Check with your system administrator to find out if it is available on your phone.

Park or Retrieve a Call

You can park the call to the local extension or the desired extension through the “Park” button in the phone screen

Procedure

1. During a call, tap More > Park.
The phone will dial the call park code which is pre-configured.
2. Do one of the following:
 - If you want to park the call against the local extension, press the # key.
 - If you want to park the call against the desired extension, enter the extension (for nexample, 4606) where you want to park the call and press the # key.
 - If the call is parked successfully, you will hear a voice prompt that the call is parked.

Retrieve a Parked Call

You can retrieve a parked call from any phone within your network.

Procedure

1. Pick up the handset, press the Speakerphone key or tap the line key.
2. Select Retrieve Park on the dialing screen.
The phone will dial the park retrieve code which is configured in advance.
3. Follow the voice prompt to retrieve:
 - Press the # key on the phone where the call is parked.
 - Enter the desired extension followed by # (for example, 4606#) on any phone.

Voice Mail

Voice mail feature allows you to leave voice mails for someone

Listen to Voice Mails

You can listen to your voice mails on the phone, to obtain a voice information sent by a contact.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap Voice Mail.
3. Select View Voice Mail.

The phone screen displays the amount of new voice mails. You can tap the account to listen to voice mails.

Tip: When the phone prompts that the phone receives a new voice mail, you can press the Message key or tap Connect to dial out the voice mail access code directly.


Short Message Service (SMS)

You can use this feature to send or receive messages.


Note: If your administrator has enabled the Multimedia Messaging Service (MMS) feature, you can check the SMS in the Voice Mail APP.

Send Messages

1. Go to Voice Mail > Text Message > New Message.

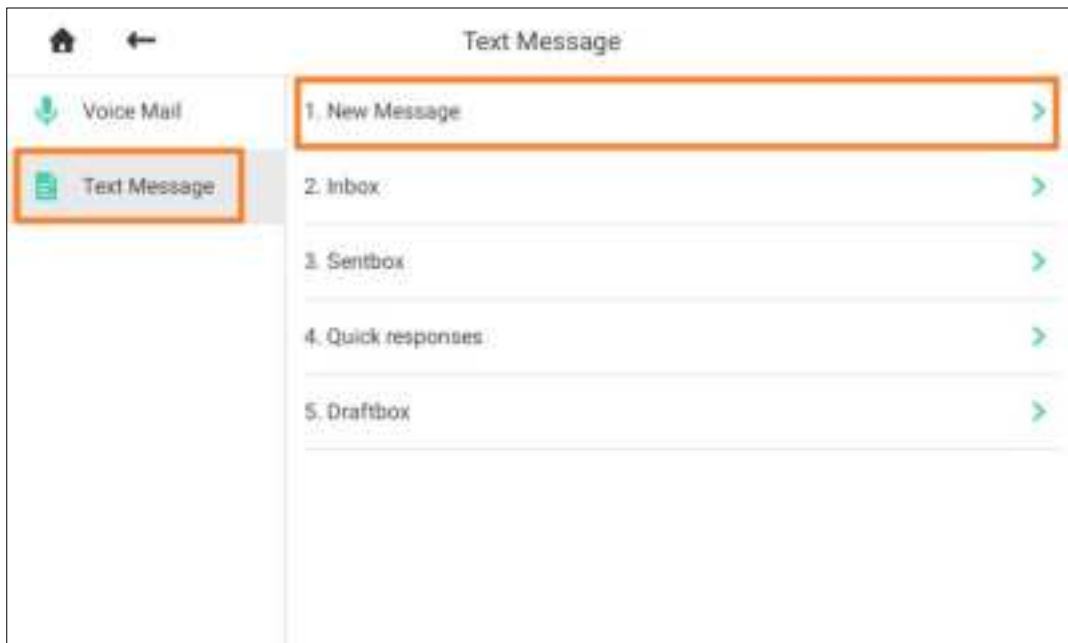

2. Enter the target number in the To field and the desired text in the input box on the New Message page.

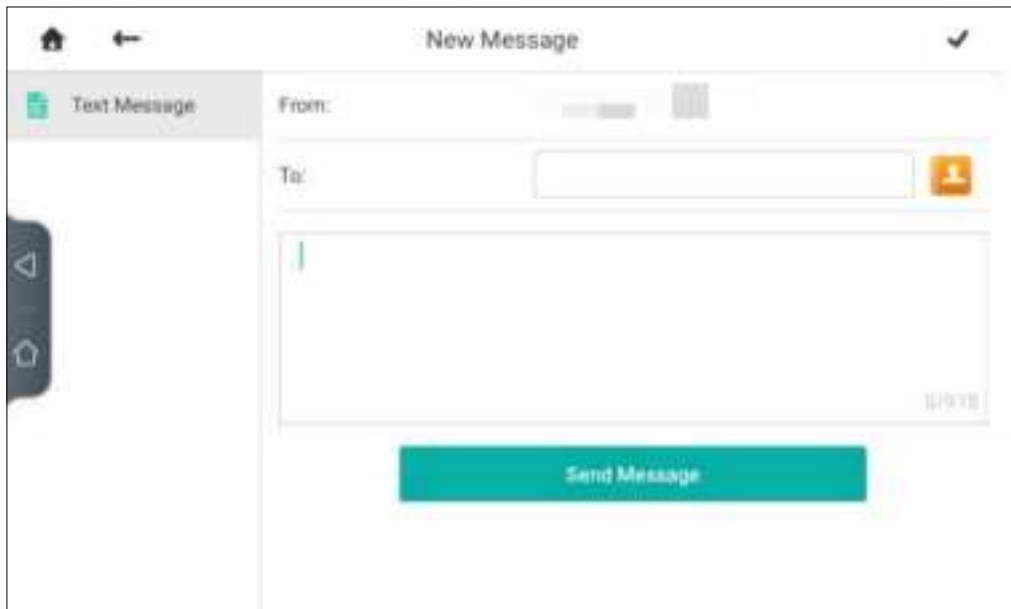


3. Tap Send Message to send a message.

If the message is successfully sent, the page prompts success and the target person will receive a message.

Receive Messages

1. When you receive a message, the page is displayed as below:

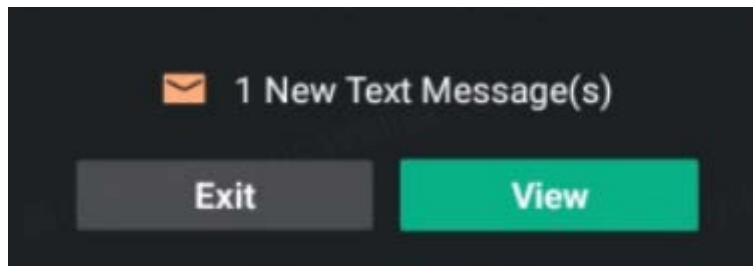

2. Do one of the following:

- Tap View to view the message details.
- Tap Exit to return to the idle page if you are busy at that time.
You can tap Voice Mail > Text Message > Inbox to view the message when you are available.
The green message icon means you have a new, unread message. This will turn grey after you read the message.

View the Sent Box

Go to Voice Mail > Inbox , and you can view the messages sent from this phone.


View the Draft Box

Go to Voice Mail > Text Message > Draftbox, and you can view the unsent but saved messages.



Quick Reply

When reading the received message, you can tap Quick replies to go to the Quick responses page and select the desired text to reply.

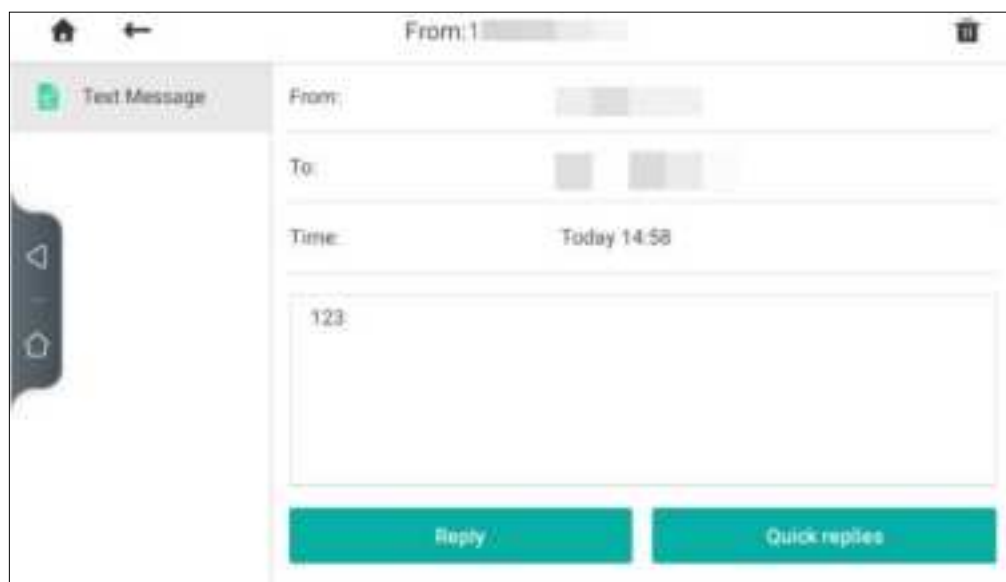

Receive Multimedia Messages

When you receive a multimedia message, an icon  will appear in the status bar on the top right corner of the phone screen. To view the message, you can swipe down on the screen and tap the notification, or you can tap  directly to access the message.

Directory

The phone provides several types of phone directories, which can be customized by your system administrator.

Local Directory

You can store up to 1000 contacts and 48 groups in your local directory, you can search, add, edit and delete a contact.

Manage the Local Directory Groups


You can manage the Local Directory groups when the phone is idle.

Add Contact Groups

To organize your contacts and make them easier to find, you can add additional groups in the Local Directory.

Procedure

1. Tap Contact.
2. Tap Add Group.
3. Enter the desired group name.
4. Save the change.

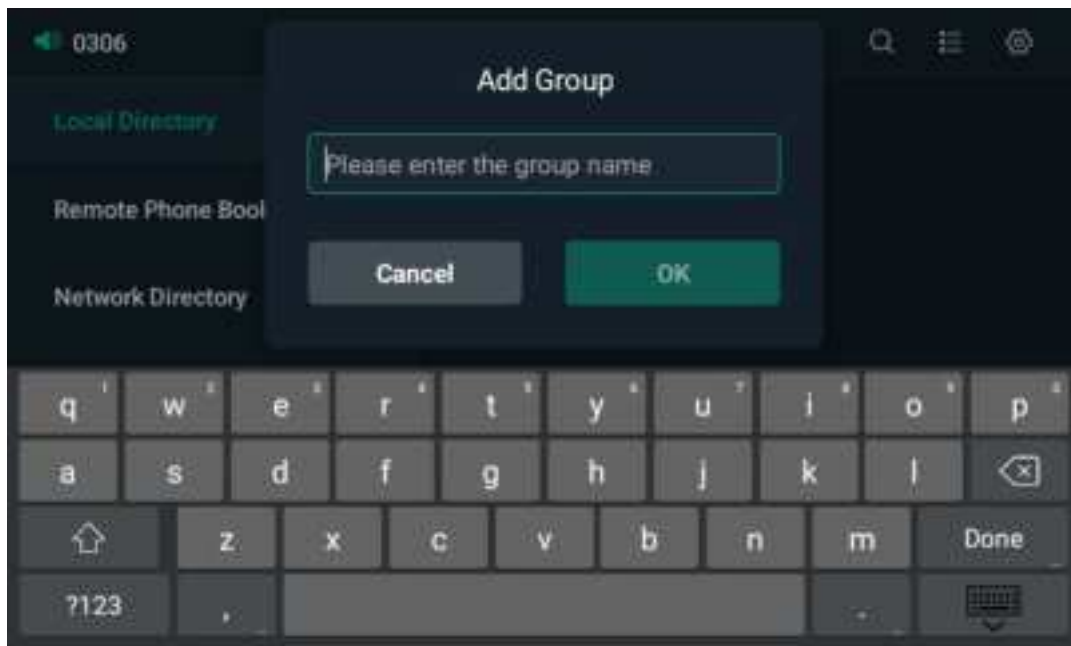


Edit Contact Groups

You can change or add the group's information.

Procedure

1. Tap Contact.
2. Select the desired group and then tap .
3. Tap Rename to edit the group name.
4. Save the change.

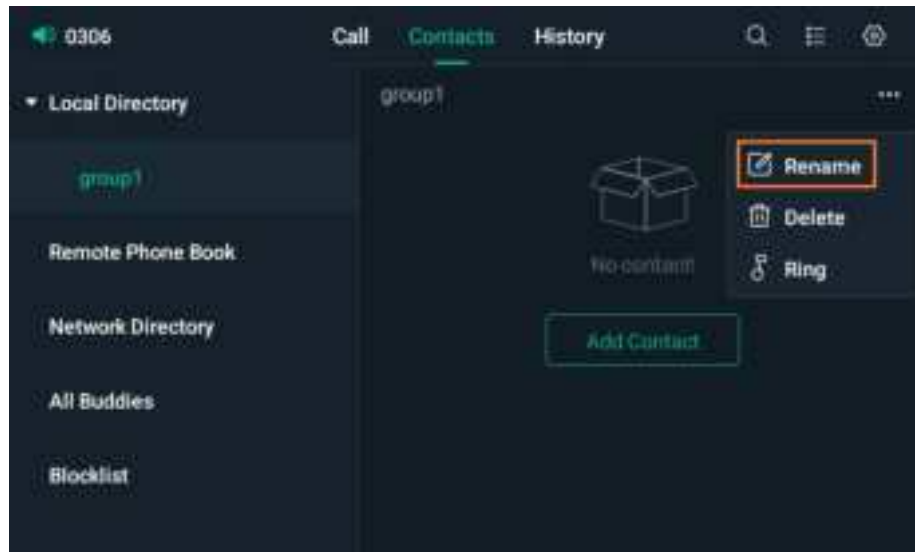


Delete Contact Groups

When you delete a contact group, the contacts in the group will not be deleted. You can view the contacts in All Contacts list.

Procedure

1. Tap Contact.
2. Select the desired group and then tap .
3. Tap Delete to delete the group.
The phone prompts you to delete the group or not.
4. Select OK.

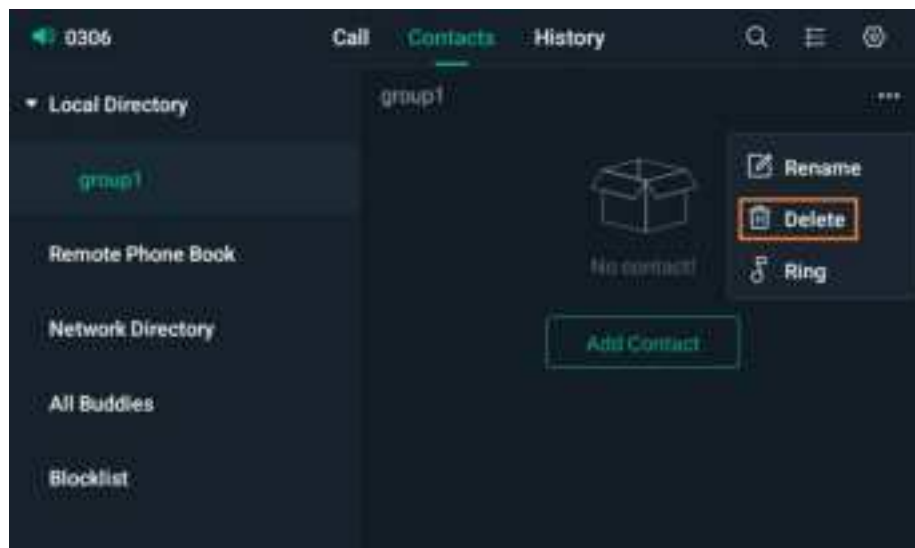

Manage the Local Directory Contacts

You can manage the Local Directory contacts when the phone is idle.

Add Contacts

When you add a contact to your local directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

Procedure

1. Tap Contact.
2. Select .
3. Enter your contact's information.
4. Select the desired account from the Account field.
5. Save the change.

View Contacts

You can view the local contacts from the Local Directory on your phone.

Procedure

1. Tap Contact.
- The contact names are displayed in alphabetical order.

Edit Contacts

You can update your contacts' information.

Procedure

1. Tap Contact.
2. Select the desired contact, and then tap .
3. Edit the contact information.
4. Save the change.

Delete a Contact

You can delete any contact from the Local Directory.

Procedure

1. Tap Contact.
2. Do one of the following:
 - Select the desired contact, and then tap  > .
 - Tap  and select the desired contact, and then tap Delete.

The phone prompts you to delete the contact or not.

3. Tap OK.

Delete All Contacts

You can delete all contacts from the Local Directory.

Procedure

1. Tap Contact.
2. Tap .
3. Tap Select All > Delete.

The phone prompts you to delete all contacts or not.

4. Select OK.

Move a Local Directory Contact to Blocklist

You can move a contact in the local directory to blocklist. Incoming calls from this contact will be rejected automatically.

Procedure

1. Tap Contact.
2. Tap .
3. Tap Select All.
4. Select Move to Blocklist.

The phone prompts you to move this contact to the blocklist or not.

5. Select OK.

Search for Contacts

In the Local Directory, you can enter search criteria to find your desired contact quickly.

Procedure

1. Tap Contact.
2. Do one of the following:
 - Tap . Enter your search criteria in the search field.
 - Select the desired letter (for example, T) along the right side to jump to contacts whose names start with T or t.

Blocklist

Incoming calls from the blocklist are rejected automatically. You can store up to 30 contacts in the Blocklist to block unwanted callers.

Add a Blocklist Contact

You can add a blocklist contact on the phone to prevent someone from calling you.

Procedure

1. Go to Contact > Blocklist.
2. Tap .
3. Enter the blocklist contact's information.
4. Save the change.

View Blocklist Contacts

You can view the blocklist contacts from the Blocklist on your phone.

Procedure

1. Go to Contact > Blocklist.

Edit a Blocklist Contact

You can update your blocklist contacts' information.

Procedure

1. Go to Contact > Blocklist.
2. Select the desired contact, and then tap .
3. Edit the blocklist contact information.
4. Save the change.

Delete Blocklist Contacts

You can delete one or all blocklist contacts. If a contact is removed from the Blocklist, you can answer the call from the contact normally.

Delete a Blocklist Contact

If you want to answer a call from a specific contact, you need to remove it from the Blocklist.

Procedure

1. Go to Contact > Blocklist.
2. Do one of the following:
 - Select the desired contact, and then tap  > .
 - Tap  and select the desired contact, and then tap Delete.

The phone prompts you to delete the contact or not.

3. Tap OK.

Delete All Blocklist Contacts

You can delete all contacts from the Blocklist when you are ready to answer calls from them again.

Procedure

1. Go to Contact > Blocklist.
2. Tap .
3. Tap Select All > Delete.

The phone prompts you to delete all contacts or not.

4. Select OK.

Move a Blocklist Contact to the Local Directory

You can move a blocklist contact to the local directory. Incoming calls from this contact will not be rejected automatically.

Procedure

1. Go to Contact > Blocklist.
2. Tap .
3. Tap Select All.
4. Select Move.

The phone prompts you to move the contact to the local directory or not.

5. Select OK.

Mobile Contacts

You can synchronize the contacts on your mobile phone to your device. The mobile phone contacts will be imported to your device and stored under the Mobile Contacts directory.

You can save mobile contacts to the local directory, but you cannot save a local contact to the Mobile Contacts directory.

Note: If you disconnect the Bluetooth-enabled mobile phone from phone or disable the phone to synchronize phone contacts, the mobile contacts will not be displayed.

Save a Mobile Contact to the Local Directory

You can save any mobile contact to the Local Directory, to conveniently call this contact after disconnecting the mobile phone from the phone.

Before You Begin

Make sure your Bluetooth-enabled mobile phone has been paired with your IP phones, and mobile contact sync feature is enabled.

Procedure

1. Go to Contact > Mobile Contacts.
2. Select the desired contact.
3. Select Local Directory from the Group field.
4. Edit the contact information.
5. Save the change.

Search for Mobile Contacts

In Mobile Contacts, you can enter search criteria to find your desired mobile contact quickly.

Before You Begin

Make sure your Bluetooth-enabled mobile phone has been paired with and connected to your IP phones, and mobile contact sync feature is enabled.

Procedure

1. Go to Contact > Mobile Contacts.
2. Do one of the following:
 - Select . Enter your search criteria. The contacts whose name or phone number matches the search string will be displayed in the result list.
 - Select the desired letter (for example, T) along the right side to jump to the contacts whose names start with T or t.

Update the Mobile Contacts

You can update the Mobile Contact to synchronize the contacts you add, edit, and delete on the mobile phone to your phone.

Before You Begin

Make sure your Bluetooth-enabled mobile phone has been paired with and connected to your phones, and mobile contact sync feature is enabled.

Procedure

1. Go to Contact > Mobile Contacts.
2. Select .

The phone prompts "Updating, please wait...".

Note: If you disconnect the mobile phone from the phone when the phone is updating the Mobile Contacts, the phone screen will prompt "Fail to download mobile contacts!", and the mobile contacts disappear from the phone directory list.

Remote Phone Book

If the Remote Phone Book feature has been enabled by your system administrator, you can access your corporate directory directly from your phone.

Search for Remote Phone Book Contacts

In the Remote Phone Book, you can enter search criteria to find your desired contact quickly.

Procedure

1. Go to Contact > Remote Phone Book.
2. Do one of the following:
 - Tap . Enter your search criteria in the search field.
 - Select the desired letter (for example, T) along the right side to jump to contacts whose names start with T or t.

View Remote Phone Book Contacts

You can view the contact list of the Remote Phone Book on your phone.

Procedure

1. Go to Contact > Remote Phone Book.

Save a Remote Phone Book Contact to the Local Directory

You can save any remote phone book contact to the Local Directory, to conveniently call this contact when you cannot access the remote phone book.

Procedure

1. Go to Contact > Remote Phone Book.
2. Select the desired remote phone book.
3. Tap .
4. Select the desired contacts and tap Move.

The phone prompts you to move the contact to the local directory or not.

5. Select OK.

Save a Remote Phone Book Contact to the Blocklist

You can save any remote phone book contact to the Blocklist on the phone, to prevent this contact from calling you.

Procedure

1. Go to Contact > Remote Phone Book.
2. Select the desired remote phone book.
3. Tap  .
4. Select the desired contacts and tap Move to Blocklist.
The phone prompts you to move the contact to the blocklist or not.
5. Select OK.

Call History

The call history list includes Missed Calls, Placed Calls, Received Calls and Forwarded Calls, and each list holds 100 entries.

Call History Icons

Each icon in the Call History indicates the corresponding call history status.

Icons	Description	Icons	Description
	Received Call		Missed Call
	Placed call		Forwarded Call

Viewing History Records

The history record saves the call information such as the caller’s name and number, local line and call duration.

Procedure

1. Tap History.
2. Select the desired list.
3. Select  after the desired contact.

Save a History Record to Local Directory

To identify someone’s call the next time, you can save a history record to the Local Directory.

Procedure

1. Tap History.
2. Select the desired list.
3. Select  > .
4. Select Local Directory in the Group field.
5. Edit the contact information.
6. Save the change.

Save a History Record to Blocklist

You can prevent someone from calling you again by saving a history record to Blocklist.

Procedure

1. Tap History.
2. Select the desired list.
3. Select  > .
4. Select Blocklist in the Group field.
5. Edit the contact information.
6. Save the change.

Delete History Records

You can delete one or all call records from the call history list.

Delete a Call Record

You can delete any call record from the call history list.

Procedure

1. Tap History.
2. Select the desired list.
3. Select  > .
- The phone prompts you to delete the record or not.
4. Select OK.

Delete All Call Records

You can delete all call records from the call history list.

Procedure

1. Tap History.
2. Select the desired list.
3. Tap .
4. Select Select All.
5. Select Delete.
- The phone prompts you to delete all the records or not.
6. Select OK.

System Applications

The system applications are pre-installed on your phone and they cannot be uninstalled.

Manage Applications and Widgets

You can add widgets to the idle screen for easy use, and adjust the location of applications and widgets.

Add a Widget to the Idle Screen

The phone provides widgets like analog clock, calendar, digital clock, email and photo gallery. You can conveniently add these widgets to the idle screen as preferred.

Before You Begin

If you want to add a photo widget, you need to choose the album or images to be displayed. You cannot add this widget if there are no images in the photo gallery.

Procedure

1. Long tap the empty spot on the idle screen.
2. Tap Widgets.
3. Touch and hold to pick up a widget.
4. Drag the desired widget up/down/left/right to the destination spot on the idle screen.

Resize a Widget

Some widgets such as calendar, digital clock and email can be resized on the idle screen.

Procedure

1. Long tap the desired widget for about 2 seconds, and then lift your finger from the screen.
2. Drag the border of the frame to adjust the size.

Move an Application or Widget

You can move an application or widget to a different spot on the idle screen or to a different idle screen.

Before You Begin

Before moving an application or widget, you should know the following:

- You can drag an application or widget to the rightmost of the third idle screen to add a new screen.
- If there is only one application or widget on the screen, you cannot add a new screen.
- The idle screen (except the home screen) will be deleted automatically if there is no application or widget on it.

Procedure

1. Long tap the desired item for about 2 seconds.
2. Drag the item up/down/left/right to the destination spot on the screen.

Remove a Widget from the Idle Screen

Removing operation only removes the widget of the application from the screen. The application itself will not be uninstalled.

Procedure

1. Long tap the desired item for about 2 seconds.
The Remove field will appear on the top of the phone screen.
2. Drag the item to the Remove field to remove it.

File Manager

File Manager is a tool that allows you to view, search, delete, copy or move photo/video/audio files. You can also share files via Bluetooth or email. It helps you to access and manage files in the internal SD card as well as USB flash drive.

View Files

You can view photo, video and audio files on your phone.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch File Manager.
3. Tap Photos/Videos/Audios in the Local Storage field.

If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Tap the desired picture/video/audio to view.

You can also swipe down from the top of the screen to enter the control center, and then tap USB to launch File Manager to view the files if you have connected a USB flash drive to the phone.

Search Files

By entering search criteria, you can easily find the desired files.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch File Manager.
3. Tap  on the top of the screen.
4. Enter a search string of the file name.

The phone screen shows the file whose name matches the search string. You can drag up and down to scroll through the searching results, and then tap the desired file to view.

Copy Files

You can copy the files that stored in the USB flash drive to internal SD card, or vice versa.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch File Manager.
3. Tap Photos/Videos/Audios in the Local Storage field.


If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Tap  and then select the desired files.

You can also select the Select All check box to copy all files.

5. Tap .

The following prompt will appear on the phone screen:

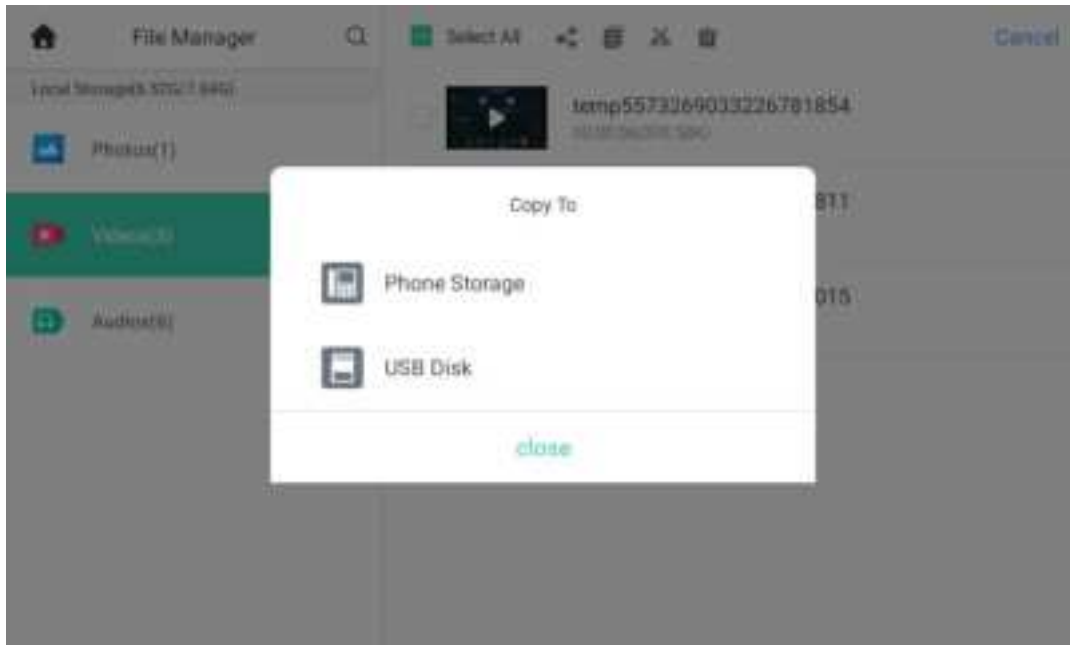

6. Tap the desired storage device.

7. Save the change.

The files are copied successfully with a prompt.

Cut Files (Move Files)

You can move the files to other desired path. Once you move the files, they will not be kept in the original storage device any more.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch File Manager.

3. Tap Photos/Videos/Audios in the Local Storage field.


If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Tap  and then select the desired files.

You can also select the Select All check box to cut all files.

5. Tap .

The following prompt will appear on the phone screen:

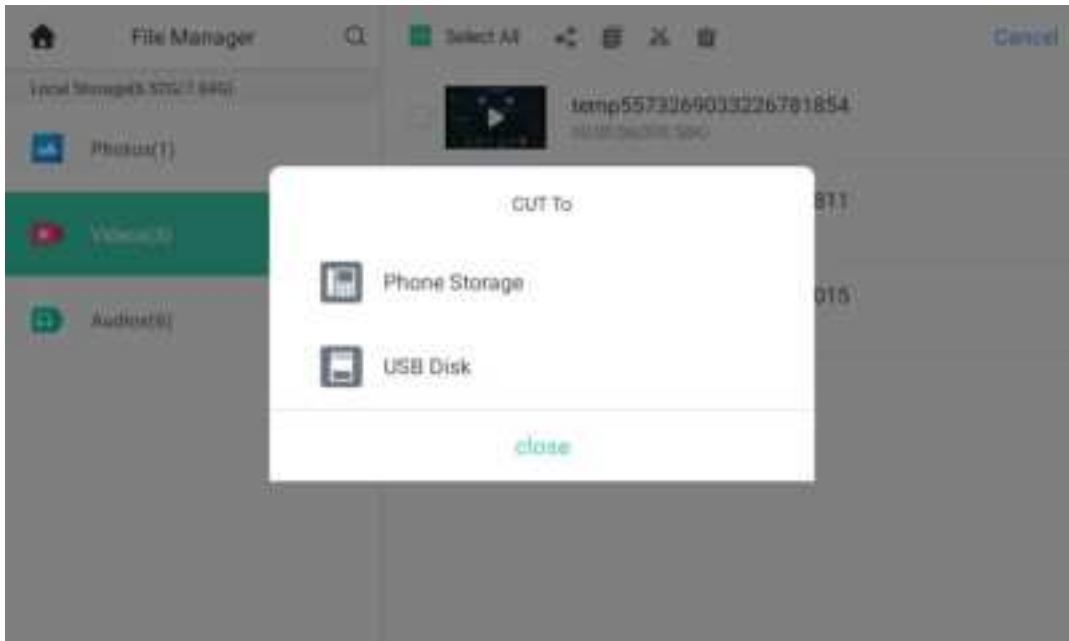

6. Tap the destination storage device.

7. Save the change.

The files are cut successfully with a prompt.

Upload Files

You can upload the files to the server designated by the administrator.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch File Manager.

3. Tap Photos/Videos/Audios in the Local Storage field.

If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Select the check box before the desired file.

You can also select the Select All check box to cut all files.

5. Tap .

The file is uploaded to the server successfully with a prompt.

Delete Files

You can delete the useless files to make room for other files.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch File Manager.

3. Tap Photos/Videos/Audios in the Local Storage field.

If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Tap  and then select the desired files.

You can also select the Select All check box to delete all files.

5. Tap .

The phone prompts you whether to delete the files.

6. Tap OK.

Share Pictures/Videos/Audio via Bluetooth

You can share files in the File Manager with other Bluetooth devices.

Before You Begin

Make sure the Bluetooth mode is enabled, and the Bluetooth device is discoverable. Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch File Manager.

3. Tap Photos/Videos/Audios in the Local Storage field.

If a USB flash drive has been connected to your phone, you can tap Photos/Videos/Audios in the USB Storage field to view the files stored in USB flash drive.

4. Tap  and then select the desired files.

5. Tap .

6. Tap Bluetooth/Messaging, and then select Always or Just once.

7. (Optional) If the Bluetooth is deactivated, it will prompt you to tap TURN ON to activate the Bluetooth mode.

The phone scans and displays the available Bluetooth device automatically.

If there is no Bluetooth device found, go to  > Refresh to search for the Bluetooth devices.

8. Tap the desired Bluetooth device to share the pictures/video/audio.

The phone screen will prompt “Sending n file to “XXX”” (n represents the number of the files that are being sent).

9. Accept the request of transferring files via Bluetooth on the Bluetooth device.

If the pictures are successfully transferred, the notification center will display a notification “Bluetooth share: Sent files n successful, n unsuccessful.” (n represents the number of files that are sent successfully or unsuccessfully).

You can tap the notification to view the detail information about the shared files.

Gallery

You can access the Gallery to do many operations for the listed pictures/videos. You can also take pictures/videos with it.

View Pictures/Videos


You can view the pictures/videos on your phone in different ways.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Gallery.

By default, the pictures are displayed as thumbnails in the albums arrangement mode.

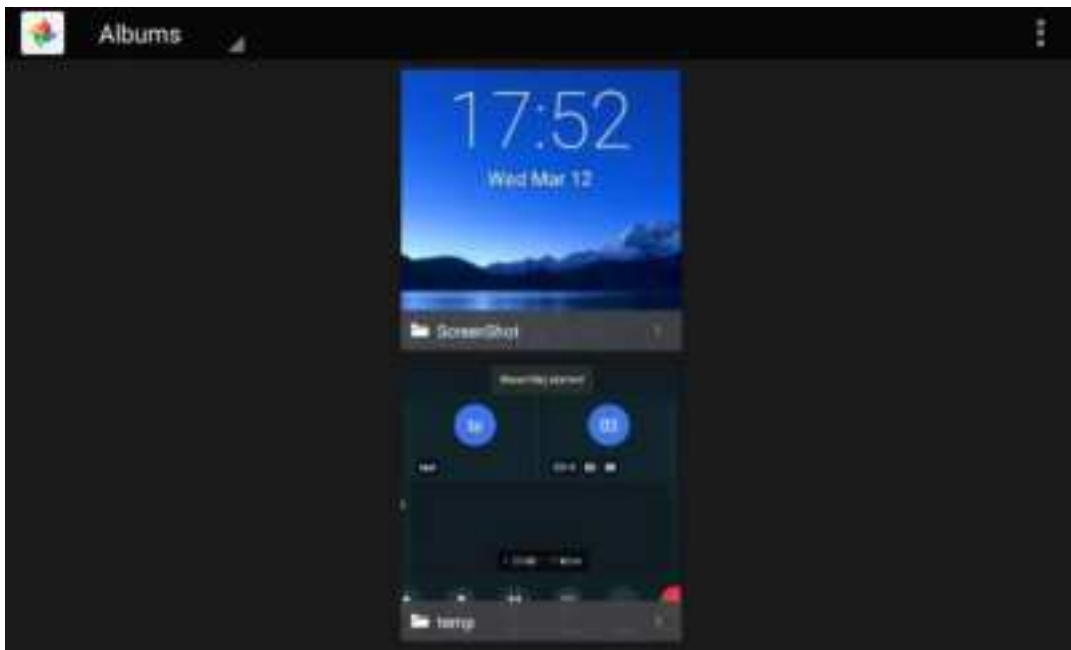

3. (Optional.) Tap Albums.

You can tap Albums/Locations/Times/People/Tags to view the pictures in different arrangement modes.

4. Swipe left/right to view all albums if required.

5. Select the desired album.

6. You can do the following:

- Tap the album name on top-left of the phone screen.
Select Filmstrip view or Grid view to view the pictures/videos in different modes.
- Tap , and then tap Group by.
Select a desired group type in the pop-up dialog box to view the pictures/videos in different arrangement modes.

7. Tap a desired picture/video to preview the picture.

8. For picture albums, you can tap  > Slideshow to start a slide show of the pictures in the album.

Note: You can also select a desired picture and tap  > Details to view the detailed information.

Edit Pictures

You can edit the pictures in the Gallery.

Rotate Pictures

You can rotate the picture as you want.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Gallery.
3. Tap the desired picture album.
4. Tap the desired picture.
5. Tap  > Rotate left/Rotate right to rotate the picture left/right
6. Tap SAVE.

Add a Filter for Pictures

You can add a filter for the picture to change its display style.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Gallery.
3. Tap the desired picture album.
4. Tap the desired picture.
5. Go to  > Edit > .
6. Select the desired filter.
7. Tap SAVE.

Add a Frame for Pictures

You can add a frame for the picture to make it displayed more vivid.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Gallery.
3. Tap the desired picture album.
4. Tap the desired picture.
5. Go to > Edit > .
6. Select the desired frame.
7. Tap SAVE.

Crop Pictures

You can crop a picture to the desired size.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Gallery.

3. Tap the desired picture album.

4. Tap the desired picture.

5. Go to  > Edit > .

6. Do the following:

Tap Crop to resize the picture.

Tap Straighten to straighten the picture.

Tap Rotate to rotate the picture clockwise.

Tap Mirror to flip the picture symmetrically.

Tap Draw to draw the picture.

7. Tap SAVE.

Color Pictures

You can color pictures to make the pictures displayed better.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Gallery.

3. Tap the desired picture.

4. Go to  > Edit > .

5. Adjust the desired exposure, contrast, saturation and so on.

6. Tap SAVE.

Set a Picture as Wallpaper

You can set a desired picture as wallpaper to make your phone more personalized.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Gallery.

3. Tap the desired picture album.

4. Tap the desired picture.

5. Go to  > Set picture as.

6. If you want to set the picture as phone wallpaper, tap Wallpaper, and then tap Set wallpaper on the top-right of the screen.

Print Pictures

You can print the desired pictures in the Gallery.

Before You Begin

Before printing the picture, make sure your phone has been connected to the network printer.

For more information, refer to the documentation from the printer manufacturer.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Gallery.
3. Tap the desired picture album.
4. Tap the desired picture.
5. Go to  > Print to print the picture.

Delete Pictures/Videos

You can delete any useless picture/video from the Gallery.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap to  launch the Gallery.
3. Tap the desired album.
4. Do one of the following:

Long tap the desired picture/video.

Go to  > Select item.

Select the pictures/videos you want to delete.

You can also tap n items selected (n represents the number of pictures you selected)

and then tap Select all to select all pictures.

5. Tap  to delete the selected pictures/videos.

The phone prompts you whether to delete the pictures/videos.

6. Tap OK.

Share Pictures/Videos via Bluetooth

You can share the pictures/videos in the Gallery via Bluetooth.

Before You Begin

Before sharing pictures/videos via Bluetooth, make sure the Bluetooth device is discoverable.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Gallery.
3. Tap the desired picture album.

4. Do one of the following:

- Long tap one of the pictures/videos.
- Go to  > Select item.

Select the pictures/videos you want to share.

You can also tap n items selected (n represents the number of pictures/videos you selected) and then tap Select all to select all pictures/videos.

5. Tap , and then select Bluetooth.

6. If the Bluetooth is deactivated, it will prompt you to tap TURN ON to activate the Bluetooth mode.

The phone scans and displays the available Bluetooth device automatically.

If there is no Bluetooth device found, go to  > Refresh to search for the Bluetooth devices.

7. Tap the desired Bluetooth device to share the pictures/videos.

The phone screen will prompt Sending n file to “XXX” (n represents the number of pictures/videos that are being sent).

8. Accept the request of transferring files via Bluetooth on the Bluetooth device.

If the pictures/videos are successfully transferred, the notification center will display a notification “Bluetooth share: Sent files n successful, n unsuccessful.” (n represents the number of files that are sent successfully or unsuccessfully).

You can tap the notification to view the detail information about the shared files.

Recorder

You can use the Recorder to record audio and manage the recording.

During recording, you can mark specific moments so that you can quickly find and listen to them later. You can record up to 12 hours in one file. The recording is saved in “*.amr” format with the name consisting of a prefix “record@” and date & time stamp.

Record Audio

By default, the recorded audio is saved in the internal SD card. You can connect a USB flash drive to your phone, the recorded audio will be saved in the USB flash drive instead of the internal SD card.

Note: For more information on how to attach a USB flash drive, please refer to the Quick Start Guide for your phone on [Yealink Support](#).

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Recorder.

3. Tap  to start recording.

4. Do one of the following:

- Tap  to pause the recording.
- Tap  to set a mark.

The icon changes to , the number will increase if you set more marks. And there is a red flag on this moment when playing.

5. Tap  to end the recording and save the recording.

The recorded audio will be displayed on the right list automatically.

Play a Recorded Call

You can browse and play back the recordings on your phone.

The recorded calls include a date & time stamp and the other party's number/IP address/name (or the first person's number/IP address/name you called), for example, 20160302-1452-Tom was created on March 2, 2016, at 14:52 and you have a call with Tom. The recorded audio-only calls are saved in ".aac" format and the recorded video calls are saved in ".mkv" format. You can view the recorded files by Recorder or File Manager. The following is an example of playing the recorded call using the Recorder.

Tip: You can also play back the recorded calls on the phone or on a computer using an application compatible of playing ".aac"/".mkv" files.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Recorder.
3. Tap  before the desired recorded call to play the recorded call.
The length of the recording and a progress bar are displayed as the recording plays.
You can press the Volume key to adjust the volume of audio output.

Pause/Resume a Playback

When you receive an incoming call while playing a recording, the recording is paused automatically. You can resume the playback after handling the call. You can also pause the recording manually at any time.

Procedure

1. Tap  to pause playing the recording. The icon  appears on the phone screen.
2. Tap  to resume the playback.

Fast Forward/Rewind a Playback

While a recorded file plays, you can fast forward or rewind the playback at any time.

Procedure

1. Drag the slider to skip forward the playing or rewind the playing.
- If you have set marks for the recorded audio, you can drag the slider to the position with a red flag to listen to the marked moments.

Stop a Playback

While a recording plays, you can stop playing it at any time.

Procedure

1. Tap  to stop the playing.

Rename the Recording

You can rename the recording for better recognition.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch the Recorder.
3. Tap  after the desired recording.
4. Tap Rename.
5. Enter the desired file name.
6. Tap OK.

Upload a Recording to Server

You can upload the local recording file to the server designated by the administrator.

Before You Begin

Your system administrator has enabled the recording upload feature for you.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Recorder.

The phone shows all recordings in the Audio Recorder list.

3. Tap  after the desired recorded audio.

4. Tap Upload.

The file is uploaded to the server successfully with a prompt.

Delete a Recording

You can delete local recordings or call recordings from Recorder. The local recording is named with a prefix “record@” and date & time stamp, while the call recordings are named with the date & time stamp.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Recorder.

The phone shows all recordings in the Audio Recorder list.

3. Tap  after the desired recording.

4. Tap Delete.

The phone prompts you whether to delete the audio.

5. Tap OK.

Delete All Recordings

You can delete all the recording when you need additional space.

Procedure

1. Swipe left to go to the right idle screen.

2. Tap  to launch the Recorder.

The phone screen shows all recorded files in the Audio Recorder list.

3. Tap .

The phone prompts you whether to delete all the audio files.

4. Tap OK.


Check Storage Space

You can check the total space or available space of the phone or connected USB flash drive.

Procedure

1. Swipe left to go to the right idle screen.
2. Tap  to launch File Manager.

You can check the total space or available space on the top-left corner.

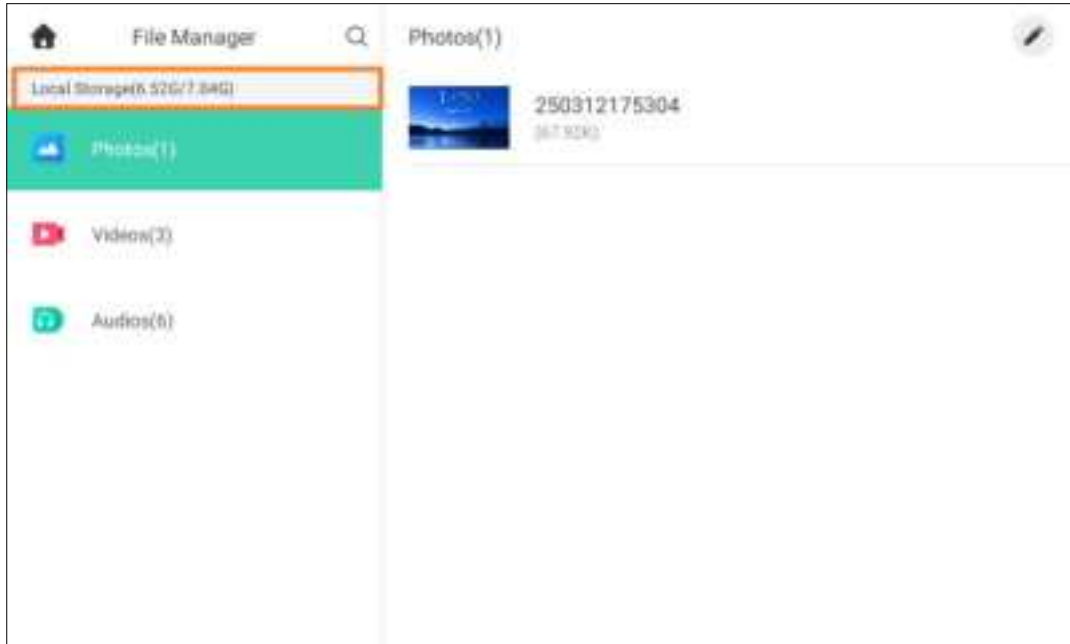

Clock

You can use the Clock to set an alarm, check the time of other cities in the world, set a stopwatch and timer.

Alarm

You can set an alarm on the phone to remind you of a task, for example, join a meeting.


Set an Alarm Clock

To avoid forgetting the important tasks, you can set an alarm clock.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap  on the top-left of the phone screen.
3. Tap .
4. Tap the desired number to set the alarm time.
5. Tap OK.

The alarm clock you have set is displayed on the phone screen.

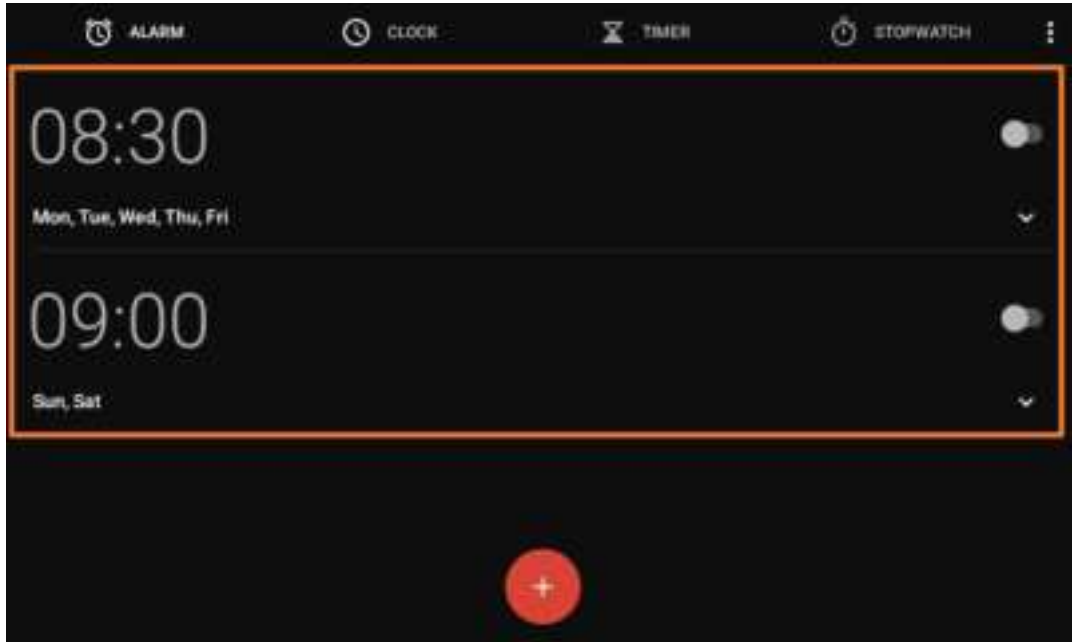

6. You can do the following:

- Select the Repeat check box, and then tap the repeat day of the alarm.
- Tap .
Select a desired ring tone for the alarm, and then tap OK.
- Tap the Label field.
Enter a label for the alarm, and then tap OK.

Note: If you have set the time format as 12 Hour, you need to select AM or PM when setting the alarm time.

Edit an Alarm Clock

According to your needs, you can edit the alarm clocks.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap .
3. Drag up and down to select the desired alarm.
4. Tap the desired option to edit the alarm clock.

Delete an Alarm Clock

When you no longer need the alarm clock, you can delete it.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap  on the top-left of the phone screen.
3. Tap the desired alarm.
4. Tap  on the bottom-left of the alarm to delete the desired alarm.

Set the Alarm Parameters

You can set the alarm parameters to make your alarm clock more personalized.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap .
3. Tap  > Settings.
4. You can do the following:
 - Tap the desired lasting time of the alarm bell from the Silence after field. The alarm clock will automatically stop after this specified period of time.
 - Tap the desired snooze time from the Snooze length field, and tap OK.
 - Tap the Alarm volume field, drag the slider to adjust the alarm volume and then tap OK.
 - Tap the Volume buttons field, and then configure the desired function for the Volume key when the alarm is ringing.
 - Snooze: Press the Volume key when the alarm is ringing, the alarm will stop and ring after a specified period of time.
 - Dismiss: Press the Volume key when the alarm is ringing, the alarm will stop.
 - Control volume: Press the Volume key when the alarm is ringing, the alarm will still ring

Clock

You can check the current time and date via the clock on the Home screen.

Add the Clock of Other Cities

You can add the clock for other cities. After added, you can know the current time in multiple cities simultaneously.

Procedure

1. Tap the digital clock widget on the Home screen.

The phone screen displays the current date and time.
2. Tap .
3. Drag up and down to scroll through the cities.
4. Select the desired city check box.
5. Tap  to return to the clock screen.

The added clock of the desired city is displayed on the phone screen.

Configure the Clock Display Mode

You can switch the digital clock to analog clock, set the home clock, and home time zone.

Procedure

1. Tap the digital clock widget on the Home screen.
2. Tap  > Settings.
3. You can do the following:
 - Select Analog from the Style field.
 - Enable the Automatic home clock feature.
 - Select the desired time zone from the Home time zone field.

Set a Timer

You can set a timer to keep you on track to finish something within a set time.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap .
3. Enter the time by tapping the digits on the right of the screen.

You can tap  to delete the entered numbers.

4. Tap .

When the timer is running, you can do the following:

- Tap  to add an additional minute.
- Tap  to pause the timer.
- Tap DELETE to delete the current timer.
- Tap ADD TIMER to add an additional timer.

The timer beeps when the time is up. It keeps beeping until you tap to stop.

Set a Stopwatch

You can set a stopwatch to measure the amount of time that you spend on something.

Procedure

1. Tap the digital clock widget on the home screen.
2. Tap .
3. Tap .
4. You can do the following:
 - Tap  to pause the stopwatch.
 - Tap RESET to reset the stopwatch.
 - Tap SHARE, and then tap Bluetooth or Email to share the record via Bluetooth or email.
 - Tap LAP to count a lap while the stopwatch is running.

Customize Your Phone

You can make your phone more personalized by customizing various settings

Wallpaper

You can change the background picture that is displayed on your phone.

The phone comes with a default background picture, you can change it to another built-in picture.

You can also add personal pictures stored on a USB flash drive, or use a custom picture uploaded by your system administrator as the wallpaper.

Change Wallpaper on Idle Screen

You can set one of your pictures as the background image on your phone's idle screen.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Display > Wallpaper Selection.
3. Select the desired image.
4. Select Set.

Add a Wallpaper from a USB Flash Drive

You can use a picture that is stored on a USB flash drive as the background image of your phone.

When USB flash drive is connected to your phone, the pictures on the USB flash drive are shown in the album. You can set a picture as wallpaper using the Gallery or File Manager.

We recommend that you add a picture that meets the size of the custom picture. Either the smaller or larger picture will be scaled proportionally to fit the screen.

Screen Saver

The screen saver starts automatically when your phone has been idle for the preset waiting time.

You can stop the screen saver by pressing any key.

Change the Waiting Time for Screen Saver

You can set the waiting time after no activity before displaying the screen saver.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Display > Screen Saver.
3. Select the desired waiting time from the Screensaver Time field.
4. Save the change.

Set the Screen Saver Type

The screen saver can start with different types and you can set it manually.

Your phone supports the following screen saver types: Clock, Colors, Photo Table, Photo Frame, Server XML and System screensaver.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Display > Screen Saver.
3. Select the desired screen saver type.
 - If you select Clock, select Screensaver settings to select Style or Night mode.
 - If you select Photo Frame, select Screensaver settings to select the desired photo album(s).
 - If you select Photo Table, select Screensaver settings to select the desired photo album(s).
 - If you select System screensaver, select Screensaver settings to select Animation Effect or Screensaver Content.
4. Save the change.

Change the Screen Backlight and Time

You can change the brightness of the phone screen during phone activity and inactivity.


Brightness: The intensity of the phone screen when the phone is active.

Backlight Time: The delay time to change the brightness of the phone screen when the phone is inactive. Backlight time includes the following settings:

- Always On: Backlight is on permanently.
- 15s, 30s, 1min, 2min, 5min, 10min or 30min: Backlight is changed when the phone is inactive after the designated time.

Procedure

1. Swipe down from the top of the screen.
2. Do one of the following:
 - Drag the backlight slider.

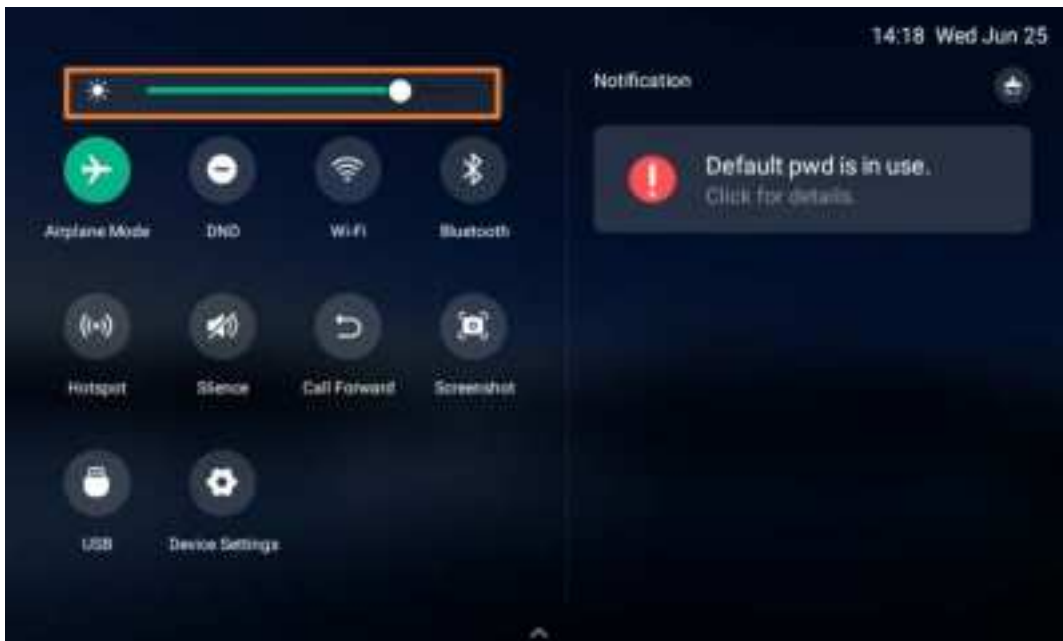

When dragging the slider, the control center (except the backlight slider) and notification center will be hidden. You can view the intensity changes of the phone screen in real-time.

If you lift your finger, the control center and notification center will be shown again.

Tip: You can only change the screen intensity during phone activity on the control center. To change the backlight time, go to Settings > Display > Backlight Time.

Change the Language

Your phone supports several languages that you can choose to use on the phone.

Contact your system administrator to find out exactly which languages are supported on your phone.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > General > Language.
3. Select the desired language.
4. Save the change.

The phone language is changed to the selected one.

Date & Time

You can set the time and date manually. The time and date formats are also variable.

Set the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set it manually.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > General > Date & Time.
3. Edit the date and time.
4. Save the change.

The time and date set on the phone will be changed accordingly.

Note: After the phone reboots, it will be forcibly switched to obtain the time and date from the NTP server.

Change the Time and Date Format

You can set the phone to display the time in 12-hour format or 24-hour format. You can also change the date format, including the options to display the day (D), month (M), and year (Y).

Note: Your system administrator can customize the date format.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > General > Date & Time > Date Format/Time Format.
3. Select the desired time format or date format.
4. Save the change.

Phone Lock

Phone lock helps you protect your phone from unauthorized use.

Set the Phone Lock

You can manually lock the phone or wait a specified time to automatically lock the phone.

When your phone is locked, you can:

- Dial emergency numbers.
- Reject incoming calls.
- Answer incoming calls.
- End the call.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Phone Lock.
3. Select Enabled from the Lock Enable field.
4. Enter the desired interval (0 - 3600 seconds) in the Idle time-out field.
5. Save the change.

Lock Your Phone Manually

You can lock the phone manually before the phone is automatically locked.

Before You Begin

Make sure that the phone lock is set.

Procedure

1. Long press # key when the phone is idle.

The lock icon appears on the phone screen.

Unlock Your Phone

You can use an unlock PIN to unlock the phone.

If you forget the unlock PIN, you can enter the administrator password to unlock your phone, and then automatically access the PIN change screen.

Procedure

1. Tap the screen or tap the locked key, the phone prompts you to enter an unlock PIN.
2. Enter the desired PIN (default: 123) in the Unlock PIN field.
3. Select OK.

The lock icon disappears from the phone screen.

Change Your Phone Unlock PIN

The default unlock PIN is "123". For security reasons, you should change the default unlock PIN as soon as possible.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Phone Lock, and enter the old unlock PIN.
3. Enter your new unlock PIN.

The unlock PIN length must be within 15 digits.

4. Save the change.

Line Keys

Line keys allow you to quickly access features such as recall and speed dial. The line key can indicate the monitored status when the line keys are assigned with particular features, such as BLF.


You can assign predefined functions to line keys. You can also define a label for a line key feature which will appear on the phone screen.

Assign Functionality to a Line Key

You can assign functions to a line key, as a result, you can access this function quickly by tapping this line key.

Procedure

1. Long tap the desired Dsskey and then select Edit.

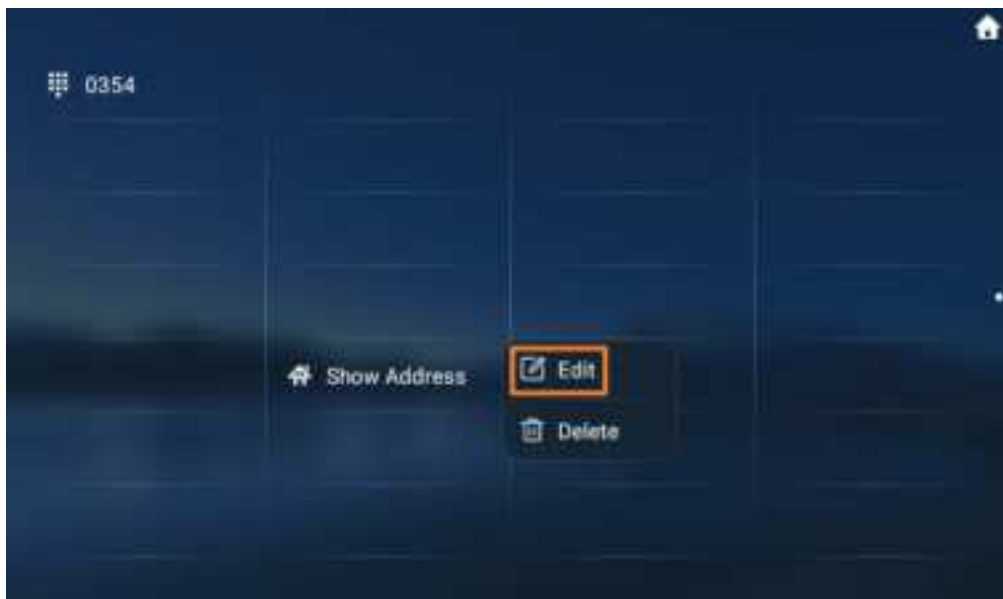

2. Select the desired key type from the Type field.
3. Configure the settings for the corresponding key type.
4. Save the change.

Change the Locations of the Line Keys

You can change the order in which your line keys display on the phone screen.

Procedure


1. Drag a line key to the desired location.

Delete a Line Key

You can delete a line key when you no longer need the corresponding function.

Procedure

1. Long tap the desired line key, and then select Delete.

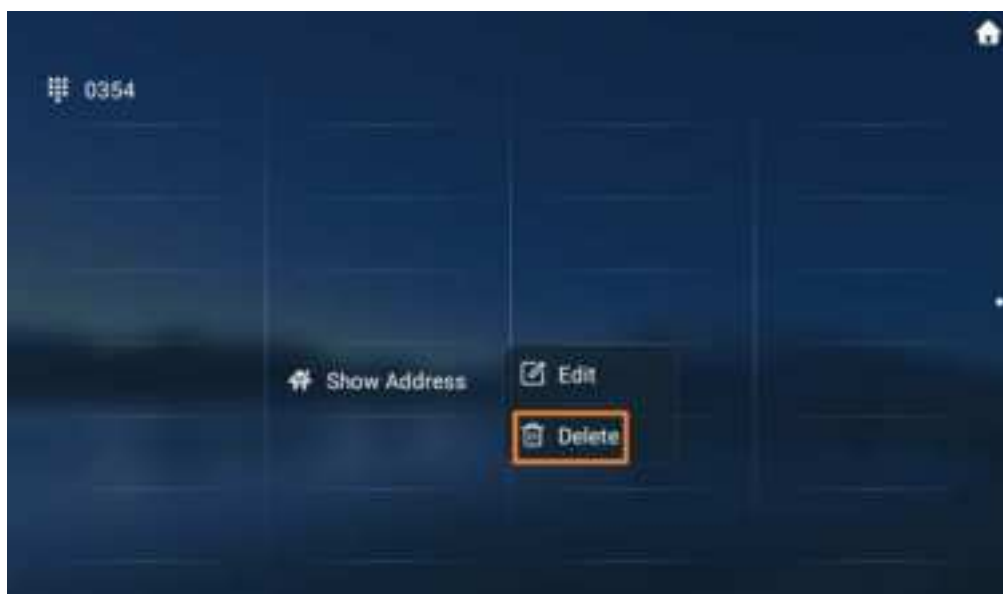

The phone prompts you to delete the DSS key or not.

2. Select OK.

Audio Settings

You can change the basic audio settings on your phone.

Adjust the Volume

You can adjust the volume of the ringer, media, and audio during a call.

Procedure

1. Press the Volume key.

Set the Ring Tone

You can set distinctive ring tones for groups or contacts in your Local Directory so that you can identify the caller when your phone rings.

The ring tones are used according to this priority: Contact ring tone>Group ring tone>Account ring tone >Phone ring tone.

Set a Ring Tone for the Phone

You can choose a ring tone for all incoming calls.

Procedure

1. Tap Call/Contact/History.
2. Tap  in the top-right corner of the screen, and then go to Ring Tones > Common Ring Tone.
3. Select the desired ring tone.
4. Save the change.

Set a Ring Tone for an Account

You can select a unique ring tone for an individual account.

Procedure

1. Tap Call/Contact/History.
2. Tap  in the top-right corner of the screen, and then go to Ring Tones > Common Ring Tone.
3. Select the desired account.
4. Select the desired ring tone.

If Common is selected, this account will use the ring tone selected for the phone.

5. Save the change.

Set a Ring Tone for a Group

You can select a unique ring tone for various groups in your Local Directory.

Note: You can only set a ring tone for a group that is added manually.

Procedure

1. Tap Contact.
2. Select the desired group and then tap .
3. Select  after the desired group.


4. Select the desired ring tone.

If Auto is selected, this group uses the ring tone according to the default priority.

If a specific ring tone is selected, this group uses the ring tone according to the priority:

Contact ring tone>Group ring tone.

5. Select OK.

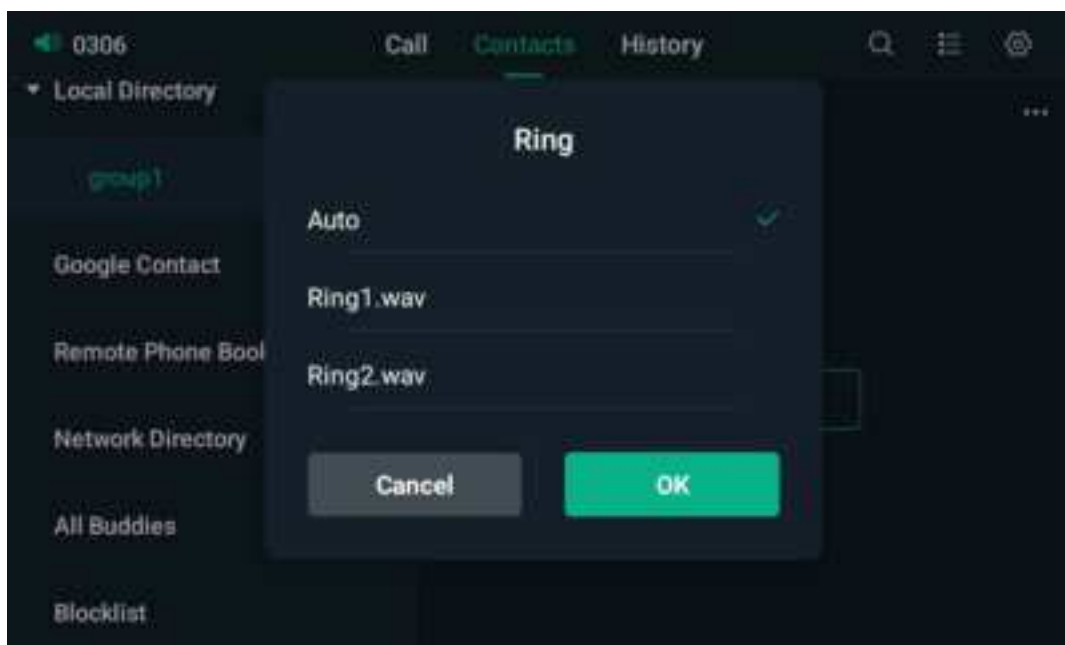

Set a Ring Tone for a Contact

You can select a unique ring tone for various contacts in your Local Directory. This helps you quickly identify callers according to the ring tones.

Procedure

1. Tap Contact.
2. Select the contact group first.
3. Select the desired contact, and then tap .
4. Select the desired ring tone from the Ring field.

If Auto is selected, the contact uses the ring tone according to the default priority.

5. Select OK.

Disable the Key Tone

If you disable the key tone, the phone will not produce a sound when pressing the keypad keys.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Audio.
3. Turn off Key Tone.

Enable Touch Tone

If you enable touch tone, the phone will produce a sound when you tap an option on the phone screen.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Audio.
3. Turn on Touch Tone.

Configure Notification Sound

The phone will produce a notification sound when receiving a notification (for example, incoming email notification).

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Audio.
3. Tap the desired notification sound from the Notification Sound field.
4. Select OK.

Enable Silent Mode

If you turn on the silent mode, your phone won't produce a ring tone/key tone/touch sound/notification sound from phone's speaker.

Procedure

1. Do one of the following:
 - Swipe left to go to the right idle screen, go to Settings > Audio. Turn on Silent.
 - Press the Volume key to adjust the ringer volume to the minimum.
 - Swipe down from the top of the screen and toggle Silence on.

Note: You may have no permission to turn on the silent mode. Contact your system administrator for more information.

Bluetooth

Bluetooth enables low-bandwidth wireless connections within a range of 10 meters (32 feet). The best performance is in the 1 to 2 meters (3 to 6 feet) range.

You can activate the Bluetooth mode, and then pair and connect the Bluetooth device with your phone. You can pair up to countless Bluetooth devices with your phone; however, you can connect up to two different types of Bluetooth devices at a time. You can also share files with friends via Bluetooth.

You can pair and connect a Bluetooth headset/speakerphone/microphone or a Bluetooth-enabled mobile phone to your phone. And the Bluetooth operating instructions on different Bluetooth devices are the same.

Activate the Bluetooth Mode

You should activate the Bluetooth mode first when you need to connect the Bluetooth device to your phone.

Procedure

1. Do one of the following:
 - Swipe down from the top of the screen.
 - Swipe left to go to the right idle screen, go to Settings > Bluetooth.

2. Turn on the Bluetooth.

The phone automatically scans the available Bluetooth devices in your area.

The Bluetooth icon appears in the status bar.

Pair and Connect the Bluetooth Headset

You can pair and connect the Bluetooth headset to handle calls on the phone.

Before You Begin

Make sure that the Bluetooth headset is discoverable.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Turn on Open Detection to make the phone discoverable by other Bluetooth devices.
4. Tap the desired Bluetooth headset to connect to your phone.

The connection will be completed successfully with a prompt appears under the Bluetooth headset name.

The Bluetooth icon  appears in the status bar.

Pair and Connect the Bluetooth-enabled Mobile Phone

When you need to use the phone to handle the mobile phone's calls, you can pair and connect the Bluetooth-enabled mobile phone.

You can only connect one Bluetooth device at a time. After connection, the phone will automatically find an available line key and assign the line key for Mobile Account. The Mobile Account key's default label is "Mobile Account". If there is no available line key, you may assign it manually.



Before You Begin

Make sure that the Bluetooth-enabled mobile phone is discoverable.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Turn on Open Detection to make the phone discoverable by other Bluetooth devices.
4. Tap the desired Bluetooth-enabled mobile phone.
5. Tap Pair on both mobile phone and phone.

The phone prompts you to sync phone contacts temporarily.

6. Tap OK to enable the mobile contacts sync feature and the phone will sync the mobile contacts temporarily, or tap Cancel to disable mobile contacts sync feature.

The connection will be completed successfully with a prompt appears under the Bluetooth-enabled mobile phone name.

Note: If you enable mobile contacts sync feature, you also need to authorize the phone to sync the contacts temporarily on the mobile phone.

Pair and Connect two Bluetooth Devices

You can connect two Bluetooth devices on the phone at a time, for example, a Bluetooth-enabled mobile phone and a Bluetooth headset.

Before You Begin

Make sure that the Bluetooth devices are discoverable.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Turn on Open Detection to make the phone discoverable by other Bluetooth devices.
4. Pair and connect the two Bluetooth devices respectively.

Note: The phone does not support connecting two Bluetooth devices of the same type at the same time. The Bluetooth channel cannot support two devices at the same time, and Bluetooth-enabled mobile phone has higher priority than the Bluetooth headset.

Sync the Mobile Contacts to the Phone

You can sync mobile contacts to your phone. Then you can view a contact without accessing your mobile phone.

Note: Not all mobile phones support syncing the mobile contacts to phone. For more information, contact your system administrator.

Enable the Mobile Contacts Sync Feature

You can choose to enable the phone to sync the mobile contacts.

Before You Begin

Make sure that the Bluetooth-enabled mobile phone is paired and connected to your phone and the phone audio feature is enabled.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Tap  after the desired Bluetooth-enabled mobile phone name.
4. Select Mobile Contacts Sync.

You need to authorize the phone to synchronize the contacts temporarily on the mobile phone first, and then the mobile contacts directory will appear in the phone directory list.

View Your Mobile Contacts

You can view a list of mobile contacts on the phone.

Before You Begin

Make sure that the mobile contact sync feature is enabled.

Procedure

1. Go to Contact > Mobile Contacts.

Handle a Mobile Phone Call on the Phone

You can handle a mobile phone call on your phone, the phone acts as a hands-free device for your mobile phone.

The call information appears on both your phone and mobile phone screen. You can control the call's audio to go through the mobile phone or phone on your mobile phone. If you choose Bluetooth, the audio will go through the phone; if you choose Handset earpiece or Speaker, the audio will go through the mobile phone.

Before You Begin

Make sure that the Bluetooth-enabled mobile phone is paired and connected to your phone, and the phone audio feature is enabled.

Procedure

1. Do the following on the phone:
 - Place a call. Tap the Mobile Account line key first, and then place a call or multiple calls to the mobile contacts.
 - Answer a call. An incoming call to your mobile phone is also shown on the phones, you can answer the call on the phone. The phone will firstly match the contacts in the mobile contacts directory to present the caller identity.
 - During the call, you can hold/resume, mute/unmute or end the call on the phone.

Configure the Phone Audio Feature

After syncing the mobile contacts to your phone, the phone acts as a hands-free device for your mobile phone. The call is made through your mobile phone, but the audio is present and the call control is done by the phone.

If a Bluetooth headset is connected to the phone, you can choose to answer a call using the Bluetooth headset.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Tap  after the desired Bluetooth-enabled mobile phone name.
4. Turn on Phone audio.

Configure the Media Audio Feature

If a Bluetooth headset is connected to the phone, you can enable the media audio feature to stream the audio from IP phone to Bluetooth headset. The Bluetooth headset acts as the player for the SIP phone.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Tap  after the desired Bluetooth-enabled mobile phone name.
4. Turn on Media audio.

Change Your Phone's Bluetooth Name

You can change the Bluetooth name for your phone to identify your phone to other Bluetooth devices.

By default, the phone is identified as "Yealink-T77-LTE" by other Bluetooth devices.

Before You Begin

Make sure that the Bluetooth mode is activated.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth > Broadcast Name.
3. Enter the desired name in the Broadcast Name field.
4. Save the change.

Enable/Disable Bluetooth Device Discovery

You can choose to enable or disable this feature to control whether your phone appears as an available device to other Bluetooth devices.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Turn off Open Detection.
4. Save the change.

Rename the Paired Bluetooth Device

You can rename the paired Bluetooth device to make it recognized more easily.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.

The phone screen shows the paired and connected Bluetooth device.

3. Tap  after the desired Bluetooth-enabled mobile phone name, and then tap Device Name.
4. Enter the desired device name in the Device Name field.
5. Save the change.

The renamed Bluetooth name will be displayed in the PAIRED DEVICES list on your phone. The Bluetooth device name displayed in the scanning list of other devices will not be changed.

Unpair the Bluetooth Device

After unpairing the Bluetooth device, next time you activate the Bluetooth, the phone will not automatically reconnect to the device. You need to scan, pair and connect with the device again.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Basic > Bluetooth.

The phone screen shows the paired and connected Bluetooth device.

3. Tap  after the desired Bluetooth-enabled mobile phone name.
4. Tap Unpaired.

Send Files via Bluetooth

You can use the Gallery or File Manager to share pictures, videos or audio with an available Bluetooth device in your area.

Receive Files via Bluetooth

The available Bluetooth devices in your area can share pictures, audio, videos, documents with your phone. You can use the corresponding system application to view the files.

Procedure

1. Share a file with the phone on your Bluetooth device.

The phone will play a notification sound, and the phone prompts you whether to accept the incoming file.

2. Tap Accept to start receiving the file.

The phone prompts "The file will be received. Check progress in the Notification panel.". The icon  will be displayed in the status bar.

3. (Optional.) Swipe down from the top of the screen.

Tap the notification "Bluetooth share: Received files".

You can use the corresponding system applications to view the file.

Disconnect the Bluetooth Device

When you disconnect a Bluetooth device, it remains paired so that you can reconnect it to your phone.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > Bluetooth.
3. Tap the connected Bluetooth device.
4. Tap OK in the pop-up window.

Deactivate the Bluetooth Mode

You can deactivate the Bluetooth mode when you no longer use a Bluetooth device.

Procedure

1. Do one of the following:
 - Swipe down from the top of the screen.
 - Swipe left to go to the right idle screen, go to Settings > Bluetooth.
2. Turn off the Bluetooth.

The Bluetooth icon disappears from the status bar.

Battery


The T77LTE supports a built-in battery, allowing the phone to function normally during power outages and other abnormal situations

Battery Settings

You can monitor the battery status and activate saving mode to conserve battery life.

Procedure

1. Navigate to Settings > General > Battery.

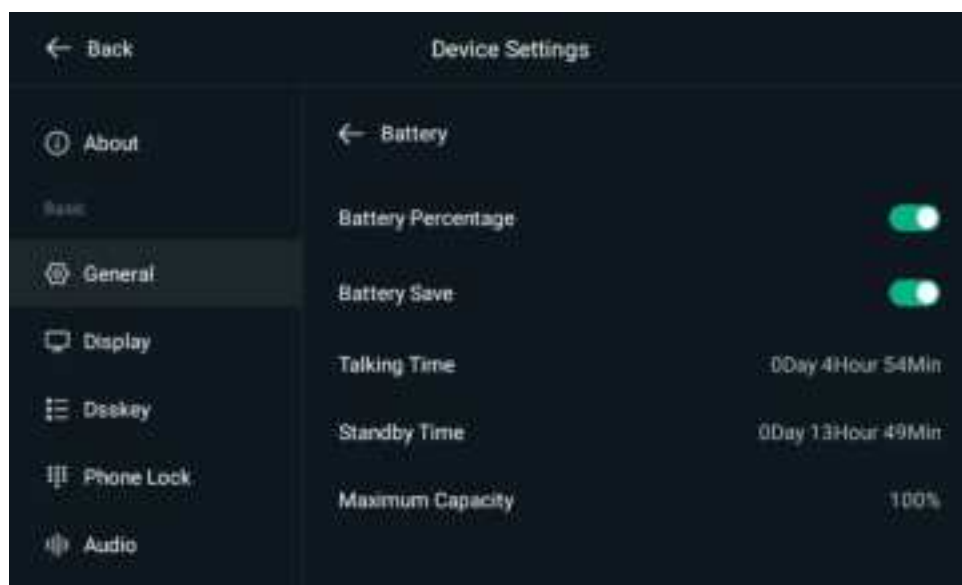

a. Battery Percentage

- The feature is enabled by default, displaying the remaining battery percentage. Turning it off will hide the percentage.



b. Battery Save

- The feature is disabled by default, allowing users to manually enable or disable it.

c. Talking Time

- Displays the remaining battery life for talk time.
- Format: xDay xHour xmin.
- Shows Charging when the battery is being charged.
- Shows Battery full when the battery is fully charged.

d. Maximum Capacity

- Displays the maximum remaining capacity percentage of the battery.

Wireless Network

The phone can be connected to the wireless network if Wi-Fi is available within the area.

Note: Enable Bluetooth may degrade your wireless network connection. For improved wireless network performance, you should disable Bluetooth when it is not in use.

Activate the Wi-Fi Mode

You can activate the Wi-Fi mode to connect your phone to an available wireless network.

Procedure

1. Do one of the following:

- Swipe down from the top of the screen.
- Swipe left to go to the right idle screen, go to Settings > Wi-Fi.

2. Turn on the Wi-Fi.

The phone automatically scans the available wireless networks in your area.

The Wi-Fi icon appears in the status bar.

Connect to the Wireless Network

After you have activated the Wi-Fi mode, you can connect the phone to the wireless network.

When the phone is connected to a wireless network, the Wi-Fi icon  will display in the status bar.

Connect to an Available Wireless Network Manually

You can use the password provided by your system administrator to connect the phone to a secured wireless network.

Before You Begin

Make sure that the Wi-Fi mode is activated.

Procedure

1. Swipe left to go to the right idle screen.

2. Go to Settings > Wi-Fi.

The phone will automatically search for available wireless networks in your area.

3. Tap the desired wireless network (SSID) to connect to it.

4. Enter the desired password in the Password field.

5. (Optional.) Tap  to make the password visible.

6. Select OK.

Once the connection has completed successfully, the prompt “Connected” appears under the corresponding SSID.

Add a Wireless Network Manually

If your gateway/router has SSID broadcast disabled, it doesn't appear in the scanning results.

Then you must manually add a wireless network.

Before You Begin

Get the available wireless network information from your system administrator. Make sure that the Wi-Fi mode is activated.

Procedure

1. Swipe left to go to the second idle screen, go to Settings > Wi-Fi.

2. Select Other.

3. Enter the desired value in the SSID field.

4. Tap the desired value from the Security Mode field.

Tap the desired value from the Security Mode field.

- If you select WPA3-Personal/WPA-SAE or WPA/WPA2 PSK, enter the password.
- If you select 802.1x EAP, tap the desired value from the EAP method field, and enter additional information.

5. (Optional.) Tap  to make the password visible.

6. Select Save.

View the Wireless Network Information

You can view the detailed wireless network information, such as Profile Name, SSID and Signal Strength.

Procedure

1. Swipe left to go to the right idle screen.

2. Go to Settings > Wi-Fi.

3. Tap the desired Wi-Fi to check the detailed information.

Disconnect from a Wireless Network

You can disconnect the wireless network connection from your phone.

Procedure

1. Swipe left to go to the right idle screen.

2. Go to Settings > Wi-Fi.

3. Tap  behind the connected SSID (the top one).

4. Select Forget the Network.

Tip: You can also disconnect from the wireless network by deactivating the Wi-Fi mode.

Deactivate the Wi-Fi Mode

You should deactivate the Wi-Fi mode when you need to connect your phone to the wired network.

Procedure

1. Do one of the following:

- Swipe down from the top of the screen.
- Swipe left or right to go to the second idle screen, go to Settings > Wi-Fi.

2. Turn off the Wi-Fi.

The Wi-Fi icon disappears from the status bar.

Hotspot

The phone supports Wi-Fi hotspot sharing, allowing connection for up to three devices.


Enable Hotspot

1. Do one of the following to turn on the hotspot:

- Swipe down from the top of the screen, and then tap the Hotspot.
- Go to Settings > Hotspot.

2. You can configure the AP settings:

- **Hide SSID:** Optionally hide the network name for security.
- **Configure AP:** Customize settings such as AP Name, Password, Frequency and Channel.
- **AP device list:** View connected devices (up to three).
- **Blocklist:** Manage devices that are blocked from connecting.

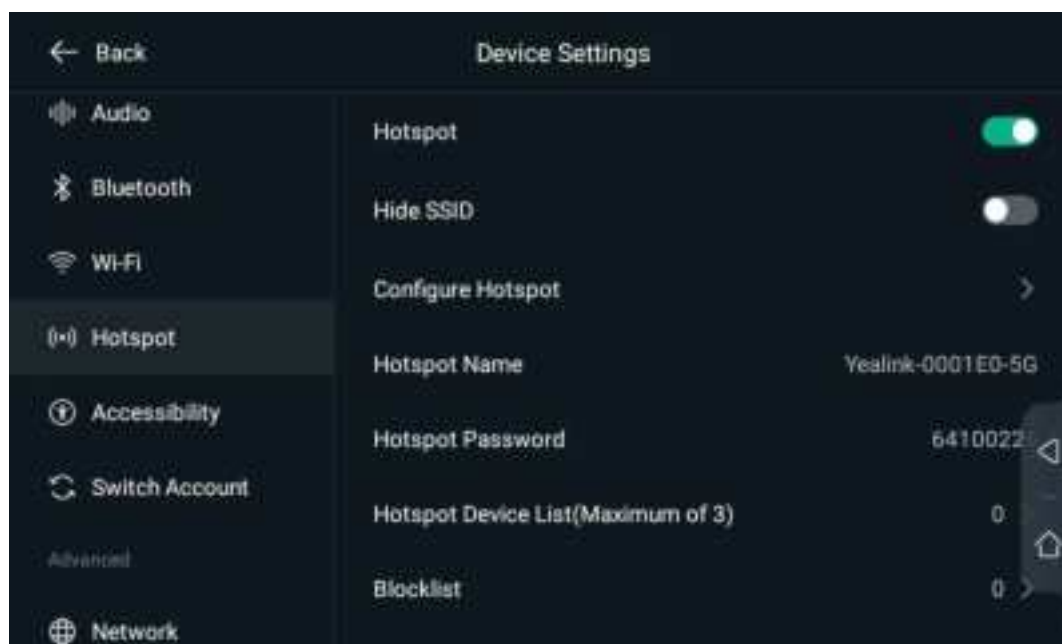

Maintain Your Phone


Investigate Warnings

The warning icon lets you know that your phone has one or more important issues.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > About.

The warning detail is displayed in the Warning field.

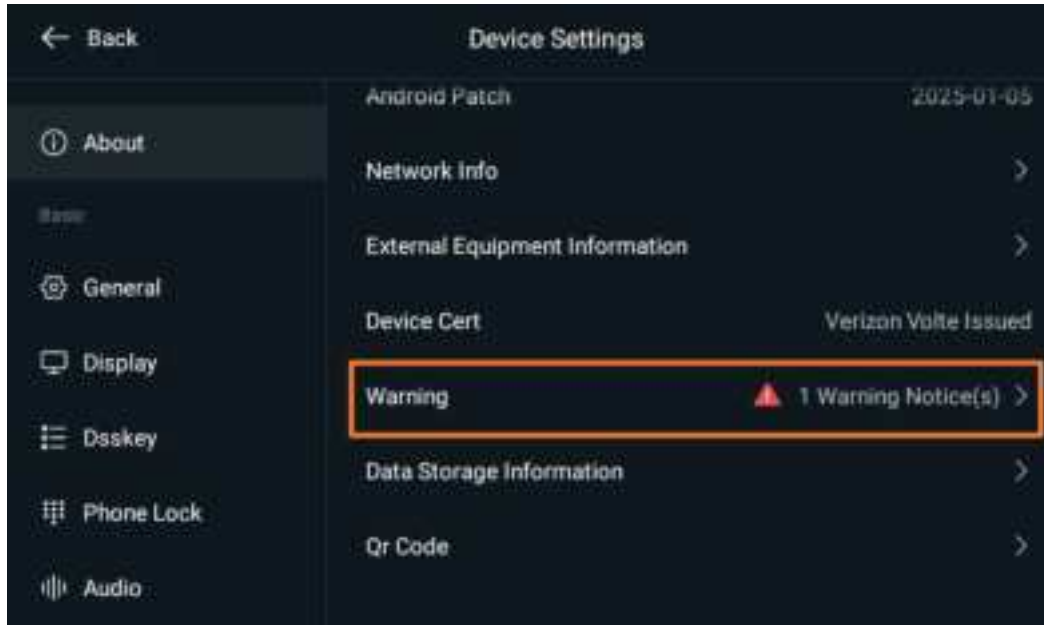

Clear Warning Icon

You can temporarily remove the warning icon from the status bar. However, the warning message still is displayed on the Status screen until the issue is fixed.

The warning icon appears in the status bar again after reboot if the issue is not fixed. Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > About.
3. Tap the Warning field, and then select Clear.

The phone prompts you to clear the warning icon or not.

4. Tap OK.

The warning icon  is removed from the status bar. And it is also removed from the Warning field.

Tip: You can also swipe left or right to temporarily remove the warning icon via Notification Center.

Reboot Your Phone

The improper operation may cause malfunction. If the malfunction occurs, your system administrator may ask you to reboot your phone.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > General > Reboot.

The phone prompts you to reboot the phone or not.

3. Select OK.

Tip: You can also long press the * key on the keypad when the phone is idle to reboot the phone.

Reset to Factory Settings

When some issues occur on your phone and you have tried all troubleshooting suggestions but still do not solve the problem, you can reset your phone to factory configurations.

This operation will delete all your personal configuration settings, and reset all settings to the factory defaults.

Check with your system administrator if the personalized settings are kept before resetting your phone to factory settings.

Procedure

1. Swipe left to go to the right idle screen.
2. Go to Settings > System (default password: admin).
3. Select Reset to factory settings.

The phone prompts you to reset the setting or not.

4. Select Reset.

The phone begins resetting.

Tip: You can also long press the Redial key when the phone is idle.

After reset, the screen prompts "Welcome Initializing...Please wait". The phone will be reset successfully after startup.

Note: Reset of your phone may take a few minutes. Do not power off until the phone has started up successfully.

Notices

The specifications and information regarding the products in this guide are subject to change without notice. All statements, information and recommendations in this guide are believed to be accurate and presented without warranty of any kind, express or implied. Users must take full responsibility for their application of products.

Technical support

For additional support information please visit the One Talk support site (verizonwireless.com/support/one-talk/) for the latest guides, FAQs, product documents and more.

Important customer information

To avoid electric shock, use caution when connecting cables. For example, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. LAN ports contain SELV circuits, and WAN ports contain TNV circuits.

Some LAN and WAN ports both use RJ-45 connectors.

To avoid electric shock, do not operate the product or connect or disconnect cables during electrical storms. To avoid electric shock, do not use this product in or near water.

To reduce the risk of fire or overheating, keep this product in well-ventilated areas, away from radiators or other heat sources. Do not block cooling vents.

The plug-socket combination must be accessible at all times because it serves as the main power-disconnecting device.

Use only the manufacturer-provided AC adaptor approved for use with this product. Use of another AC adaptor may cause a fire or explosion.

This product relies on short-circuit (overcurrent) protection installed in your home or office. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15 A U.S. is used on the phase conductors (all current carrying conductors).

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

1. When the power cord or plug is damaged or frayed
2. If liquid has been spilled into the product
3. If the product has been exposed to rain or water
4. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition



WEEE warning

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of waste electrical and electronic equipment (WEEE) as unsorted municipal waste and collect such WEEE separately.

Disclaimer

The specifications and information regarding the products in this guide are subject to change without notice. All statements, information, and recommendations in this guide are believed to be accurate and presented without warranty of any kind, express or implied. Users must take full responsibility for their application of products.

Yealink Network Technology CO., LTD., makes no warranty of any kind with regard to this guide, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Yealink Network Technology CO., LTD., shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

Important 911 emergency response information

If you call 911, emergency service responders will be sent to the registered location you provided when you provisioned this phone. An incorrect address could result in incorrect routing of 911 calls and dispatch of emergency personnel to the wrong location, so please contact your administrator if your registered location is not accurate.

Once a 911 call is placed, the device will enter for a period of five minutes Emergency call back mode and on the LCD screen of the device the message displayed will say "Emergency Call Activated: features restored after 5 minutes". What this means is that for a period of five minutes all of the advanced One Talk calling features will not work to allow the 911 operator to contact the number placing the 911 call during those five minutes. Once the five minutes have passed, the phone will resume normal operation.

Data and voice functionality (including the ability to make and receive 911 calls) will not be available during a power outage, broadband connection failure or other service disruption. Neither Verizon Wireless nor any of its affiliates shall be liable for any service outage and/or inability to access emergency service personnel, nor shall Verizon Wireless or any of its affiliates be responsible for the acts or omissions of emergency response center personnel.

Part 15 FCC Rules

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device is compliant with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

Class B digital device or peripheral

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
 2. Increase the separation between the equipment and receiver
 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 4. Consult the dealer or an experienced radio/TV technician for help
-

Important safety precautions

Please read the following important safety notices and instructions before installing or using the product.

A DANGER warning refers to situations that could cause bodily injury

A CAUTION warning refers to situations that could result in equipment malfunction or damage

1. Follow all warnings and instructions marked on the product
 2. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use an antistatic cleaning pad for cleaning
 3. Do not use this product near water
 4. Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged
 5. This product should be operated using the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company
 6. Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord
 7. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock
 8. Never spill liquid of any kind into or onto the product
 9. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks
 10. Refer all questions regarding servicing of this product to qualified service personnel
-

Danger—electric shock and fire

Electric current from power, telephone and communication cables is hazardous and could result in electric shock and/or fire.

Learn more

For more information, visit www.onetalk.com

