



Key Specifications

Efficiency	Peak efficiency: 97% ≥ 96% (230 V AC, 30%–80% load)
Dimensions (H x W x D)	40.8 mm x 105 mm x 269 mm
Weight	≤ 2.2 kg
Cooling mode	Built-in fan (fan speed adjustment)
IP rating	IP20

Overview

The R4875G1 is a digital rectifier with high efficiency and high power density. It supports a wide input voltage range and provides the 53.5 V DC or 57 V DC default output voltage. The rectifier provides comprehensive protection functions, supports soft start, and produces low noise. Multiple rectifiers can be connected in parallel. With the power monitoring technology, states of the rectifier and load are monitored in real time, and the output voltage can be adjusted.

Key Features

- Wide input voltage range
- Wide operating temperature range
- Low total harmonic distortion (THD)
- Full digital control
- Hot swappable
- Supports a smart electricity meter
- Supports CAN bus communication
- Supports LED alarm display
- Supports voltage adjustment, current adjustment, and current equalization
- Disconnects at above 320 V AC
- RoHS compliance
- TUV and CE certifications, CB report

Environment Specifications

Item	Specifications
Operating temperature range	–40°C to +75°C
Storage temperature range	–40°C to +75°C

Item	Specifications
Relative humidity	5% RH–95% RH (non-condensing)
Altitude	≤ 5000 m (When the altitude ranges from 2000 m to 5000 m, the operating temperature decreases by 1°C for each additional 200 m.)
Environmental requirements	<ul style="list-style-type: none"> • There should be no conductive dust, corrosive gas, or explosion hazard. • Dust, corrosive substances, pests, molds, and other indicators should be controlled in accordance with Class 3.1 requirements in ETSI EN 300 019-1-3 (V2.3.2 or a later version). • If the module is configured in a direct ventilation cabinet or an outdoor cabinet, the IP rating of the cabinet must be greater than or equal to IP55.

Electrical Specifications

Item	Specifications
Input	
Input voltage range	85 V AC–300 V AC
Input frequency	45 Hz–66 Hz Rated frequency: 50 Hz/60 Hz
Rated input current	≤ 21 A
Power factor	≥ 0.97 (50%–100% load)
THD	≤ 5% (50%–100% load)
Output	
Output voltage	42 V DC–58 V DC Rated voltage: 53.5 V DC / 57 V DC
Output power	4000 W (176 V AC–300 V AC) 4000 W–1600 W (176 V AC–85 V AC)
Peak efficiency:	97% ± 0.2%
Regulated voltage precision	≤ ± 0.6% x Vo
Ripple and noise	≤ 200 mVp-p (bandwidth ≤ 20 MHz)
Dynamic response	<ul style="list-style-type: none"> • 25%–50%, 50%–75% load: <ul style="list-style-type: none"> – Overshoot: ≤ ± 5% – Recovery time: ≤ 200 μs (± 0.6% x Vo) • 10%–90% load: <ul style="list-style-type: none"> – Overshoot: ≤ ± 5% – Recovery time: ≤ 1 ms (± 1% x Vo)
Standby power consumption	≤ 5 W
Startup time	3s–10s
Output hold-up time	> 10 ms
Psophometrically weighted noise voltage	≤ 2 mV
Wide-band noise voltage	≤ 50 mV (3.4 kHz–150 kHz) ≤ 20 mV (0.15 MHz–30 MHz)

Other Specifications

Item	Specifications
Protection	
Input overvoltage protection	Protection threshold: > 300 V AC
	Recovery range: 290 V AC–300 V AC
Input undervoltage protection	Protection threshold: < 80 V AC
	Recovery range: 80 V AC–90 V AC
Output overvoltage protection	Protection range: 56 V DC–60 V DC (can be set on the monitoring module) 1. If overvoltage occurs inside a rectifier, the rectifier will latch off. 2. If the external voltage is greater than 63 V DC for about 500 ms, the rectifier will latch off.
Output current limiting protection	See Figure 1.
Output short-circuit protection	A long term short circuit is allowed. After the fault disappears, the rectifier is restored to a healthy state automatically.
Overtemperature protection	The rectifier protects against overtemperature.
Safety/EMC/Lightning Protection	
Certification & Safety	<ul style="list-style-type: none"> TUV and CE certifications, CB report Complies with IEC 62368-1, IEC 60950-1 standards.
EMC	EN 55032, EN 55024, EN 61000-3-2, EN 61000-3-3, ETSI EN 300 386, ETSI EN201 468, ETSI EN 301489, and ITU-T K.20
Lightning protection	5 kA (8/20 μ s)
Reliability	
MTBF	$\geq 500,000$ hours (40°C)
Audible Noise	
Specifications	≤ 55 dB(A) (40°C)

Output Feature Curves

Figure 1 Output feature curve

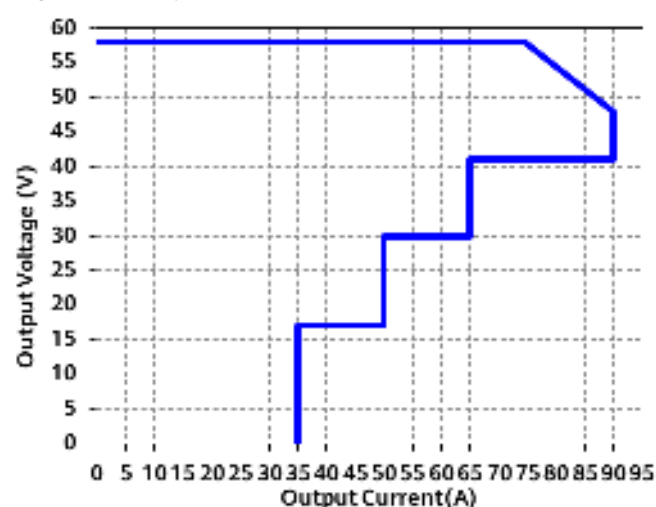


Figure 2 Output efficiency curve (230 V AC, 25°C)


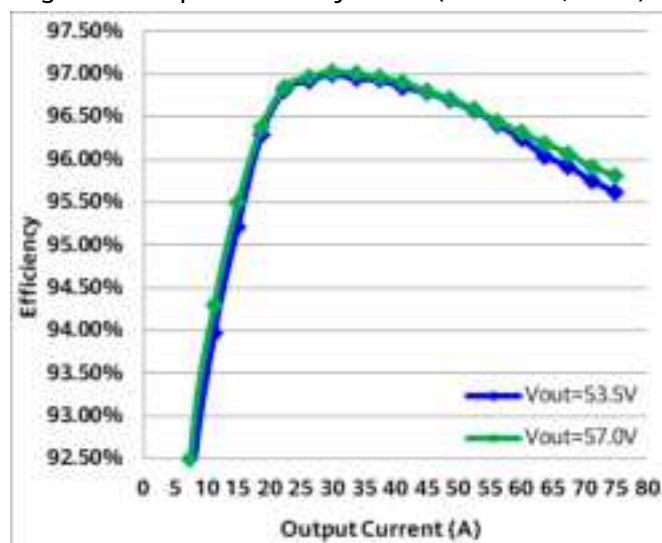


Figure 3 Output power derating curve

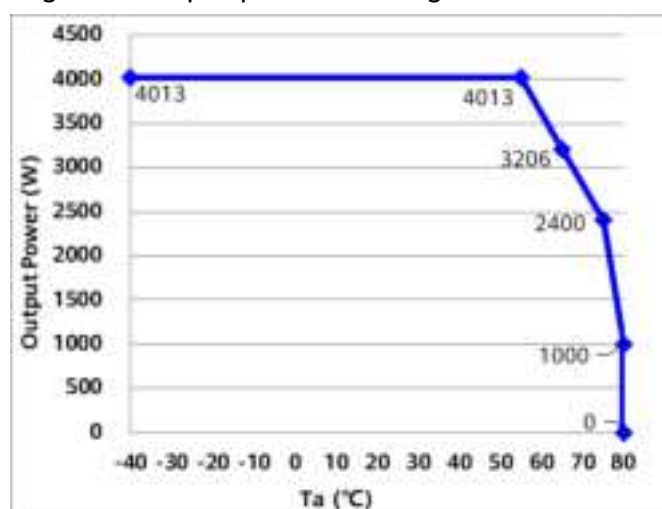

Port Description

Figure 4 Rectifier edge connectors

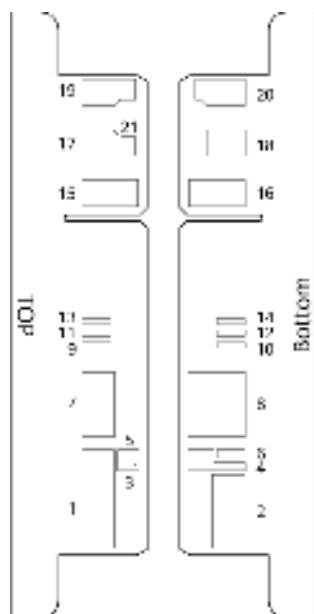


Table 1 Rectifier edge connector definitions

Pin	Definition	Function
1-2	OUTPUT-	Output 48 V-
3-5	PRE-CHARGE	Precharging
6	PRESENT	Rectifier in-position detection
7-8	OUTPUT+	Output 48 V+
9	P_ADJ	Power identification signal 1
10	N_ADJ	Power identification signal 2
11	AC_D2	Slot detection signal 2
12	AC_D1	Slot detection signal 1
13	CANL	CAN low level
14	CANH	CAN high level
15-16	PE	Protective earth
17-18	N	AC input neutral wire
19-20	L	AC input live wire
21	AC-PRECHAR	Input pre-charge

CAUTION

- Only trained and qualified personnel are allowed to install or service the module.
- A fuse is equipped for the input terminal L (The module does not apply to dual-live wire power scenarios).
- This product should be used in an environment that meets specifications described in the user manual.
- If the product is used with abnormal grid input or exposed to salt mist, dust, or water mist, the product may become faulty, and the resulting product exceptions or component damage are beyond the warranty scope.
- To prevent burns, wear protective gloves and exercise caution when removing a rectifier because it is hot during operation.

CAUTION

- If the red indicator is on or the green indicator is off, check the PSU first and then power it on. (Shake the PSU to check whether there is abnormal sound, check whether the PSU has an odor, whether the edge connector is clean and intact, and whether the L/N and PE pins of the edge connector are short-circuited.) Do not directly power on the PSU. Otherwise, it may arc or become faulty.

Replacing a Rectifier

Figure 5 Removing a rectifier



Step 1: Push the locking latch leftwards.

Step 2: Pull out the handle and remove the rectifier from the subrack.

Figure 6 Installing a rectifier



Step 1: Place a new rectifier in the correct slot, push the locking latch left, and pull out the handle.

Step 2: Gently push the rectifier along the guide rails into the subrack, close the handle, and flip the locking latch right to secure the handle.

Transportation

During transportation, the product must be securely placed in a packing case. The packing case must comply with related international standards and be printed with marks such as anti-collision and moisture prevention. The packing case containing the product can be transported by any means. Protect the packing case with the product from being dampened and knocked.

Storage

Unused products must be stored in packing cases and placed in a dry, well-ventilated warehouse where the temperature ranges from -40°C to $+75^{\circ}\text{C}$, the relative humidity is not greater than 80%, and no corrosive gas exists.

CAUTION

- In an indoor scenario, you are advised to power on the rectifier within seven days after unpacking. If the rectifier cannot be powered on in time, place it in an indoor environment that is dry and without corrosive gas.
- In an outdoor scenario, you are advised to power on the rectifier within 24 hours after unpacking. If the rectifier cannot be powered on in time, place it in an indoor environment that is dry and without corrosive gas.




Maintenance

DANGER

- The equipment is powered by high-voltage electricity. Direct or indirect contact (especially through damp objects) with high-voltage electricity may result in serious injury or death.
- Non-standard and improper high-voltage operations may result in accidents such as fire or electric shock.

Table 2 describes the states of LEDs and the causes for faults.

Table 2 LED description

Indicator	Color	Status	Description	Suggestion
Power indicator 	Green	Steady on	The rectifier has AC input.	The status is normal.
		Off	The rectifier has no AC input.	<ul style="list-style-type: none"> • Check whether the input voltage is normal. • If the input is normal, replace the rectifier.
			The rectifier is faulty.	Replace the rectifier.
		Blinking at 0.5 Hz	The rectifier is being queried.	The status is normal.
		Blinking at 4 Hz	The rectifier is loading an application program.	The rectifier automatically recovers after the loading is finished, and no action is required.
Alarm indicator 	Yellow	Off	The rectifier is not protected, and there is no alarm.	The status is normal.
		Steady on	The rectifier has generated an alarm due to ambient overtemperature. The rectifier has generated a shutdown alarm for protection due to ambient overtemperature or undertemperature.	Check that the air vent is not blocked and the ambient temperature is within the normal range.
			The rectifier is protected against input over/undervoltage.	Check the power grid voltage.
			The rectifier is hibernating.	The status is normal.
		Blinking at 0.5 Hz	The communication between the rectifier and the monitoring module is interrupted.	Replace the rectifier or monitoring module.
Fault indicator 	Red	Off	The rectifier is normal.	The status is normal.
		Steady on	The rectifier latches off due to output overvoltage, or the rectifier is not properly inserted.	Remove the rectifier and then insert it after 1 minute.
			The rectifier has no output due to an internal fault.	Replace the rectifier.
			The module is locked upon theft.	Contact the monitoring center to unlock the module.

Suggestions

1. Rectify a fault by referring to Table 2.
2. If you cannot rectify the fault according to Table 2, replace the rectifier.
3. Return the faulty rectifier to Huawei for repair.

Huawei Digital Power Technologies Co., Ltd.

Huawei Digital Power Antuoshan Headquarters

Futian, Shenzhen 518043

People's Republic of China

<https://e.huawei.com>