




Swimming Pool Pump

Installation and Operation Manual

- 0.75hp Pool Pump
- 1.0hp Pool Pump
- 1.5hp Pool Pump

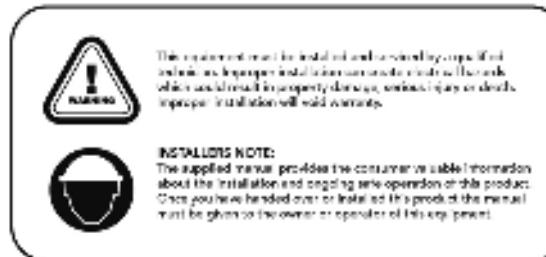

HY-CLOR AUSTRALIA PTY LTD
ABN: 81 000 655 381

178 Power Street
Glendenning, NSW 2761 Australia

Australia: 1800 625 123
New Zealand: (09) 973 2477


help@hyclor.com.au
www.hyclor.com.au

HY-CLOR AUSTRALIA PTY LIMITED
ABN: 81 000 625 381

178 Power Street
Glendenning, NSW 2761 Australia

All enquiries
AU: 1800 625 123 NZ: (09) 973 2477
or help@hyclor.com.au

visit us at hyclor.com.au

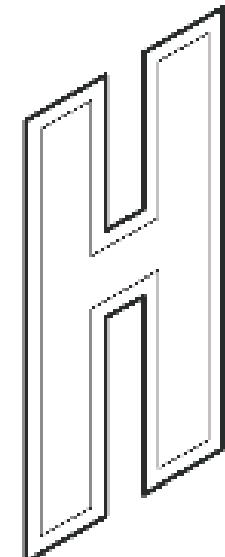

Swimming Pool Pump

Installation and Operation Manual

- 0.75hp Pool Pump
- 1.0hp Pool Pump
- 1.5hp Pool Pump

1.0	INTRODUCTION	3
2.0	SAFETY INFORMATION	3
3.0	INSTALLATION	4
4.0	OPERATION	5
5.0	SERVICE AND MAINTENANCE	6
6.0	TROUBLESHOOTING	7
7.0	WARRANTY	7
8.0	TECHNICAL SPECIFICATIONS	10

NOTES

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

NOTES

1.0 INTRODUCTION

- 1.1 Congratulations on your recent purchase of a HY-CLOR Pump. Please take a moment to read through the entire manual before installing your new pump. Your pump must be installed and operated as specified.

2.0 SAFETY INFORMATION

2.1 IMPORTANT SAFETY INSTRUCTIONS, READ AND FOLLOW ALL INSTRUCTIONS. SAVE ALL INSTRUCTIONS.

- 2.1.1 **WARNING:** Hazardous Suction. Pump suction is hazardous and can trap hair and body parts resulting in severe injury or death. Do not block filter or suction lines with any part of your body, if someone becomes entrapped, immediately turn the pump off.
- 2.1.2 **WARNING:** Two suction inlets (minimum 500mm apart) must be provided into every pump to avoid suction entrapment. If a suction cover is broken, missing or loose, do not operate the swimming pool or spa.
- 2.1.3 A qualified technician should carry out the pump installation.
- 2.1.4 Always wear protective clothing and gloves when handling adhesives.
- 2.1.5 The pump must be installed and maintained in accordance with national wiring rules.
- 2.1.6 Children should be supervised to ensure they do not play with the appliance.
- 2.1.7 If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 2.1.8 This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.1.9 The pump power must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.
- 2.1.10 Routinely check the pump basket, skimmer and entire pool system to maximise the life of the pool equipment and personal safety. Always turn the pump off before carrying out cleaning and maintenance.
- 2.1.11 DO NOT remove any safety alert labels on the pump such as DANGER, WARNING or CAUTION. Keep safety labels in good condition and replace missing or damaged labels.

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

3.0 INSTALLATION

3.1 LOCATION

- 3.1.1 Locate the pump as close to the pool as practical and in accordance with any relevant regulations or recommendations.
 - 3.1.2 The pump must be installed in a dry and well-ventilated position protected from the elements.
 - 3.1.3 A clearance of 230mm is required behind the motor for ease of removal and ventilation.
 - 3.1.4 The pump must be installed horizontally, at 3 metres maximum elevation; maximum 0.5 metres above the pool water level (without consulting manufacturer).
 - 3.1.5 DO NOT store or use gasoline or other flammable gases or liquids in the vicinity of this pump. DO NOT store pool chemicals near the pump.
 - 3.1.6 Flooding or moisture in the motor voids warranty. Ensure the pump is elevated and kept dry and free from flooding.

3.2 PLUMBING CONNECTION

- 3.2.1 The piping should be as straight and free from turns or bends as possible as above one other fitting can greatly reduce flow efficiency.
 - 3.2.2 If the pump is located below water level, isolation valves must be installed on both sides of the pump to prevent the back flow of pool water during any routine or emergency servicing.
 - 3.2.3 Use PVC fittings for all connections. A 50mm (2") suction inlet/union union is provided to suit 40mm PVC pipe. The suction and discharge pipes must not be smaller in diameter than the pump fittings (otherwise flow rates may be affected).
 - 3.2.4 Use plumbing cleaner prime to clean and prepare the pipe ends and union sockets. Place the union collets over the pipe ends. Using plumbing solvent cement glue the union sockets to the pipe ends. Allow at least 24 hours for any adhesive to dry thoroughly before mating the unions.
 - 3.2.5 Ensure that the o-rings are fitted to the union sockets and apply a suitable o-ring lubricant if required. Also check that the pump casings' o-ring is sufficiently lubricated.
 - 3.2.6 Suction and discharge lines should be independently supported at a point near the pump to avoid strain being placed on the pump.

NOTES

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydcor.com.au
www.hydcor.com.au

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydcor.com.au
www.hydcor.com.au

NOTES

- 3.3 ELECTRICAL CONNECTION**

3.3.1 HVC-LDR pumps are suitable for connection to a nominal 220-240VAC 50Hz power supply.

3.3.2 The motor is equipped with a flexible cable and 3-pin plug. If a power outlet is not available within 2 metres of the pump, a 3 pin power point in a safe dry place will need to be provided by an electrician.

3.3.3 The pump power must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.

3.3.4 Extension cords are unsafe and must not be used.

4.0 OPERATION

4.1 GENERAL START UP GUIDE

- 4.1.1 CAUTION: Never run the pump without water. Running the pump "dry" for any length of time can cause severe damage to both the pump and the motor and will void the warranty.

4.1.2 If it is a new pool installation, make sure all piping is clear of construction debris and has been properly pressure tested. Special care must be taken to ensure no small bubbles are ingested into the pump as this voids the warranty.

4.1.3 The filter should be checked for proper installation, verifying that all connections are secure according to the manufacturer's recommendations.

4.1.4 Depending on the location of the pump, do one of the following:

 - a) If the pump is located below the water level of the pool, open the filter pressure valve to prime the pump with water.
 - b) If the pump is located above the water level of the pool, remove the lid and fill the tank with water before starting the pump.

4.1.5 Prior to replacing the lid, check for debris around the O-ring seat. Debris around the O-ring seat will make it difficult to prime the pump and may damage the O-ring.

4.1.6 Hand-tighten the lid to make an air-tight seal (do not use key tools to tighten as damage may occur).

4.1.7 Make sure all valves are open and the unions are tight. Turn on the pump, the pump will take a short time to prime and then deliver at full rate. No further priming should be required.

4.1.8 If prime is not established within approximately two minutes (as evidenced by a strong flow of water from the outlet switch off the pump and repeat the procedure above (5.1.4 through 5.1.7).

4.1.9 If bubbles persist under the lid there is a leak in the suction connection or the lid is not sealed properly, switch off the pump and repeat the procedure above (5.1.5 through 5.1.7).

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

5.0 SERVICE AND MAINTENANCE

- 5.1.1.** To achieve a maximum potential life expectancy from the pump ensure the following steps are taken:
- 5.1.2.** Empty the skimmer basket regularly (weekly recommended). The regularity will vary from pool to pool, for example:
- Where you may have lots of leaves and debris you should empty the basket twice or more for each operating cycle, particularly when using a suction-type cleaner.
 - Where you may have minimal leaves and debris the basket may only require cleaning weekly.
 - Always remove children's toys or balls from the pool when not in use.
- 5.1.3.** Check for leakage: Carry out weekly inspections, for example:
- Around the pump, filter, or motor and heater (where fitted) where water can leak from all or some of these components.
 - If water is present whether you can see the source of the leak or not, then contact your pool technician immediately. This may reduce the possibility of major equipment damage.
- 5.1.4.** Inspect and empty the pump filter basket, at least weekly:
- Turn pump OFF at the main power supply.
 - Close all valves where fitted, to prevent water loss through pump.
 - Remove clear plastic screw down cap off the pump.
 - Remove plastic basket and empty any sediment. If a sink or filter has been fitted, inspect hole holes and replace if necessary.
 - Inspect the chamber housing of the basket, ensure no debris, pebbles or leaves have fallen in whilst removing the basket; remove all foreign material.
 - Return the basket into the chamber and ensure it is correctly seated to avoid any damage to the pump.
 - Lubricate the O-ring. The O-ring can be located on top of the chamber when the lid screws on; use a silicone lubricant which is available from your retailer or serviceman. (Do NOT use petroleum gel or axle grease as this will damage the O-ring).
 - Replace the screw-down cap firmly by hand only.
 - Re-open any valves where fitted that were closed in step 5(b) above.
 - Operate the pump, it is essential that the pump be operated after carrying out the above procedure, this will purge any air from the system. Start the pump and wait until the int basket is full of water. Then where fitted, open an bleed fitting on the filter to expel air. Once the stream of water amongst all air is gone and the air bleed valve can be closed.
- 5.1.5.** Dirty Filters: Restricted water flow from a dirty filter can cause the pump to overwork thus shortening its lifespan. Please follow the filter manufacturers guidelines for the method and frequency of cleaning.
- 5.1.6.** Noisy Pump: As with all mechanical designs, if more noise than usual is heard coming from the pump, notify Hy-Clor or your pool service technician. A noise can indicate a fault and the longer this is left unaddressed the risk of increased damage can occur resulting in an expensive repair or replacement.

HY-CLO® 1.5HP POOL PUMP

HY-CLO® 1.5HP POOL PUMP	1.5HP
Head Max (m)	14.8
Max Flow Rate	255 Litres/min
Port Connection (mm)	40 mm PVC
Overall Connection (mm)	40 mm PVC
Suggested Pipe Size	40/50 mm
Motor Speed (RPM)	2850
Power Input (W)	230W/50Hz
Power Input (Watts)	198W

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

8.0 PUMP SPECIFICATIONS

HY-CLOR 0.75 POOL PUMP	HY-CLOR 0.75HP POOL PUMP	0.75HP
Head Max (m)	13	
Max Flow Rate	705 L/min/m	
Inlet Connection (mm)	42mm PVC	
Outlet Connection (mm)	40mm PVC	
Suggested Pool Size	25,000 Litres	
Motor Speed (RPM)	2850	
Power Input (Watts)	240W	
Power Input (Watts)	256W	

HY-CLOR 1.0HP POOL PUMP	HY-CLOR 1.0HP POOL PUMP	1.0HP
Head Max (m)	13	
Max Flow Rate	300 L/min/m	
Inlet Connection (mm)	40mm PVC	
Outlet Connection (mm)	40mm PVC	
Suggested Pool Size	45,000 Litres	
Motor Speed (RPM)	2850	
Power Input (W)	220.2W@50Hz	
Power Input (W)	256W	

5.1.7 **Backwash Pool.** All backwash or similar pools should initially be fitted with a sock if either the estimate made up in the pump inlet to prevent damage to the pump as a result of loose stones making their way through the system. Should a sock not be installed, any subsequent damage caused by loose pebbles entering the pump impeller will void the warranty.

6.0 TROUBLESHOOTING

6.1.1 **WARNING:** Your pump must be serviced by a professional service technician qualified in pool pump installation. The following troubleshooting must be followed correctly. Improper installation and / or operation can create dangerous electrical hazards, which can cause high voltage to run through the electrical system. This can cause property damage, severe personal injury and / or death. Improper installation and / or operation will void the warranty.

6.2 GENERAL PUMP TROUBLESHOOTING

SYMPTOM	POTENTIAL CAUSE	SUGGESTION
No power to pump	No AC supply to the pump. No water in the pump. Check all fittings including the filter, valve, pump and filter. Ensure all valves are open and in their correct position. Replace any damaged pump parts.	
Motor runs switch off	No power to pump. Pump overheating.	Make sure that power supply to the pump is on. Check and read over fuse box. Check relay. Ensure that the pump is not covered and has adequate ventilation.
Frothy water	Drain tank. Check for any debris, fallen leaves, sticks and insects. Make sure all valves are open and in their correct position.	Backwash or backflow supply. Clean outlet of debris. Ensure all valves are open and in their correct position.
Noisy Pump Sound	Noisy pump. Debris caught in impeller causing it to rotate.	Refer to pump part, contact dealer. Contact HY-CLOR.

7.0 HY-CLOR WARRANTY

7.0.1 Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. Please read these warranty terms and conditions carefully. A failure to comply with these terms and conditions may affect any claim on warranty you may have on a product.

7.0.2 All products provided by HY-CLOR AUSTRALIA PTY LTD are warranted for defined periods of time (refer to warranty terms).

7.0.3 All mechanical swimming pool products supplied to consumers by HY-CLOR are to be installed or used in the manner they are manufactured for only.

7.0.4 Warranty may be voided if the product or products claimed by the consumer under warranty have been used for purposes other than that designed or manufacturer's purpose.

7.0.5 Where applicable, products supplied by HY-CLOR come with operation and installation instructions. All care must be taken to install and operate the products according to these instructions. Failure to install or operate these products in accordance with these instructions may void warranty.

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

help@hydor.com.au
www.hydor.com.au

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

- 7.0.6 The chemical balance of the swimming pool water plays a significant part in the operational health of all swimming pool products. HY-CLOR recommends regular water testing using an approved swimming pool test kit or test strips. This is provided on our website's SMARTS-U-S: <http://hydor.com.au/marts-test>
- 7.0.7 This warranty is valid for the original purchase and is not transferable. Keep your purchase receipt, this evidence is required at the point of purchase, and as proof of the date on which the purchase was made.
- 7.0.8 Modifications to any electrical product provided by HY-CLOR without prior approval by a hydor authorised warranty service provider or written approval has been granted by HY-CLOR and has been carried out by one of its authorised agents. All electrical installations must be carried out by a competent licensed professional.
- 7.0.9 All pool filtration equipment including filters, pumps and salt chlorinators, must be kept in a dry well ventilated area away from direct sunlight and in an area that is free from flooding or rain. This warranty does not cover normal wear and tear to the products or parts.
- 7.1 WARRANTY TERMS**
- 7.1.1 Your HY-CLOR Pump carries a manufacturer's warranty of 2 years on the Pump pump, Motor, Body Dosing, Mechanical seal and Lid.
- 7.1.2 All other Components including O-rings are 1 year warranty, but subject to wear and tear.
- 7.2 EXCLUSIONS**
- To the maximum extent permitted by Applicable Laws, the warranty will not apply under any of the following circumstances:
- 7.2.1 The Purchaser is in breach of the terms and conditions of sale.
 - 7.2.2 The product was used for a purpose or under conditions other than what it was intended for.
 - 7.2.3 The product was repaired, modified or altered by any person other than HY-CLOR Authorised Representatives.
 - 7.2.4 The product was not installed, maintained and/or operated in complete compliance with the installation and operating instructions and any instructions provided by HY-CLOR.
 - 7.2.5 The product was operated under adverse conditions including, but not limited to, use with water exceeding 35°C, hot operating enclosures with poor ventilation, fluctuating power supplies, water pressure greater than 250kpa, or lack of protection from the weather.
 - 7.2.6 Normal wear and tear or damage or associated with the age or use of the product.
 - 7.2.7 The product was damaged by foreign debris causing suction pool cleaners, refer to equipment installation instructions.
 - 7.2.8 The product was damaged by weather and other environmental conditions including but not limited to storm, flood, and/or heat wave damage.
 - 7.2.9 Failure of the mechanical seal due to insufficient wear life caused by any leakage or ingress of foreign material of any kind whatsoever.
 - 7.2.10 Damage to the product caused by the addition of chemicals, salt, thermal media or any other thing through the skimmer box.
 - 7.2.11 Failures or any defects in component, part or operating function of the product, which is in the opinion of HY-CLOR the result from misuse, negligence, rebuilds or modifications, incorrect installation or by persons that are not HY-CLOR Authorised Representatives.

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au

7.3 LIMITATIONS

Except to the extent permitted by applicable laws, breach of a condition or warranty shall be limited to rendering or repairing the same substance for any person benefit or the services supplied.

The maximum liability incurred by HY-CLOR shall not exceed in any case the cost(s) paid for the equipment or the product parts claimed to be defective. Further HY-CLOR shall not be liable for any loss, damage or delay directly or indirectly caused by any malfunction of or defect of or failure of the equipment other than as expressly stated in this warranty.

Subject to applicable laws, the repair or replacement of the product or part of the product is the absolute limit of HY-CLOR liability under this express warranty.

7.4 WARRANTY CLAIMS

If you consider that the product which you have purchased is not of acceptable quality, has a latent defect or is otherwise not compliant with the warranties, conditions, undertakings and legal rights you have under Applicable Laws you can make a claim under this warranty by contacting:

HY-CLOR AUSTRALIA
178 Power Street, Gledhill NSW 2761
Phone: +61 2 8805 2400
Fax: +61 2 8805 2401
AUS: 1800 625 123
NZ: (09) 9732 2477
Email: help@hydor.com.au

All Warranty claims must be accompanied by the proof of purchase, a legend defect and any appropriate documentation (historical and maintenance records).

7.5 CUSTOMER WARRANTY INFORMATION

- 7.5.1 Please complete the **WARRANTY CERTIFICATE** at time of installation and retain it the event you need to file a warranty claim.
- 7.5.2 Contact HY-CLOR for all warranty repairs help@hydor.com.au, or Australia: 1800 625 123
New Zealand: (09) 9732 2477

PRODUCT HELPLINE

Australia: 1800 625 123
New Zealand: (09) 973 2477

help@hydor.com.au
www.hydor.com.au