# LUMARY SMART GIMBAL LIGHT START MANUAL



Thank you for purchasing Lumary products. Ready to get started? Download the Lumary App to manage your devices straight from your phone and tablet. Easily connect to your home Wi-Fi and control multiple devices with touching fingertips. Thank you for your support, we will be dedicated to your service and continue to optimize the application and products.

### Contents

Product & Notes	3
Installation	4-5
Application Connection	6-14
Beacon Remote Control	15-16
FAQ	17-20
Important Information	21-22
App-To-App Voice Control	23-30

### Product&Notes

### What's in the Box

Lumary Smart Gimbal Light Start Guide

Lumary Smart Gimbal Light

### Get Ready

- Know your Wi-Fi network and password.
- Make sure your mobile device is running iOS 13.3 or higher and Android 9.0 or higher.
- Make sure you're connecting to a 2.4GHz Wi-Fi network (Lumary can't connect to 5GHz networks).

### Attention

1.Do handle carefully in transportation.

2.Do not disassemble the fixture for non-professional.

3. The fixture work under AC high voltage and current, it should be installed where can't be touched easily. The connection must be completely sealed and be earthed.

4. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

5.The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similarly qualified person.

6.The surface where it's positioned must be firm enough to ensure safety.

7.Ensure the voltage of the electricity system is in the range of working voltage for the fixture. Otherwise, lifetime of fixtures will be influenced.

8.Installation and maintenance should be operated by a professional.

## INSTALLATION INSTRUCTIONS

#### IMPORTANT:

Read all instructions before installing fixtures. Retain for future reference. SAFFTY:

For your safety, this fixture must be wired in accordance to local electrical codes and ordinances. All work should be done by a qualified electrician.

#### WARNING:

Make certain power is OFF from the electrical. Panel before starting installation or attempting any maintenance. Indoor installation only.

#### PRE-INSTALLATION:

- 1. Turn power OFF from the electrical panel before starting installation.
- 2. Locate a suitable position to plate the fixture andopen in accordance to the cut-hole dimensions (refer to Hole CutTable for appropriate size).
- 3. Run electrical wire from the switch (power supply) through the mounting hole-use NMD90 Romex or BX cable.

#### DRIVER WIRING:


- 1. Open the hardwire box swing cover and remove the appropriate knockout(s).
- 2.Insert the electrical supply cable through the knockout and secure with a cable connector (sold separately).
- 3.Using wire nuts, connect green ground wire of cable to green wire on box. Connect white wire of cable to white wire of box. Connect black wire of cable to black wire of box. (Fig.1).
- 4.Place all wiring and connections back in to the box and close the cover.


5.Insert hardwire box through the mounting hole.(Fig.2)

New construction applications: Hardwire box shall be firmly secured to studs, joists, or similar fixed structural units

Remodel applications: Do not require the hardwire box tobe frmly secured after the mounting plates, studs, joists, or structural units have been concealed.

6. Junction box suitable for maximum of 5 No 12 AWG or 8 No 14 AWG Conductors.

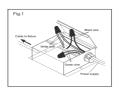

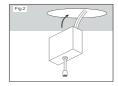


#### FIXTURE INSTALLATION:

1.Connect the fixture to the hardwire box by inserting and twisting the male/female connectors.(Fig.3)

2.Push spring loaded clips on the fixture upwards and insert fixture base in to the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Fig.4) 3.Once assembly is complete, turn on power to confirm fixture is flashing white.



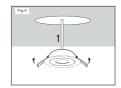

## Install the "Lumary" App

 Find and install the "Lumary" App on App Store, Google Play.









## 2. Register a Lumary account.





Enter your email address.

Log into the App.

Note:Please select your region and country.

### 3. Connect

NOTE: Lumary's products can't connect to 5GHz networks. Steps:

- Advised to enable Bluetooth, Enable Bluetooth to add some Wi-Fi device easily:
- Each time the device without distribution network is powered on, confirm the light is breathing or blinking pairing mode;
- 3. Open the Lumary App,In the top corner of the Devices screen, click "+" and select "Add Device" to confirm that the device is paired.


### If not, you need to use the wall switch to reset: on-off-on-off-on;

- 4. Find the device, choose Wi-Fi and enter password, press "Next".
  Click "Add", and wait patiently. After that, click "Done", and the device is successfully added to the App.
- 5. Other ways to add devices,Open the Lumary App>>In the top corner, click "+">> Choose "Lighting">>>Select "Light Source (BLE + Wi-Fi)" >>Select "AP Mode" or "EZ Mode" in the upper right corner.







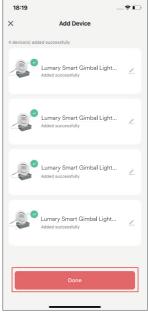

### 4. Troubleshooting

1. Can't connect to your Wi-Fi network.

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

- 2. If you fail to bind, you will need two phones, one to set the hotspot and the other to connect the hotspot and add the device through the app. If the device is successfully added, the device is normal. The problem may be in the router, you need to check your router Settings to see if there are MAC and DHCP restrictions. Lumary's products do not support 5GHz networks.
- 3. If you have any questions. You can contact us via our after-sales email: support@lumary.tech or leave a message on our official social media account.


Note: To ensure the stable output of the product, 4-inch 6-inch light source and power supply box can not be mixed, please follow the corresponding model with the connection.


# **Group Control**







### 2.Click "Create Group", then select a device and save.

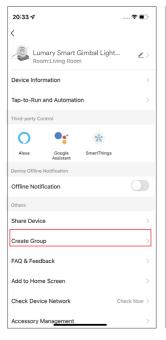


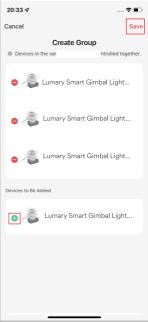

3. You can reset the group name and save it, and the group can control devices.

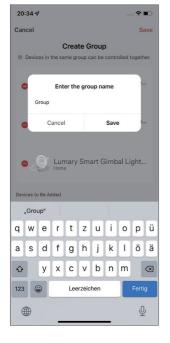

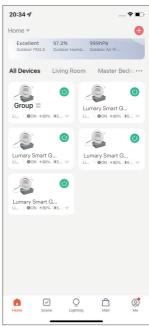

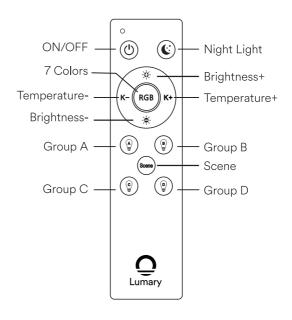

# Remote control paired device

Note: Not all devices are compatible with the remote control. Downlights of models A/B/C/D/F that have been manufactured after January 2022 are compatible with the remote control. If you require more detailed information, please do not hesitate to contact us at our after-sales email address: support@lumary.tech.

- 1. The device is powered by 2xAAA dry batteries.
- The lighting device needs to be paired with the App through the mobile phone first.
- For devices that have completed network configuration to the App, keep the network unblocked.
- 4. Turn off the device through the wall switch, and then turn on the switch after 5 seconds. Within 1 minute of power-on, the lighting device and remote control are in a pairing state.
- 5. Long press any key on the remote control A/B/C/D as needed until the device flashes to indicate success. If during the configuration process, the required device is not fully paired, long press the group button again until all devices are paired. If it times out, repeat step 4.

### FAQ

## 1. What should I do, if I don't have internet access to my Lumary product?

If you do not have a network, you will need two mobile phones, one to set up the hotspot and the other to connect to the hotspot and add the device via the app (refer to the guide).

# 2.If my Wi-Fi internet goes down, will Lumary App still work?

Lumary products need to be connected to Wi-Fi in order to use them remotely, and the device can be controlled simply using the app via the LAN as well as Bluetooth.For example: on, off, dimming, colour temperature, colors.

## 3. Why does the flickering occur with Lumary products?

Lumary's products are factory set to the default network configuration. If the device has not been connected to the network, it will flash for three minutes each time it is powered on. If the device has not been connected to the network, it will flash for three minutes every time it is powered on. If the device is connected to the network, it will stop flashing and will automatically connect to the network when it is switched off and on via the wall switch after 15 seconds.

### 4.Can I share with family and friends?

Yes, you can share access to your Lumary devices. In the Lumary App, from your main device list, click on one of the devices press the "..." button on the top right and click on "Share Device" to give or revoke sharing permissions. In order to share, the other user should already have downloaded the Lumary App and registered an account.

### 5.Can I group multiple Lumary devices together?

Yes, you can group multiple same-type devices by room, location, or however else you want. The same devices can be in multiple groups. For example, if you create a group for "Bedroom" and another group for "Entire House" ,your Bedroom lights can be included in both groups. From your main device list, click on one of the devices you want to group, press the "..." button on the top right for advanced settings, and click "Create Group" .You'll be able to name a new group and choose which devices you'd like to group together.

# 6.My Lumary device has a funny name. How do I rename it?

From your main device list, click on one of the devices you want to rename, press the "..." button on the top right for advanced settings, and click "Modify Device Name" (or "Modify Group Name"). You'll then be able to choose a more familiar name. cally connect to the network when it is switched off and on via the wall switch after 15 seconds.

### 7.What's the wireless range?

The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.

# 8.What should I do if the device Appears offline or is unreachable?

Make sure your Wi-Fi router is online and in range, and check that you have the latest Lumary functionality by clicking "Check for firmware update" in your device settings. Try to turn off the device >> clear the application cache >> reboot the router >> turn on the device after one minute and check and confirm the device status after five minutes.

## 9. How many devices can I control?

- The maximum number of timers that can be added to a single device: 30
- Maximum number of devices that can be added in a single home: 120
- The maximum number of Tap-to-Run that a single home can create: 100
- Maximum number of Automation that can be created in a single home: 100
- The maximum number of tasks that can be added in a Tap-to-Run: 150
- The maximum number of tasks that can be added in an Automation: 150
- The maximum number of conditions that can be added in an Automation: 10
- The maximum number of mobile devices that can simultaneously log in to an account is: 200
- The maximum number of Homes that can be created by a single App account is: 20
- The maximum number of home members that can be added in a single home is: 20

- The maximum number of rooms that a single home can create is: 20
- The maximum number of devices that can be added in a single room is: 50
- The maximum number of devices that can be added in a single device group is: 100
- The maximum number of device groups that a single home can create is: 20
- The maximum number of each device group that can be shared with other users is: 20
- The maximum number of each device that can be shared with other users is: 20
- The maximum number of each App account that can be invited by other homes is: 20

# 10.What should I do, when I find a problem with the purchased product?

Please email us (support@lumary.tech) with your Amazon order ID. We are dedicated to ensuring your 100% satisfaction. Rest assured if the problem is with this product, we'll be more than happy to exchange it for a new one immediately.

### 11. How do I reset the device?

If the device is connected to the network, press and hold the control button for 5s, the indicator light or light will flash rapidly and enter the network state.

To reconnect to Wi-Fi, Reset the device through the wall switch, on - off - on - off - on

- Reset once (press switch on off on off on ) to reach Easy Mode, indicated by rapidly blinking white light. Refer to connect in Easy Mode.
- Reset again (press switch on off on off on) to reach AP Mode, indicated by slowly blinking white light. Refer to connect in AP Mode.

## Important Information

### Troubleshooting

Can't connect to your Wi-Fi network.

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup.

Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

## Parameter information

Name	Lumary Smart Gimbal Light C
Model	US-GL4C -1,PL-D4-B09
Input Voltage	100-130VAC,60Hz
Wattage	9W
Color Temperature	RGB +Tunable White(2700K-6500K)
CRI	90+
Lumens	810lm
Beam Angle	45°
Rated Life	25000h







FCC ID:2A7AK-PL-D4-B09 Made in China

### CAUTION:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

# VOICE CONTROL GUIDE


Name and Control Each Device by Voice





## Work With Amazon Alexa


- 1. Log in to Lumary App, tap the smart device and enter into, click" <u>""</u> in the top right corner.
- 2.Tap "Alexa" in Third-party Control.
- 3.Tap "Sign In With Amazon".

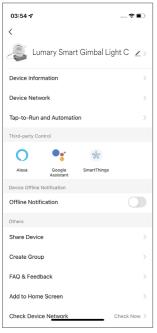



- 4. Tap"Allow".
- 5. Linked successfully, when add new device, there is no need to link again, just discover new device in Alexa.

÷■

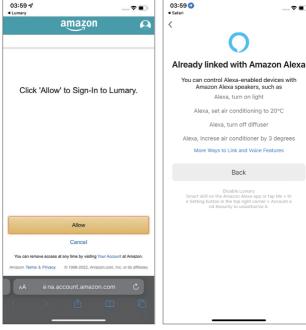



To control your Lumary smart device, just ask Alexa.

Make sure your devices are already set up using the Lumary app.

Things you can say\*:

"Alexa, discover my devices."

"Alexa, turn on the bedroom light."

"Alexa, set the bedroom light to orange."

"Alexa, turn off the coffee machine."


"Alexa, set the living room to 50%."

"Alexa, dim porch light."

\*Some commands require compatible devices.


# Work With Google Assistant

- Log in to Lumary app, tap the smart device and enter into, click "\( \Lambda \)" in the top right corner.
- 2. Tap "Google Assistant" in Third-party Control.
- 3. Tap "Link with Google Assistant".

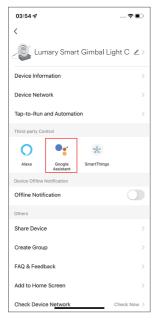



- 4. Click"Agree and link".
- 5. Linked successfully, when add new device, there is no need to link again, just discover new device in Google Home.

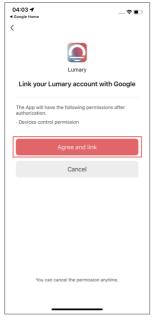





To control your Lumary smart device, just say "Hey Google",and ask.

Make sure your devices are already set up using the Lumary app.

Things you can say\*:

"Hey Google, turn on all the lights in my bedroom."

"Hey Google, turn off the light."

"Hey Google, set the bedroom light to orange."

"Hey Google, turn off the coffee machine."

"Hey Google, set the living room to 50%."

"Hey Google, dim porch light."

\*Some commands require compatible devices.

If you have any questions about use and operation, you can contact us!

Customer Service Email:

support@lumarv.tech

You can also search for our "account name" and "enter URL" on social media platforms or directly scan the following QR code to find us quickly.

- Facebook: US-Smart Home (https://www.facebook.com/Lumary-Smart-Lighting-1028786 58675054)
- YouTube: Lumary Official (https://www.youtube.com/channel/UCcEQnWxockzsPwyPOfSppug)
- Instagram: lumary Smart Home (https://www.instagram.com/lumarysmartlights/)
- Twitter: Lumary @Lumarysmarthome (https://twitter.com/Lumarysmarthome)
- Pinterest: Lumary Smart Home (https://www.pinterest.com/LumarySmartHome/)











Facebook

# Can't connect? Need help?



HAVING AN EASY TALK TO US BEFORE YOU RETURN THE PRODUCT WILL FIX A PROBLEM MORE QUICKLY

# Lumary support:

support@Lumary.tech

Visit us at: www.lumary.tech www.lumarysmart.com