

X8


RoboVac X8 Hybrid

QUICK START GUIDE




Using Your RoboVac

1

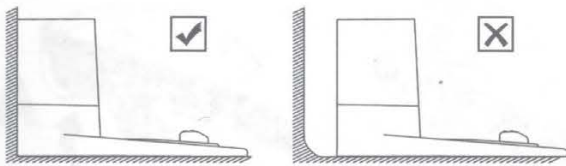


2

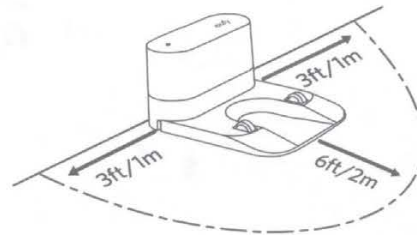


If you cannot remove the objects surrounding the Charging Base, check whether RoboVac can return without assistance; if not, contact eufy customer service for help.

3

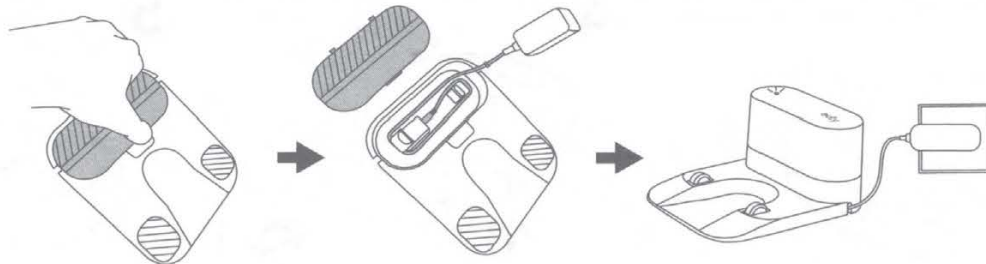

- Always keep the Charging Base plugged in, otherwise RoboVac will not automatically return.
- When the Charging Base is connected to AC power, the LED indicator on the Charging Base is SOLID WHITE.

4

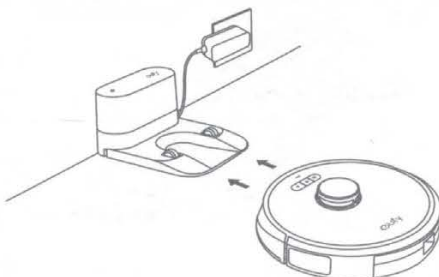



Fully charge RoboVac before use. The LED indicator on RoboVac pulses orange while charging, and is solid blue when fully charged.

5






Download the EufyHome app and follow the in-app instructions to complete the Wi-Fi connection. You then will be able to control RoboVac via this app. Refer to the Owner's Manual for details.



Using Mopping System

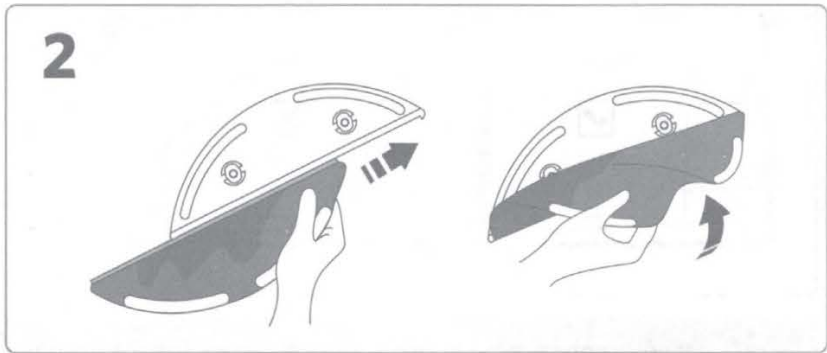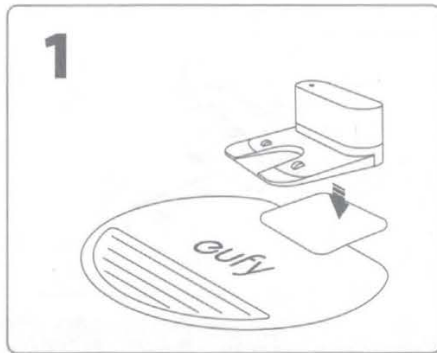

Attach the waterproof pad to the charging base. Wet the cloth before mopping.

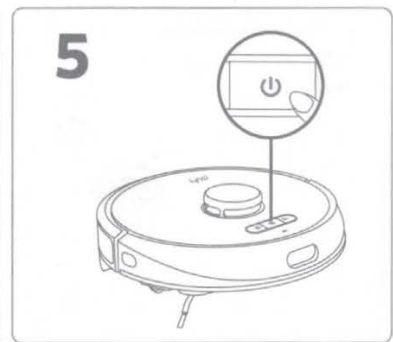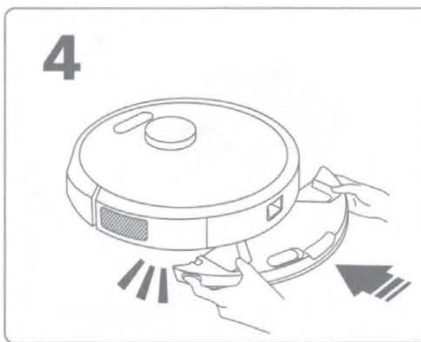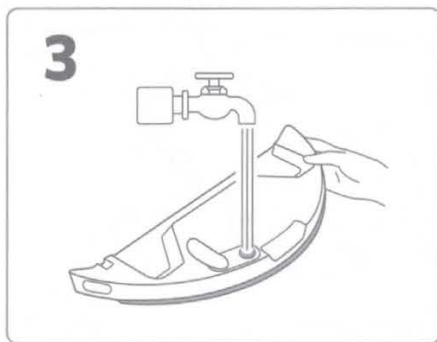






Cleaning and Maintenance

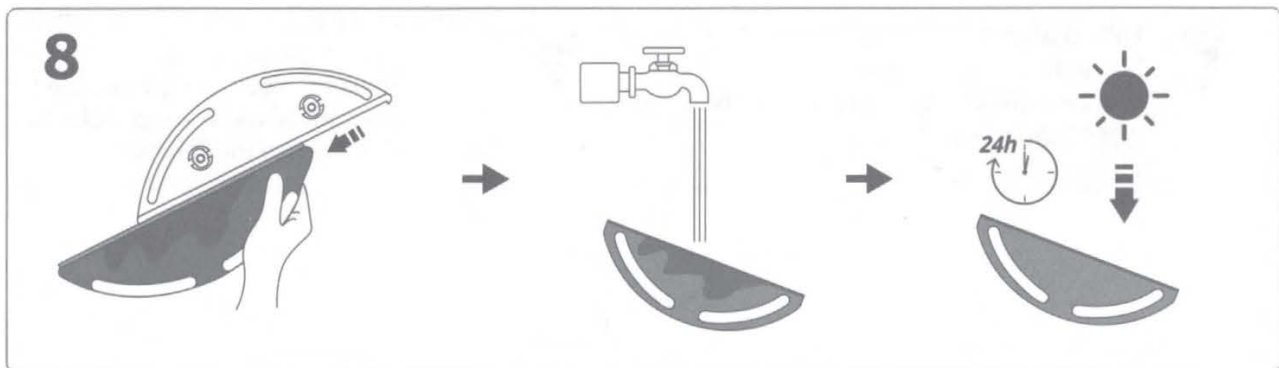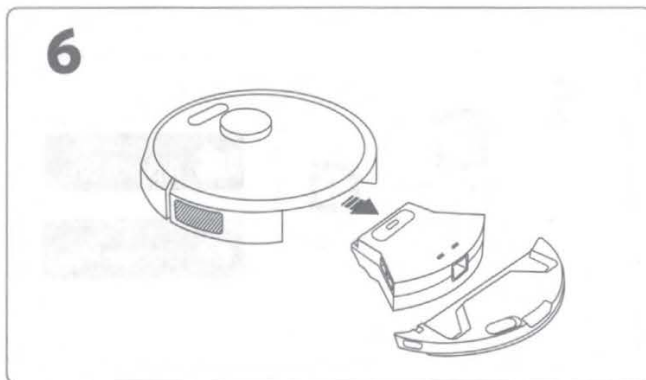

Important Tips



When using for the first time, follow RoboVac to observe and resolve any problems that may occur.

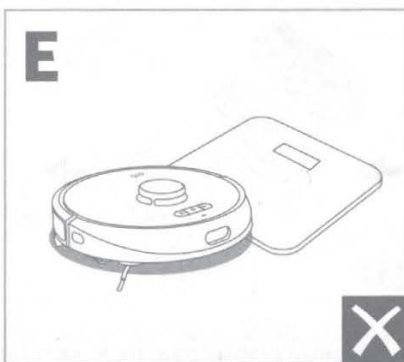
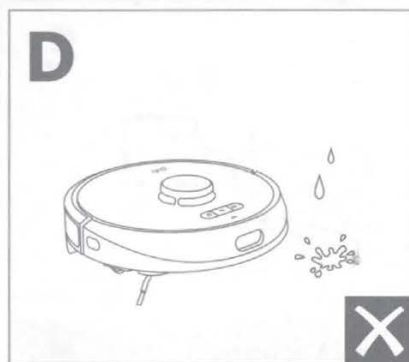
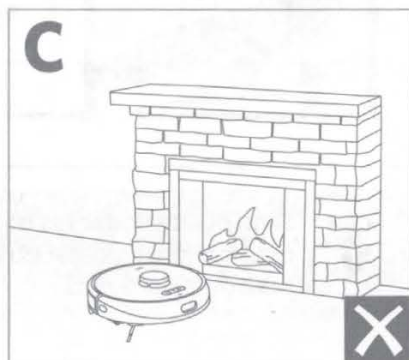
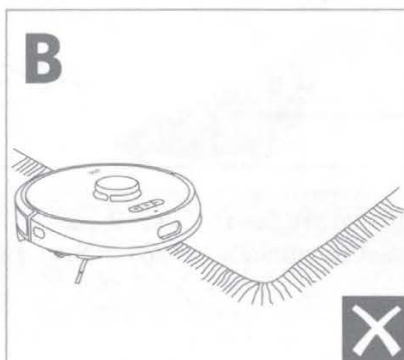
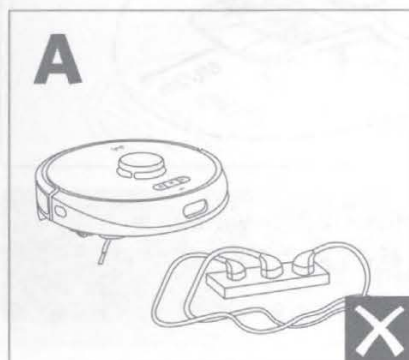


- A** Remove power cords and small objects from the floor that may entangle RoboVac.
- B** Fold tasseled edges of area rugs underneath to prevent tangling RoboVac. Avoid cleaning very dark-colored high-pile rugs or rugs thicker than 1.02 in / 26 mm as they may cause RoboVac to malfunction.
- C** The "No-Go" zones that you set may be ineffective in some cases. It is strongly recommended to place boundary strips (sold separately) in front of fireplaces and certain areas (i.e. air vents) that may cause damage to RoboVac if entered.
- D** Keep RoboVac away from wet areas during cleaning.
- E** RoboVac may climb on top of objects less than 0.67 in / 17 mm in height. Remove these objects if possible.
- F** Anti-drop sensors will prevent RoboVac from tumbling downstairs and steep drops in most cases. Sensors are less effective if dirty or used on carpeted / reflective / very dark-colored floors. It is recommended to place physical barriers to block off areas where RoboVac may fall.

Consejos importantes



Cuando lo use por primera vez, siga al RoboVac para observar y resolver cualquier problema que pueda surgir.

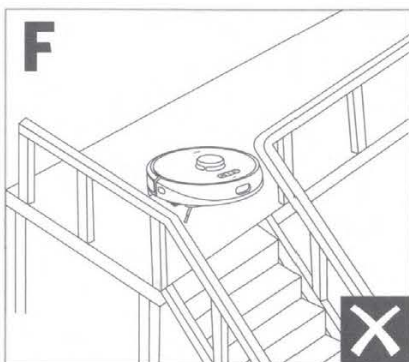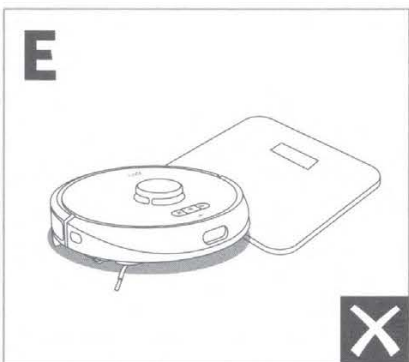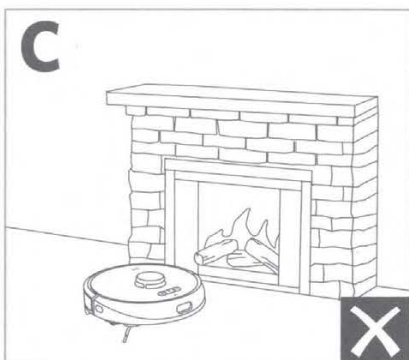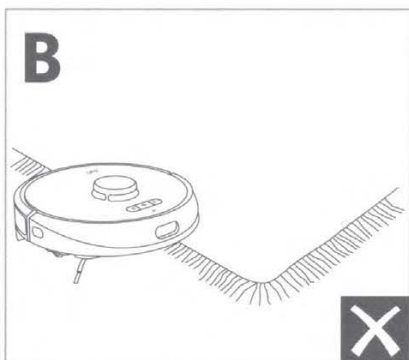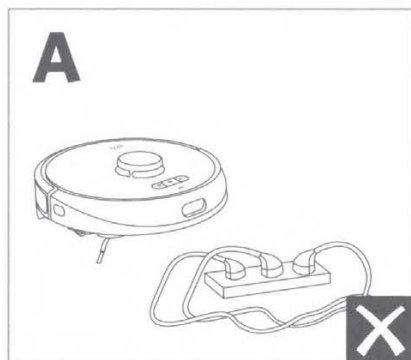

- A** Retire los cables de alimentación y los objetos pequeños del suelo que puedan enredarse en el RoboVac.
- B** Doble los bordes con borlas de las alfombras para evitar que el RoboVac se atasque. Evite limpiar alfombras de pelo alto y colores muy oscuros o alfombras de más de 26 mm, ya que pueden hacer que el RoboVac no funcione correctamente.
- C** Las zonas de acceso restringido que establezca pueden no ser efectivas en algunos casos. Se recomienda encarecidamente colocar tiras de delimitación (se venden por separado) frente a las chimeneas y ciertas áreas (por ejemplo, salidas de aire) que pueden dañar el RoboVac si entra en ellas.
- D** Mantenga el RoboVac alejado de las áreas húmedas durante la limpieza.
- E** El RoboVac puede trepar encima de objetos de menos de 17 mm de altura. Retire estos objetos si es posible.
- F** Los sensores anticaída evitarán que el RoboVac se caiga escaleras abajo y en desniveles abruptos en la mayoría de los casos. Los sensores son menos efectivos si están sucios o se usan en suelos alfombrados/reflectantes/de colores muy oscuros. Se recomienda colocar barreras físicas para bloquear las áreas por donde el RoboVac podría caerse.



Cleaning

Owner's Manual
RoboVac X8 Hybrid

Table of Contents

02 Important Safety Instructions

17 About Your RoboVac

What's in the Box

RoboVac Anatomy

Map Navigation and Management

23 Get Started

Important Tips Before Use

Preparation

Charge Your RoboVac

Auto Recharge and Resume

26 Using Your RoboVac

Turn On / Off

Start Cleaning

Use Your RoboVac with the EufyHome App

Select a Cleaning Mode

Use Your RoboVac with Amazon Alexa /
the Google Assistant

Set Up Virtual Wall / Boundary Strip

35 Cleaning and Maintenance

Clean the Dust Collector and Filter

Clean the Rolling Brush

Clean the Side Brush

Clean the Swivel Wheel

Clean the Mopping Cloth and Water Tank

41 Troubleshooting

Voice Alert

47 Customer Service

Thank you for purchasing RoboVac. Carefully read all the instructions below before using this device, and keep this manual for future reference.

Important Safety Instructions

To reduce the risk of injury or damage, keep these instructions at hand when setting up, using, and maintaining this device.

WARNING SYMBOLS USED



This is the safety alert symbol. This symbol alerts you to potential hazards that could result in property damage and/or serious bodily harm or death.

- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this device in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with this device.
- Cleaning and maintenance shall not be performed by children without adult supervision.
- This device is only to be used with the power supply unit provided.
- Before cleaning or maintaining this device, the plug must be removed from the outlet.
- The battery in this device should only be replaced by a skilled professional.
- When removing the battery, disconnect the device from the supply mains.
- To recharge the battery, only use the detachable adapter (US/CA: GSCU1000S024V24T; UK: GSCB1000S024V24T; AU: GSCS1000S024V24T; EU: GSCV1000S024V24T) provided with this device.
- The battery must be removed before this device is disposed of. To remove the battery, first unscrew

the screws on the bottom, then remove the back cover. Remove the battery by disconnecting the quick connector.

- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- The external flexible cable or cord of the power supply unit cannot be replaced; if the cord is damaged, the power supply unit should be disposed of.
- This device is for indoor use only.
- This device is not a toy. Do not sit or stand on this device. Small children and pets should be supervised when this device is operating.
- Store and operate this device in room temperature environments only.
- Do not use this device to pick up anything that is burning or smoking.
- Do not use this device to clean up spills of bleach, paint, chemicals, or anything wet.
- Before using this device, pick up objects like clothing and loose paper. Lift up cords for blinds or curtains. Move power cords, sharp-pointed and fragile objects out of the way. If this device passes over a power cord and drags it, an object could be pulled off a table or shelf.
- If the room to be cleaned has a balcony, a physical barrier should be used to prevent access to the balcony and to ensure safe operation.
- Do not place anything on top of this device.
- Be aware that this device moves around on its own. Take care when walking in the area where this device is operating to avoid stepping on it.
- Do not operate this device in areas with exposed electrical outlets on the floor.

- Do not expose the electronics of this device, its battery, or the integrated Charging Base. There are no user-serviceable parts inside.
- Do not use this device on an unfinished, unsealed, waxed or rough floor. It may result in damage to the floor and this device. Use only on hard floor surfaces or low-pile carpets, and not on carpets with tasseled edges or loose threads.
- This device has been designed to be used on floors without scratching them. We still recommend that you test this device on a small area of the room to be cleaned to ensure no scratches are made before cleaning the whole room.
- Only use attachments recommended or described in this manual.
- Do not handle the appliance or plug with wet hands.
- Ensure that the dust collector and/or filters are correctly in-place before usage.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Do not expose the battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause an explosion.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable), except as indicated in the instructions for use and care.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- The laser distance sensor of this device meets the standards for Class I Laser Products in IEC 60825-1:2014 and will not generate hazardous laser radiation.

Notice



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

ISED Compliance Statement

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

RF Exposure Compliance Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Declaration of Conformity

This product complies with the radio interference requirements of the European Community. Hereby, Anker Innovations Limited declares that the radio equipment type T2261 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.eufylife.com/>.

Maximum output power: 18 dBm (For EU)

Frequency band: 2.4G band (2.4000GHz - 2.4835GHz)

GB Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type T2261 is in compliance with Radio Equipment Regulations 2017 and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012. The full text of the GB declaration of conformity is available at the following internet address: <https://www.eufy.com>.

Trademark Notice

- Amazon, Echo, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.
- Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- Google Play and the Google Play logo are trademarks of Google Inc.
- Google Home is a trademark of Google Inc.

AUSTRALIA & NEW ZEALAND WARRANTY

This document details the terms and conditions of the warranty provided with this product. Please disregard any other representations contained on this product's packaging or provided with this product, which constitute or appear to constitute a warranty.

Subject to the exclusions and limitations set out below, we warrant to you that if you purchase a product directly from us, or, from any of our authorized resellers, that it will not contain defects which are a result of faulty manufacturer workmanship or materials. This warranty subsists for 15 months from the date of purchase. This warranty is provided in addition to your rights under the Australian & New Zealand Consumer Law.

Subject to any rights you have under the Australian & New Zealand Consumer Law, we will not be liable for defects which are a result of damage or loss caused by factors beyond our control, any product which has not been maintained according to any care or maintenance instructions provided with the product, any alterations to a product which are not performed by us, or damage or defects caused to the product due to unusual or non-recommended use. We will not be liable for any special, indirect, consequential or economic loss or damage or loss of profits whatsoever suffered by you or any other person resulting from any act or omission by us. Our total liability in respect of this Warranty against Defects is limited to the replacement of the goods.

This Warranty against Defects is provided in addition to other rights and remedies that you may have at law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonably foreseeable loss or

damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.


In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics Australia authorized by Anker Innovations Limited. Directed Electronics Australia will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics Australia, will be borne by you.

This warranty is offered by Directed Electronics Australia.


Customer service support number (+61) 3 8331 4800
Mon-Fri 8:30am - 5:00pm (AEST) and customer service
email address service@myeufy.com.au.

About Your RoboVac


What's in the Box

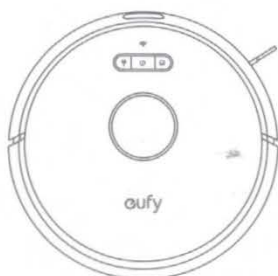


RoboVac

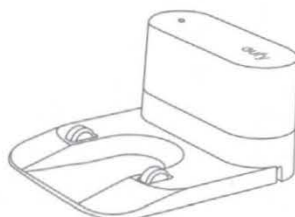


Charging Base

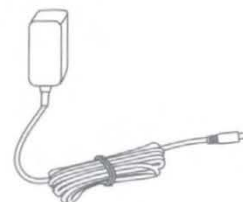

Power Adapter

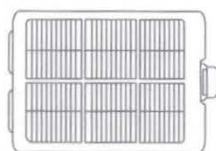

Additional Filter

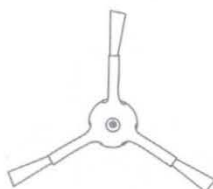

Additional Side Brush




Cable Ties (x5)



Water Tank



Washable Mopping Cloth

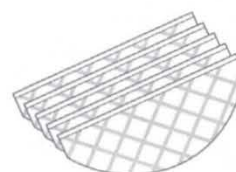

Disposable Mopping Cloths (x5)




Waterproof Pad




Owner's Manual &
Other Documents

RoboVac Anatomy


A. Top & Side

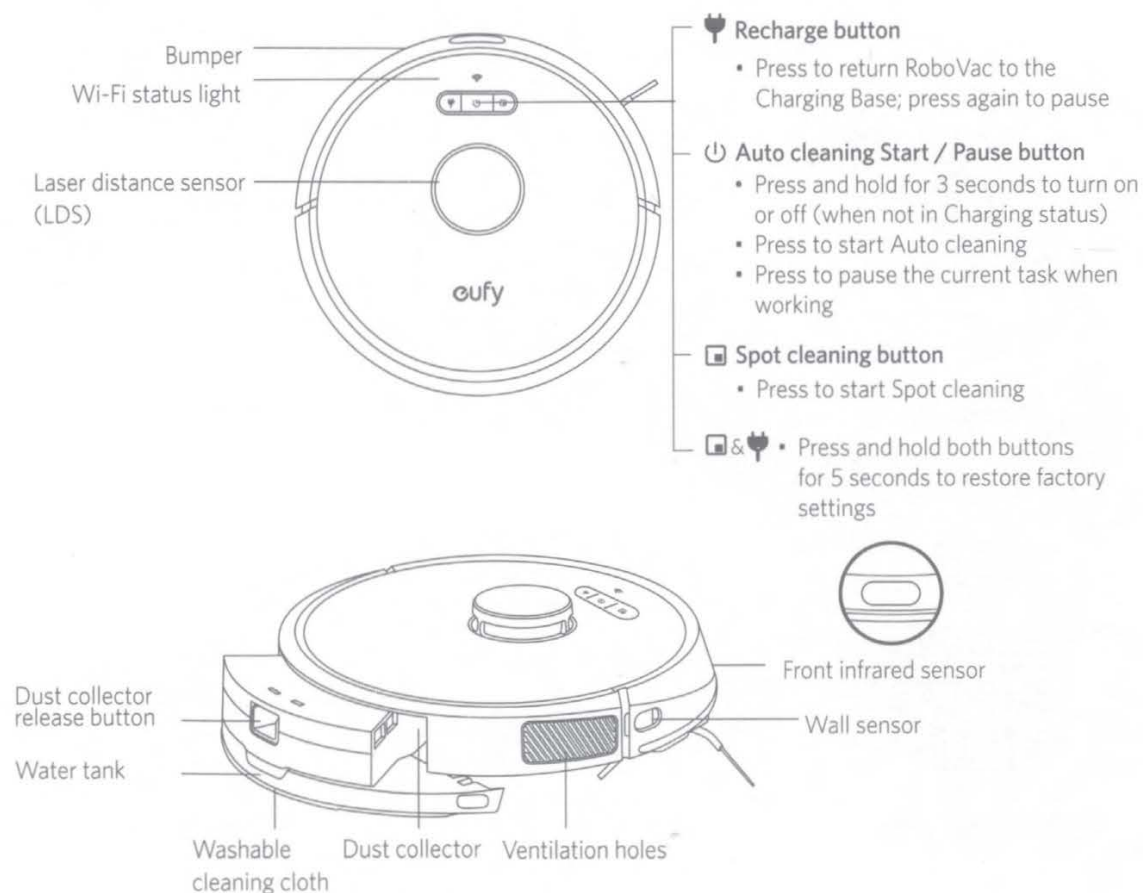


B. Bottom

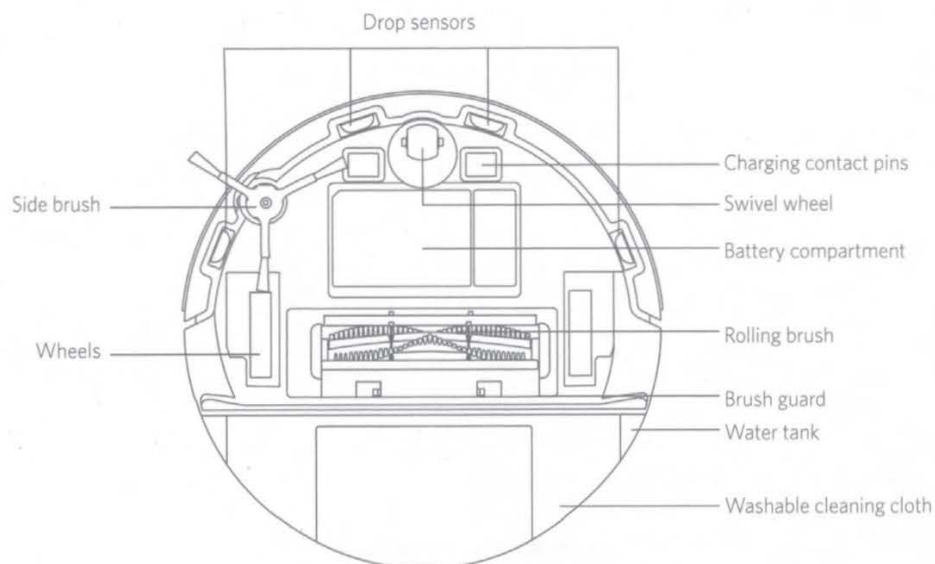


C. Dust Collector

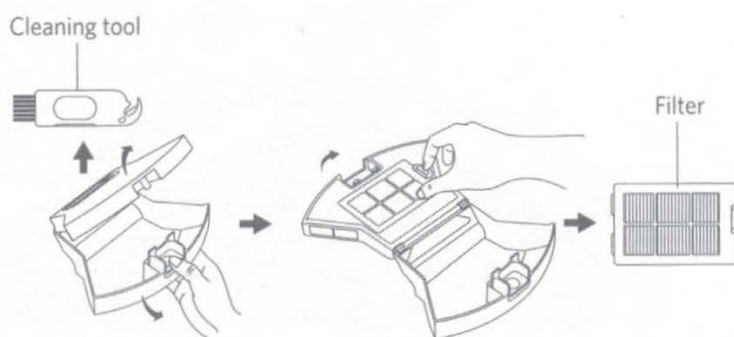


D. Suction Inlet

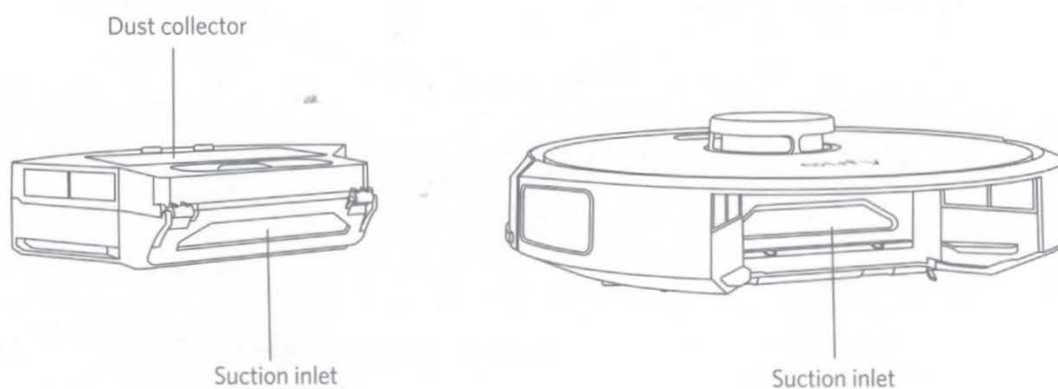

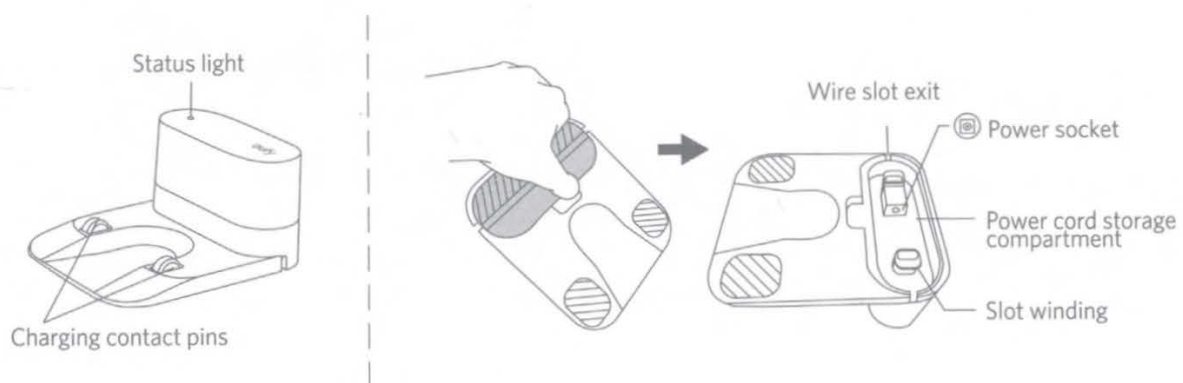



E. Charging Base

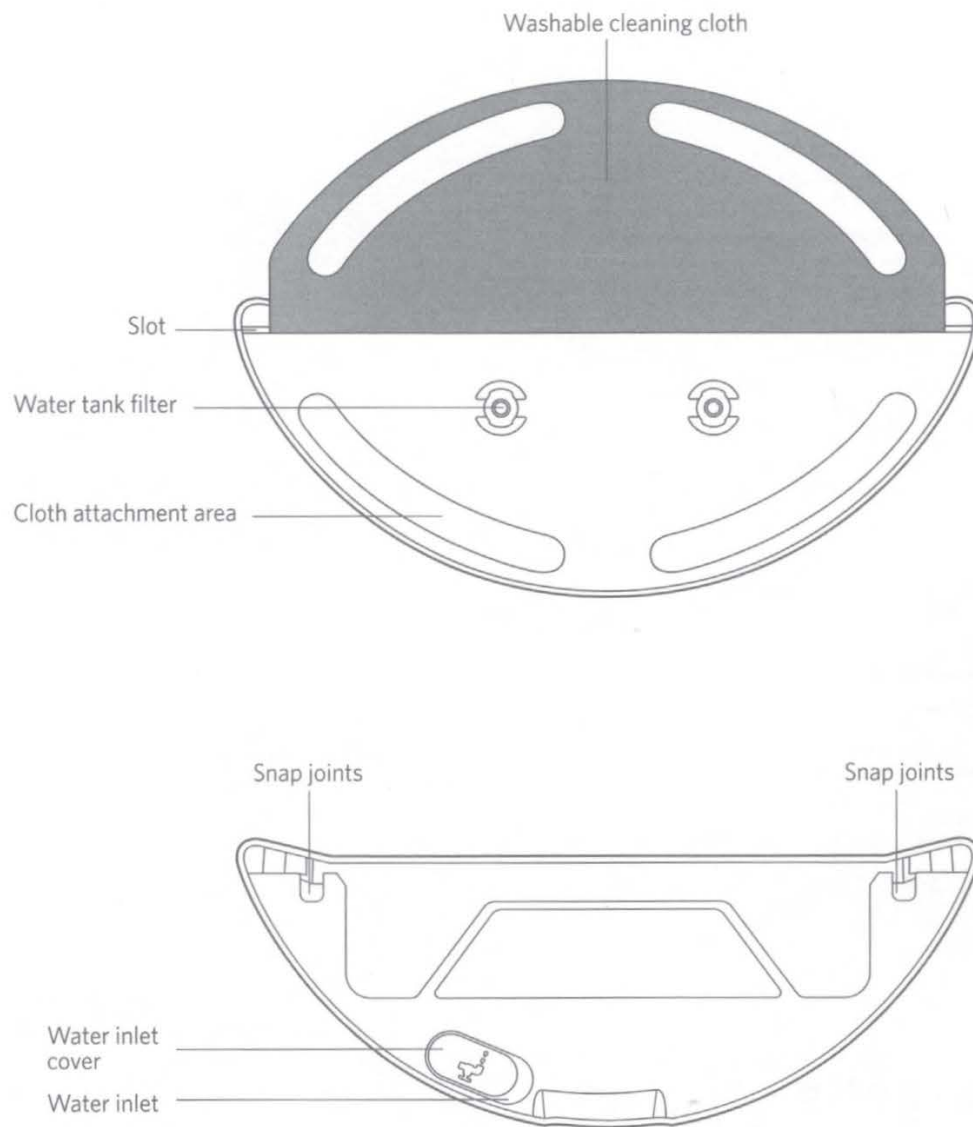

F. Water Tank

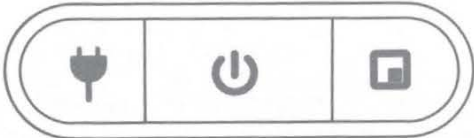


Buttons & Indicators

	
	Turn on / off (Press and hold for 3 seconds)
	Start / Paused Cleaning <ul style="list-style-type: none"> ▪ Solid blue: standby, cleaning, paused cleaning, returning to charging base or fully charged ▪ Solid orange: working in low battery status ▪ Pulsing orange (when docked to Charging Base): charging ▪ Flashing red: error <p>* Refer to the "Troubleshooting > Voice Alert" section in this manual for solutions.</p>
	Returning to Charging Base <ul style="list-style-type: none"> ▪ Flashing blue slowly: returning to Charging Base ▪ Solid blue: standby or paused
	Start / Paused Spot Cleaning <ul style="list-style-type: none"> ▪ Flashing blue slowly: Spot Mode ▪ Solid blue: standby or paused




- When you use the **Find My Robot** function via the EufyHome app, all three LED indicators are solid blue and a voice prompt is heard.
- To conserve power, the blue light on the buttons becomes dim when:
 - RoboVac is not docked to the Charging Base and has been inactive for 10 minutes;
 - RoboVac is fully charged for 1 minute.

 (Wi-Fi Status Light)	Status
Slowly flashing blue	Waiting for connection
Rapidly flashing blue	Connecting with your wireless router
Solid blue	Connected to your wireless router

Map Navigation and Management

Navigation

Once Auto cleaning starts, RoboVac moves from the Charging Base, automatically scans to generate maps, intelligently determines its cleaning route, and divides the space into zones. The cleaning paths are planned along the walls, following a Z-shaped cleaning method to complete the cleaning of each zone one by one.

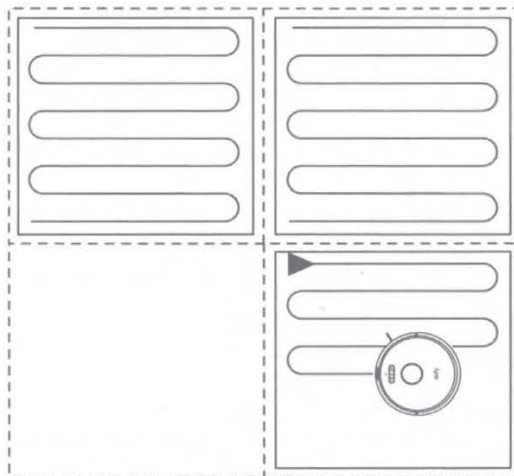

Real-time Mapping & Floor plan

Real-time mapping helps RoboVac to learn the correct cleaning path and the environment of your home easily. A floor plan will be built after cleaning. The map will be updated in real-time during each cleaning session to ensure normal navigation.

To create a complete floor plan:

1. Open your doors so that RoboVac can map each room.
2. Remove any objects that may be in the way or that might entangle RoboVac.

Repositioning & Remapping

If the position of RoboVac / Charging Base is adjusted or the surroundings are changed significantly, RoboVac will try to reposition and remap to match the surroundings.


- If the repositioning is successful, RoboVac will resume cleaning.
- If the repositioning fails, RoboVac will remap to ensure normal navigation with a new cleaning.



- When using for the first time, make sure RoboVac starts cleaning from the Charging Base.
- During cleaning, do not move RoboVac frequently. If moved, place RoboVac back to the original position.

Get Started


Important Tips Before Use

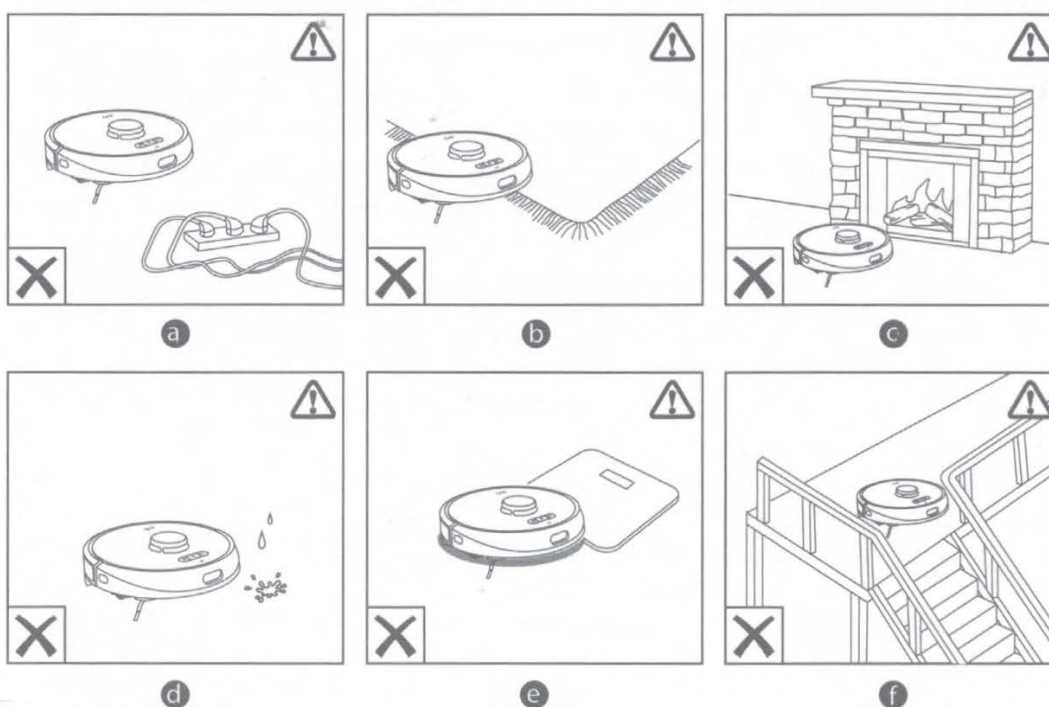


- a** Remove power cords and small objects from the floor that may entangle RoboVac. Use the supplied cable ties to organize your wires and power cords.
- b** Fold tasseled edges of area rugs underneath to prevent tangling RoboVac. Avoid cleaning very dark-colored high-pile rugs or rugs thicker than 1.02 in / 26 mm as they may cause RoboVac to malfunction.
- c** The "No-Go" zones that you set may be ineffective in some cases. It is strongly recommended to place boundary strips (sold separately) in front of fireplaces and certain areas (i.e. air vents) that may cause damage to RoboVac if entered.
- d** Keep RoboVac away from wet areas during cleaning..
- e** RoboVac may climb on top of objects less than 0.67 in / 17 mm in height. Remove these objects if possible.
- f** Anti-drop sensors will prevent RoboVac from tumbling downstairs and steep drops in most cases. Sensors are **less effective** if dirty or used on carpeted/reflective/very dark-colored floors. It is recommended to place physical barriers to block off areas where RoboVac may fall.

Preparation


- 1 Remove the foam blocks beside the bumper before use.
- 2 Place the Charging Base on a level surface and against a wall.

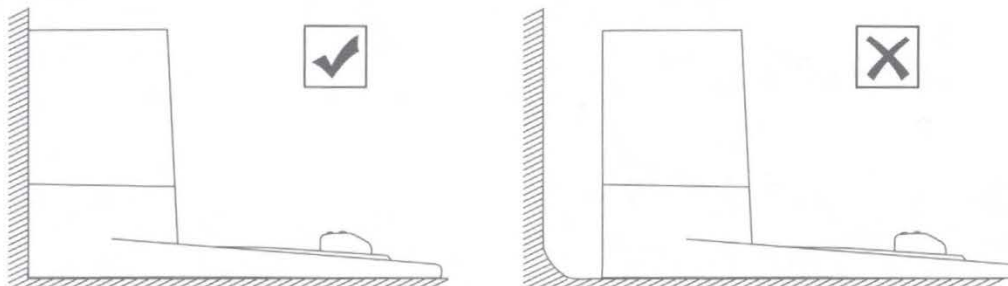

- 3 Remove objects within 3 ft / 1 m of the left and right side and within 6 ft / 2 m of the front of the Charging Base. If you cannot remove the objects, move RoboVac to a new place and check whether RoboVac can return to the Charging Base normally; if not, contact eufy customer service for help.

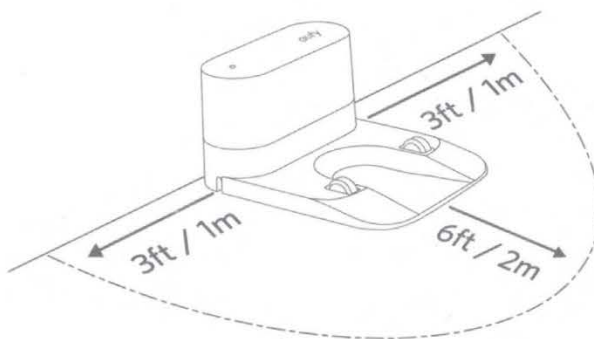

- 4 Connect the adapter to the Charging Base and a wall outlet.
 - When the Charging Base connects to AC power, the LED indicator on the Charging Base is SOLID WHITE.

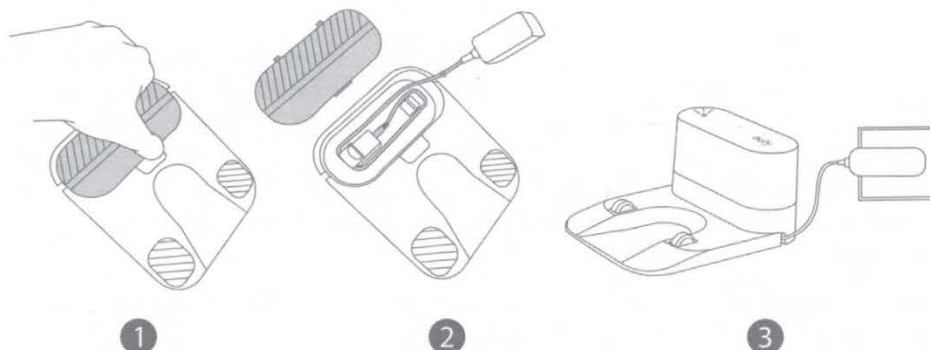






- Install the Charging Base in a location that RoboVac can easily access. It is recommended to place the Charging Base against a wall, and on a hard-level surface rather than on rugs or carpets.
- Always keep the Charging Base plugged in, otherwise RoboVac will not automatically return to it.
- To ensure proper charging, do not frequently move the Charging Base. When its location is changed, RoboVac may remap due to repositioning failure (see **About Your RoboVac > Map Navigation and Management** for details).


Charge Your RoboVac

- Make sure RoboVac is fully charged before use.
- RoboVac will return to the Charging Base at the end of a cleaning cycle or when its battery is running low.

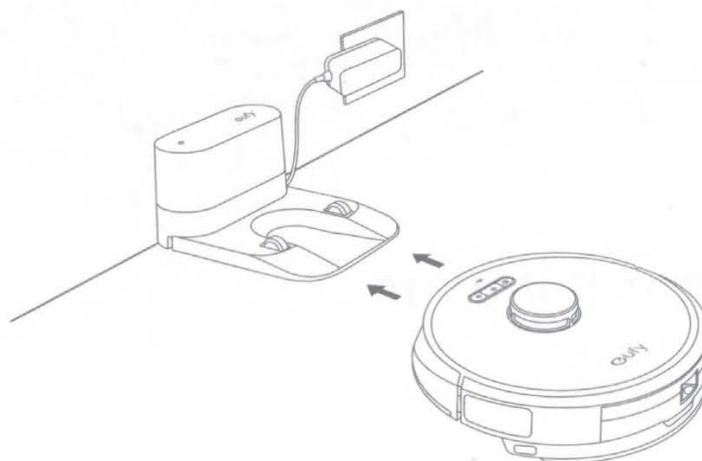



Method 1: Attach RoboVac to the Charging Base by aligning its charging pins with the charging pins on the base.

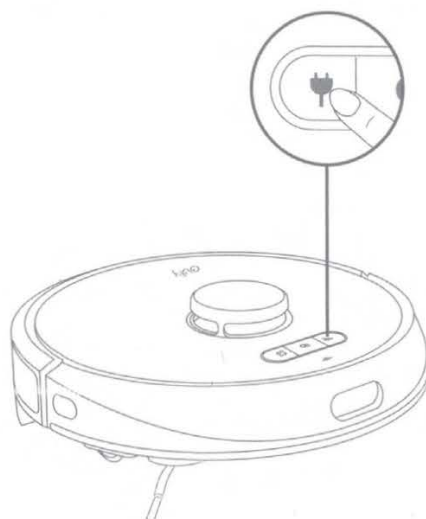

Method 2: Press  on the main unit or tap the  icon in the EufyHome app to send RoboVac to the Charging Base.





- If RoboVac is not used for a long time, to preserve the battery's lifespan, recharge at least once every 6 months.
- When RoboVac is being charged, to enter Reduced Power Standby mode for power-saving, simultaneously press and hold the three buttons ( &  & ) on RoboVac for 10 seconds until the lights turn off. Wi-Fi is disabled while this mode is active. Press  to exit Reduced Power Standby mode.

Auto Recharge and Resume

RoboVac returns to the Charging Base automatically to recharge when:



- RoboVac has finished cleaning;
- Cleaning is not complete and the battery level becomes low; once recharged to 80% battery capacity, RoboVac will resume and finish the remaining cleaning.



Do not move the Charging Base during cleaning, otherwise RoboVac may fail to return for recharge. If failed, you have to manually attach it to the Charging Base. If the Charging Base is moved, start cleaning from the new location. RoboVac will automatically return when it has finished cleaning.

Using Your RoboVac

Turn On / Off

- RoboVac turns on automatically when attached to the Charging Base and connected to power.
- When RoboVac is not on the Charging Base, press and hold  for 3 seconds to turn on the main unit. Wait until the Power Status Light turns solid blue.
- When RoboVac is not on the Charging Base, press and hold  for 3 seconds again to turn off the main unit.


Start Cleaning




RoboVac cannot start cleaning if the battery level is low. In this case, recharge RoboVac first before cleaning.

1 Press  to start cleaning in Auto cleaning mode.

- RoboVac moves around to scan the environment and builds a map automatically.

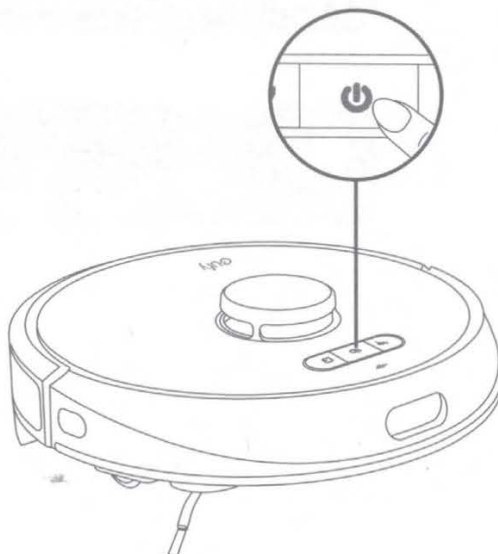

2 Press  again to pause cleaning.

- Press  to resume cleaning.
- When cleaning is paused, docking RoboVac onto the Charging Base will stop the cleaning.
- If cleaning is paused for 10 minutes, RoboVac automatically stops cleaning and switches to sleep mode.

3 Press  to stop current cleaning and return to the Charging Base.



Before cleaning, tidy cables and cords to avoid power interruption or any damage caused by pulling the cord during cleaning.

Use Your RoboVac with the EufyHome App

To fully enjoy all the available features, it is recommended to control your RoboVac via the EufyHome app.

Before you start, make sure that:

- Your smartphone or tablet is running iOS 9.0 (or above) or Android 5.0 (or above).
- The 2.4GHz band wireless signal is enabled on your wireless router.
- The Wi-Fi status light on RoboVac is slowly flashing blue.
- Your smartphone or tablet has enabled Bluetooth to ensure a better connection.
- RoboVac has enough power during setup.



1. Download the EufyHome app from the App Store (iOS devices) or Google Play (Android devices).
2. Open the app and create a user account.
3. Tap the "+" icon to add **"RoboVac X8 Hybrid"** to your EufyHome account.
4. Follow the instructions in the app to set up the Wi-Fi connection.
 - After connecting successfully, you can control RoboVac via the app.
 - With the app, you can select cleaning at your desired suction level, schedule cleaning, view the cleaning map, set up "No-Go" zones, check the network connection status, and access additional features.



Wi-Fi Status Light

	Slowly flashing blue	Waiting for connection
	Rapidly flashing blue	Connecting with your wireless router
	Solid blue	Connected with your wireless router



If RoboVac gets stuck in any space, tap **Find My Robot** in the app to find the machine. This function is available in the app only.

Reset the Wi-Fi connection

To reset the Wi-Fi connection, press and hold the two buttons ( and ) simultaneously for 5 seconds until you hear a voice prompt. At the same time, RoboVac will restore the factory default settings.

- You will hear a voice prompt when the Wi-Fi connection has been reset, and the Wi-Fi status light will slowly flash blue. Now you can follow the Wi-Fi instructions in the eufyHome app to set up the Wi-Fi connection.

Schedule Cleaning


With the EufyHome app, you can schedule RoboVac to start cleaning at a particular time.



You can set the time and customize the cleaning schedules from Sunday to Saturday on the EufyHome app. This function is available in the app only.


Select a Cleaning Mode



- You can press  at any time to pause the current cleaning cycle.
- You can also select a cleaning mode via the EufyHome app.

Auto Cleaning Mode

1. Press  to start cleaning in Auto cleaning mode.

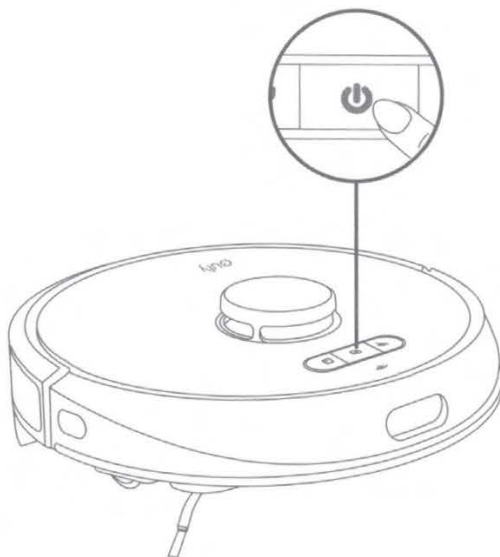


2. Press  again to pause cleaning.




By default, RoboVac starts in Auto cleaning mode when it is turned on.

Spot Cleaning Mode

RoboVac intensively cleans a specific area with a size of 4.9 ft x 4.9 ft / 1.5 m x 1.5 m, useful if there is a concentrated area of dust or debris. When the cleaning of a certain zone is finished, it automatically returns to the Charging Base.

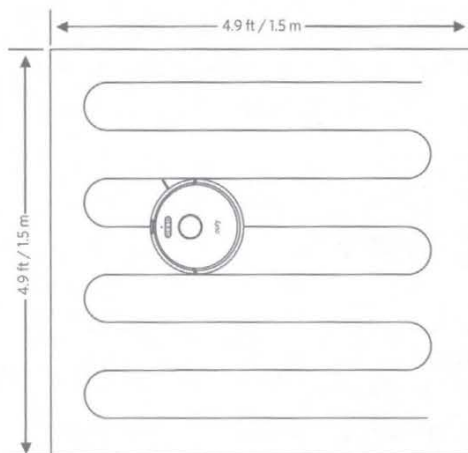

Press  to start Spot cleaning.

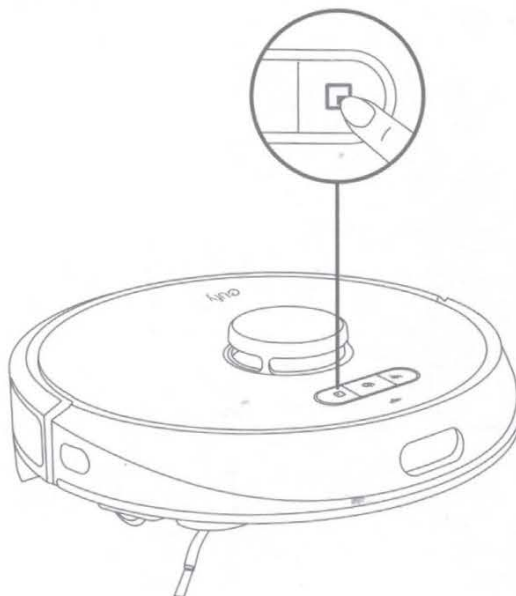

Room Cleaning Mode (available via the EufyHome app only)

In this mode, your house is automatically divided into several rooms for cleaning in the EufyHome app. You can also customize your room settings in the app. RoboVac will clean the selected rooms only and return to the Charging Base after cleaning.



- Start Room cleaning only after RoboVac has created the map.
- It is recommended that RoboVac moves from the Charging Base to start Room cleaning.

Zone Cleaning Mode (available via the EufyHome app only)

In this mode, you can set up a cleaning zone in the EufyHome app. RoboVac will clean the selected zone only.

Select a Suction Power Level

In the EufyHome app, select a suction power level according to your needs:

- Quiet
- Standard (Default)
- Turbo
- Max

Select BoostIQ™ feature


In the EufyHome app, select the BoostIQ™ feature according to your needs. RoboVac will automatically increase the suction power if it detects that stronger power is needed to ensure the best clean. BoostIQ™ is ideal for cleaning thicker carpets and hard-to-sweep messes, which will reduce the total cleaning time, but increase the noise level. If the vacuuming noise caused by BoostIQ™ disturbs you, you can disable this feature.

Use Mopping System




- The mopping mode is only intended for a clean floor without stubborn stains or liquids. To avoid staining floors, do not use the mopping function when dust is mixed with liquids such as coffee or ink.
- Mopping System cleans best on smooth hard surfaces and may not perform so well on uneven tiles, heavily waxed floors or rough surfaces like slate or brick, which may snag the cleaning pad.
- The mopping mode is not recommended when no one is at home.
- Do not use the mopping mode on a carpeted floor. It is recommended to set a "No-Mop" zone in the EufyHome app to avoid cleaning the carpeted area.

1. Before mopping, install the waterproof pad under the Charging Base to protect the floor.

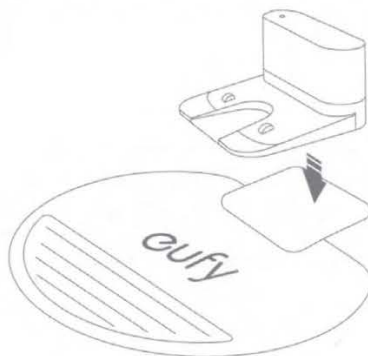


2. Wet the mopping cloth and wring it until it does not drip. Insert the cloth along the bracket slot and stick it firmly.

- Use either the washable mopping cloth or the disposable cloth for mopping.

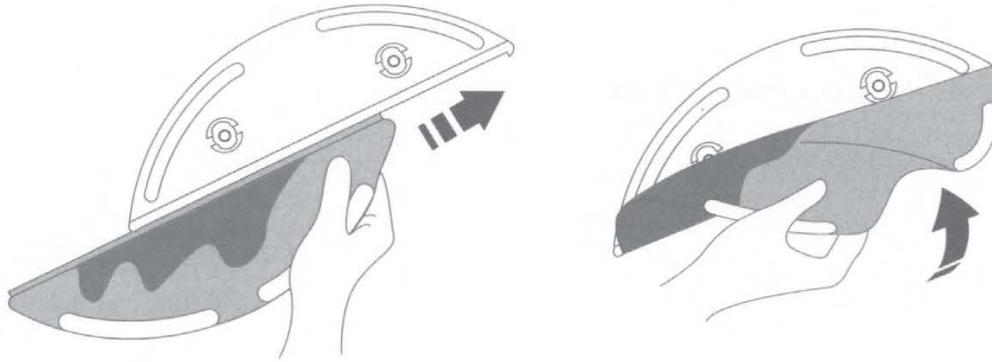


3. Open the water inlet cover to fill the water, then close the cover.

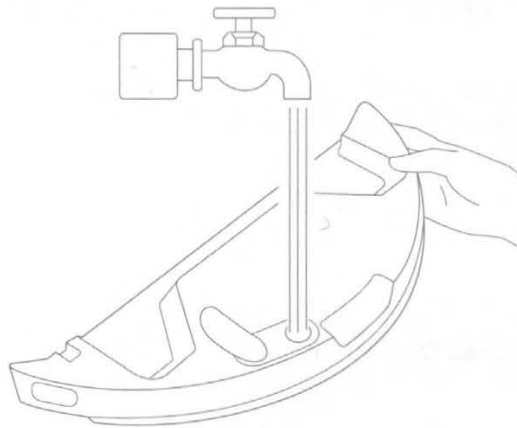

- Do not use any cleaning solution other than those specified by eufy, as it may damage RoboVac.

4. Install the water tank into the bottom of RoboVac until a click is heard.

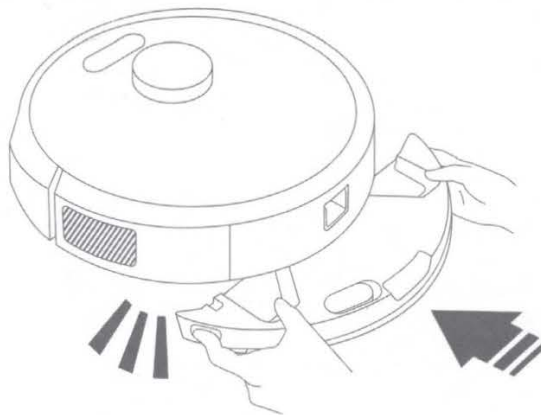


- The mopping mode is only intended for a clean floor without stubborn stains. To achieve a better mopping effect, it is recommended to clean the floor with RoboVac three times before installing the mopping module.

5. Select a cleaning mode to start cleaning.

➤ RoboVac automatically sweeps and mops in the selected mode.

6. When RoboVac finishes working and returns to the Charging Base, remove the water tank, empty any remaining water, and clean the mopping cloth to prevent mildew or unpleasant smells. The disposable mopping cloth is for single-use only. For how to clean and maintain the water tank, refer to the **"Cleaning and Maintenance"** section in this manual.

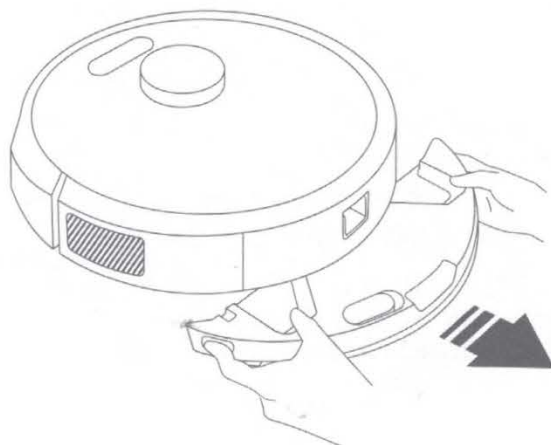

Use Your RoboVac with Amazon Alexa / the Google Assistant

Amazon Alexa and the Google Assistant are smart voice assistants that enable you to control RoboVac with your voice.

Before you start, make sure that:

- RoboVac is attached to the Charging Base to ensure there is enough power.
- RoboVac is connected with the EufyHome app.
- You have an Alexa-enabled device (i.e. Amazon Echo, Echo Dot and Amazon Tap, Echo Show, Echo Spot) or a device enabled with the Google Assistant (i.e. Google Home, Google Home Mini). These devices are sold separately.
- The Amazon Alexa app or Google Home app is already installed on your smart device, and you have created an account.

To control RoboVac with Amazon Alexa or the Google Assistant

1. Open the EufyHome app and tap **"Smart Integrations"** in the top left.
2. Follow the on-screen instructions to complete the setup.



Currently this feature only supports English, German, French, and Spanish. You can check regularly if more languages are supported at <https://www.eufylife.com/support/>.

Set Up Virtual Wall / Boundary Strip

Virtual Wall (Available on the App Only)

In the EufyHome app, you can set up a "No-Go Zone" or "Virtual Wall" as a restricted area. This eliminates the need to use physical barriers, including Boundary Strips. This feature is only designed for dividing the cleaning zones, not for isolating hazardous areas.


- **No-Go Zone:** RoboVac will not enter the zone to vacuum.
- **Virtual Wall:** RoboVac will not cross the virtual wall.

- To set a virtual wall, RoboVac must initially perform a cleaning run to create a floor plan.
- Although a virtual wall is set, RoboVac may still enter the restricted zone due to repositioning failure or abnormal sensors.
- Moving the device or changing the environment may lose the virtual wall and cause mapping to fail and rebuild.

Boundary Strips

Boundary strips (sold separately) can keep RoboVac away from hazardous areas. RoboVac will recognize the barriers and will not cross into the blocked-off area.

1. Identify the area or item you do not want RoboVac to get close to.
2. Place the boundary strips FLAT on the floor or under a rug.
 - Do not place the boundary strips under a THICK rug as RoboVac may fail to recognize the boundary strip.

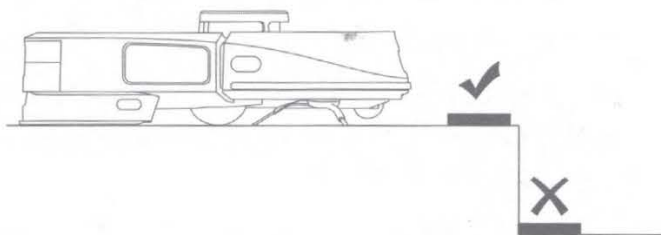

- Make sure the boundary strips are placed on the same surface plane RoboVac is used on.
- If the boundary strips roll up, remove and then re-apply to the floor with adhesive tape. Otherwise the boundary strips may not work well.

Cleaning and Maintenance

Before cleaning and maintaining, turn off the device and unplug the adapter.


For optimal performance, follow the instructions below to clean and maintain RoboVac regularly. The cleaning / replacement frequency will depend on your RoboVac usage habits.

Recommended Cleaning / Replacement Frequency


RoboVac Part	Cleaning Frequency	Replacement Frequency
Dust Collector	After each use	-
Filter	Once every week	Every 3 months
Rolling Brush	Once every week	Every 6-12 months
Side Brush	Once every month	Every 3-6 months (or when visibly worn)
Brush Guard	Once every month	Every 3-6 months (or when the silicone rubber strip on the brush guard becomes visibly worn)
Sensors	Once every month	-
Charging Pins	Once every month	-
Swivel Wheel	Once every month	-
Water Tank	After each use	-
Washable Mopping Cloth	After each use	-
Water Tank Filters	-	Every 6 months (or when they become yellow)

Clean the Dust Collector and Filter


- 1 Press the dust collector release button to pull the dust collector out.
- 2 Open and empty the dust collector.

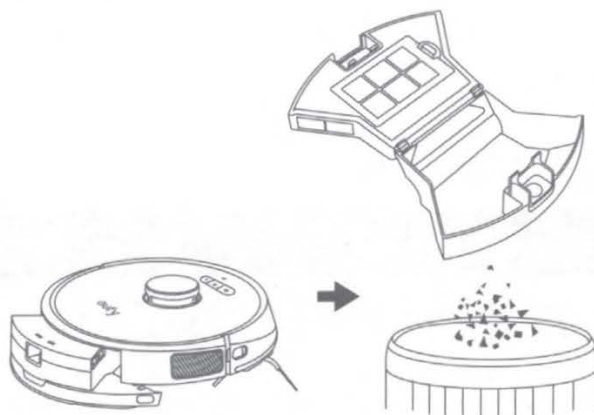


- 3 Remove the filter.

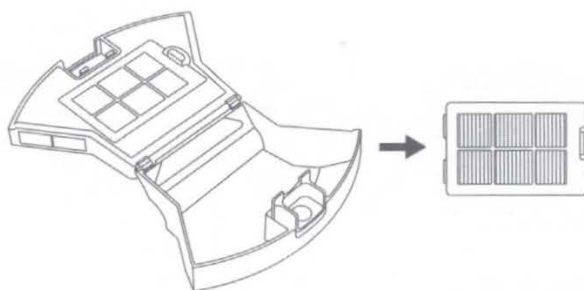


- 4 Clean the dust collector and filter with the cleaning brush.

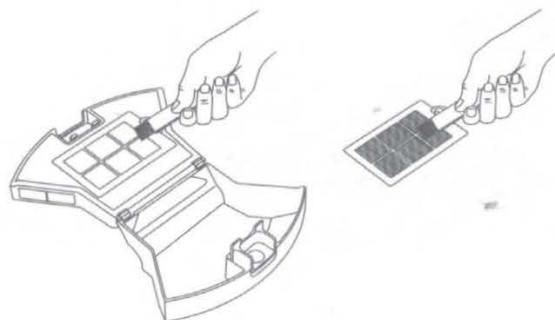


- 5 Rinse the dust collector and filter thoroughly with water.

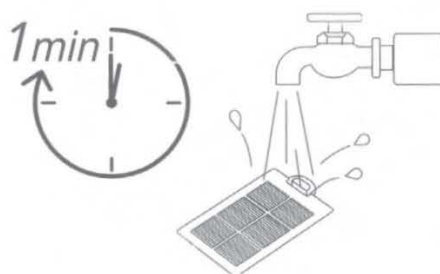


- 6 Air-dry the dust collector and filter completely before next use. You may use another filter if the original one is not dry.

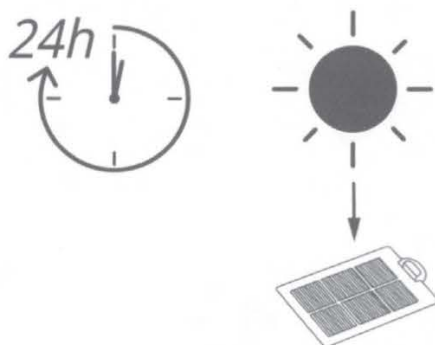

- 7 Place the filter back into the dust collector.

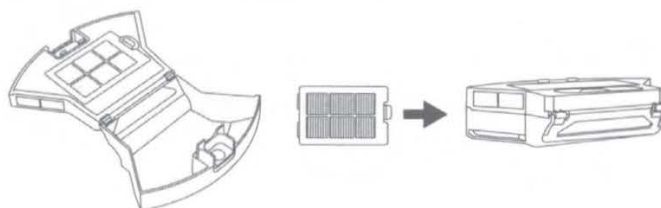


- 8 Push the dust collector back into the main unit.

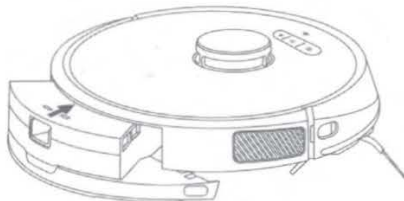

Clean the Rolling Brush


- 1 Pull on the release tabs to unlock the brush guard as shown.
- 2 Lift the rolling brush to remove.
- 3 Clean the rolling brush with the cleaning tool.
- 4 Reinstall the rolling brush by inserting the fixed protruding end first and then clicking into place.
- 5 Press down to snap the brush guard into place.

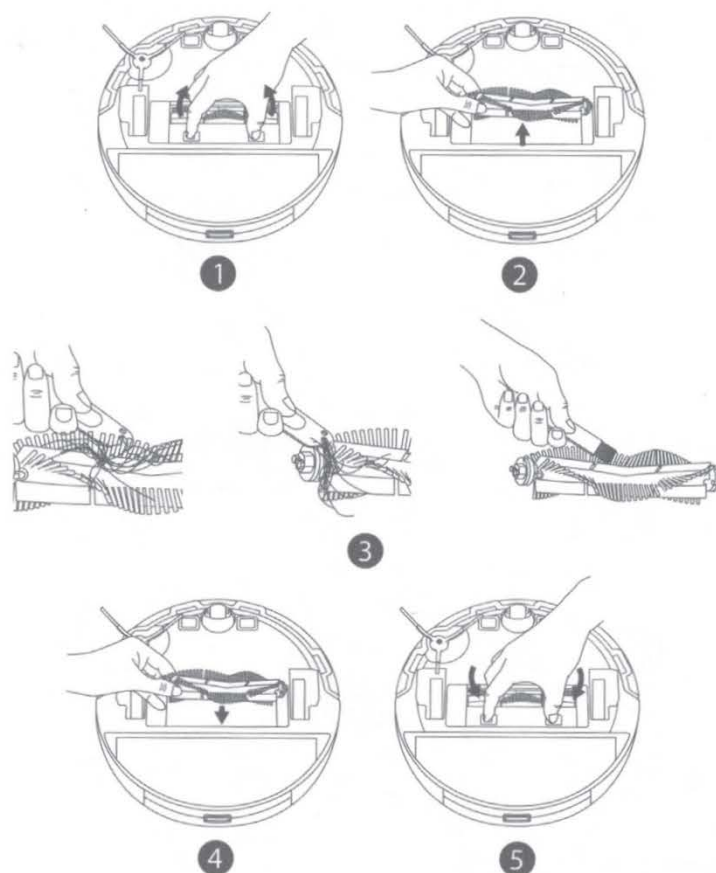


Clean the Side Brush

Foreign substances, such as hair, can easily get tangled in the side brush, and dirt may adhere to it. Be sure to clean it regularly.

- 1 Use a Phillips screwdriver to unscrew the screw on the side brush.
- 2 Remove the side brush.

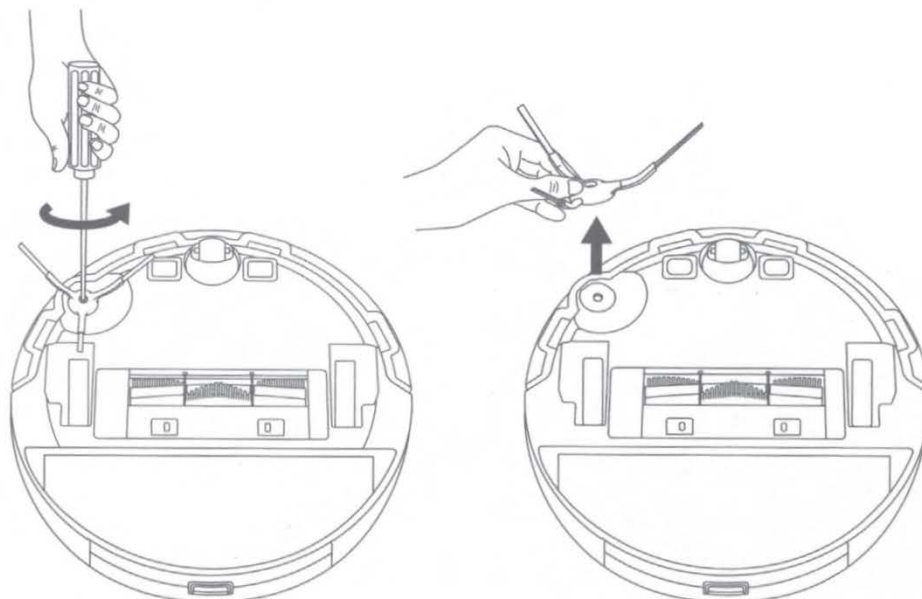

- 3 Carefully unwind and pull off any hair or string that is wrapped between the main unit and the side brush.
- 4 Clean the side brush with water.

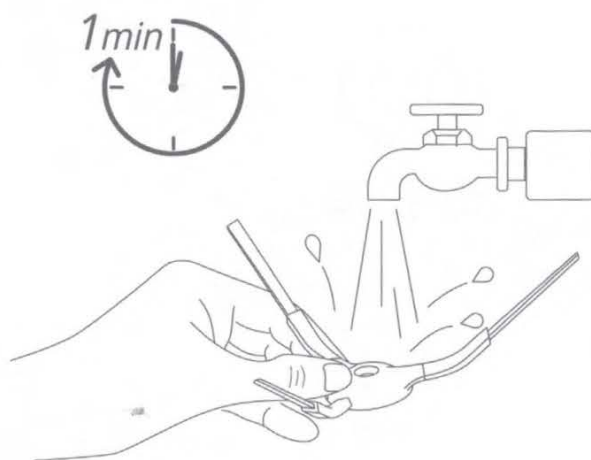


Only use the side brush when it is completely dry.

Replace the Side Brush

The side brushes may become bent or damaged after being used for a period of time. Follow the instructions below to replace it.

- 1 Use a Phillips screwdriver to unscrew the screw on the side brush.
- 2 Pull off the old side brush and snap the new one into place.

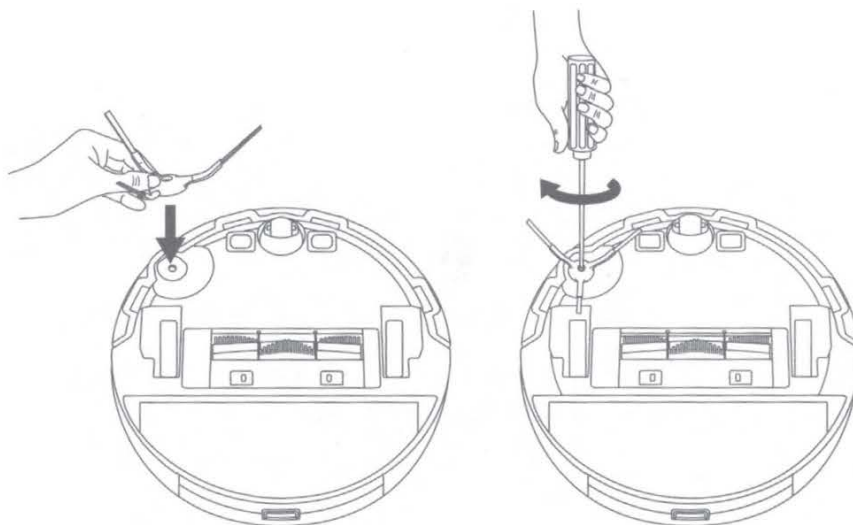


- 3 Screw down the screw to fasten the side brush.

Clean the Sensors and Charging Pins


To maintain the best performance, clean the drop sensors and charging pins regularly.

- Dust off the sensors and charging contact pins using a cloth or cleaning brush.

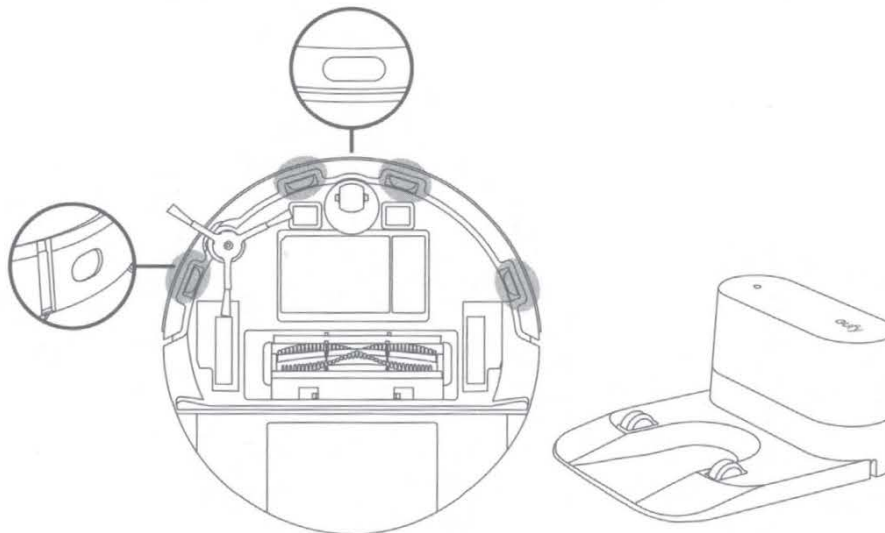


Clean the Swivel Wheel

Hair or dust particles can easily get entangled in the swivel wheel. Be sure to clean the swivel wheel periodically and as needed.

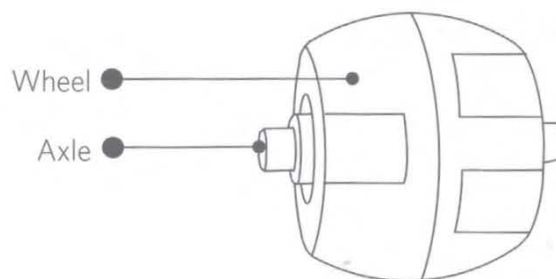

- 1 Pull out the swivel wheel.

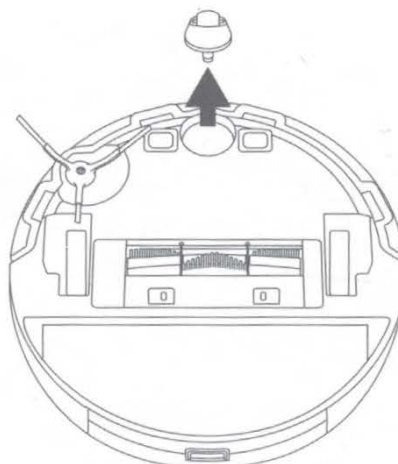


- 2 Clean any hair or debris wrapped around the wheel or entangled inside the wheel cavity.
- 3 Reinstall the wheel and push in until it clicks into place.



Do not clean the swivel wheel with water.

Clean the Mopping Cloth and Water Tank

It is recommended to clean the washable mopping cloth and water tank after each use.

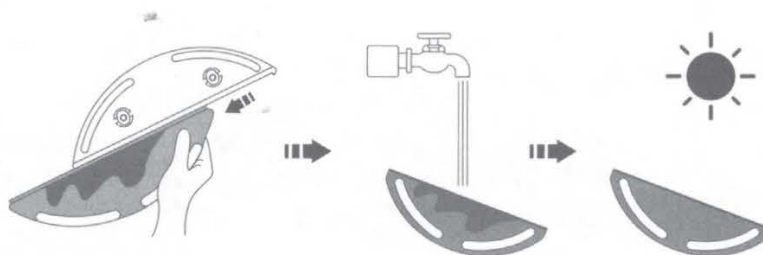


- 1 After each use, remove the mopping cloth from the water tank.
- 2 Rinse the mopping cloth and water tank thoroughly with water.
- 3 Air-dry the mopping cloth and water tank completely to prevent mildew or unpleasant smells.
- 4 To discard your single-use mopping cloth, remove and drop it into a trash container.

Troubleshooting

The solutions below are for general questions. If your problem persists, visit www.eufylife.com, go to EufyHome app, or contact support@eufylife.com for help.

Problems	Solutions
RoboVac suddenly produces a loud noise.	<ul style="list-style-type: none"> ▪ Adjust the suction power level in the EufyHome app. ▪ Check if the rolling brush, filter, dust collector, suction inlet, or wheels are stuck. ▪ Make sure the filter and the brush guard have been properly installed.

Problems	Solutions
The map is lost or rebuilt even after a floor plan is created.	<ul style="list-style-type: none"> ▪ If the position of RoboVac / Charging Base is adjusted or the surroundings are changed, RoboVac will try to reposition and remap to match the surroundings. ▪ Place RoboVac back on the Charging Base and start a new cleaning session.
RoboVac cannot be activated.	<ul style="list-style-type: none"> ▪ Make sure RoboVac is connected to a power source. ▪ Make sure the battery is fully charged. ▪ Press and hold the  button for 3 seconds to turn on RoboVac.
RoboVac suddenly stops working.	<ul style="list-style-type: none"> ▪ Check if RoboVac is trapped or stuck on an obstacle. ▪ Check if the battery level is too low. ▪ Check if RoboVac has alerted you with any voice prompts or LED indicators. Refer to the "Voice Alert" section in this manual. ▪ If you still have trouble, turn off RoboVac, wait for 3 seconds, and then turn it back on.
You cannot schedule cleanings.	<ul style="list-style-type: none"> ▪ Make sure RoboVac is turned on. ▪ You can set the time of day and scheduled cleaning time via the EufyHome app. ▪ Make sure the scheduled time has been set correctly. ▪ Check if RoboVac's power is too low to start cleaning. ▪ RoboVac will not start a scheduled cleaning while already performing a cleaning task.
Suction power is weak.	<ul style="list-style-type: none"> ▪ Check if any obstructions are blocking the suction inlet. ▪ Empty the dust collector. ▪ Clean the filter with water. ▪ Select the max suction power level in the EufyHome app. ▪ Check if the filter is wet due to water or other liquid on the floor. Air-dry the filter completely before use.
RoboVac cannot be charged.	<ul style="list-style-type: none"> ▪ Check if the LED indicator on the Charging Base lights up (when RoboVac is not on the Charging Base). If not, reconnect the adapter with the Charging Base and try a new power outlet. If the problem still persists, contact the eufy service center to repair or replace the Charging Base. ▪ Dust off the charging contact pins with a dry cloth.


- 2 Clean any hair or debris wrapped around the wheel or entangled inside the wheel cavity.
- 3 Reinstall the wheel and push in until it clicks into place.



Do not clean the swivel wheel with water.

Clean the Mopping Cloth and Water Tank

It is recommended to clean the washable mopping cloth and water tank after each use.

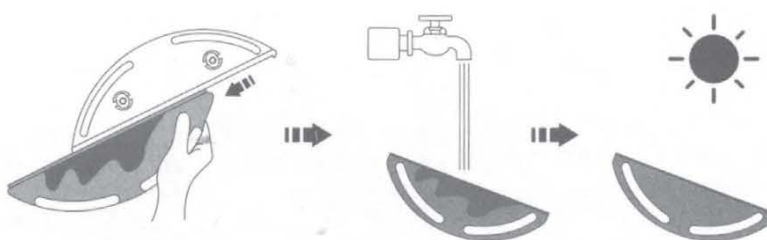

- 1 After each use, remove the mopping cloth from the water tank.
- 2 Rinse the mopping cloth and water tank thoroughly with water.
- 3 Air-dry the mopping cloth and water tank completely to prevent mildew or unpleasant smells.
- 4 To discard your single-use mopping cloth, remove and drop it into a trash container.

Troubleshooting

The solutions below are for general questions. If your problem persists, visit www.eufylife.com, go to EufyHome app, or contact support@eufylife.com for help.

Problems	Solutions
RoboVac suddenly produces a loud noise.	<ul style="list-style-type: none"> ▪ Adjust the suction power level in the EufyHome app. ▪ Check if the rolling brush, filter, dust collector, suction inlet, or wheels are stuck. ▪ Make sure the filter and the brush guard have been properly installed.

Problems	Solutions
RoboVac cannot return to the Charging Base.	<ul style="list-style-type: none"> Remove objects within 3 ft / 1 m to the left and right side and within 6 ft / 2 m of the front of the Charging Base. Check if RoboVac is stuck by any objects. Make sure RoboVac started cleaning from the Charging Base and was not moved during cleaning. Clean the charging contact pins.
The rolling brush does not rotate.	<ul style="list-style-type: none"> Clean the rolling brush. Remove the hair wrapped around the rolling brush or entangled in the two ends of the brush. Check if the rolling brush and brush guard have been installed properly.
RoboVac's movements or travel path are abnormal.	<ul style="list-style-type: none"> Check if there is any relevant voice prompt. Follow the voice prompt to solve the problem. Clean the sensors carefully with a dry cloth. Restart RoboVac by turning RoboVac off and on.
Water does not come out during mopping.	<ul style="list-style-type: none"> Make sure there is enough water in the water tank. Check if the mopping module is correctly installed. Check if the water outlets are blocked. If yes, replace the water tank filters.
Too much water comes out during mopping.	<ul style="list-style-type: none"> Make sure the water tank has been installed properly. Make sure the water tank filters are correctly installed in place.
RoboVac cannot connect to a Wi-Fi network.	<ul style="list-style-type: none"> Make sure your Wi-Fi router supports the 2.4GHz and 802.11 b / g / n bands; the 5GHz band is not supported.
You cannot control RoboVac with Amazon Alexa.	<ul style="list-style-type: none"> Check if there are any Internet connection problems. Check whether you have installed the Amazon Alexa app onto your smart device and enabled "EufyHome - RoboVac" Skill in the Amazon Alexa app. For details, refer to the "Smart Integrations" page in the EufyHome App. Make sure you have a EufyHome account and that it is connected to RoboVac. Make sure you are using correct Alexa voice-commands.

Problems	Solutions
You cannot control RoboVac with the Google Assistant.	<ul style="list-style-type: none"> • Check if there are any Internet connection problems. • Check if you have installed the Google Home app onto your smart device and initiated the "EufyHome" action in the Google Home app. For details, refer to the "Smart Integrations" page in the EufyHome App. • Check if you are using the proper commands when talking to the Google Assistant. When making your request, first say the wake words "Ok Google". • Repeat your question. Speak clearly to the Google Assistant.

Voice Alert

When RoboVac encounters a problem, the red indicator on RoboVac will flash and you will hear the relevant voice prompts.



The voice prompts below are only for reference and may be changed slightly after voice pack updates. Please follow the voice prompts you have heard to find the cause and solution below.

Voice Prompt	Cause and Solution
Error 1: Front bumper stuck	If the front bumper is stuck, gently push the bumper in repeatedly to dislodge anything trapped inside. If there is nothing there, try moving the device to a new area and restart.
Error 2: Wheel stuck. Check the wheel and move it to a new position	Wheel may be stuck or trapped. Clear any obstacles in the surrounding area and check the wheel for any trapped dust. Move the device to a new position and try again.
Error 3: Side brush stuck	Side brush may be stuck. Please clean it and try again.
Error 4: Rolling brush stuck. Remove and clean the rolling brush	Remove the rolling brush, roller joint, roller brush cover, and suction inlet to clean it. Once cleaned, place the items back into the device and try again.
Error 5: Device trapped. Clear the surrounding area	Device is trapped. Clear any obstacles in the surrounding area and try again.
Error 6: Device trapped. Reposition the device near the area where the problem occurred	Device may be suspended in air. Move it to a new position close to the original position and try again. If the device is still unable to start, clean the edge sensor and try again.

Voice Prompt	Cause and Solution
Error 7: Wheel suspended. Please move the device to a new position	Wheels may be suspended in air. Move the device to a flat surface and a new position close to the original position then try again.
Error 8: Low battery, shutting down device. Please charge your device	Low Battery; system will shut down. Charge the device and try again.
Error 9: Magnetic Boundary Strip detected. Move device to a different area	Device is too close to a strong magnetic field or strip. Move the device to a different area and try again.
Error 12: Right wall sensor needs cleaning	Clean the right side wall sensor since it's covered in dust.
Error 13: Device tilted. Please put the device on a flat surface to start	Device may be tilted. Put the device on a flat surface and try again.
Error 14: Please insert dust collector and filter.	Put the dust collector and filter back in and confirm that they are in place. Then restart the device.
Error 17: Virtual Boundary detected. Move device to a different area	Device is too close to the virtual boundary. Move the device to a new position and try again.
Error 18: Laser cover may be stuck	Pressure sensor for laser cover is stuck. Move the device to a new position and try again.
Error 19: Laser sensor may be stuck	Laser ranging sensor is covered in dust. Clean it and try again.
Error 20: Laser sensor may be blocked	<p>Laser sensor is blocked by:</p> <ul style="list-style-type: none"> ▪ An empty environment ▪ Metal mirrors ▪ Or other multi-reflection devices <p>Remove any obstacles and move the device to a different area.</p>
Error 21: Charging Base blocked by surrounding obstacles	Charging base is blocked by obstacles, clear any obstacles around the charging base and try again.

Voice Prompt	Cause and Solution
Error S1: Battery Error. Refer to Owner's Manual or App for help	<ul style="list-style-type: none"> - Open the battery compartment and check whether the battery is connected and restart the device. - Battery Temperature may be too high or low; wait until the battery falls to normal temperatures before using (0 ° - 40 ° C / 32 ° F - 104 ° F) - If the issue persists, contact customer support for help.
Error S2: Wheel Module Error. Refer to Owner's Manual or App for help	<ul style="list-style-type: none"> - Check whether the wheels are stuck or dust is trapped inside before restarting the device. - If the issue persists, contact customer support for help.
Error S4: Suction Fan Error. Refer to Owner's Manual or App for help	<ul style="list-style-type: none"> - Check whether the fan blades are stuck in an unknown object before restarting the device. - Clean the dust collector and filter before restarting the device. - If the issue persists, contact customer support for help.
Error S5: Rolling Brush Error. Refer to Owner's Manual or App for help	<ul style="list-style-type: none"> - Remove and clean the roller brush, roller brush connection, roller brush cover and suction inlet before restarting the device. - If the issue persists, contact customer support for help.

Specifications

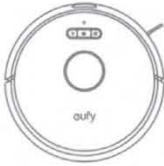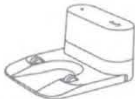	Input	24 V \equiv 1 A
	Battery Voltage	14.4 V \equiv
	Power Consumption	60 W
	Battery Type	14.4 V \equiv Li-ion 5,200 mAh (Typical)
	Dust Collector Capacity	400 mL
	Water Tank Capacity	250 mL
	Cleaning Time	Max. 150 mins
	Charging Time	240 - 300 mins
	Input	24 V \equiv 1 A
	Output	24 V \equiv 1 A

Customer Service

For tutorial videos, FAQs, manuals, and more information,
please visit: <http://support.eufylife.com>.

Contact Us

✉ support@eufylife.com

💬 www.eufylife.com

☎ (US) +1 (800) 988 7973 Mon-Fri 6:15 - 17:00 (PT);
Sat-Sun 6:30-16:30 (PT)
(UK) +44 (0) 1604 936200 Mon-Sun 6:00 - 17:00;
Sat-Sun 6:00-14:00
(DE) +49 (0) 69 9579 7960 Mo-Fr 8:00 - 16:00
(日本) 03 4455 7823 月-金 9:00 - 17:00

For more support phone numbers, please visit:
<http://support.eufylife.com/s/phonecontactus>

Or scan the QR code below:



 @EufyOfficial  @EufyOfficial  @EufyOfficial  @EufyOfficial

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong



For FAQs and more information, please visit:

www.eufylife.com

eufy RoboVac - Limited Warranty

NOTE: This limited warranty provided by the manufacturer in no way affects a potential statutory warranty provided by law.

This One-Year Limited Warranty applies to purchases made from authorized retailers of Anker Innovations Limited, and implied warranties will be limited to the duration of this limited warranty. Warranty coverage applies to the original owner and to the original product only and is not transferable. For eufy-Certified Refurbished products, a Warranty Period of three (3) months shall apply and 'Warranty Period' shall be read accordingly throughout this document.

Anker Innovations warrants that the unit shall be free from defects in material and workmanship for a period of one year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

REMEDY

1. The original unit and/or non-wearable components deemed defective, according to Anker Innovations' sole discretion, will be repaired or replaced for up to one year from the original purchase date.
2. In the rare event that a replacement unit is issued, the warranty coverage ends ninety (90) days following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is greater. If the unit is replaced, Anker Innovations reserves the right to replace the unit with one of equal or greater value.

EXCLUSION

Unless agreed in writing, the Limited Warranty will not apply if the defect(s) relate to:

1. Consumable parts such as filters, or brushes etc., that are subject to normal wear and tear, and require regular maintenance and/or replacement to ensure the proper functioning of your unit.
2. Defects caused by rough or inappropriate handling or use or damage caused by accident, misuse, neglect, fire, water, lightning or other acts of nature, external sources such as weather, electrical outages or power surges.
3. Improper operation or maintenance, use not in accordance with the Product instructions or connection to improper voltage supply.
4. Negligent use or care, neglect, or careless operation or misuse of the Product.
5. Accident, abuse, misapplication, or any unauthorized repair, modification, or disassembly or opening of the chassis of the Product.
6. Any failure by Buyer or a third party to comply with environmental and storage requirements for the Product specified by Seller.
7. Any failure to adequately package the Product for transportation.
8. If the battery has been short-circuited, if the seals of the battery enclosure or the cells are broken or show evidence of tampering, or if the battery has been used in equipment other than that for which it has been specified.
9. Use of parts not in accordance with the Product instructions.
10. Use of parts and accessories other than those produced or recommended by eufy.
11. Use in a commercial environment as the Product is designed for residential use only.
12. Consequential and incidental damages.
13. Extreme or external causes beyond our reasonable control including, but not limited to, breakdowns, fluctuations, or interruptions in electric power, ISP (internet service provider)

service, or wireless networks.

14. Weak and/or inconsistent wireless signal strength in your home.
15. Any product(s) purchased from unauthorized dealers/resellers.
16. Products used outside the country of purchase.
17. Free products.
18. Lost and/or stolen products.

DISCLAIMER

This Limited Warranty is your sole and exclusive remedy against Anker Innovations and Anker Innovations' sole and exclusive liability in respect of defects in your Product. This Limited Warranty replaces all other Anker Innovations warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise, including, without limitation, and where permitted by applicable law, any implied conditions, warranties or other terms as to satisfactory quality or fitness for purpose. However, this Limited Warranty shall neither exclude nor limit i) any of your legal (statutory) rights under the applicable national, and state, laws or ii) any of your rights against the seller of the Product.

TO THE EXTENT PERMITTED BY APPLICABLE LAWS, ANKER INNOVATIONS DOES NOT ASSUME ANY LIABILITY FOR LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA, FOR ANY LOSS OF PROFIT, LOSS OF USE OF PRODUCTS OR FUNCTIONALITY, LOSS OF BUSINESS, LOSS OF CONTRACTS, LOSS OF REVENUES OR LOSS OF ANTICIPATED SAVINGS, INCREASED COSTS OR EXPENSES OR FOR ANY INDIRECT LOSS OR DAMAGE, CONSEQUENTIAL LOSS OR DAMAGE OR SPECIAL LOSS OR DAMAGE.

TO THE EXTENT PERMITTED BY APPLICABLE LAWS, ANKER INNOVATIONS' LIABILITY WILL BE LIMITED TO THE PURCHASE VALUE OF THE PRODUCT. The above limitations will not apply in the case of gross negligence or intentional misconduct of Anker Innovations or in the case of death or personal injury resulting from Anker Innovations' proven negligence.

WARRANTY SERVICE

For Retailer Store purchasing

If you wish to make a warranty claim, please contact your local distributor.

Upon contacting your distributor, please have the serial number of your Product ready and the original proof of purchase from an authorized reseller, showing the date of purchase and full details of the Product.

For Online Store purchasing

please reach us by this channel

✉ support@eufylife.com

💬 www.eufylife.com

☎	(US) +1 (800) 988 7973 Mon-Fri 9:00 - 17:00 (PT)	(中国) +86 400 0550 036 周一至周五 9:00 - 17:30
	(UK) +44 (0) 1604 936200 Mon-Sun 6:00 - 14:00	(日本) 03 4455 7823 月-金 9:00 - 17:00
	(DE) +49 (0) 69 9579 7960 Mo-Fr 6:00 - 11:00	

When calling the customer support center, please have the Amazon order number or eBay username for the purchase of the eufy product from the authorized retailer.

(fournisseur de services Internet) ou des réseaux sans fil.

14. Une force de signal sans fil faible et/ou irrégulière dans votre maison.
15. Tout produit acheté auprès de fournisseurs/revendeurs non agréés.
16. Des produits utilisés hors du pays d'achat.
17. Des produits gratuits.
18. Des produits perdus et/ou volés.

AVIS DE NON-RESPONSABILITÉ

Cette garantie limitée est votre seul et unique recours à l'encontre d'Anker Innovations, et la seule et unique responsabilité d'Anker Innovations en ce qui concerne les défauts de votre produit. Cette garantie limitée remplace toutes les autres garanties et obligations d'Anker Innovations, qu'elles soient orales, écrites, légales (non obligatoires), contractuelles, en responsabilité civile ou autre, y compris, sans s'y limiter, et lorsque la loi applicable l'autorise, toute condition implicite, toute garantie ou toute autre disposition relative à la qualité satisfaisante ou à l'adéquation à l'usage. Toutefois, cette garantie limitée ne doit ni exclure, ni limiter i) l'un de vos droits légaux (statutaires) en vertu de la législation locale et nationale en vigueur, ou ii) vos droits à l'encontre du vendeur du produit.

DANS LA MESURE PERMISE PAR LES LOIS APPLICABLES, ANKER INNOVATIONS N'ACCEPTE AUCUNE RESPONSABILITÉ À L'ÉGARD DE LA PERTE, L'ENDOMMAGEMENT OU LA CORRUPTION DE DONNÉES, TOUTE PERTE DE PROFIT, DE JOUISSANCE DE PRODUITS OU DE FONCTIONNALITÉS, TOUTE PERTE COMMERCIALE, TOUTE PERTE DE CONTRATS, DE REVENUS OU D'ÉCONOMIES PRÉVUES, TOUTE AUGMENTATION DES COÛTS OU DES DÉPENSES, TOUTE PERTE OU TOUT DOMMAGE INDIRECTS, CONSÉCUTIFS OU PARTICULIERS. DANS LA MESURE PERMISE PAR LES LOIS APPLICABLES, LA RESPONSABILITÉ D'ANKER INNOVATIONS SERA LIMITÉE À LA VALEUR D'ACHAT DU PRODUIT.

Les limitations ci-dessus ne s'appliquent pas en cas de négligence grave ou de faute intentionnelle d'Anker Innovations ou en cas de décès ou de blessure résultant d'une négligence avérée d'Anker Innovations.

SERVICE DE GARANTIE

Pour l'achat en magasin de détail

Si vous souhaitez faire une réclamation de garantie, veuillez contacter votre distributeur local.

Pour contacter votre distributeur, veuillez vous munir du numéro de série de votre produit et de la preuve d'achat d'origine auprès d'un revendeur agréé, indiquant la date d'achat et les détails complets du produit.

Pour l'achat en ligne

veuillez nous contacter par ce canal

✉ support@eufylife.com

💬 www.eufylife.com



(US) +1 (800) 988 7973	Mon-Fri 9:00 - 17:00 (PT)
(UK) +44 (0) 1604 936200	Mon-Sun 6:00 - 14:00
(DE) +49 (0) 69 9579 7960	Mo-Fr 6:00 - 11:00

(中国) +86 400 0550 036	周一至周五 9:00 - 17:30
(日本) 03 4455 7823	月-金 9:00 - 17:00

Lorsque vous appelez le centre d'assistance clientèle, veuillez vous munir du numéro de commande Amazon ou du nom d'utilisateur eBay associé à l'achat du produit eufy auprès du détaillant agréé.