


WATCH MANUAL

MICHAEL HILL
FINE JEWELLERS

CERAMIC & DIAMOND WATCHES

A. DISPLAY AND BUTTONS

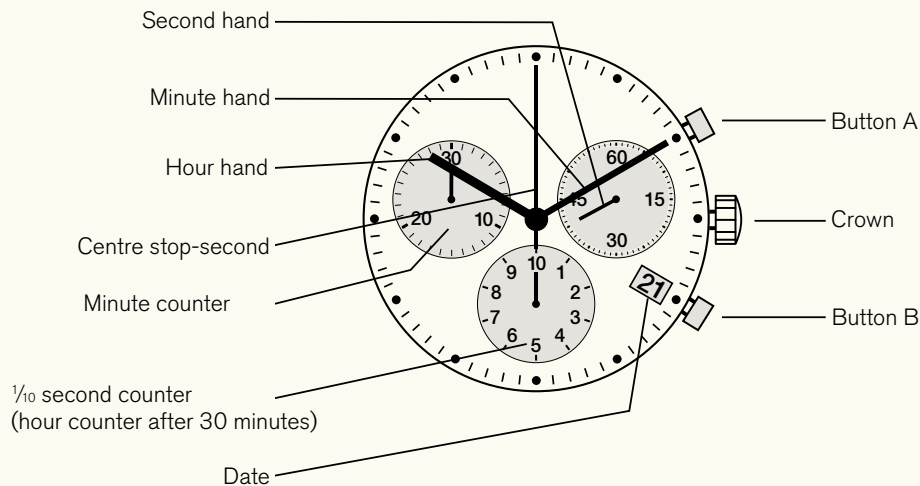

*Dial positions and layout of the face might vary depending on the watch model.

CROWN

These watches have a screw lock down crown. In order to pull the crown out for various adjustments the crown must first be unscrewed by unwinding in a counter clockwise direction. When adjustments have been finalised and the crown is returned to position I as denoted in the diagrams the crown must then be pushed down and screwed back into place to lock down.

B. USING THE CHRONOGRAPH (START/ STOP/ RESET)


- 1 Start: Press button A.
- 2 Stop: To stop the timing, press button A once more and read the 3 chronograph counters, ie: 4min/38sec /7/10 sec
- 3 Zero positioning: Press button B. The 3 chronograph hands will be reset to their zero positions, ie: the 12 o'clock position.

CERAMIC & DIAMOND WATCHES

C. CHRONOGRAPH: ACCUMULATED TIMING

- 1 Start: Start timing.
- 2 Stop (e.g. 15 min 5 sec)
- 3 Start (again): Timing is resumed.
- 4 Stop (e.g. 13 min 5 sec). Accumulated time is now shown (e.g. 28 min 10 sec)*
- 5 Reset: The 3 chronograph hands are returned to the zero positions.


*Following 4, the accumulation of the timing can be continued by pressing button A

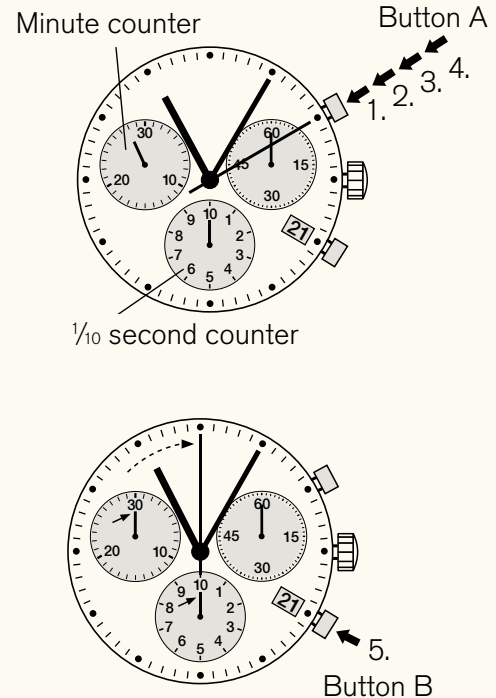

D. CHRONOGRAPH: INTERMEDIATE OR INTERVAL TIMING

- 1 Start: Start timing.
- 2 Display interval: e.g. 10 minutes 10 seconds (timing continues in the background).
- 3 Making up the measured time: (the 3 chronograph hands are quickly advanced to the ongoing measured time)*.
- 4 Stop: (Final time is displayed)
- 5 Reset: The 3 chronograph hands are returned to their zero position.

*Following 3, further intervals or intermediates can be displayed by pressing push-button B (display interval /make up measured time, ...)

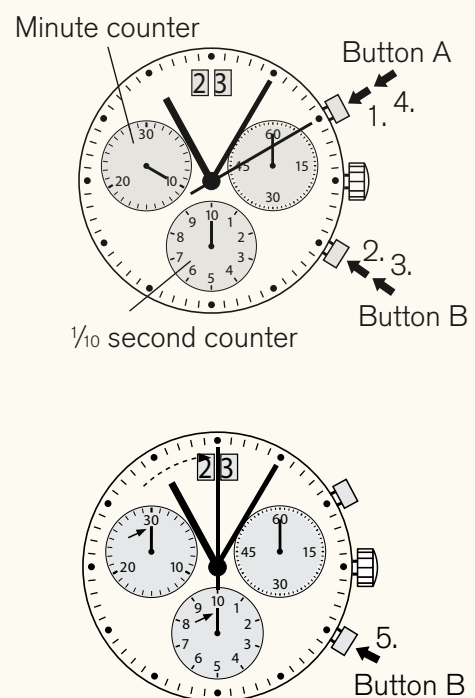

CERAMIC & DIAMOND WATCHES

E. ADJUSTING HANDS TO ZERO POSITION (12 O'CLOCK)

Example: One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).
- 2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° - corrective mode is activated).

Adjusting the centre stop second:

Single step: A - 1 x short

Continuous: A - long

Adjusting the next hand:

1/10 second counter hand (position 6h)

B to move hand

Single step: A - 1 x short

Continuous: A - long

Adjusting the next hand:




minute counter hand and (position 9h)

B to move hand

Single step: A - 1 x short

Continuous: A - long

- 3 Returning the crown to position I. Termination of the chronograph hands adjustment (can be carried out at any time).

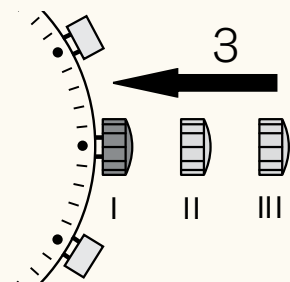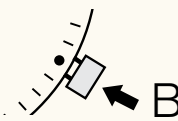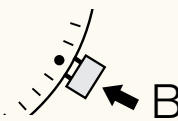


CERAMIC & DIAMOND WATCHES

F. SETTING THE TIME

- 1 Pull the crown out to the III position (the watch stops).
- 2 Turn the crown to set hour and minute hands.
- 3 Push the crown back to position I.


*In order to set the time to the exact second, step 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 3. must be pushed back into position I at the exact second.

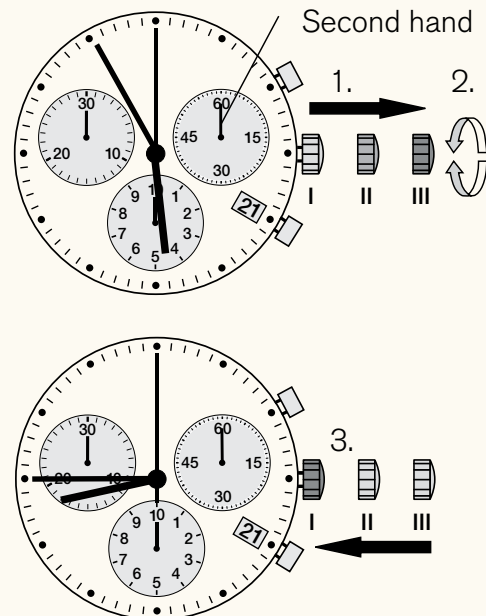

G. SETTING THE DATE (QUICK MODE)

- 1 Pull the crown out to position II (the watch continues to run).
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back into position I.

*The date can be changed during the date changing phase between 9:00 PM and 12:00 PM; please note that the date must be set to the date of the following day as in this case the automatic date changing does not occur at midnight.

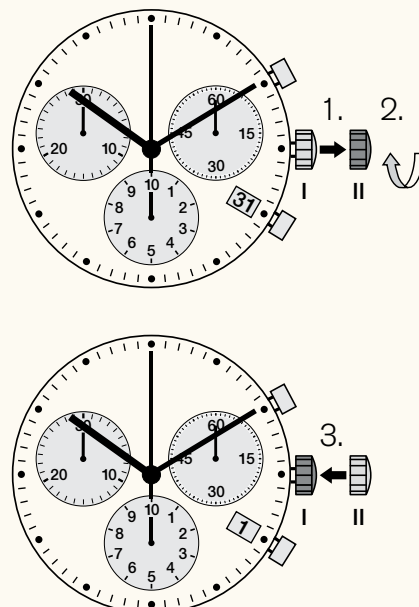





CERAMIC & DIAMOND WATCHES

H. SETTING THE DATE/TIME

- 1 Pull the crown out to the position II (the watch continues to run).
- 2 Turn the crown until yesterday's date appears.
- 3 *Pull out the crown to position III (the watch stops)
- 4 Turn the crown until the correct date appears.
- 5 **Continue to turn the crown until the correct time appears.
- 6 Push the crown back into position I.

*To set your watch to the exact second, please refer to the chapter entitled «setting the time».

**Please observe the AM/PM clock rhythm.

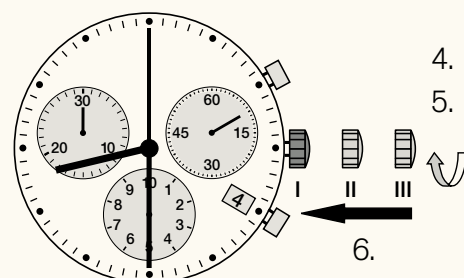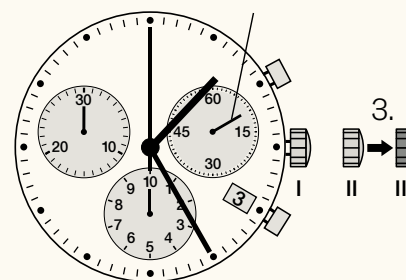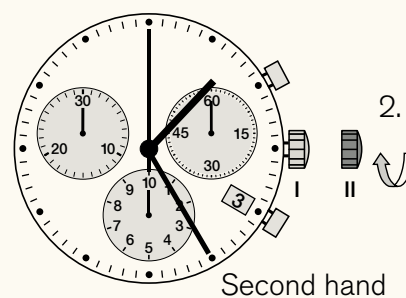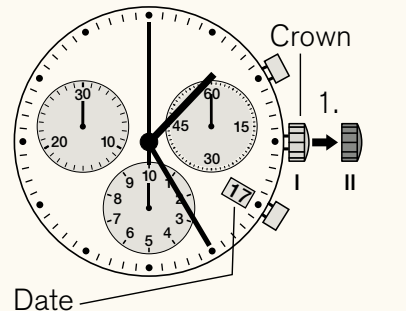

I. WARNING



WARNING



THIS PRODUCT
CONTAINS A
BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause serious injuries. It can cause severe or fatal injuries within two hours or less. Button batteries are hazardous. Keep batteries out of reach of children. If you think the battery may have been swallowed or placed inside any part of the body, you should contact your local Poisons Information Centre immediately for 24/7 fast, expert advice.

AUSTRALIA
Australian Poisons Information Centre
13 11 26

NEW ZEALAND
New Zealand Poisons Information Centre
0800 764 766

CANADA
Canada Poisons Information Centre
1 844 764 7669

Dispose of used button batteries immediately.