



Simply Better Connections

**CE700A**

USB KVM Extender  
User Manual

# **Compliance Statements**

---

## **FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital service, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



## KCC Statement

유선 제품용 / B 급 기기 ( 가정용 방송 통신 기기 )  
이 기기는 가정용 ( B 급 ) 전자파적합기기로서 주로 가정에서 사용하는  
것을 목적으로 하며 , 모든 지역에서 사용할 수 있습니다 .

## RoHS

This product is RoHS compliant.

## KVM 訊號延長器類產品

設備名稱 Equipment Name	USB VGA Cat 5 KVM 延長器			型號 ( 型式 ) Type designa- tion (Type)	CE700A	
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電纜線 Cable	—	○	○	○	○	○
印刷電路部件 PCBA	—	○	○	○	○	○
塑膠 / 其他部件 Plastic / Other parts	○	○	○	○	○	○
金屬配件 Metal parts	—	○	○	○	○	○
遙控器 Remote Control	—	○	○	○	○	○

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考 3. “—” 係指該項限用物質為排除項目。

Note 3: “—” indicates that the restricted substance corresponds to the exemption.

**製造商：**宏正自動科技股份有限公司

**地址：**新北市汐止區大同路二段 125 號三樓

**警告：**為避免電磁干擾，本產品不應安裝或使用於住宅環境。

**最大操作環境溫度：**50°C

**最大額定電壓：**DC 5.3V

# CE700A User Manual

## Online Registration

International	<a href="http://support.aten.com">http://support.aten.com</a>
North America	<a href="http://www.aten-usa.com/product_registration">http://www.aten-usa.com/product_registration</a>

## Telephone Support

International	886-2-8692-6959
China	86-10-5255-0110
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8448-158923

## Technical Support

- ◆ For international online technical support – including troubleshooting, documentation, and software updates:  
**<http://support.aten.com>**
- ◆ For North American technical support:

Email Support		<a href="mailto:support@aten-usa.com">support@aten-usa.com</a>
Online Technical Support	Troubleshooting Documentation Software Updates	<a href="http://www.aten-usa.com/support">http://www.aten-usa.com/support</a>
Telephone Support		1-888-999-ATEN ext 4998

## Package Contents

Check to make sure that all the components are in working order. If you encounter any problem, please contact your dealer.

The CE700A USB KVM Extender package contains the following:

- ◆ 1 CE700AL USB KVM Extender (Local Unit)
- ◆ 1 CE700AR USB KVM Extender (Remote Unit)
- ◆ 1 USB KVM Cable (1.8 m)
- ◆ 2 Power Adapters
- ◆ 2 Rack Mount Kits
- ◆ 1 User Instructions\*

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit or any connected devices.

---

\* This product may be updated, with features and functions added, improved or removed since the release of this manual. For an up-to-date user manual, visit <http://www.aten.com/global/en/>

---

## Overview

The CE700A is a USB KVM Extender with superior video quality and built-in ESD and surge protection that allows access to a computer system from a remote USB console (USB keyboard, monitor, and USB mouse).

Because it allows access to a computer system from a remote console, the CE700A is perfect for use in any type of installation where you need to place the console where it is conveniently accessible, but you want the system equipment to reside in a safe location – away from the dust and dirt of the factory floor, or the harsh environmental influence of a construction site, for example.

The CE700A is also useful for control and security purposes, where you can have the system unit in a secure area at the same time that you put the console in the most convenient location for user access.

The CE700A improves on previous designs by: 1) incorporating 15KV ESD protection and 2KV surge protection; 2) providing superior video quality – up to 1920 x 1200 resolution; 3) using inexpensive Cat 5 cable, instead of bulkier, more expensive, standard cables, for a much neater, more convenient, more reliable data transfer connection; 4) it is able to sense the distance to the system and automatically adjusts the gain accordingly; and 5) it features a custom ASIC to ensure the utmost in reliability and compatibility.

Setup is as easy as can be – simply connect the computer system box and local console to the Local CE700A Module; run the Cat 5 cable to the Remote CE700A Module (up to 150 meters away); and plug the remote console into the Remote Module.

---

**Note:** You can control numerous remote systems from a single console by combining the CE700A with a KVM switch.

---

# Features

- ◆ Local and Remote Units connect at distances up to 150 m using Cat 5e cable
- ◆ Dual console operation – control your system from both the local and remote USB keyboard, monitor, and mouse consoles
- ◆ Built-in ASIC for greater reliability and compatibility
- ◆ Auto Signal Compensation (ASC)
- ◆ USB Keyboard and USB Mouse Ports
- ◆ USB overcurrent detection and prevention
- ◆ Pushbutton operating mode selection (Local Unit only) – select between Local and Auto operating modes.
- ◆ Built-in 8KV/15KV ESD protection (Contact voltage 8KV; Air voltage 15KV) and 2KV surge protection
- ◆ Automatic gain control – adjusts signal strength to compensate for distance
- ◆ High resolution video – up to 1920 x 1200@60Hz (30 m ); 1600 x 1200@60Hz (100 m); 1280 x 1024@60Hz (150 m)
- ◆ Supports VGA, SVGA, SXGA, UXGA, WUXGA, and multisync monitors; local monitor supports DDC; DDC2; DDC2B
- ◆ Hot pluggable
- ◆ Rack mountable
- ◆ Easy to install – no software required – connecting cables to the devices is all it takes
- ◆ Supports widescreen formats\*

\*For widescreen modes and displays connect the monitor to the local video output port or use an ATEN EDID emulator.



# System Requirements

## Consoles

- ♦ A VGA, SVGA, SXGA, UXGA, WUXGA, or Multisync monitor capable of the highest resolution that you will be using on the installation
- ♦ A USB keyboard
- ♦ A USB mouse

## Computers

The following equipment must be installed on each computer that is to be connected to the system:

- ♦ A VGA, SVGA, SXGA, UXGA, WUXGA, or Multisync card
- ♦ USB Host Controller and Type A USB Port

## Cables


- ♦ For optimal signal integrity, and to simplify the layout, we strongly recommend that you use the high quality custom USB KVM Cable that is provided with this package.
- ♦ Cat 5e cable is the minimum required to connect the local and remote CE700A units. Cable of a lesser standard will result in degrading the video signal. For best performance, we strongly recommend Cat 5e cable.

## Supported Operating Systems


OS		Version
Windows		2000, XP, Vista
Linux	RedHat	7.1 or later
	SuSE	9.0 or later
	Mandriva (Mandrake)	9.0 or later
UNIX	FreeBSD	4.2 or later
Novell	Netware	6.0 or later

# Components

## CE700AL (Local Unit) Front View

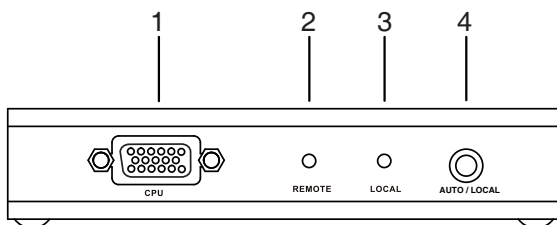


## CE700AR (Remote Unit) Front View

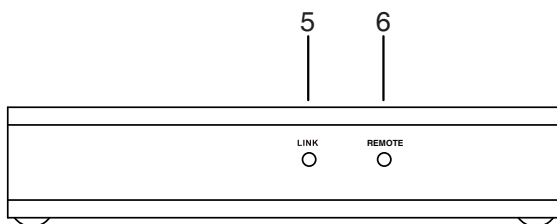


No.	Component	Description
1	KVM port	The custom USB KVM cable that links the unit to the computer plugs in here.
2	remote LED	The CE700AL has two LEDs to indicate operating status. See <i>LED Display</i> , page 19, for details.
3	local LED	
4	operating mode selection pushbutton	This pushbutton toggles the operating mode between Auto and Local. See <i>Operating Modes</i> , page 18, for details.
5	link LED	The CE700AR has two LEDs to indicate operating status. See <i>LED Display</i> , page 19, for details.
6	remote LED	

## CE700AL / CE700AR Rear View

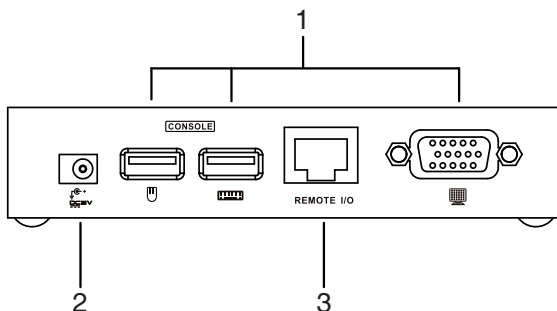

## CE700AL / CE700AR Side View

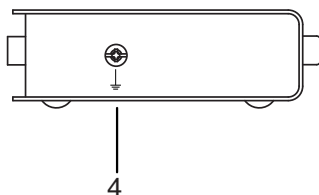

No.	Component	Description
1	console ports	The local and remote console's USB keyboard, USB mouse, and monitor plug into these ports.
2	power jack	The power adapter cable plugs into this jack.
3	remote I/O	The Cat 5e cable that connects the local and remote units plugs in here.
4	grounding terminal	The grounding wire attaches here. See <i>Installation</i> , page 13, for details.

# Hardware Setup




Make sure that the power to any device that you connect to the installation has been turned off. You must unplug the power cords of any computers that have the *Keyboard Power On* function.


## Rack Mounting

For convenience and flexibility, the CE700AL and CE700AR can be mounted on system racks.

1. Using the screws provided in the Rack Mount Kit, screw the mounting bracket into the top or bottom of the unit as shown:

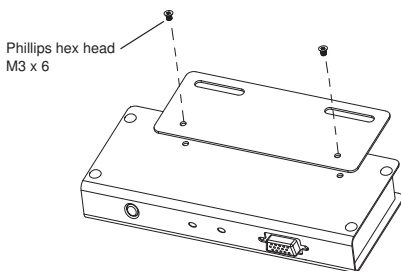

2. Screw the bracket into any convenient location on the rack.

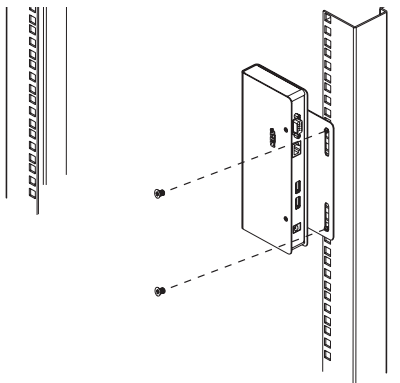


# Installation


## Grounding

To prevent damage to your installation it is important that all devices are properly grounded.

1. Use two grounding wires to ground both units by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.

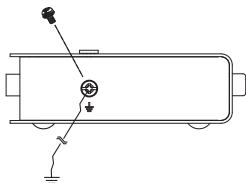


2. Make sure that the computer that the CE700AL connects to and the monitor that the CE700AR connects to are properly grounded.

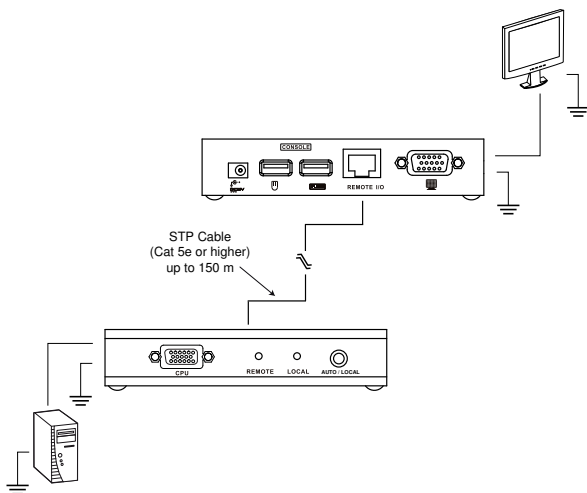


3. For increased grounding protection, use STP (shielded twisted pair) cable to connect the Local and Remote Units. There are two methods that can be used:


- a) In addition to the eight paired wires, STP cable also contains a grounding wire. Solder this wire to the RJ-45 connector as shown in the diagram below:

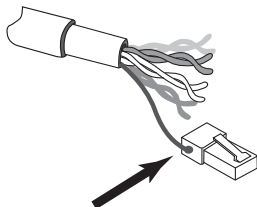

- b) The second method is to use the STP cable shielding for grounding. In this case, make sure that the shielding makes tight contact with the top inside of the RJ-45 connector as shown in the diagram below:

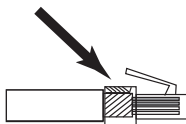

In either case, make sure that the sides of the RJ-45 connector make tight contact with the grounding contacts on the sides of the RJ-45 socket as shown in the diagram below:

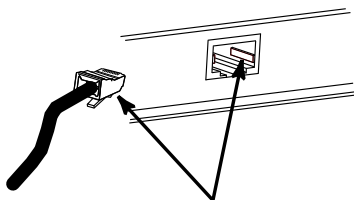

Setting up the USB KVM Extender system is simply a matter of plugging in the cables. Refer to the installation diagram on the following page and do the following:

## Connecting the Cables

1. Plug the cables from the local console devices (mouse, keyboard, monitor, microphone, speakers) into their ports on the Console section on the rear of the Local Unit (CE700AL).
2. Plug the appropriate connectors on the USB KVM cable supplied with this unit into their ports on the KVM section on the front of the Local Unit (CE700AL).
3. Plug the connectors on the other end of the USB KVM cable into the appropriate ports on the local computer.


---

**Note:** If you are combining the CE700A with a KVM switch, the other end of the USB KVM cable plugs into the appropriate ports on the KVM switch.

---


4. Plug one end of the Cat 5e cable into the CE700AL's Remote I/O port. Plug the other end of the Cat 5e cable into the I/O port of the Remote Unit (CE700AR).
5. Plug one of the power adapters (supplied with this package) into an AC source; plug the adapter's power cable into the CE700AL's Power Jack
6. Plug the cables from the remote console devices into their ports on the Console side of the CE700AR.
7. Plug the second power adapter (supplied with this package) into an AC source; plug the adapter's power cable into the CE700AR's Power Jack.

## Installation Rear View

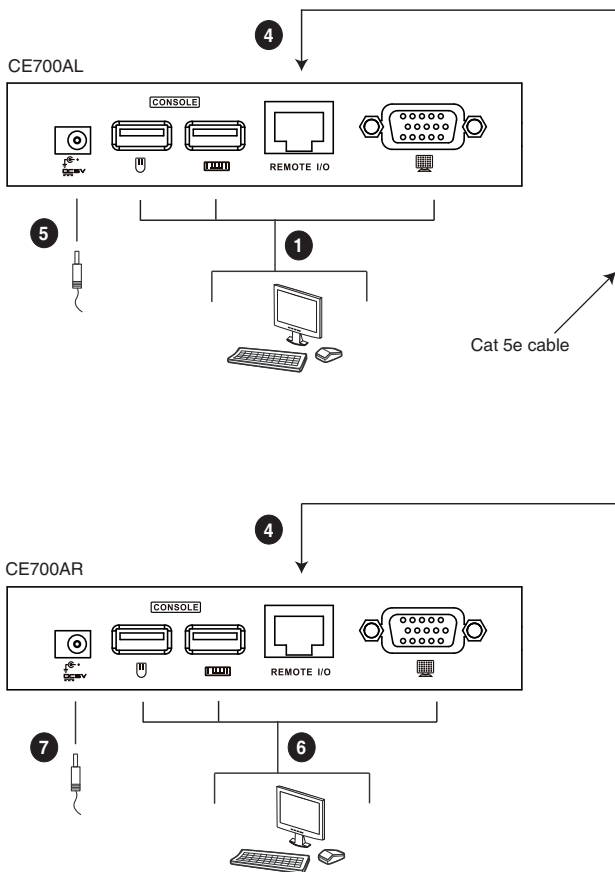



## Installation Front View

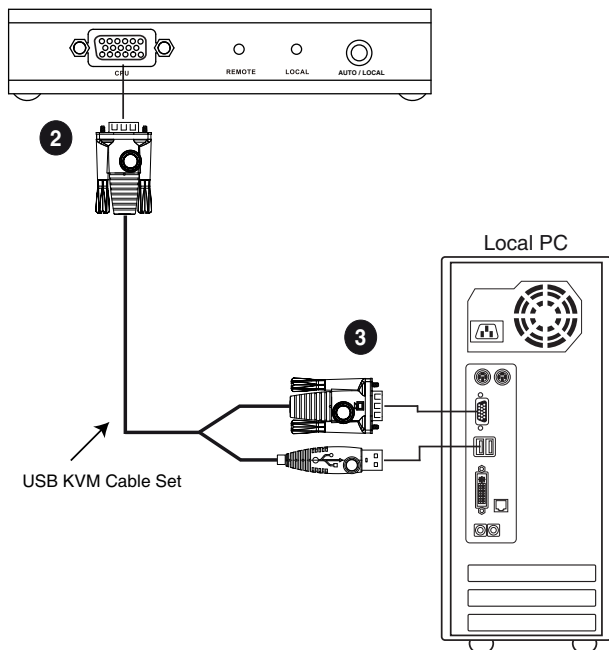

## Operating Modes

The CE700A USB KVM Extender system has three operating modes: Local, Auto, and Remote, as shown in the table, below:

Mode	Description
Local	Only the local console has KVM access. The remote console's keyboard and mouse input is disabled.
Auto	Both the local and remote consoles can have KVM access, but not at the same time. The console without access has to wait until the active console stops inputting data before it can gain access.
Remote	The remote console has KVM access. Remote cannot be selected; it can only occur when the pushbutton on the CE700AL is set to <i>Auto</i> and the local console is idle. If the remote console is then idle for more than five seconds, the local console can gain access.

---

**Note:** The default operating mode is *Auto*.

---

# LED Display

The Local and Remote Units each have two LEDs to indicate their operating status, as shown in the tables, below:

## CE700AL (Local Unit)

LED	Indication
Local (Green)	<ul style="list-style-type: none"><li>◆ Lights to indicate that the local console is active (Remote LED is off)</li><li>◆ Off when remote console is active</li><li>◆ Flashes to indicate Auto mode (neither console is active)</li></ul>
Remote (Green)	<ul style="list-style-type: none"><li>◆ Lights to indicate that the remote console is active (Local LED is off)</li><li>◆ Off when local console is active</li><li>◆ Flashes to indicate Auto mode (neither console is active)</li></ul>

## CE700AR (Remote Unit)



LED	Indication
Link (Green)	<ul style="list-style-type: none"><li>◆ Lights steadily to indicate that the connection to the local unit is working.</li><li>◆ Flashes to indicate a problem with the connection to the local unit (remote LED is off)</li></ul>
Remote (Green)	<ul style="list-style-type: none"><li>◆ Lights to indicate that the remote console is active (Local LED is off)</li><li>◆ Off when local console is active</li><li>◆ Flashes to indicate Auto mode (neither console is active)</li></ul>

# Specifications

Function			CE700AL	CE700AR
Connectors	Console Ports	Keyboard	1 x USB Type A Female (White)	
		Video	1 x HDB-15 Female (Blue)	
		Mouse	1 x USB Type A Female (White)	
	KVM Ports	KB / Video / Mouse	1 x SPHD-17 Female (Green)	N/A
	Unit to Unit		1 x RJ-45 Female (Black)	
	Power		1 x DC Jack (Black)	
Pushbuttons	Operating Mode Selection		1 x Pushbutton	N/A
LEDs	Local		1 (Green)	N/A
	Remote		1 (Green)	1 (Green)
	Link		N/A	1 (Green)
Emulation	Keyboard / Mouse		USB	
Power Consumption			DC5.3V:2.17W: 14BTU/h	DC5.3V:1.59W/ 12BTU/h
			<b>Note:</b> ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading. ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.	
Video Resolution			1920 x 1200 @ 60 Hz (30 m) 1600 x 1200 @ 60 Hz (100 m) 1280 x 1024 @ 60 Hz (150 m)	
Environment	Operating Temp.		0–50°C	
	Storage Temp		-20–60°C	
	Humidity		0–80% RH, Non-condensing	

Physical Properties	Housing	Metal	
	Weight	0.33 kg (0.73 lb)	0.32 kg (0.7 lb)
	Dimensions (L x W x H)	12.70 x 8.65 x 2.50 cm (5.00 x 3.41 x 0.98 in)	12.70 x 8.14 x 2.50 cm (5.00 x 3.20 x 0.98 in)

## TP Wiring Diagrams

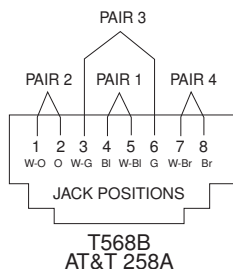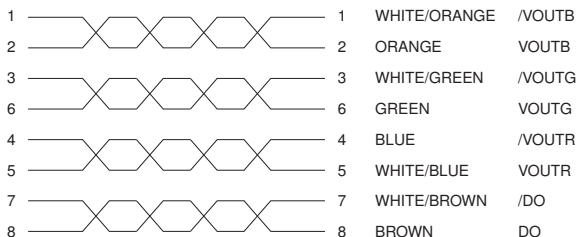

## TP Pin Assignments

Pin	Assignment
1	V OUT B
2	/V OUT B
3	V OUT G
4	V OUT R
5	/V OUT R
6	/V OUT G
7	/DO
8	DO

## Troubleshooting

Problem	Action
No video	Make sure that all cables are securely plugged into their sockets.
Poor video quality.	The video quality can be improved by reducing the refresh rate.

## About SPHD Connectors



This product uses SPHD connectors for its KVM and/or Console ports. We have specifically modified the shape of these connectors so that only KVM cables that we have designed to work with this product can be connected.

# ATEN Standard Warranty Policy

---

## Limited Hardware Warranty

ATEN warrants its hardware in the country of purchase against flaws in materials and workmanship for a Warranty Period of two [2] years (warranty period may vary in certain regions/countries) commencing on the date of original purchase. This warranty period includes the [LCD panel of ATEN LCD KVM switches](#). For UPS products, the device warranty is two [2] years but battery is one [1] year. Select products are warranted for an additional year (see [A+ Warranty](#) for further details). Cables and accessories are not covered by the Standard Warranty.

## What is covered by the Limited Hardware Warranty

ATEN will provide a repair service, without charge, during the Warranty Period. If a product is defective, ATEN will, at its discretion, have the option to (1) repair said product with new or repaired components, or (2) replace the entire product with an identical product or with a similar product which fulfills the same function as the defective product. Replaced products assume the warranty of the original product for the remaining period or a period of 90 days, whichever is longer. When the products or components are replaced, the replacing articles shall become customer property and the replaced articles shall become the property of ATEN.

To learn more about our warranty policies, please visit our website:

<http://www.aten.com/global/en/legal/policies/warranty-policy/>

© Copyright 2024 ATEN® International Co., Ltd.  
Released: 2024-09-03

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.