

THIS THERMOSTAT IS SUITABLE FOR WATER HEATING, ELECTRIC HEATING AND GAS BOILER

## Welcome

Thank you for your trust and support. By adopting higher-end technology and more perfect technology, your new thermostat will provide you with the right temperature environment every day in the future, making your life more comfortable and your living environment more stylish and beautiful. For detailed instructions on the installation and use of this thermostat, please read this manual carefully. Please contact a professional to install the thermostat for you and install and use the product to the extent permitted by law.

## Application

Intelligent digital temperature controller is a floor heating system suitable for room temperature control and household temperature control. It controls the operating state of the floor heating equipment by comparing the ambient temperature with the set temperature, which improves comfort and achieves energy saving. This digital temperature controller adopts microcomputer control technology and is equipped with full-screen display touch buttons, which is elegant in design and easy to use. The thermostat has manual automatic, programmable and state memory functions.

## Technical data

- |                           |  |
|---------------------------|--|
| 1. Temperature sensor:NTC | 2. Temperature accuracy: $\pm 1^{\circ}\text{C}$ |
| 3. Power consumption: <1W | 4. Voltage: AC100-240V 60Hz                      |
| 5. Load current: 3A/16A   | 6. Temperature setting: 5~60 $^{\circ}\text{C}$  |

## Product packaging

Thermostat host -----1PC	Manual -----1 PC
Qualification certificate -----1PC	Screw -----2PCS
Sensing line (optional) -----1PC	

## Product Model

GA Plumbing 3A      GB Electric Heating 16A


GC linkage, gas boiler 3A      GE: Plumbing 3A + linkage, gas boiler 3A

## User Notes

1. Please read this manual carefully. Improper operation may damage the product or cause dangerous conditions.
2. The installation personnel must be well-trained and experienced service technicians.
3. After installation, please read this manual carefully and operate the product according to the instructions.

Caution: Risk of electric shock or equipment damage.


## Wiring Diagram

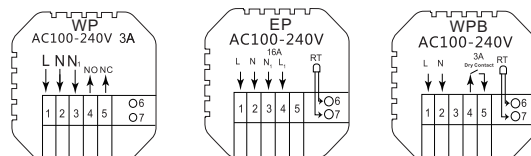


Note: WP for water heating; EP for electric heating; WPB for gas boiler

## Installation procedure


This product is installed with a standard 86 control switch (in compliance with European regulations)

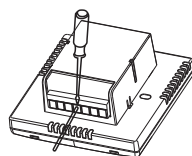


1. Connect the power box according to the wiring diagram

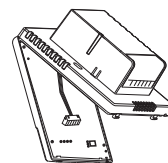

2. Separate the power supply from the control board cable

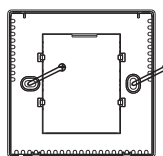


3. Screw the power supply into the box of 86

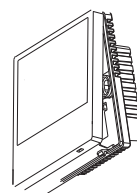

4. Connect the power board to the control board line, and align the buckle at 30 degrees to complete the installation.

## Description of display & Icon

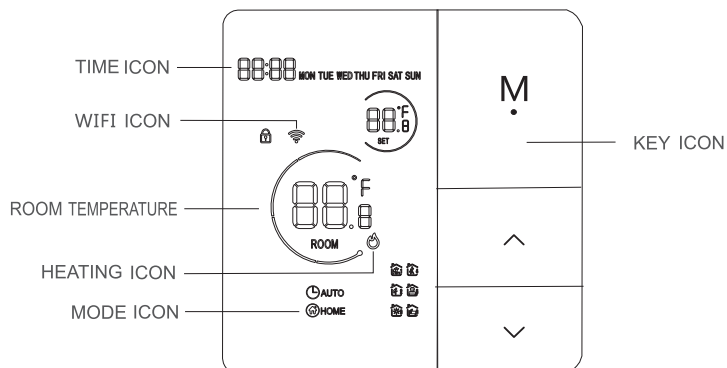

## Operating Instruction

1. Power on/off: Long press **M** for 3 seconds on/off the thermostat.
2. Press the **M** key to switch between manual and automatic modes.
3. Press **^** and **v** for 3 seconds to add or cancel the child lock.
4. WIFI link: When the thermostat is on, long press **^** button for 5 seconds and the thermostat display will come out Now the WIFI icon flashes, at this time the thermostat into the state of code.
5. Long press **M** key and **^** key to enter the clock setting, press **M** key to switch Settings Item, press **^** and **v** keys to adjust the value of each parameter. Note: the time of WIFI model will be Automatically gets Internet time
6. In the shutdown state, Long press **^** key Detect the ground temperature.

## Time programming instructions

Long press **M** key and **v** key Enter the programming settings. Short press **M** key Switching options, Press the **^** or **v** key Adjust the parameters of each option. Long press **M** key Exit saving.

Button	Options	Icon	Time	Time Adjustment	Defaults	Temperature Adjustment
<b>M</b>	Working days	1	06:00	<b>^</b>	20°C	<b>^</b>
		2	08:00		16°C	
		3	11:30		16°C	
		4	12:30		16°C	
		5	17:00		22°C	
		6	22:00		16°C	
<b>v</b>	Holidays	1	08:00	<b>v</b>	22°C	<b>v</b>
		2	23:00		16°C	

## Advanced options

When POWER OFF, press the **M** key and the **^** key for 3 seconds to enter the advanced option setting.

Press **M** to enter the next option, press **^** and **v** to adjust, and Long press **M** to exit the height Level option.

1	Temperature compensation	The default value of the calibration room temperature is -2 °C. Press the up and down keys to adjust. The adjustable range is 9.9 °C to -9.9 °C.
2	Sensor selection	The temperature sensor is selected as IN by default. Press the up and down keys to adjust as IN respectively, indicating that the internal.
3	Modify the temperature limit	The default temperature limit value is 60 °C. Press the up and down keys to adjust the range from 35 °C to 60 °C.
4	Temperature difference start	The default temperature difference is set to 1 °C. Press the up and down keys to adjust the range to 0.5-10 degrees.
5	Antifreeze function	Set the default anti-freeze function to OFF, display OFF, press the up key to turn on anti-freeze and display ON
6	Holiday option and turn off weekly programming	5:Two-day weekend 6:Single day off 7:No rest OFF:Turn off programming
7	Primary and secondary reverse selection	Set the default main and auxiliary reversal to 00. Press the up and down keys to adjust 0 to turn off the main and auxiliary reversal. 00 means auxiliary reverse, 01 means auxiliary reverse,
8	Sound	NO:Turn on the sound OFF:Turn off the sound
9	Set upper temperature limit	The default value of the set temperature upper limit is 60 °C, and the adjustment range is 15-95 °C by pressing the up and down keys.
10	Backlight brightness	00:Turn off the backlight 01:Micro-light 02:Medium brightness 03:Highlight
11	Restore Factory Defaults	Set to restore the factory default setting to display "--". Long Press the up button to adjust the display "--", restore the factory settings

## About WIFI connection



Before using the WIFI thermostat for the first time, you should set the WIFI signal and configuration through your smart phone or tablet to allow communication between your connected devices.

WIFI link: For Bluetooth thermostat, please turn on Mobile phone Bluetooth




1. Download the APP  
Search for “Tuya” in App market or scan below QR Code to download






2. Register Account If you don't have an APP account yet, you can choose to register or log in via SMS verification code. Click "Create a new account", you will enter the Tuya Smart Platform Privacy Policy page. After you click Agree, you will officially enter the mobile phone registration page.

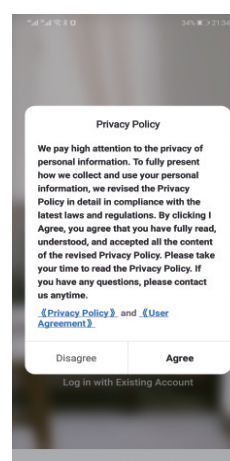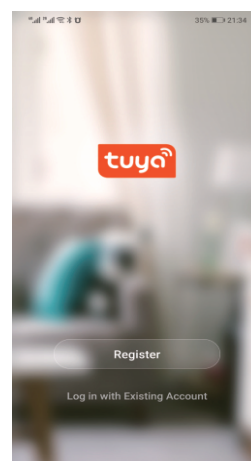


The system automatically determines the current country/region. You can also select the country/region manually. After entering your mobile phone number or email address, click “get verification code”. Enter the received verification code, then enter the password, and click "finish" to register successfully.

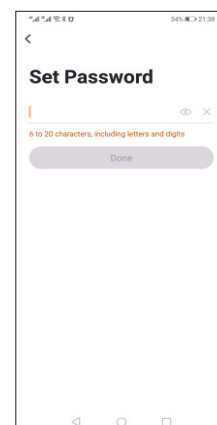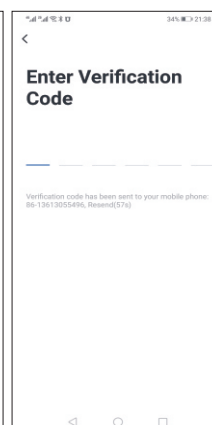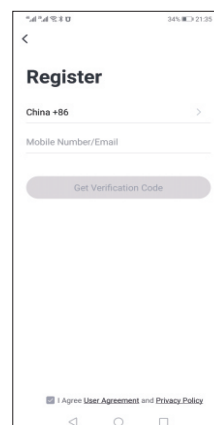


3. Add device Click "add device" or "+" on the top right of the APP homepage to enter the "add device" page. Currently, there are two ways to manually add device and search device.

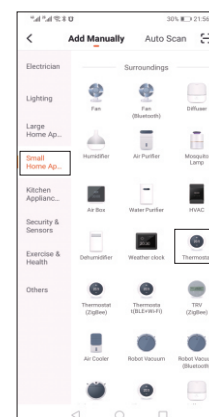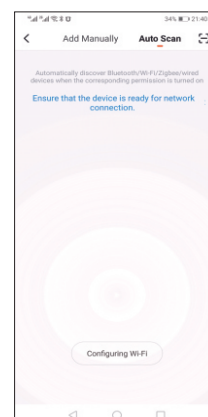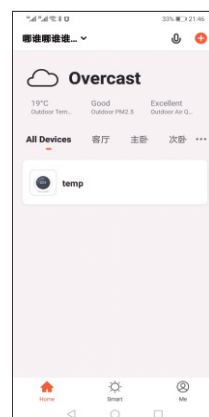


Find the thermostat product (WIFI model) in the device list. In the specified network mode, the indicator flashes (slowly flashes) and then click the confirm button on the page. Select the device's work area to connect to the WIFI of the Internet and enter the WIFI password. Click "ok" to enter the matching network process.

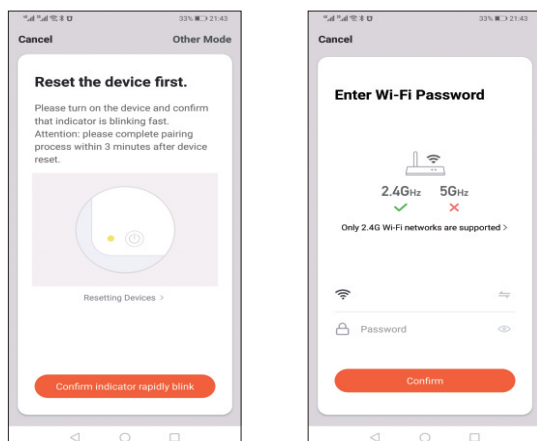

#### 4. Display of temperature controller APP interface

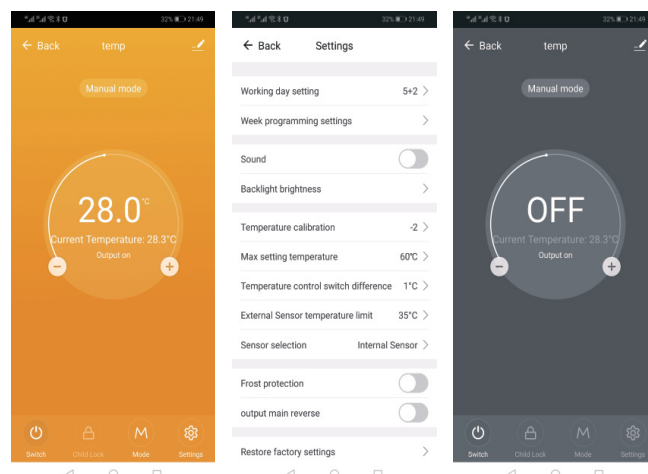

If the default mode distribution network is selected, the distribution process APP is shown in figure 1 below, and the distribution network successfully displays the interface shown in figure 2. The name of the device can be changed or the location of the room can be selected.

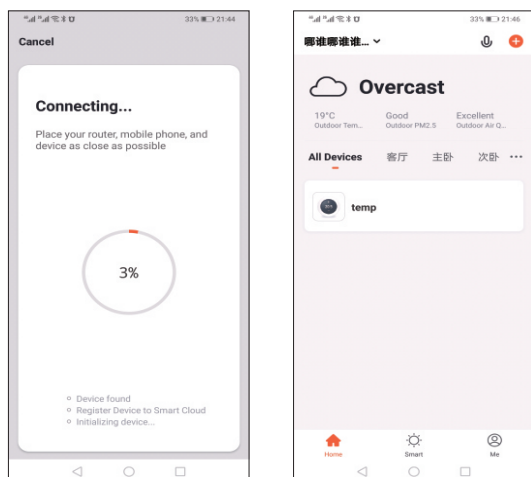

If the distribution network fails, the APP will display the page shown in the figure below. You can choose to add or view the help again. Note: if the connection fails, please confirm whether the temperature control device has entered the code matching state, refer to item 6 of the operation manual.

